

HOW TO TEST

heated beds may **NOT feel warm to the touch** when your pet is not in the bed.

THIS IS NORMAL! Our products are designed to only warm to maximum temperature when your pet is lying in the bed.

TESTING:

Note: Plug in for 1hr before testing

- 1) Place pillow on top of bed
- 2) Wait 20 minutes
- 3) Feel under pillow, it will be warm, not hot

DID YOU KNOW:

products heat to a perfect pet temperature to ensure your pet is safe. Human heating products can easily burn your pet.

