 


 
 
 
 
 
 
 
 
 
 
 
 
ASSEMBLY INSTRUCTION

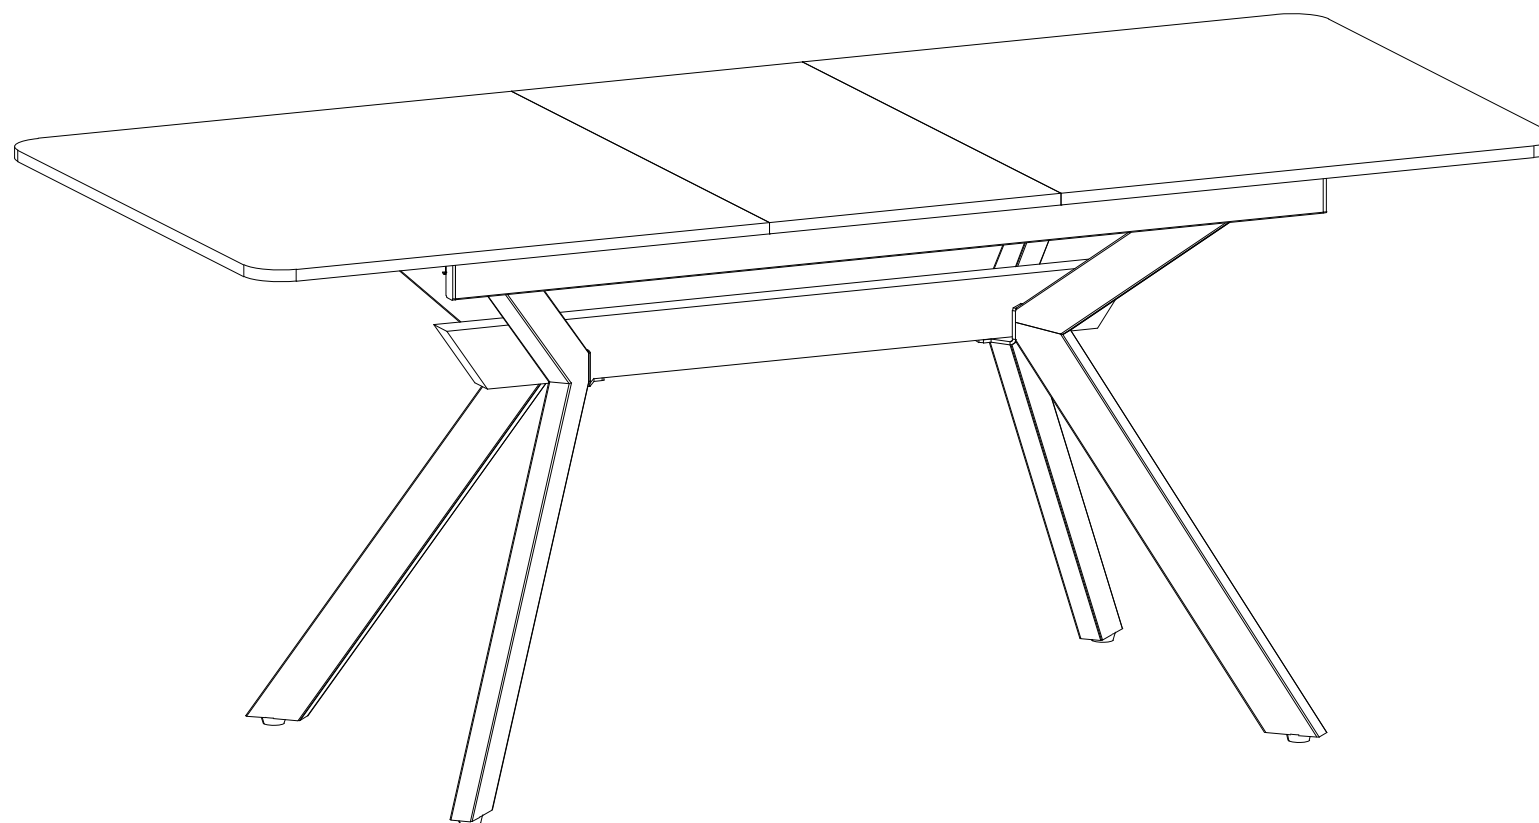

Loosely hand-tighten screws when fitting the table base; fully tighten all only after the full frame is aligned and assembled.

 
If you have any questions, please feel free to contact us at any time.
Official Consultation Email: **service@syimex.cn**

 
Parts & Tool List

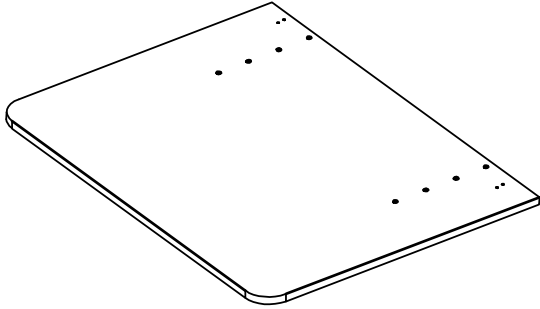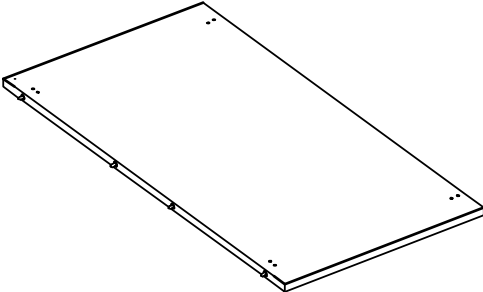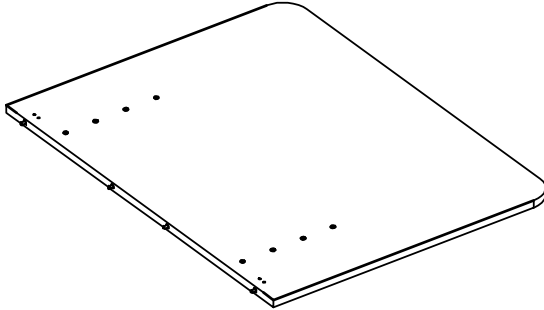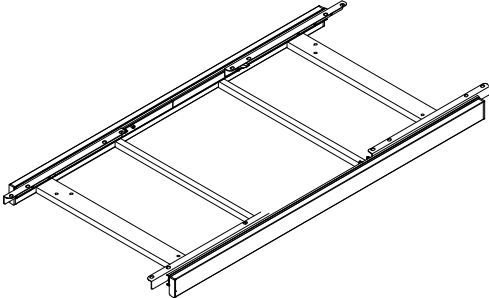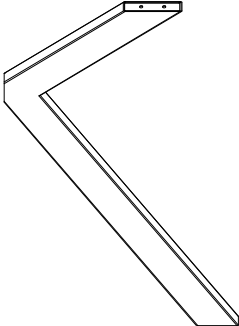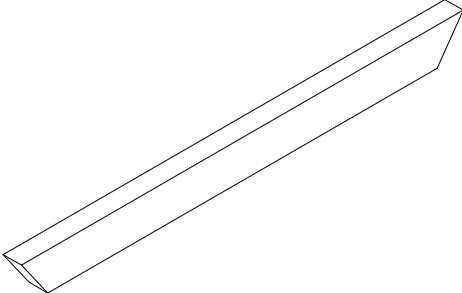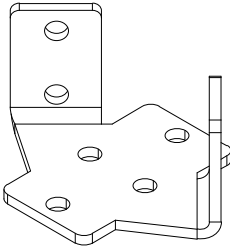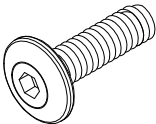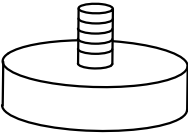①x1 	②x1 	③x1 	④x1 	⑤x4 
⑥x1 	⑦x2 			
Ax24+1  M6*12mm	Bx16+1  M6*30mm	Cx16+1  Ø3.5*14mm	Dx4 	Ex4  Ø32*M6*15mm
Fx1  S4				

 
1


Fx1

 
Dx4

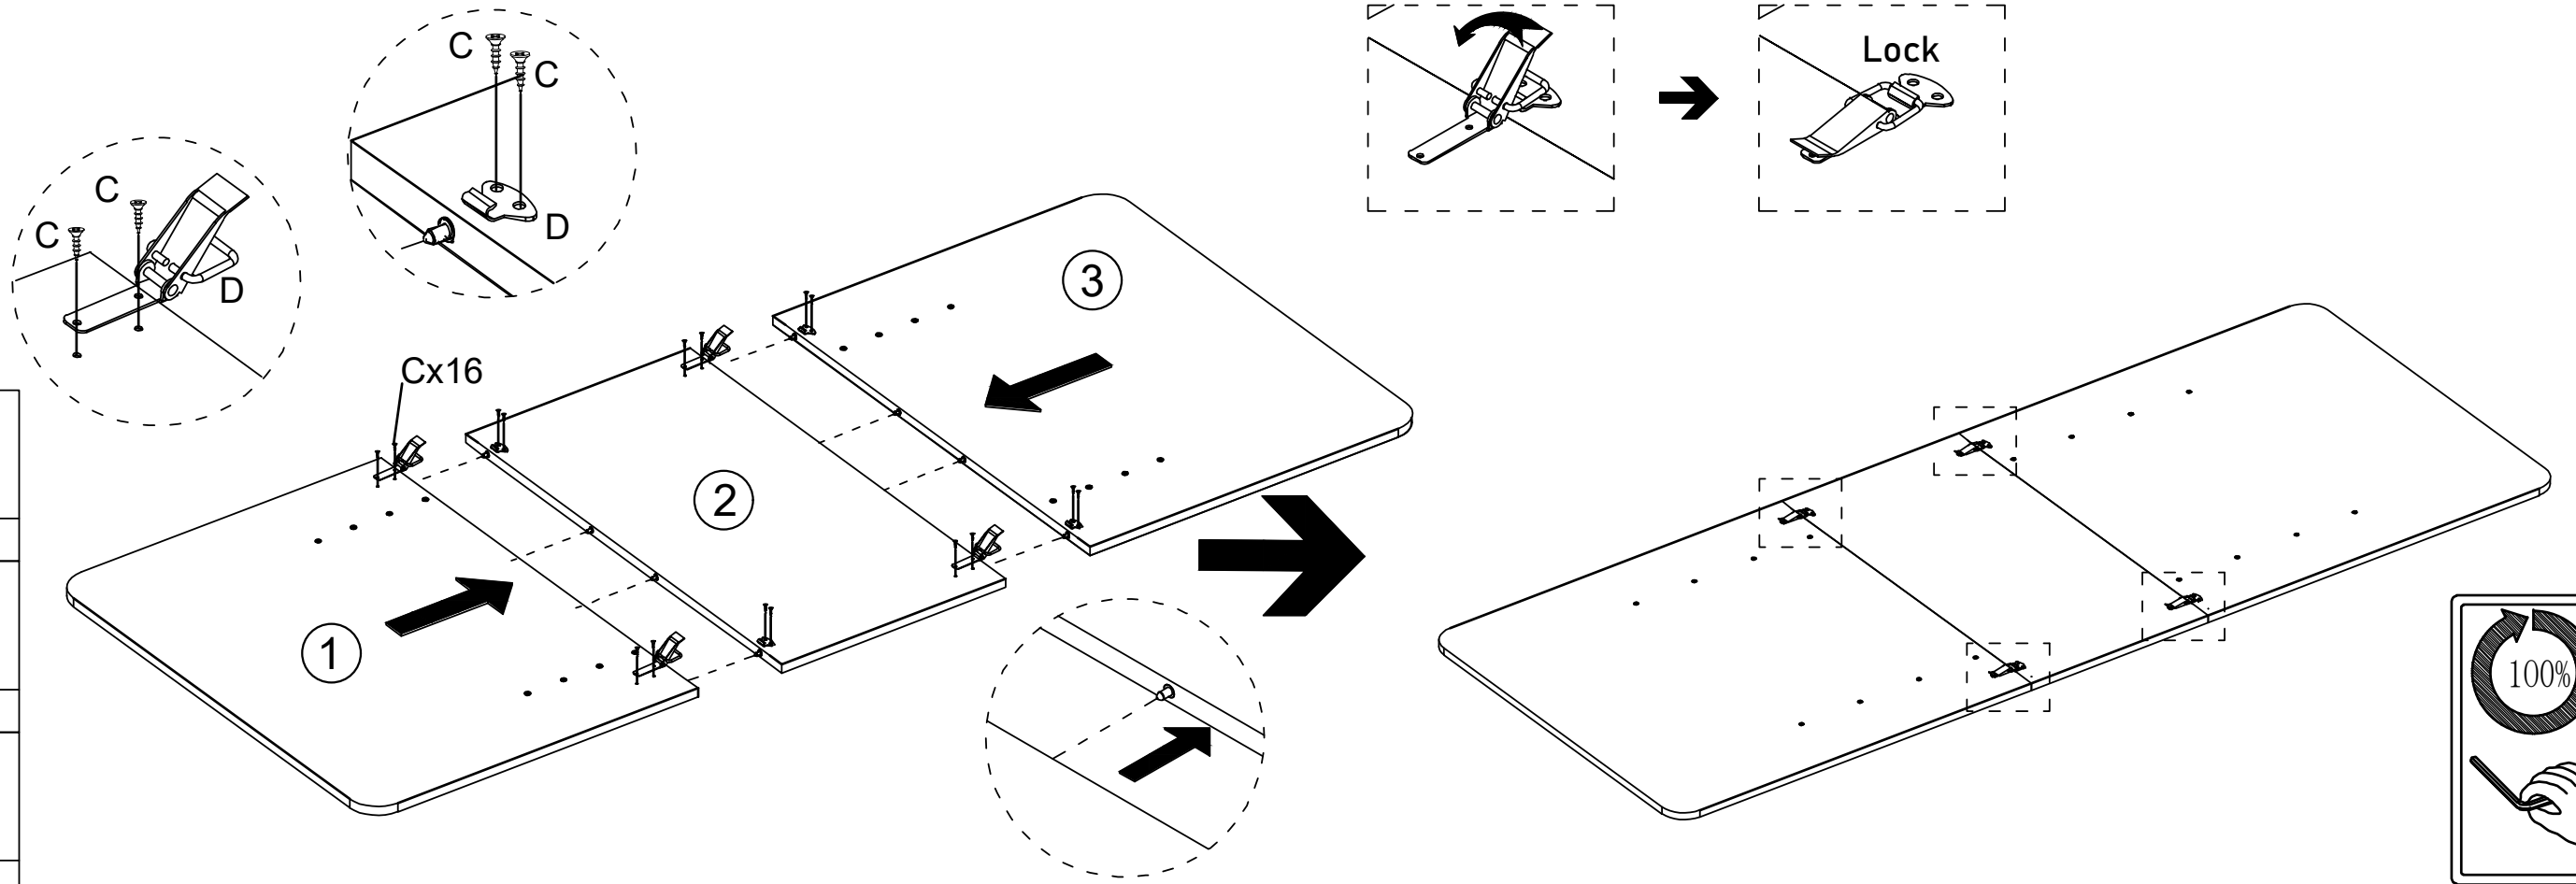Cx16

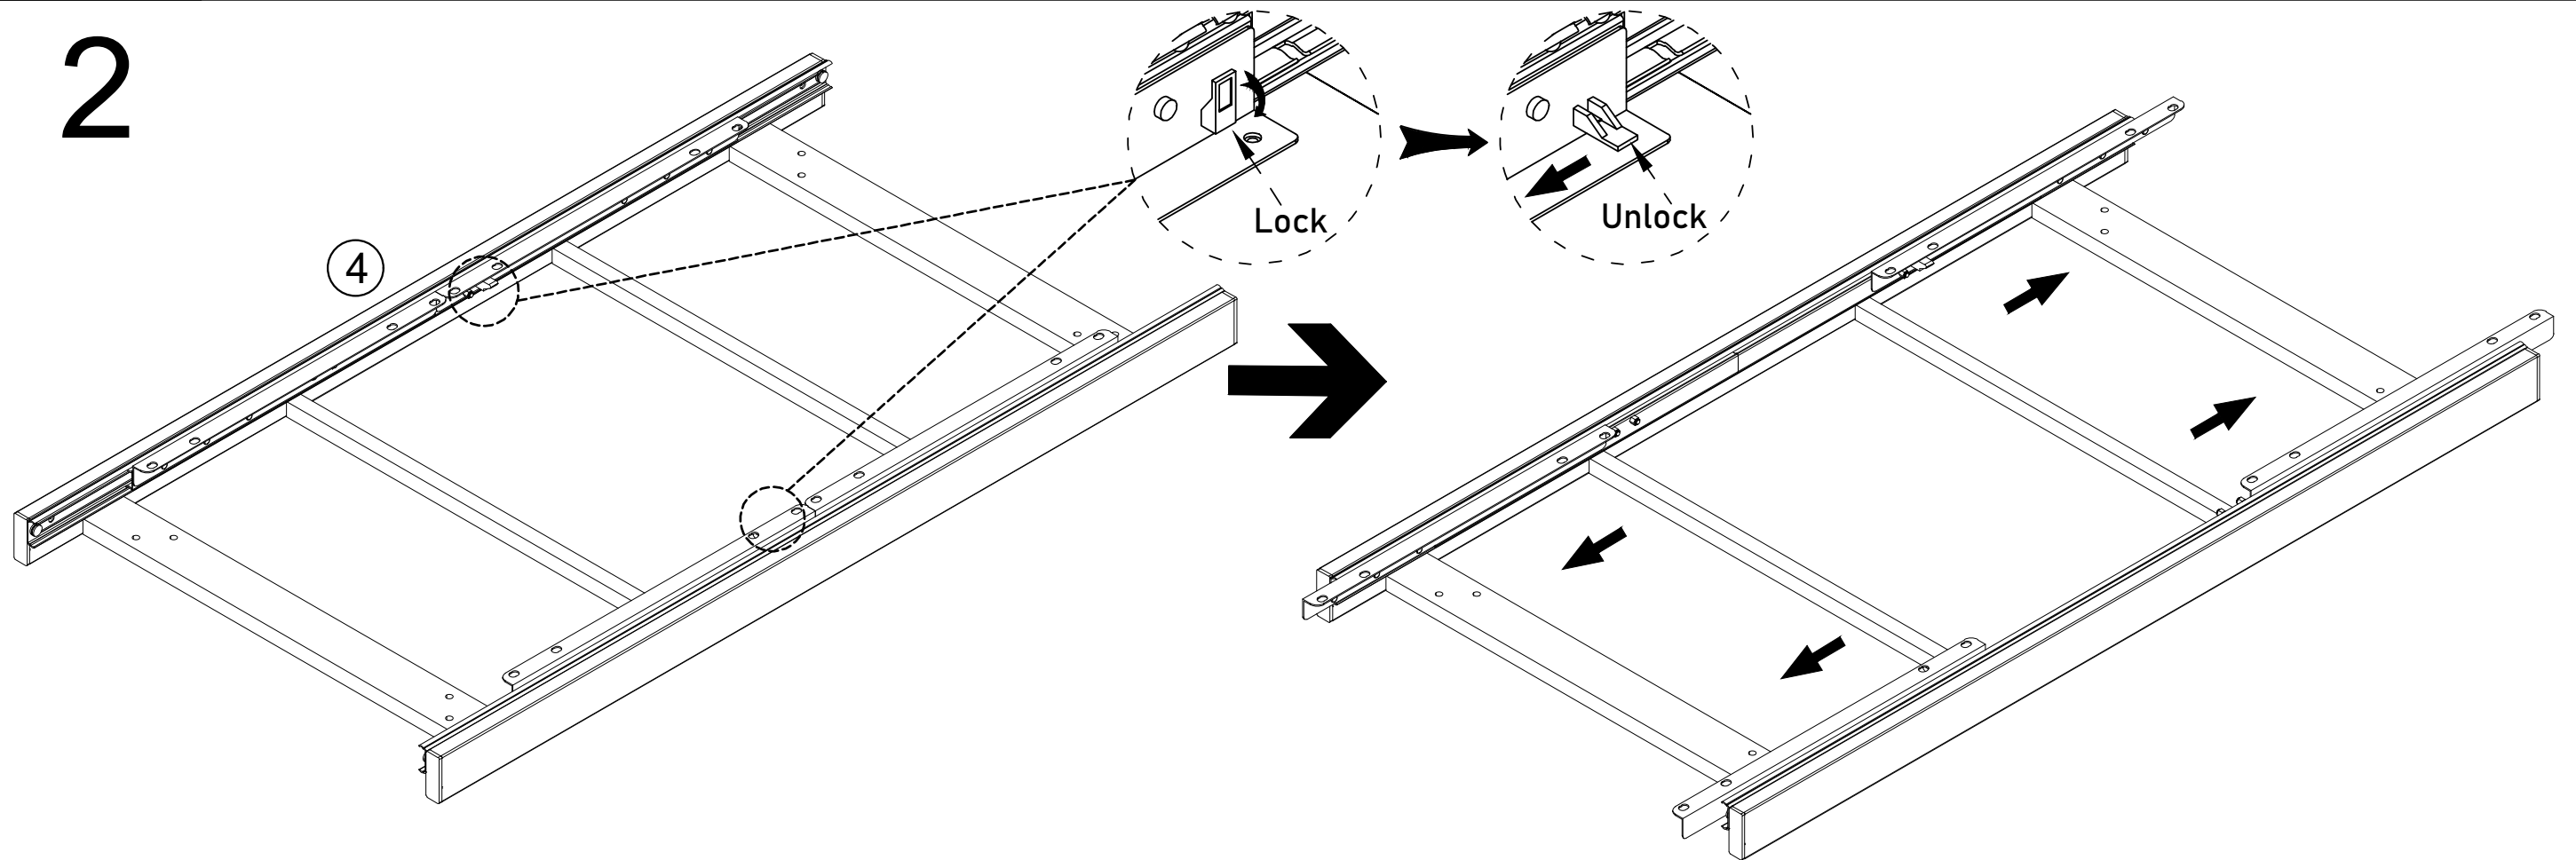

 
 
 
2

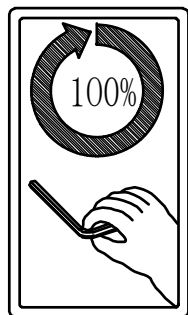

3

 


	
Bx8	Fx1

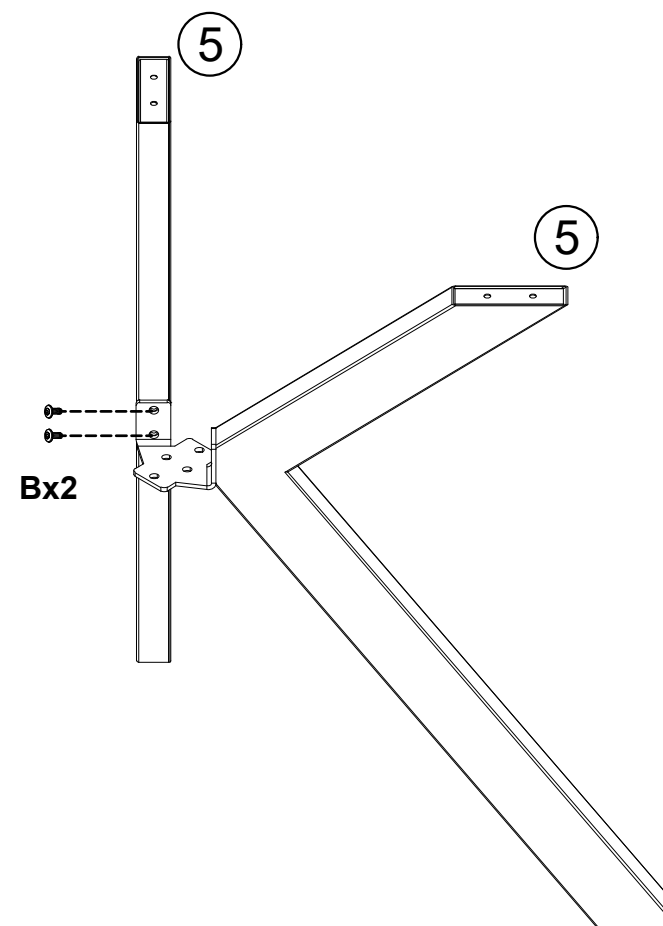 
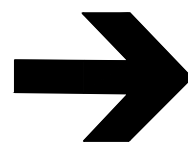 
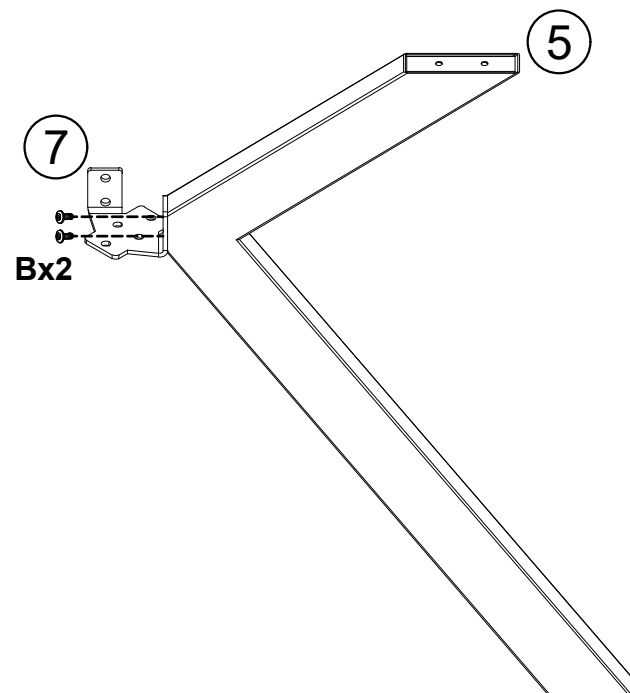 


x2

4

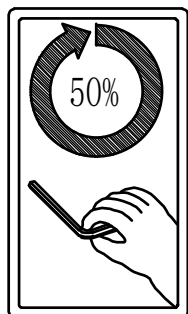 


	
Ax8	Fx1

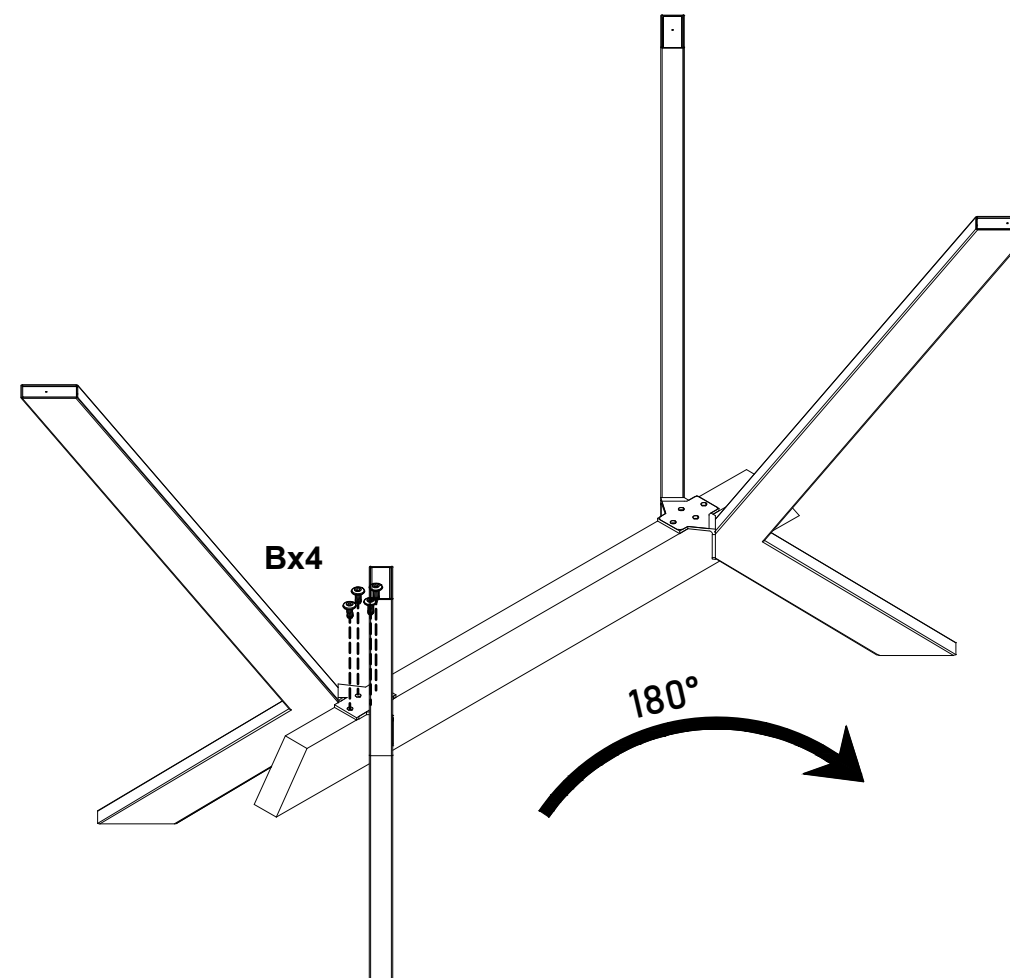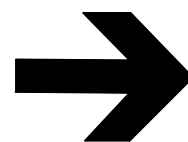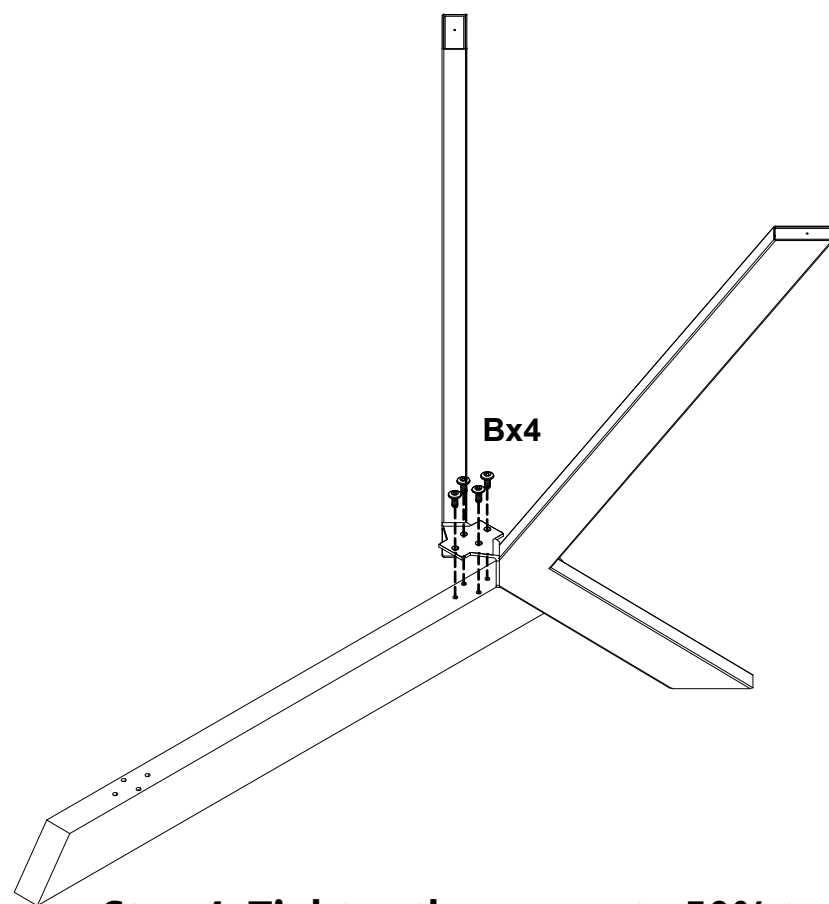

Step 4: Tighten the screws to 50% torque

 
 
 
5

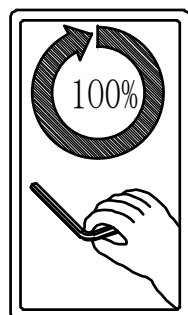

Fx1



Bx8

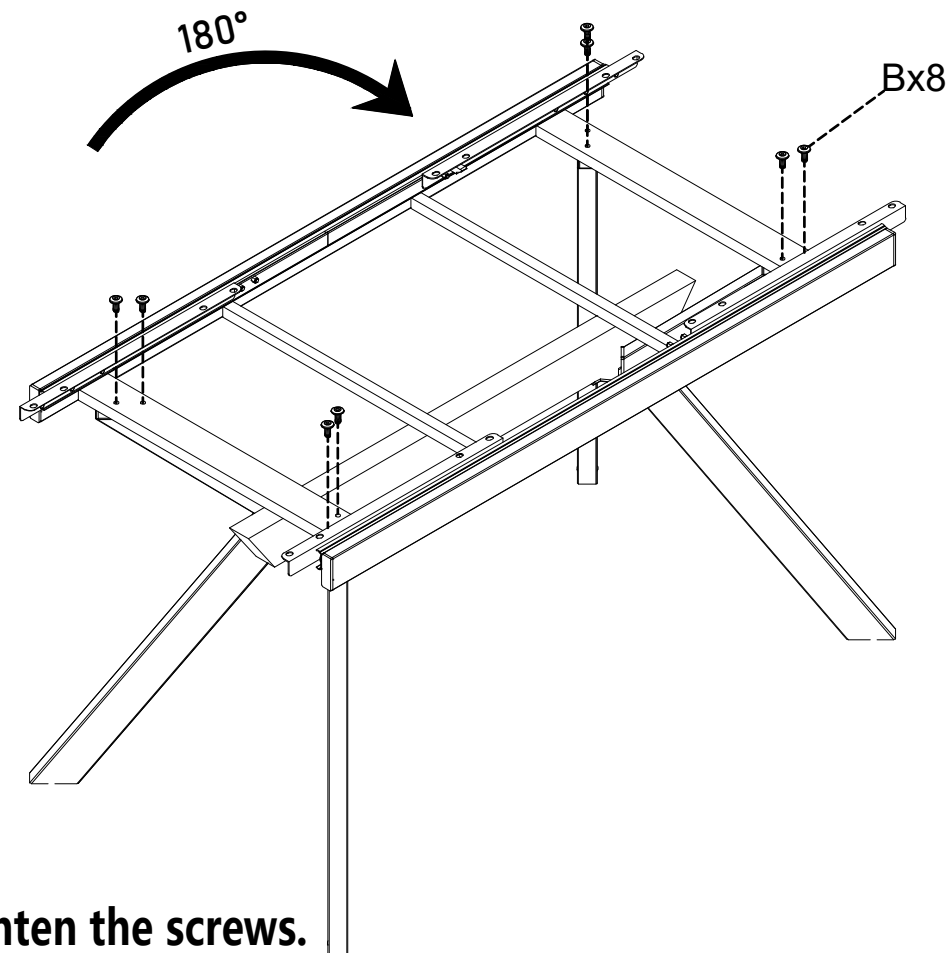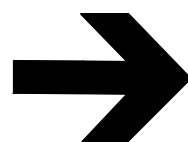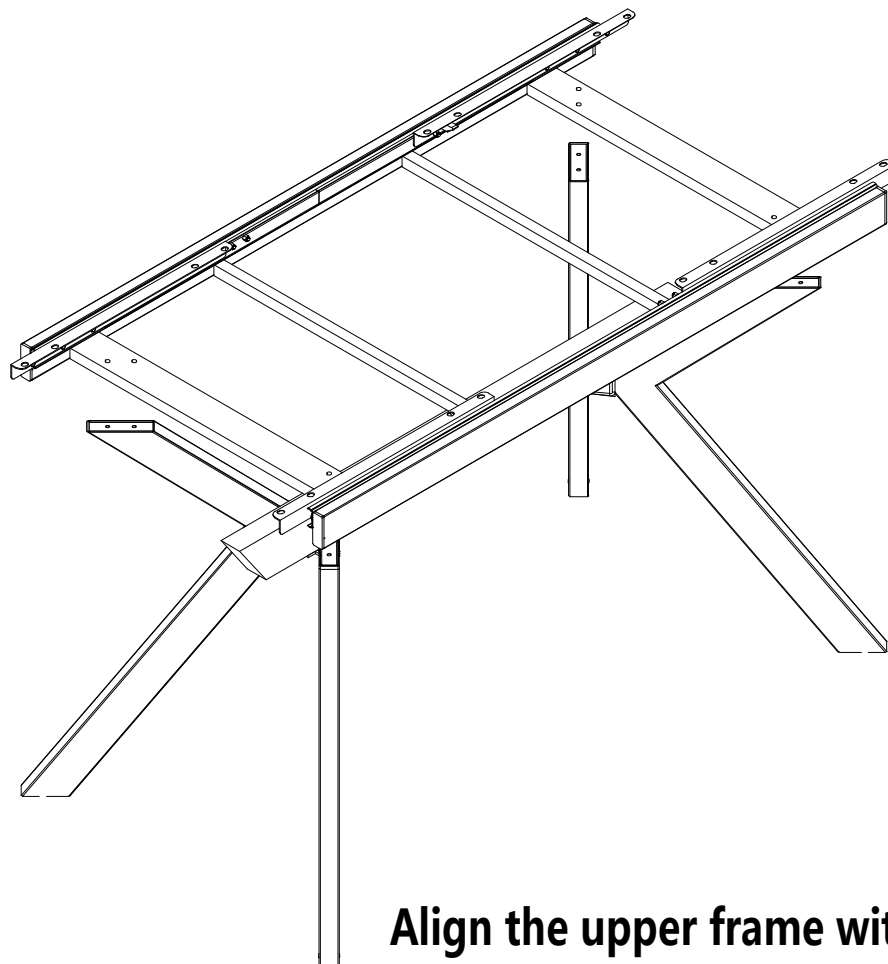 


Align the upper frame with the screw holes, then tighten the screws.

 
6



Fx1

 


Ex4

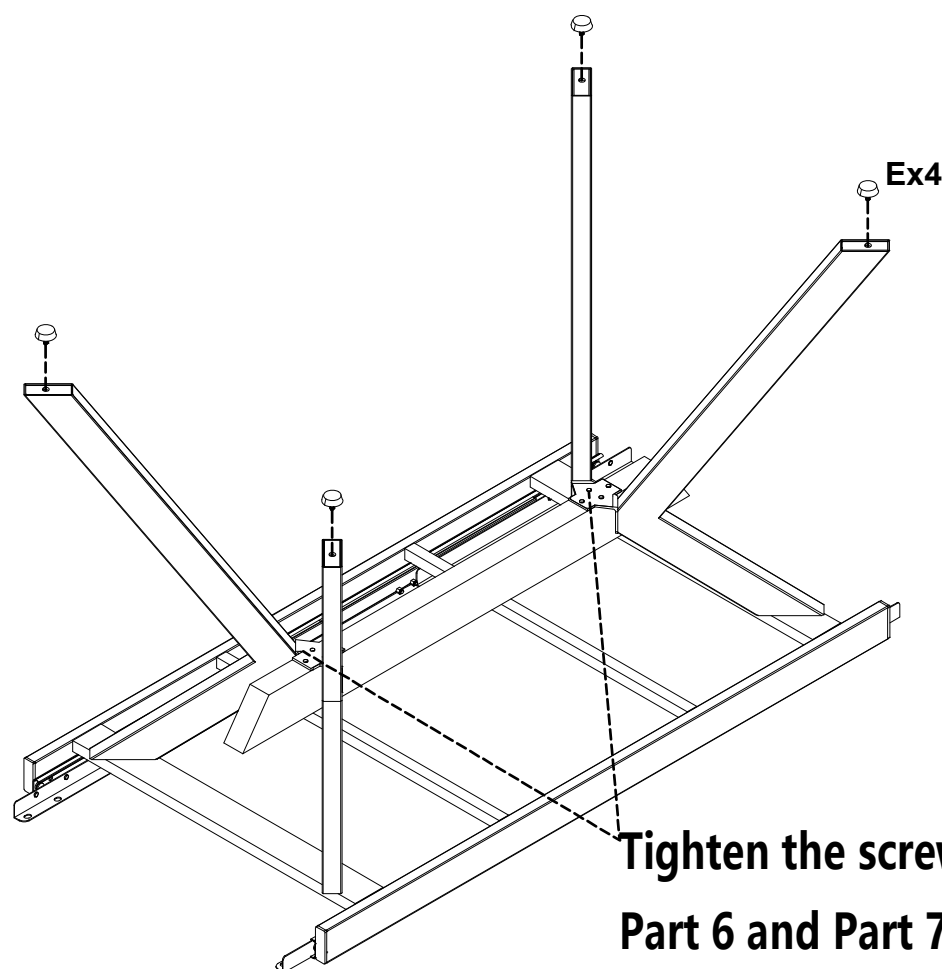

Tighten the screws to fasten Part 6 and Part 7 together.

 
7

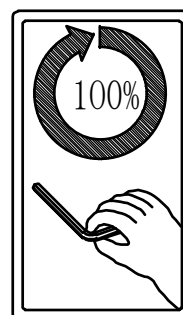

Fx1

 
 
 
 


Ax16

 
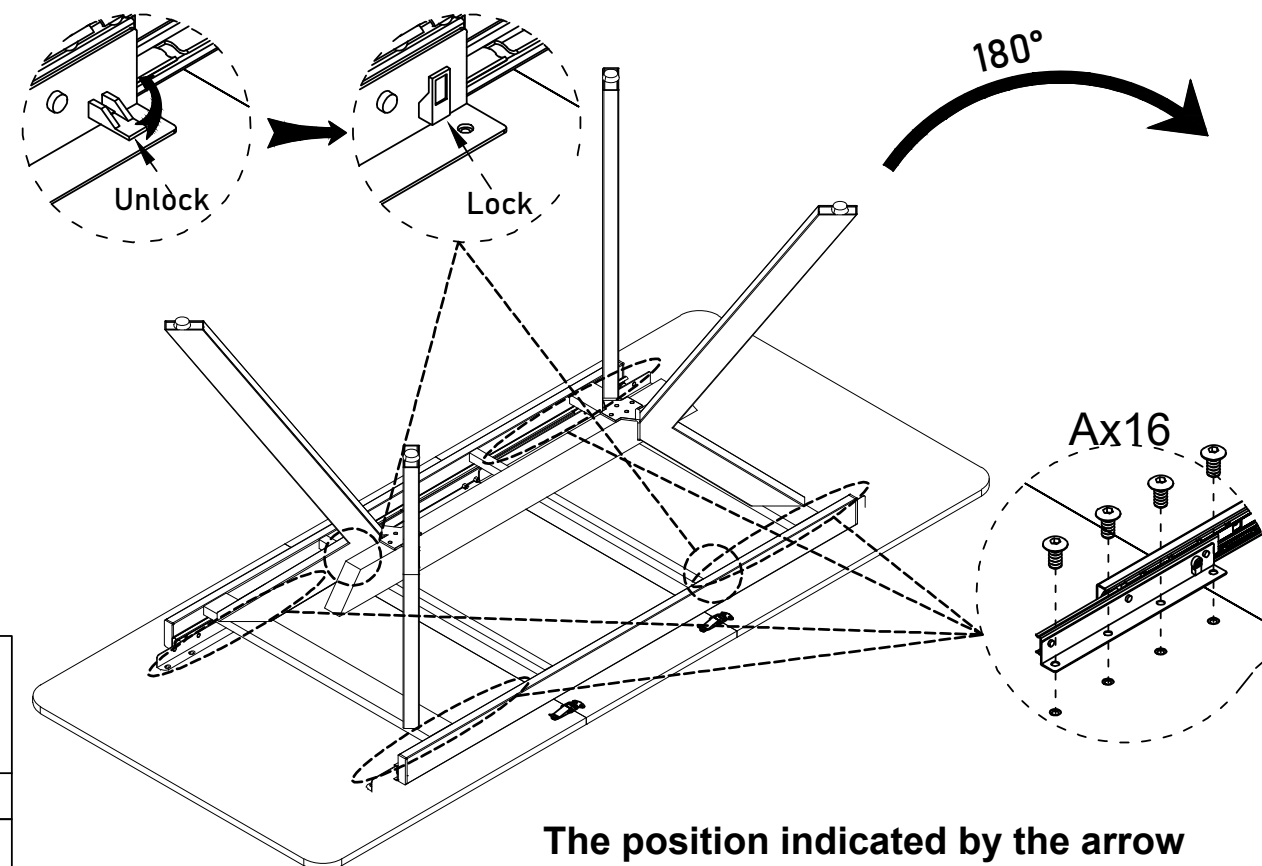 


The position indicated by the arrow on the slide rail needs to be flush with the edge of the panel below.

 
8

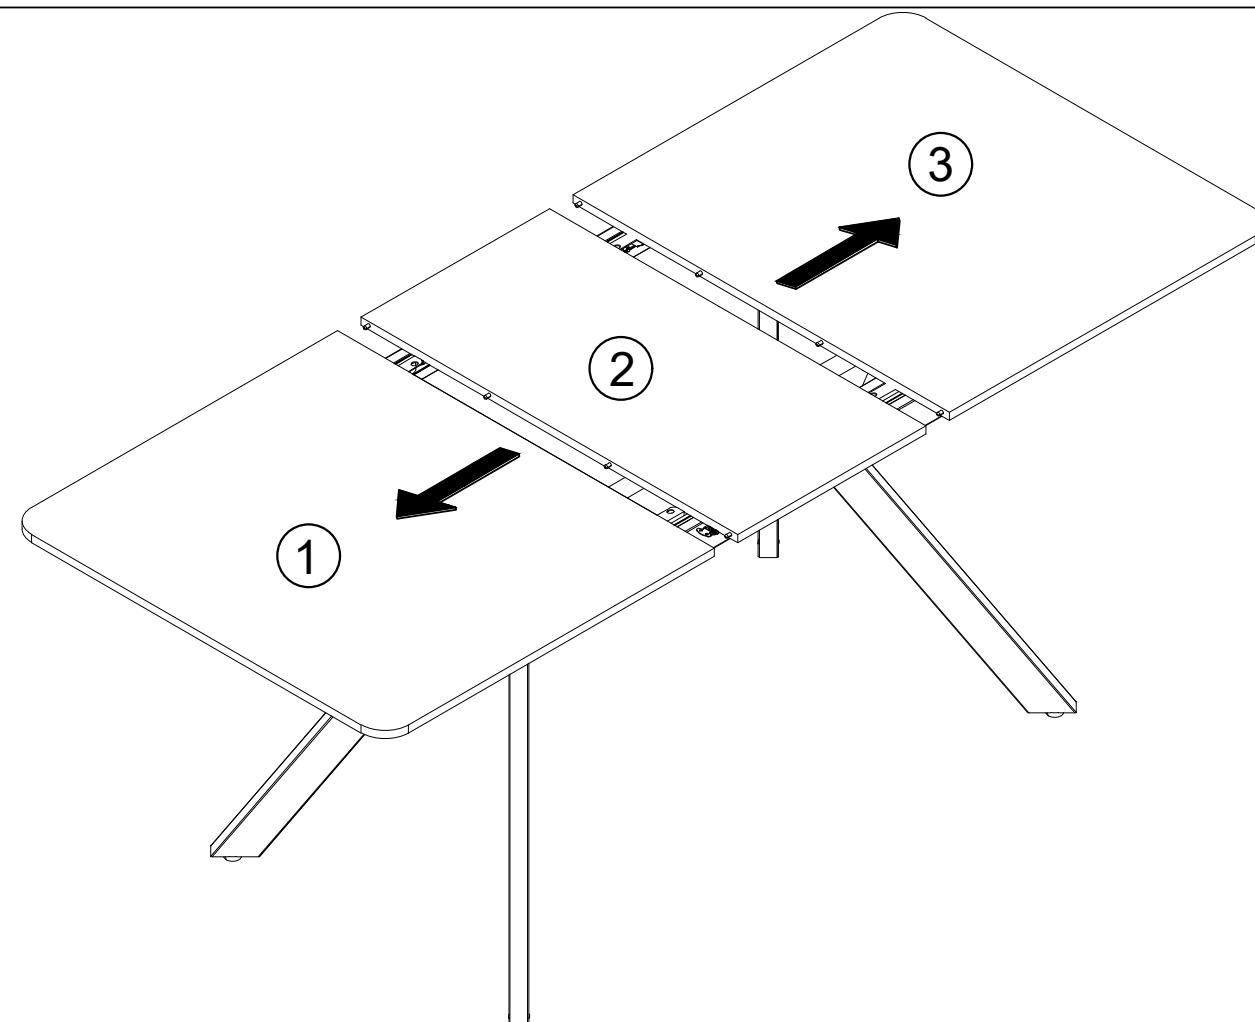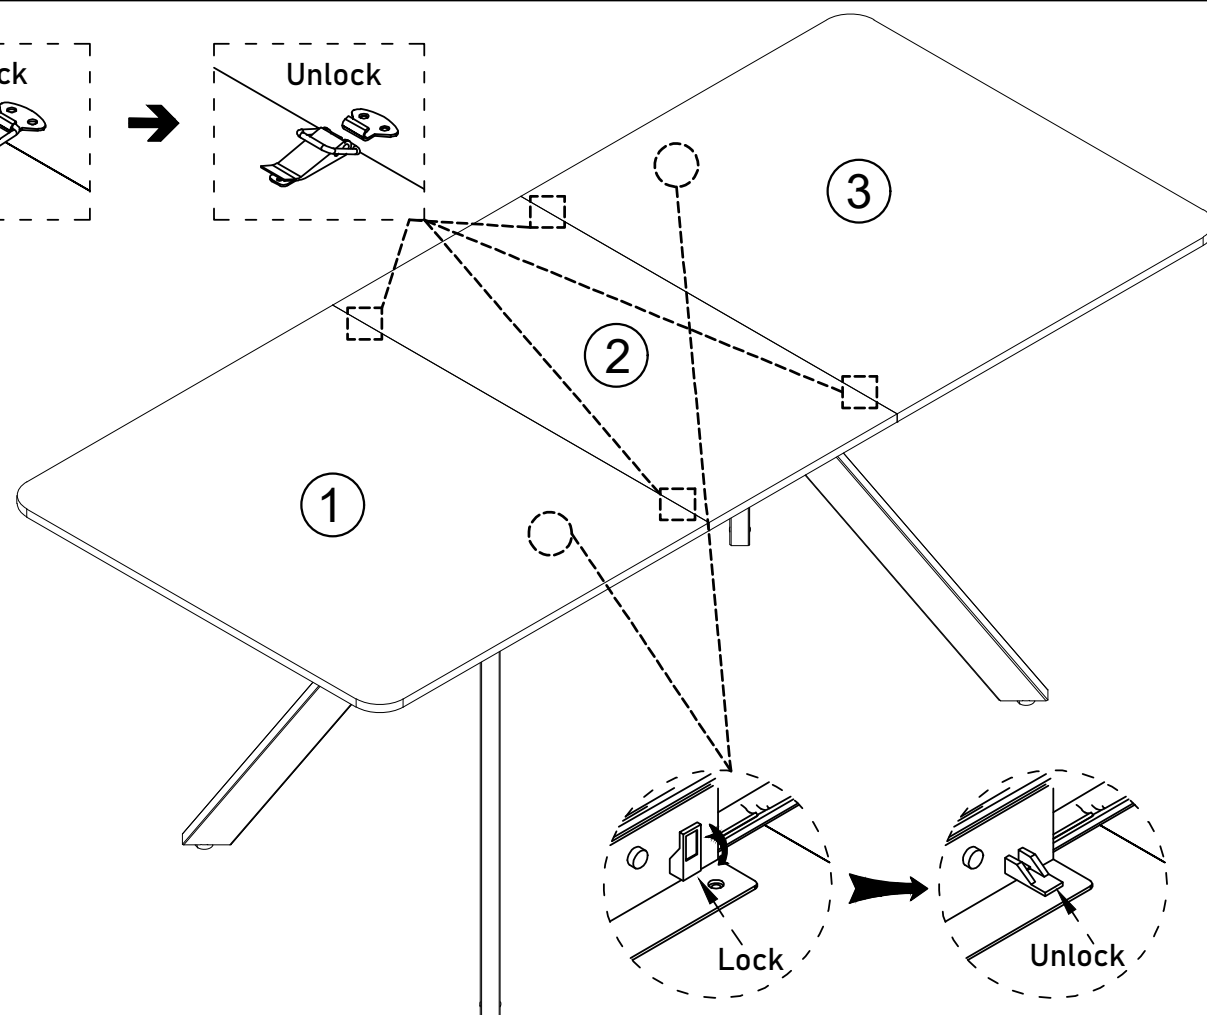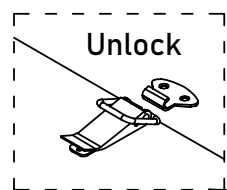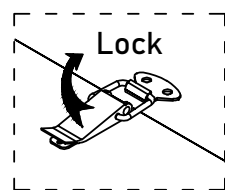

9

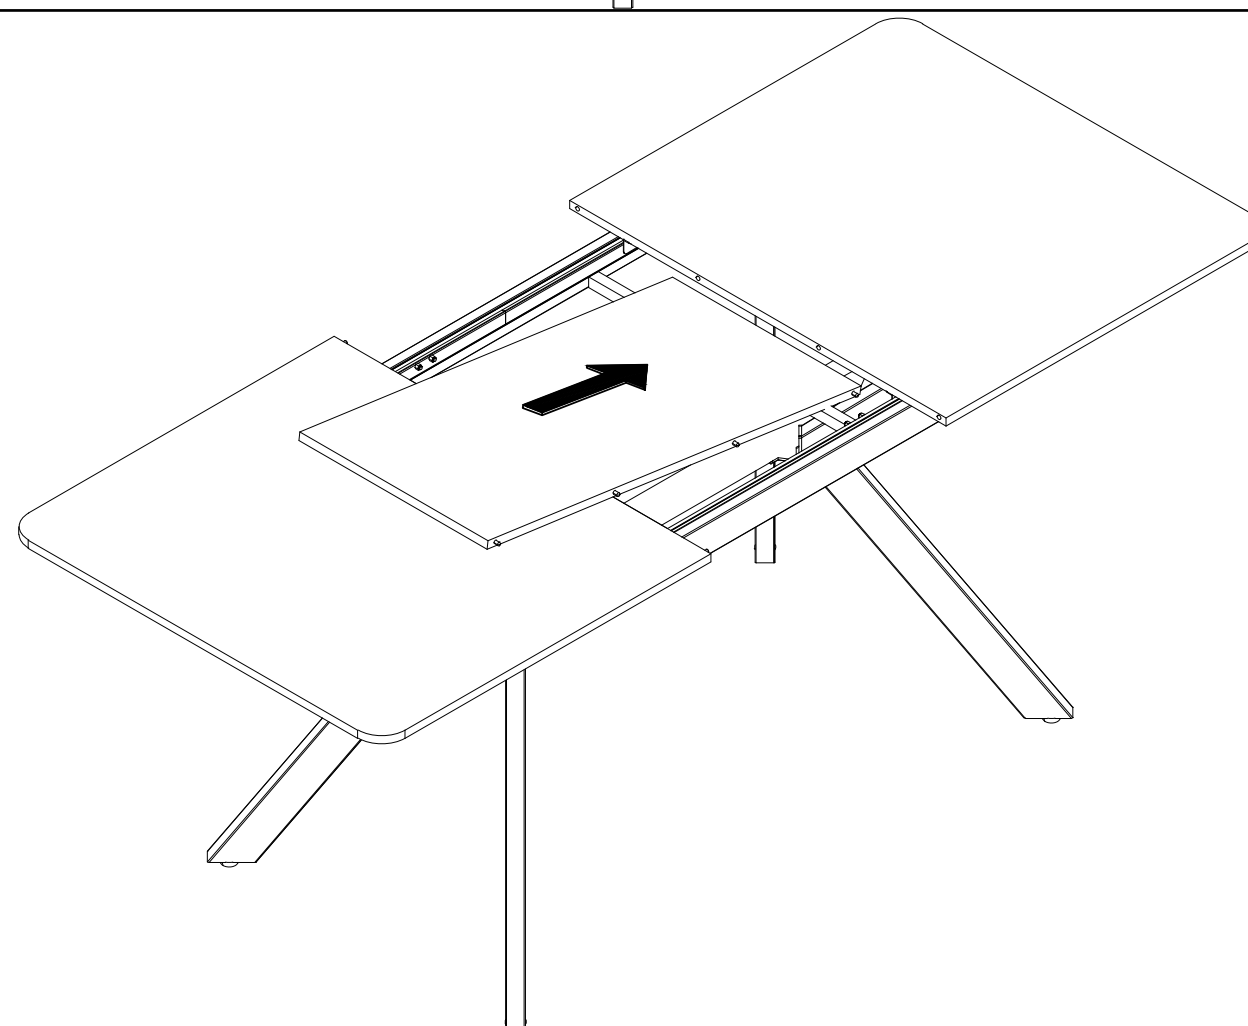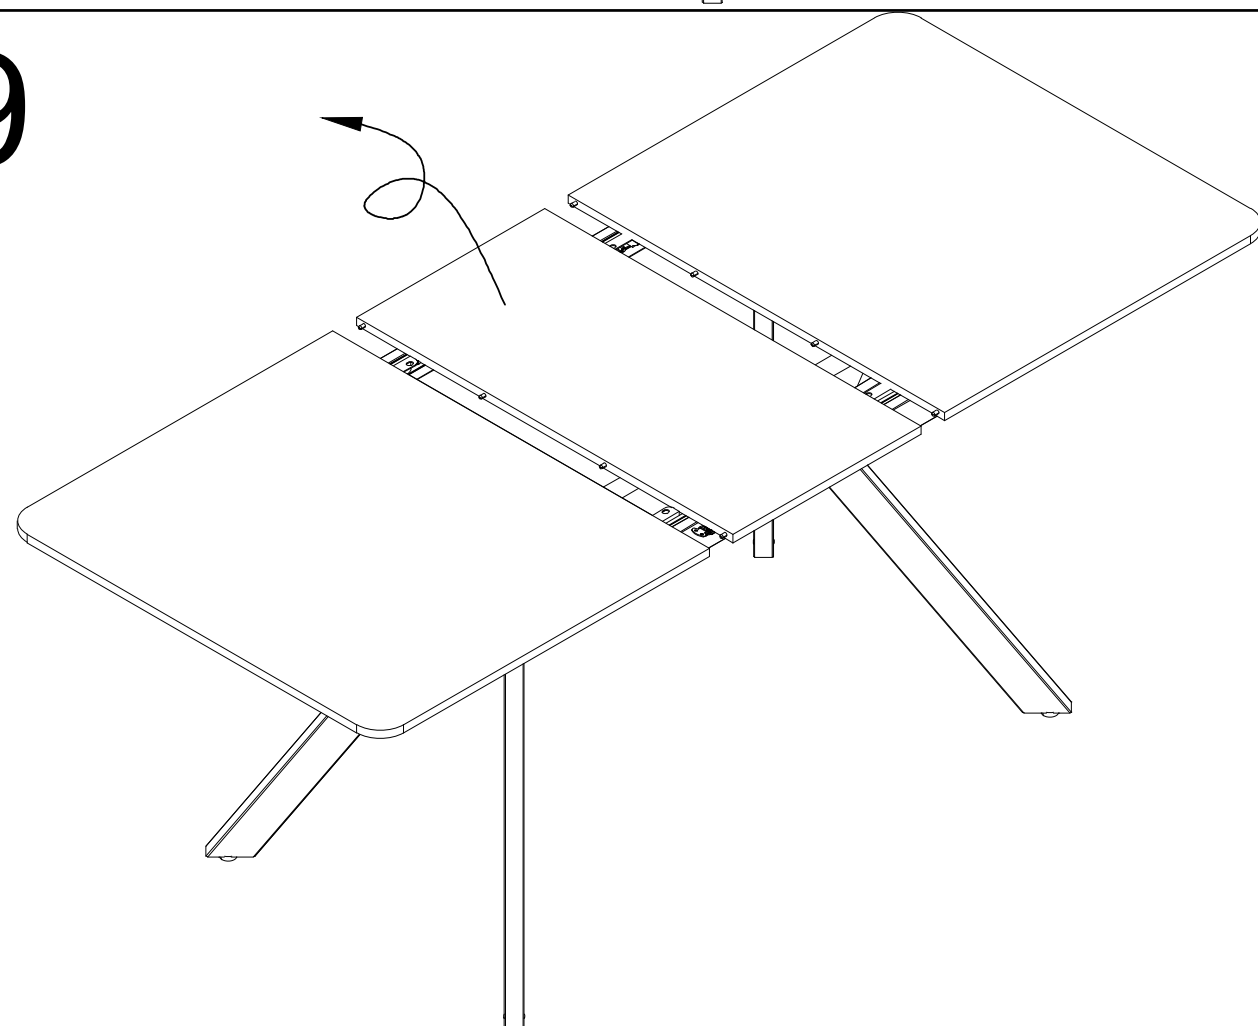

10

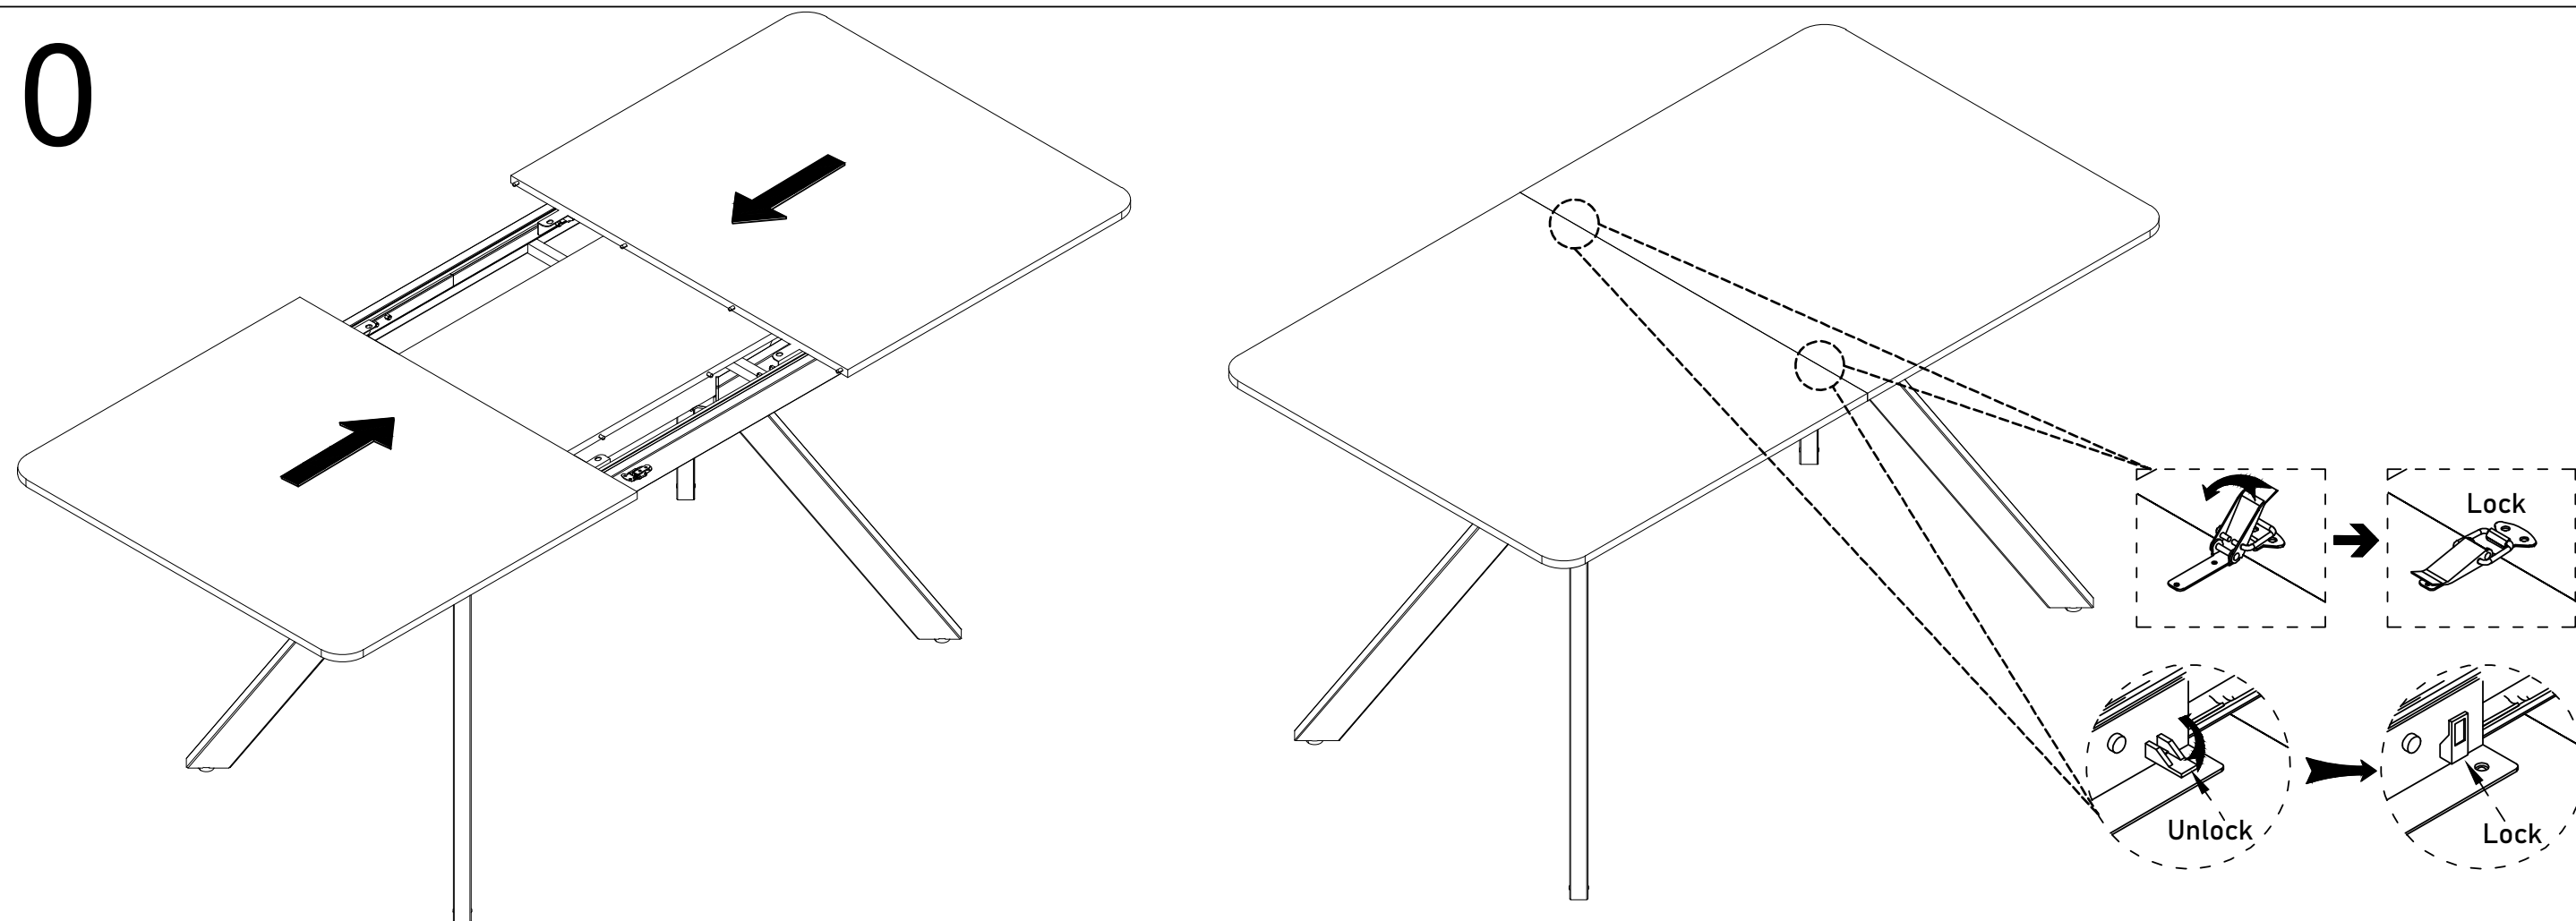

11



If you find the floor is uneven, you can adjust the height of the "E" accessories so the table can be used normally.