



## **SHAKER BOOKCASE**

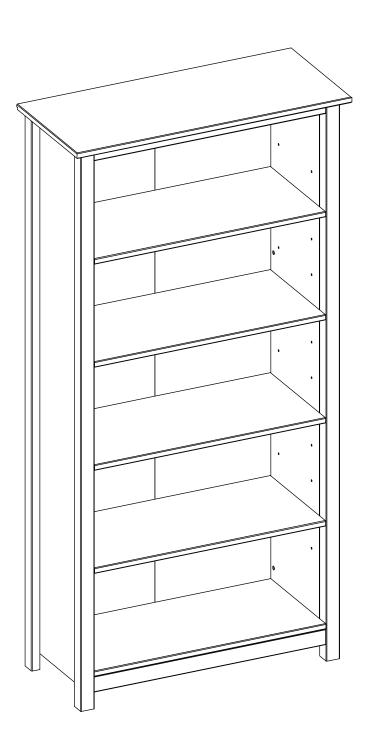


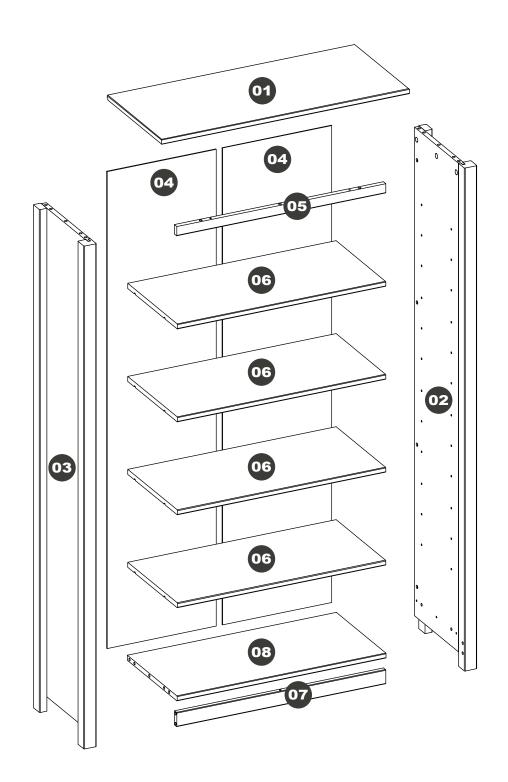

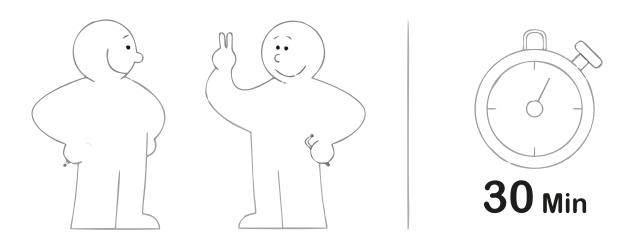

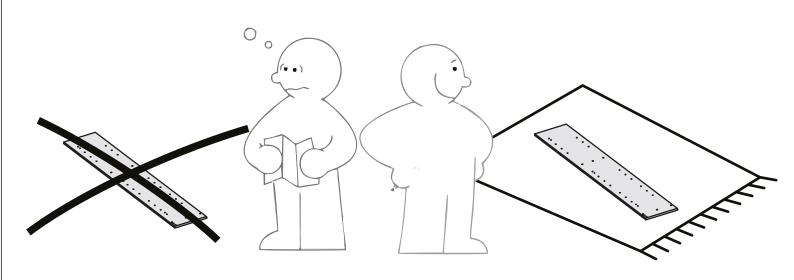

## Tools required

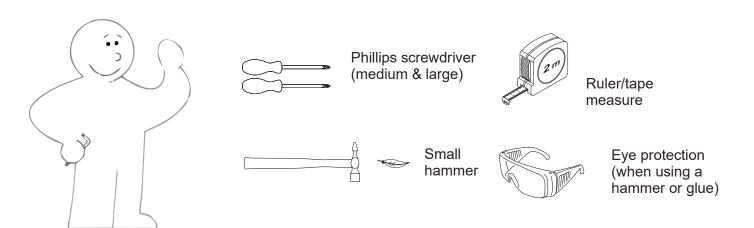



A	8x30mm	15
С	3,0x16mm	02
E		02
G		12

В	3,5x30mm	04
D	4,0x40mm	03
F		31
Н		04
J		16





HARDWARE IS LOCATED INSIDE A CARDBOARD BOX! CHECK FOR IT BEFORE DISPOSING PACKAGING

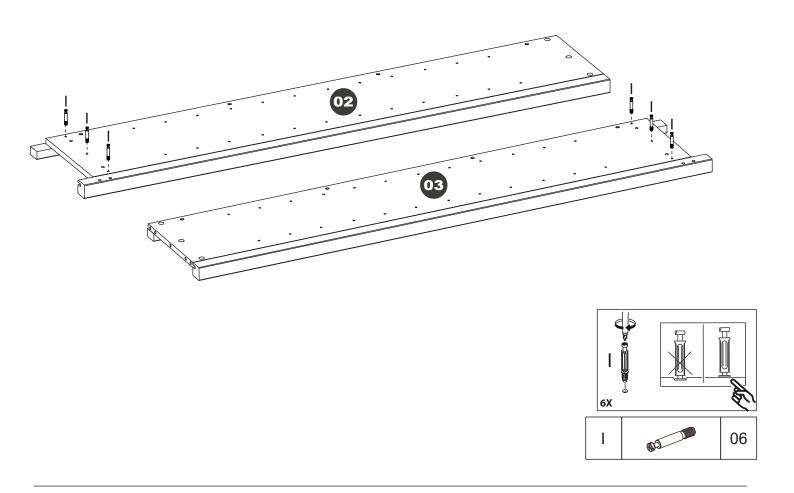

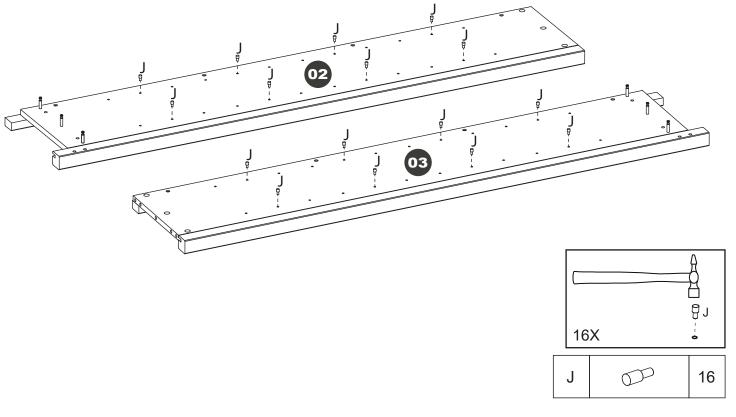



page 5 of 11

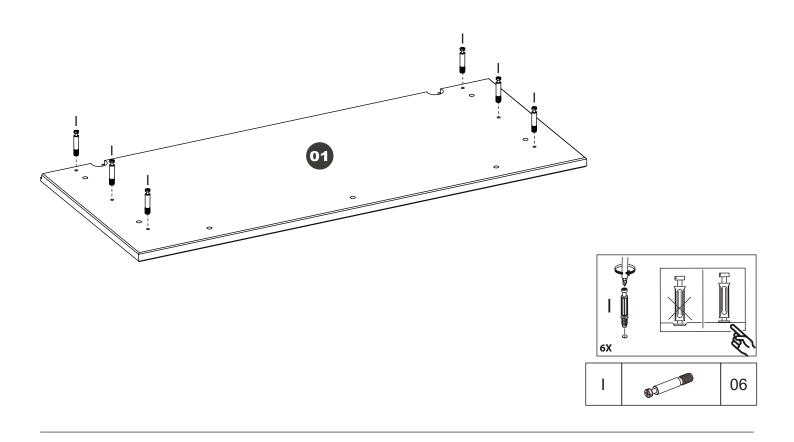

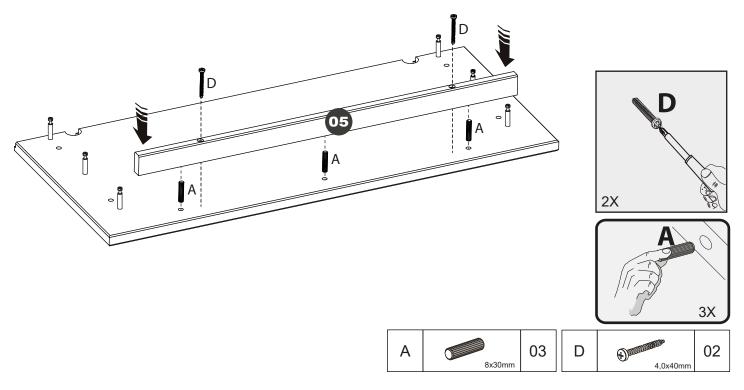



page 6 of 11

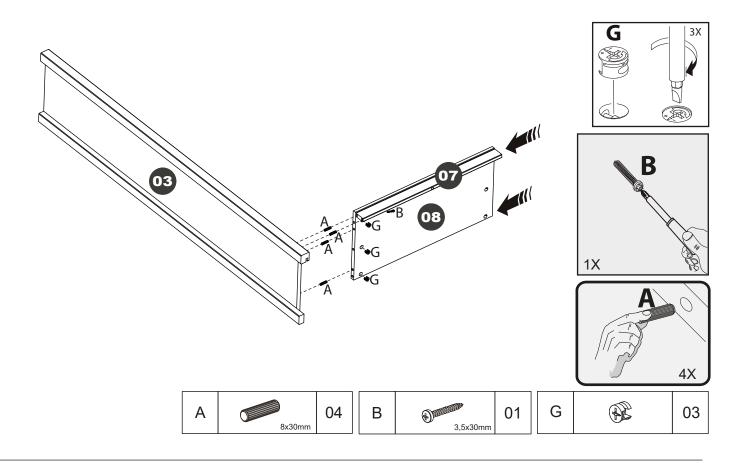

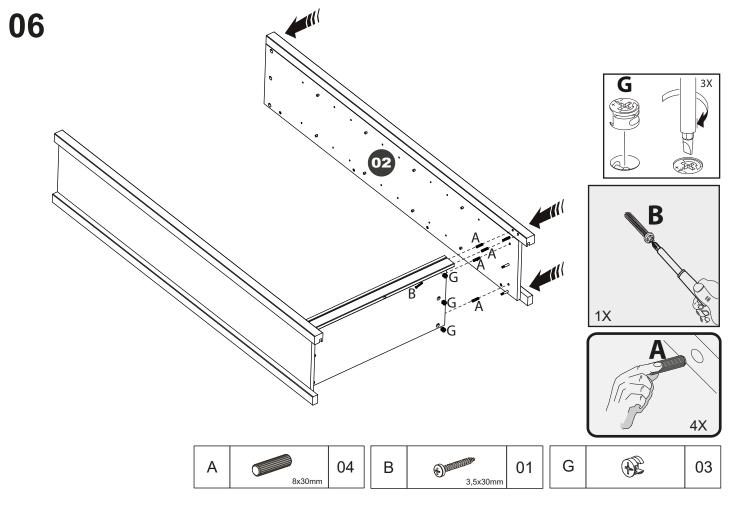


page 7 of 11

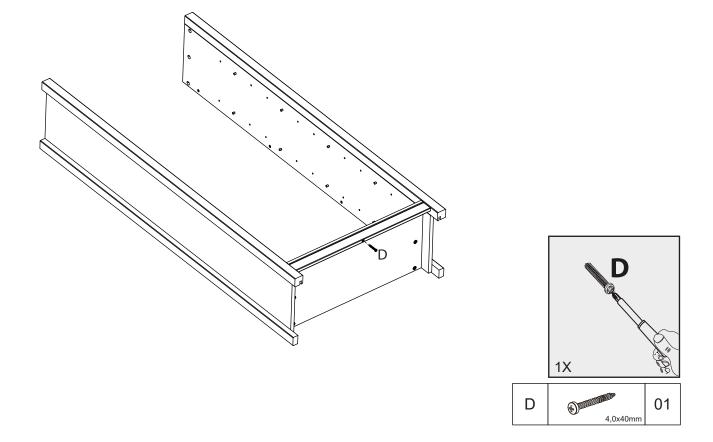


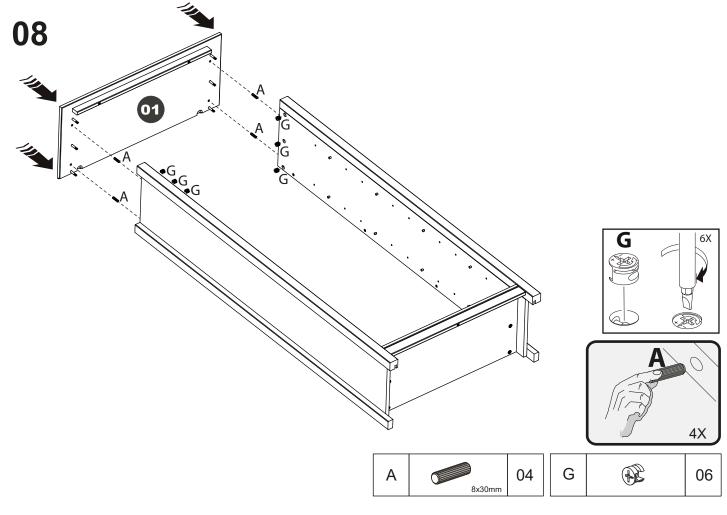

page 8 of 11



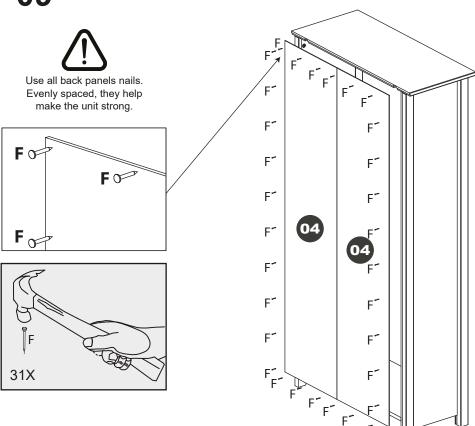


 


Important:
The unit MUST be 'square' when back panel is attached.

F 31



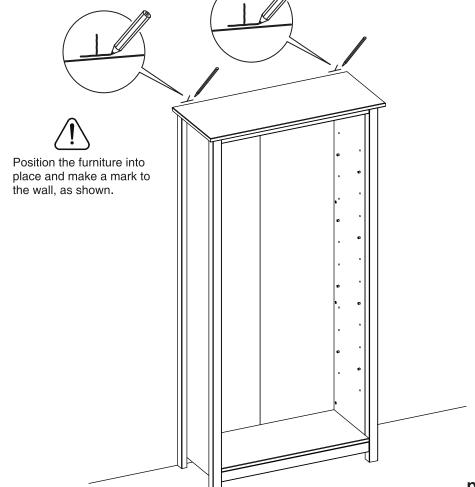

page 9 of 11

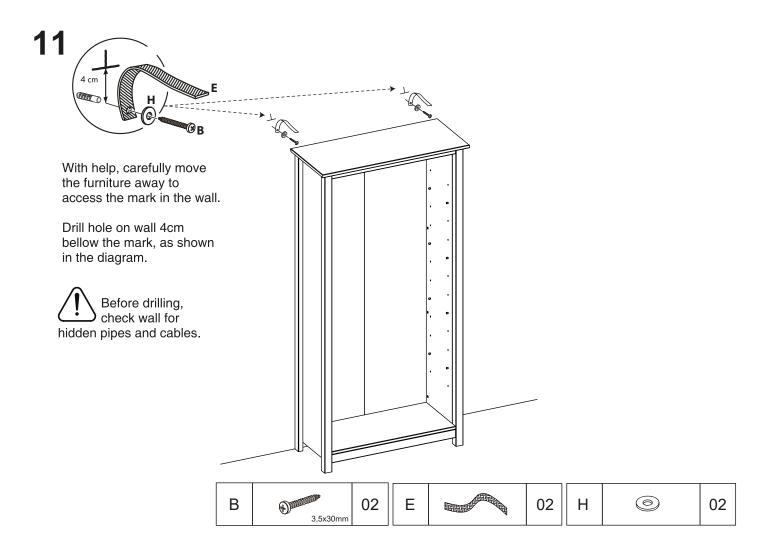



With help, carefully move the furniture back to position and insert wall strap into slot on top panel, as shown.

