

DINING ARMCHAIR

PART LIST :

A. BACKREST 1 PCE

B. SEATREST 1 PCE

C. END FRAME 2 PCS

HARDWARE :

D. WOODEN DOWELS 10 PCS

E. ALLEN HEAD BOLTS 2 PCS

F. ALLEN KEY 1 PCE

