


 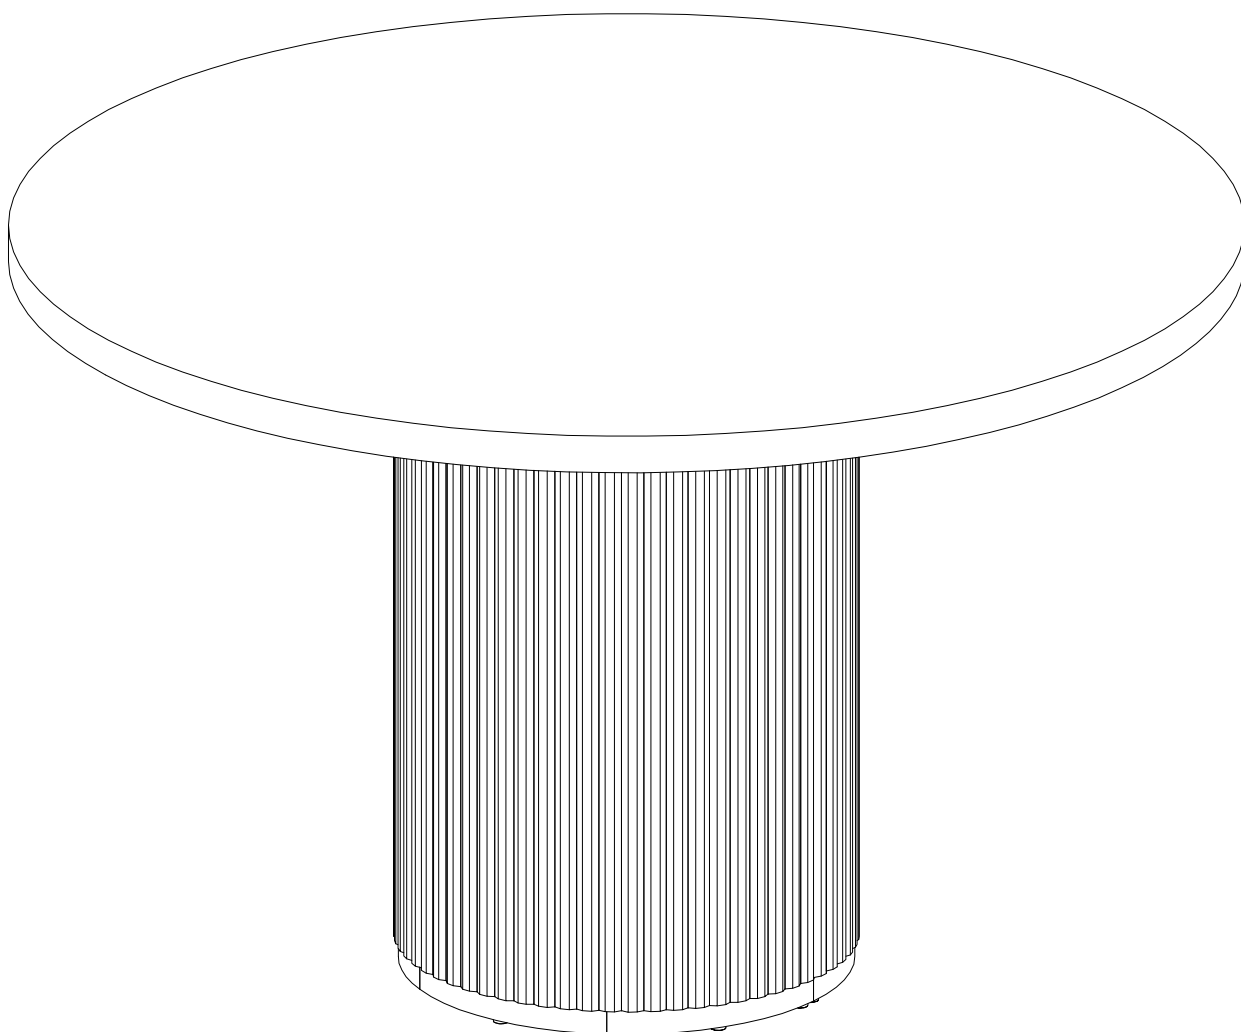
 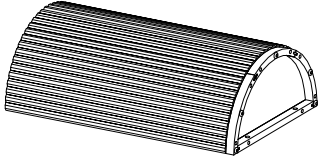


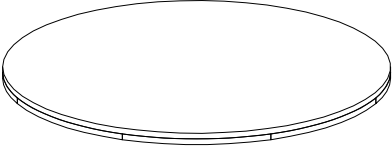




ASSEMBLY INSTRUCTION

PRODUCT NAME : CVFDR1238 DINNING TABLE




PARTS LIST:			QTY
1	Leg		2pcs
2	Top		1pc
3	Support Top		1pc
HARDWARE:			QTY
A.	Machine Screw Ø 5/16" x 1-1/2"		10pcs
B.	Lock Washer Ø5/16"		10pcs
C.	Flat Washer Ø5/16"		10pcs
D.	Dowel Ø6 x 30mm		2pcs
E.	Allen Wrench Ø4mm		1pc

STEP 1

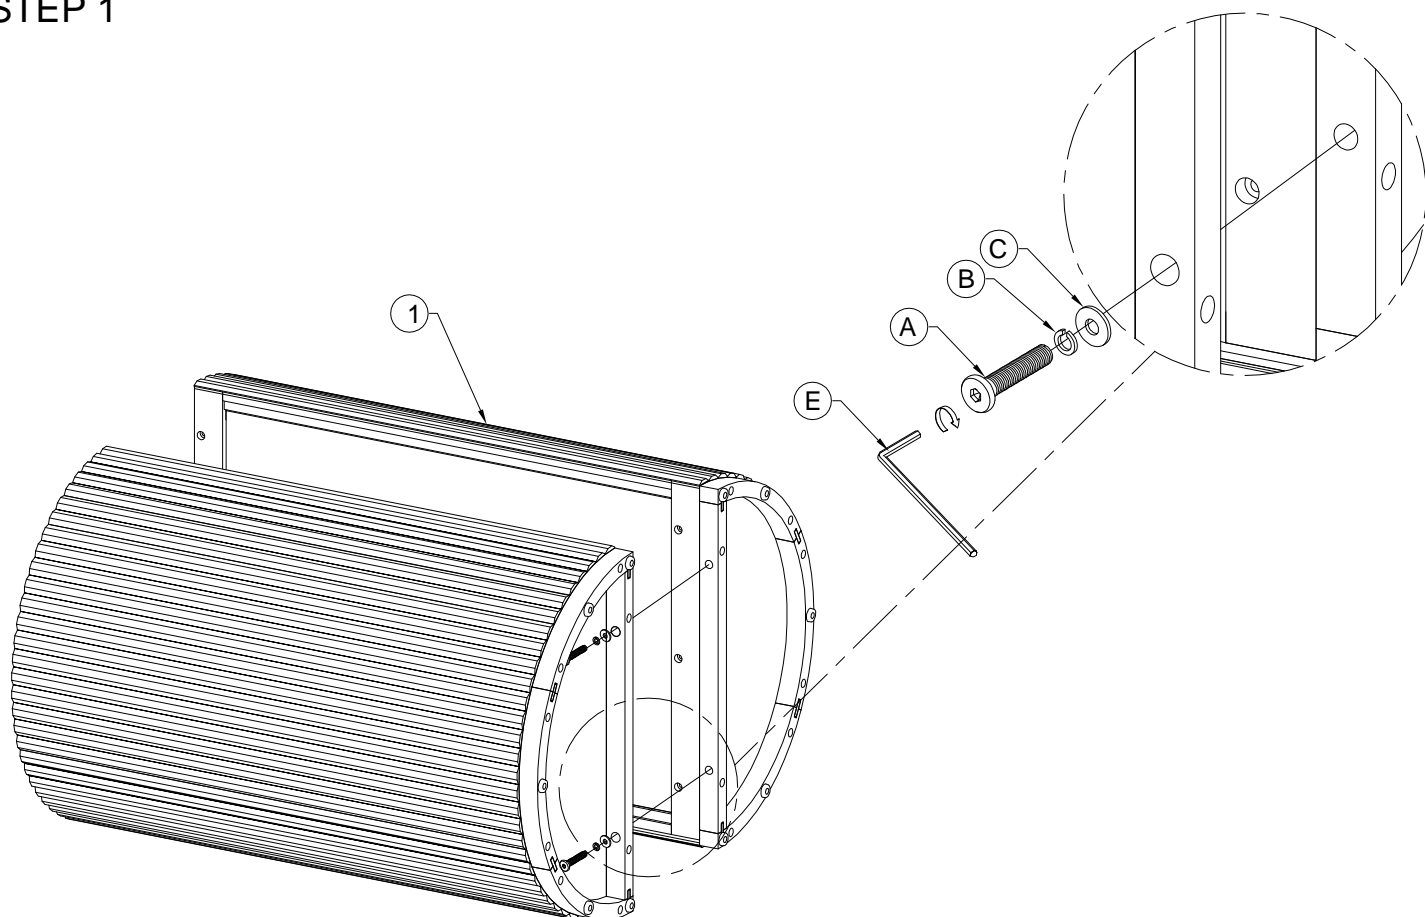


Assemble the leg (1) frame using Bolts (A), Lock washer (B) and flat washer (C) from the bottom as shown and tighten using Allen key (E).

STEP 2

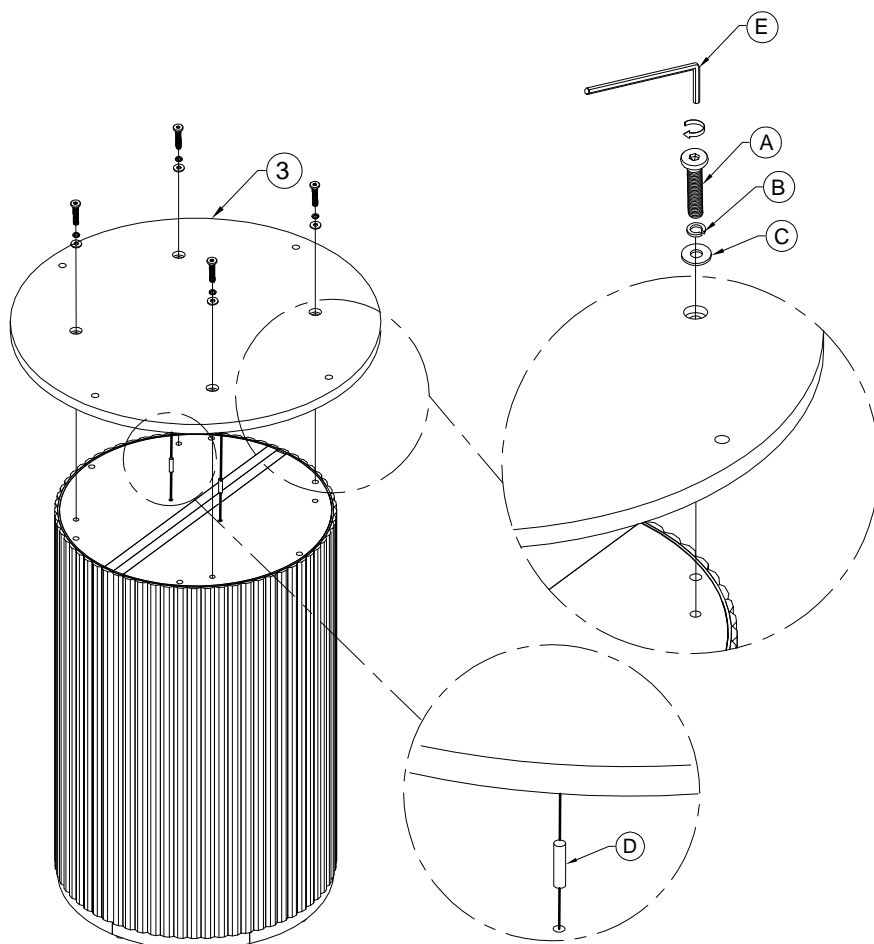


Assemble the Support Top (3) frame using dowel (D), Bolts (A), Lock washer (B) and flat washer (C) from the bottom as shown and tighten using Allen key (E).

STEP 3

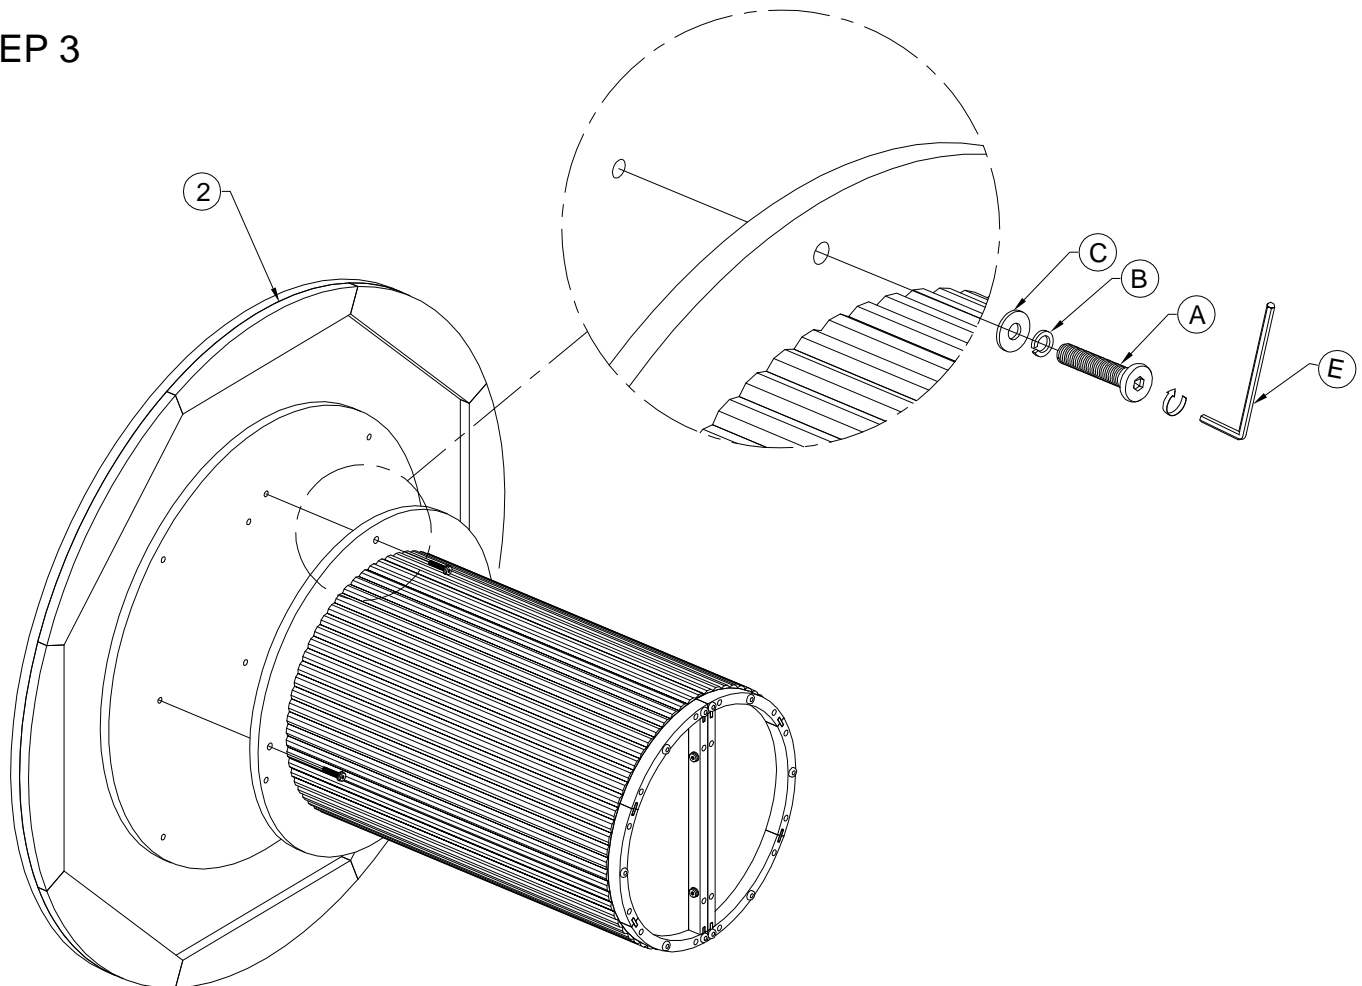

Assemble the Top (2) frame using Bolts (A), Lock washer (B) and flat washer (C) from the bottom as shown and tighten using Allen key (E).

STEP 4

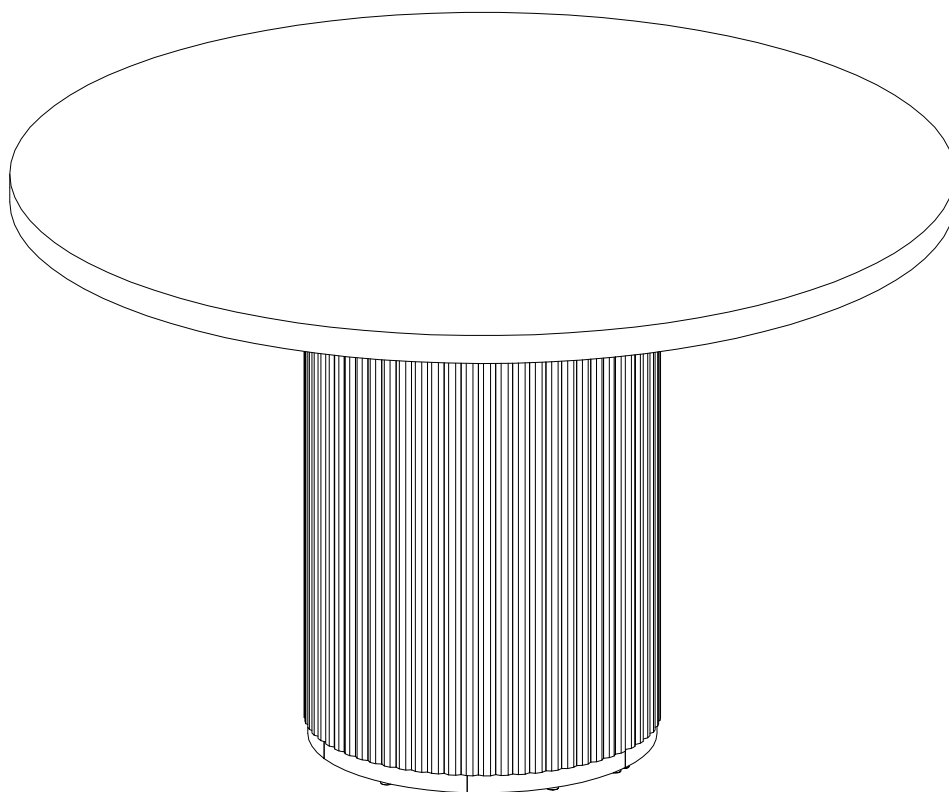

Place the dining table in a standing position, assembly is complete.