



Liberty Furniture
INDUSTRIES, INC

164-CD-3DLS

ITEM# : 364-CD-3DLS


464-CD-3DLS

LIBERTY FURNITURE

ASSEMBLY INSTRUCTIONS

DESCRIPTION : DROP LEAF TABLE

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below :

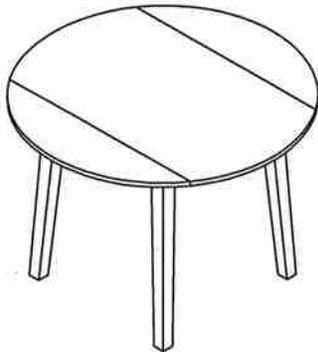




PARTS LIST

NO.	SKETCH	DESCRIPTION	Q'TY
1		TABLE TOP WITH APRON	1 PC
2		TABLE LEG	4 PCS

3

ASSEMBLY HARDWARE PACK

NO.	SKETCH	HARDWARE	Q'TY
A		Flat washer	8 PCS
B		Lock washer	8 PCS
C		Nut	8 PCS
D		Key wrench	1 PC

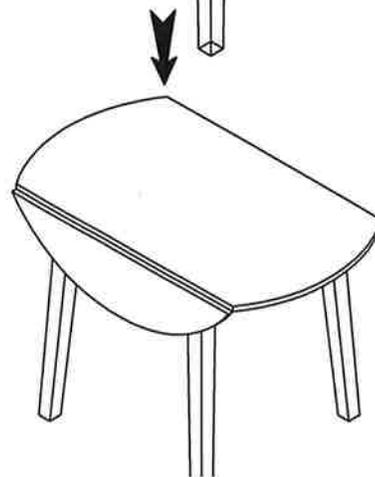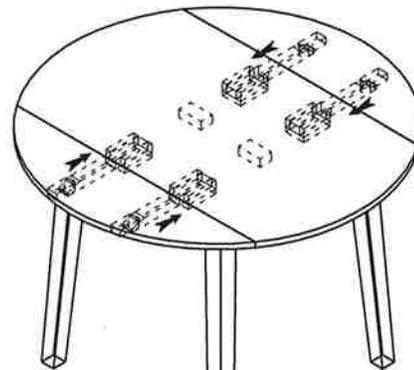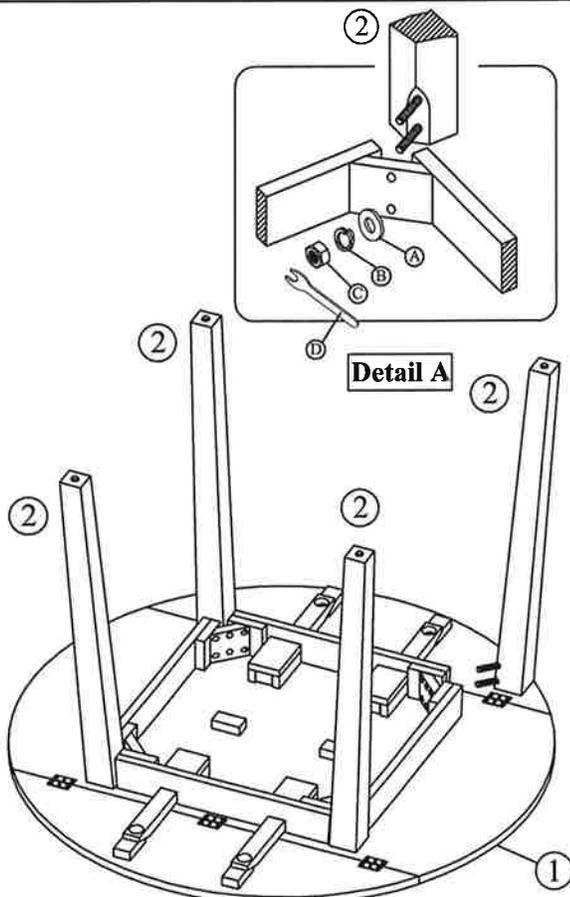



Liberty Furniture

INDUSTRIES, INC

164-CD-3DLS

ITEM#: 364-CD-3DLS


464-CD-3DLS

LIBERTY FURNITURE

ASSEMBLY INSTRUCTIONS

DESCRIPTION: SIDE CHAIR

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below:

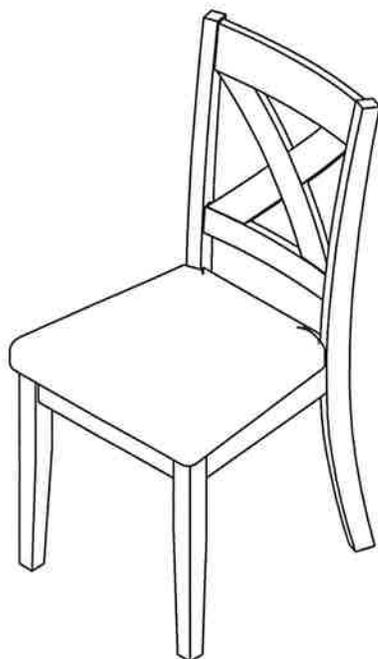

PARTS LIST


NO.	SKETCH	DESCRIPTION	Q'TY
1		CHAIR BACK	1PC
2		SEAT FRAME WITH CUSHION	1PC
3		FRONT LEG	2PCS

4


ASSEMBLY HARDWARE PACK

NO.	SKETCH	HARWARE	Q'TY
A		$\frac{1}{4}$ "X 75mm LONG BOLT	4PCS
B		$\frac{1}{4}$ "X 40mm SHORT BOLT	2PCS
C		$\frac{5}{16}$ "X13mm LOCK WASHER	10PCS
D		$\frac{5}{16}$ "X19mm FLAT WASHER	10PCS
E		4mm ALLEN KEY	1PC
F		$\frac{5}{16}$ "X6mm NUT	4PCS
G		$\frac{5}{16}$ "X90mm WRENCH	1PC

STEP 1:

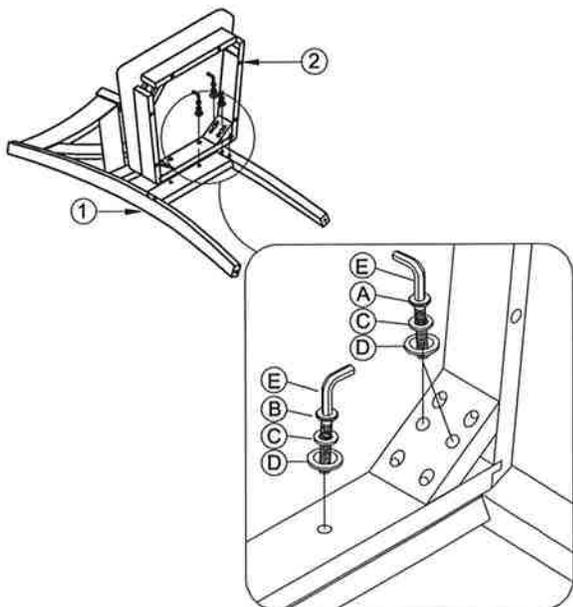

STEP 2:

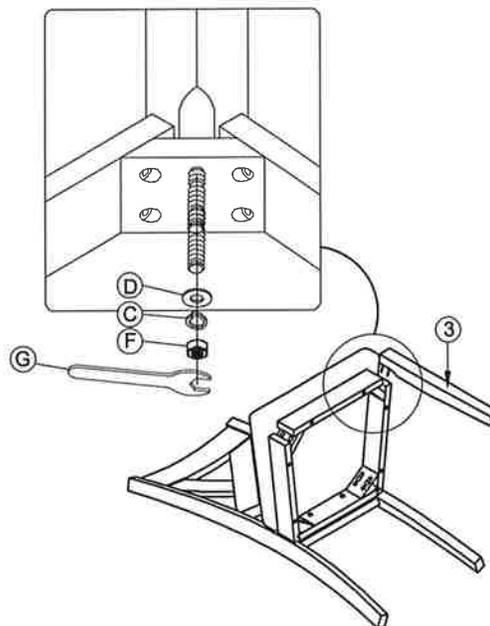

Chair Assembly Tips

Having some trouble putting together your new furniture? we can help! The key to correct chair assembly is to loosely attach all of the bolts, then gradually tighten them in succession until all of them are secure. Completely tightening one or more bolts prematurely can result in the following:


ISSUE: CHAIR IS UNLEVELED

Cause:

- Chairs can be wobbly or unlevelled if one or more bolts are fully tightened before all bolts are attached and/or tightened.

Solution:

- Loosen each bolt in the seat box (front legs, back corner- blocks, and back apron) until they're finger tight. Place the chair upright on the floor. Press firmly and evenly on the seat edges until the product sits level but do not lean against the chair back. Once the chair sits level on the desired surface, fully tighten each bolt.

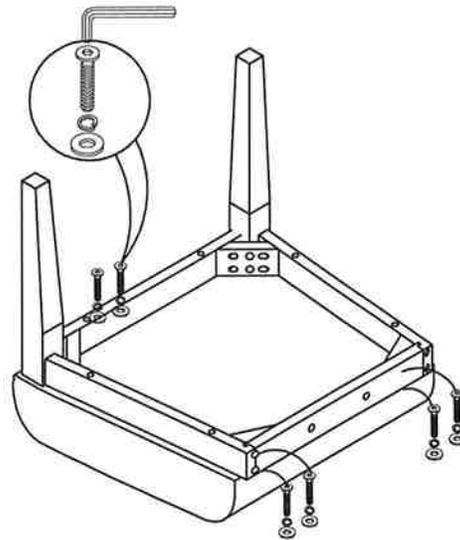

Cause:

- Chair can be wobbly or unlevelled if assembly is completed in a different room or surface than where the product is intended to primarily reside.

Solution:

- When assembling your chair, make sure to do it in the location that the chair will most often be used. Uneven flooring frequently accounts for wobbling issues.

ISSUE: HOLES ARE MISALIGNED

Cause:

- This issue can occur when some bolts are tightened fully before all other bolts are tightened or attached.

Solution:

- Loosen each bolt in the seat box (front legs, back corner-blocks, and back apron) until finger tight. This will allow you to realign the holes and properly fasten the bolts to the frame.