 
 
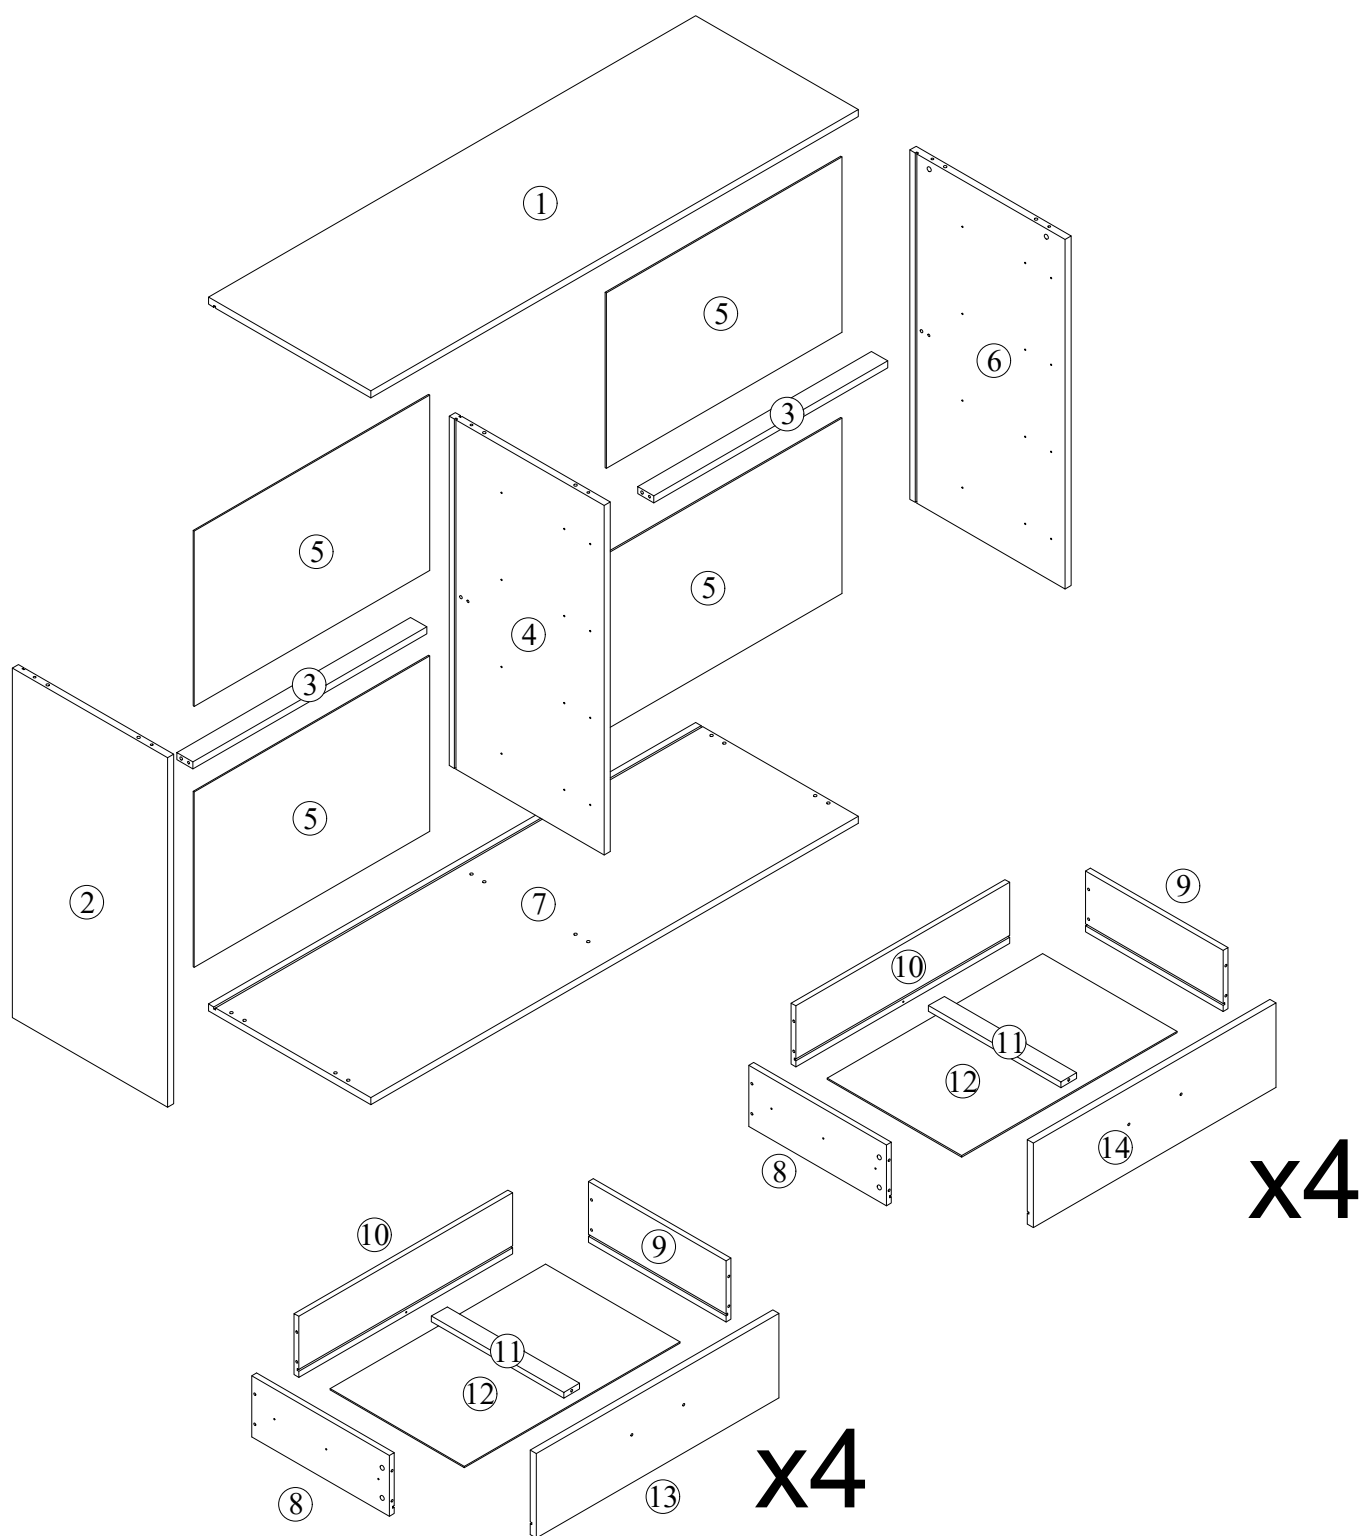 
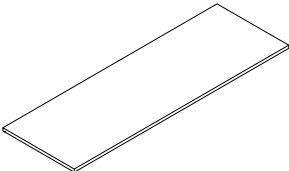 
 
 
 
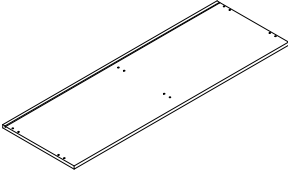 
 
 
 
 
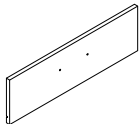 
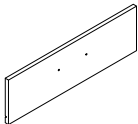 
 


Assembly Instruction




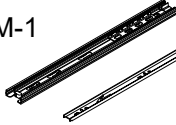


1  1399x398x12 x1	2  745x384x12 x1	3  679x39x15 x2	4  745x384x15 x1
5  686x375mm x4	6  745x384x12 x1	7  1399x398x12 x1	8  330x119x12 x8
9  330x119x12 x8	10  630x119x12 x8	11  317x39x12 x8	12  637x324mm x8
13  696x181x12 x4	14  696x181x12 x4		

A  Φ6X35mm x 50+2	B  Φ15X10mm x 50+2	C  Φ6X30mm x 14+2	D  Φ4X35mm x 44+2	E  Φ3X12mm x 96+4
F  Φ3X10mm x 4	G G-1 G-2   G-1 G-2 Φ4X18mm Φ128mm x 8	H H-1 H-2   Φ3X16mm x 16	I  x 4	J  Φ6X50mm x 1+1
K K-1 K-2 K-3    Φ4X12mm x 2	L L-1 L-2 L-3    Φ4X45mm x 2	M M-1 M-2  330mm x 16	N  Φ4X20mm x 6	O  x 6
P  Φ5X40mm x 2				

 
Detach the drawer slide before assembling it, there is a detach button on the side of the drawer slide and you can remove the drawer slide by pressing the button down

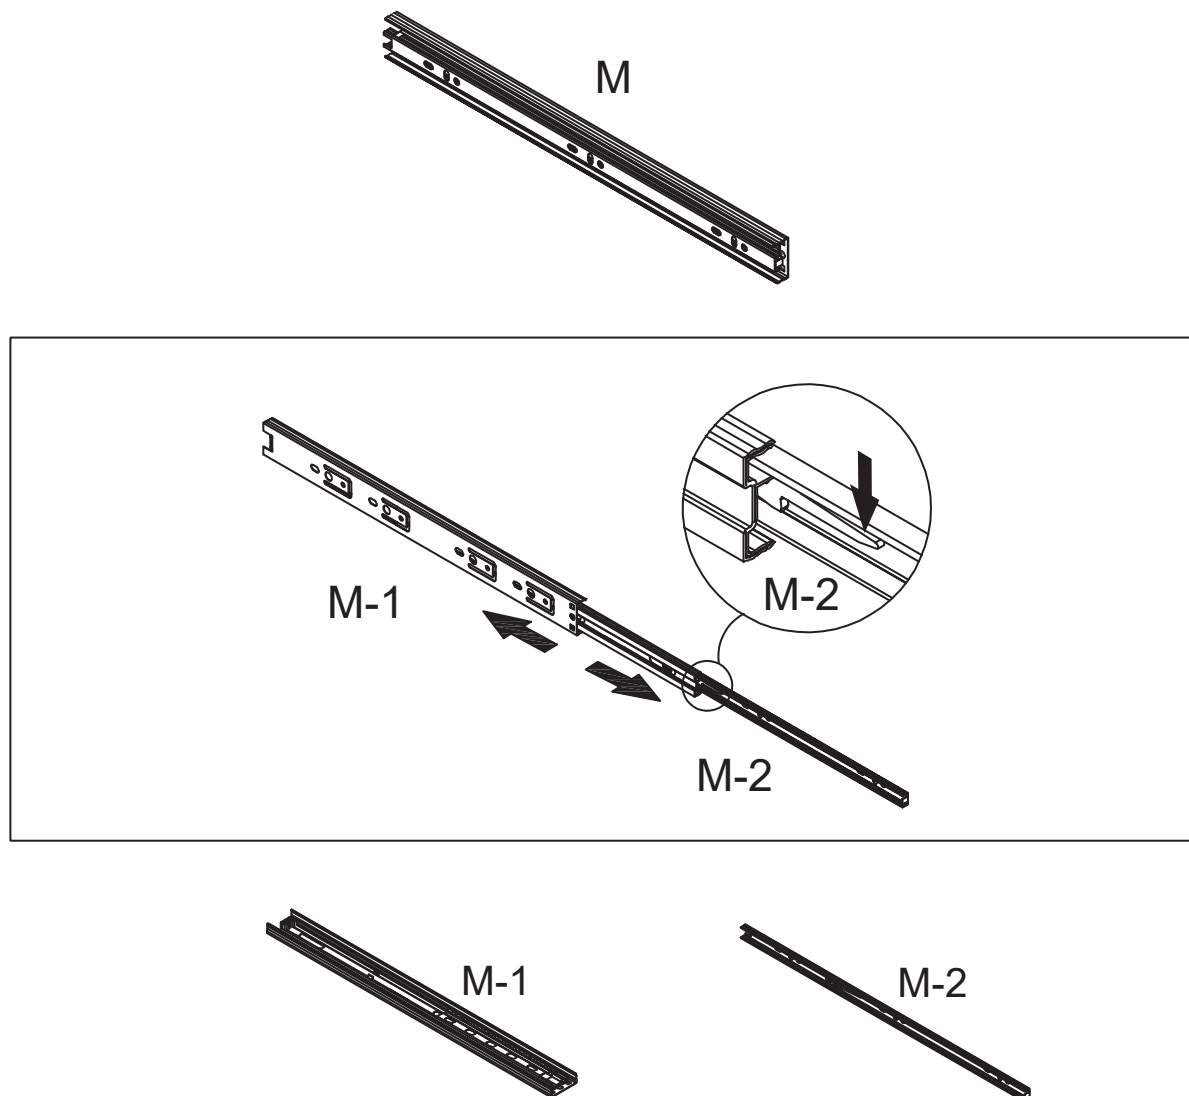


"A & B" Hardware installation example

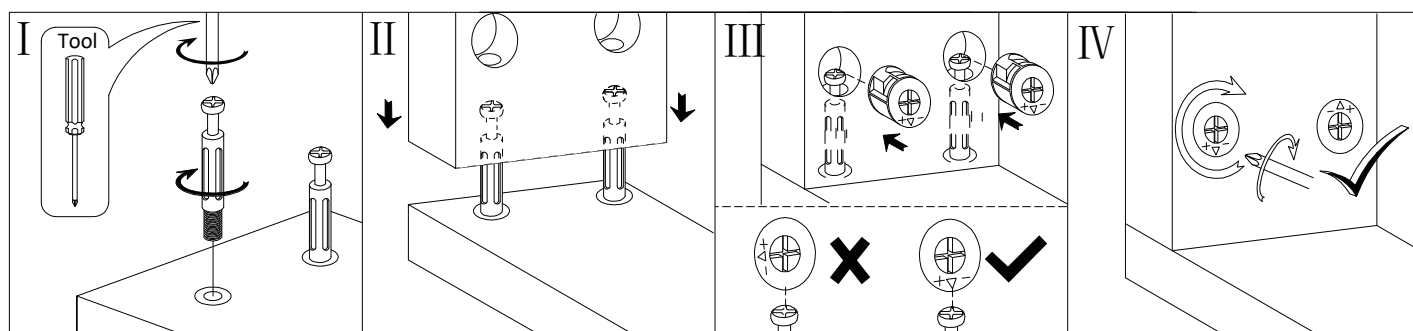 


1

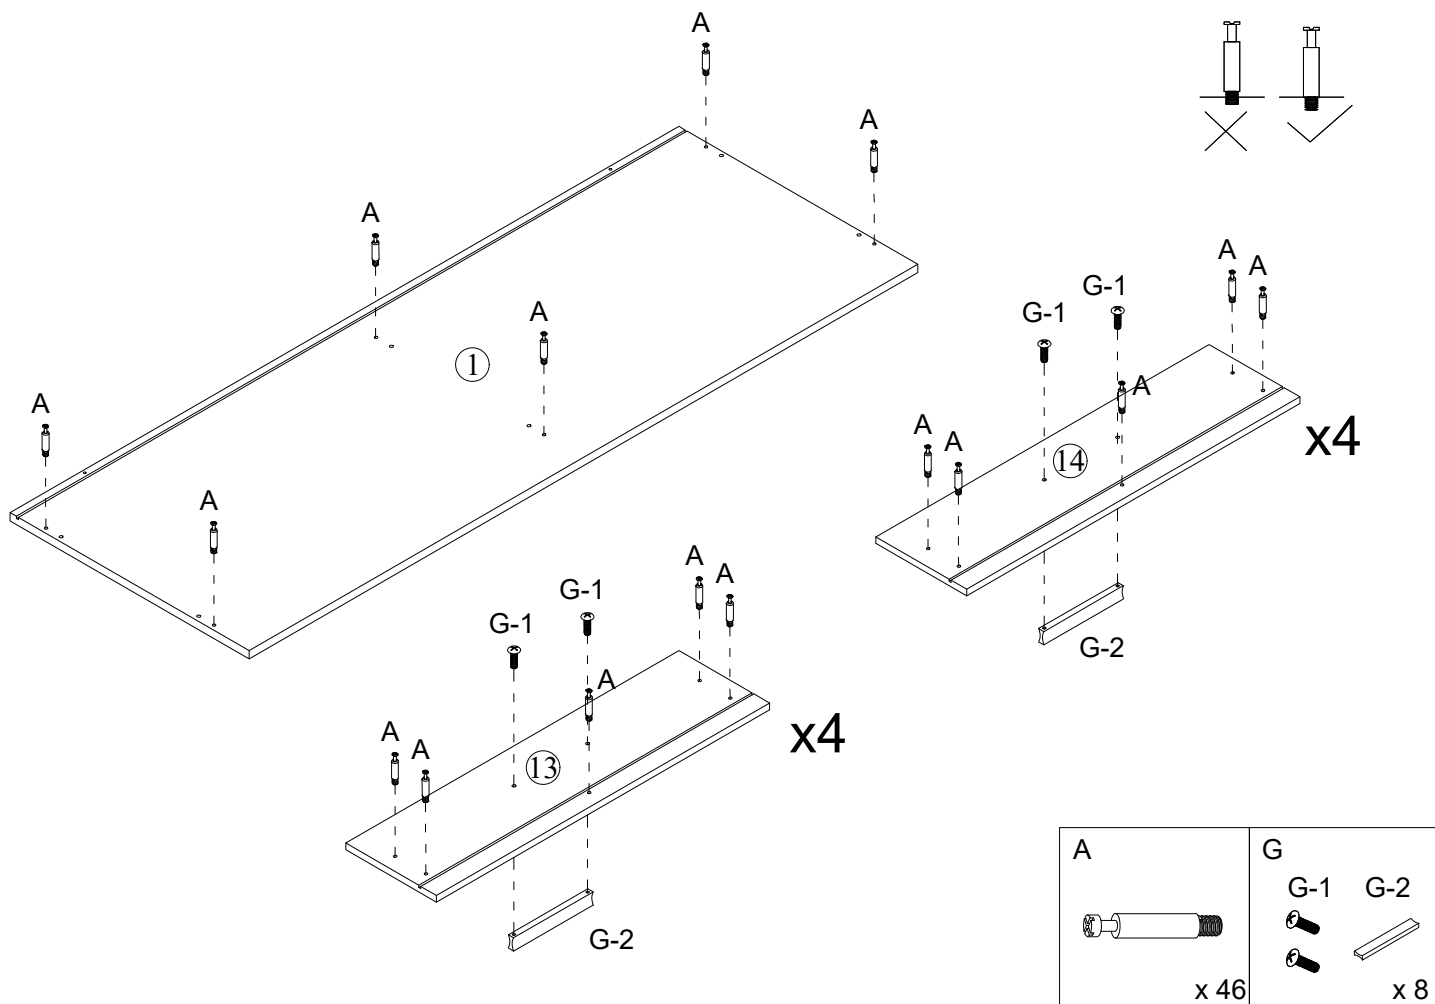 


2

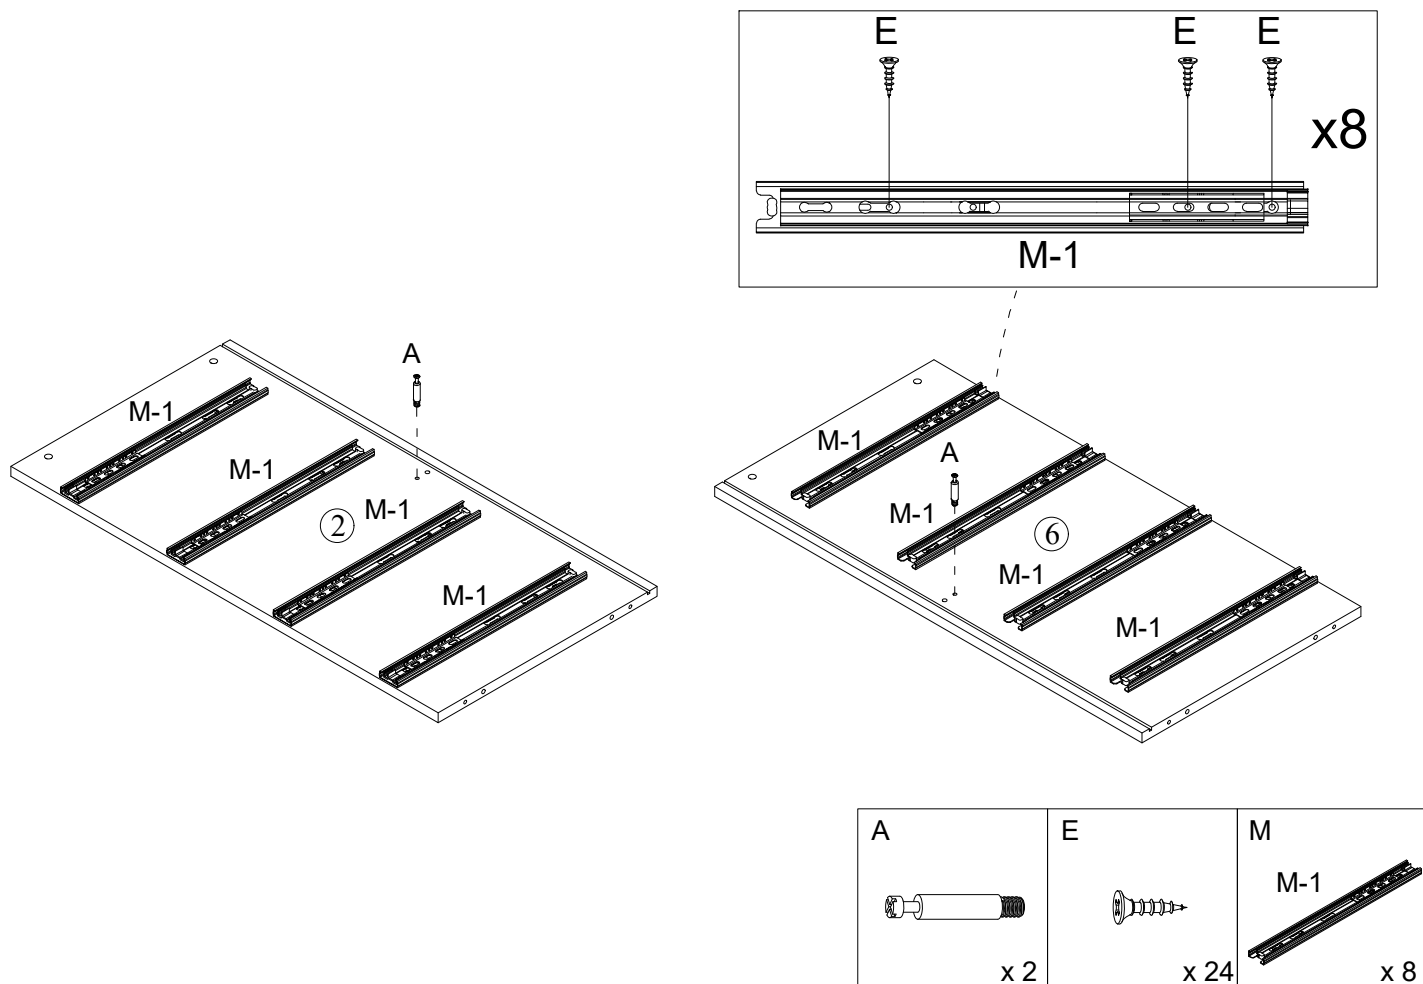 



3

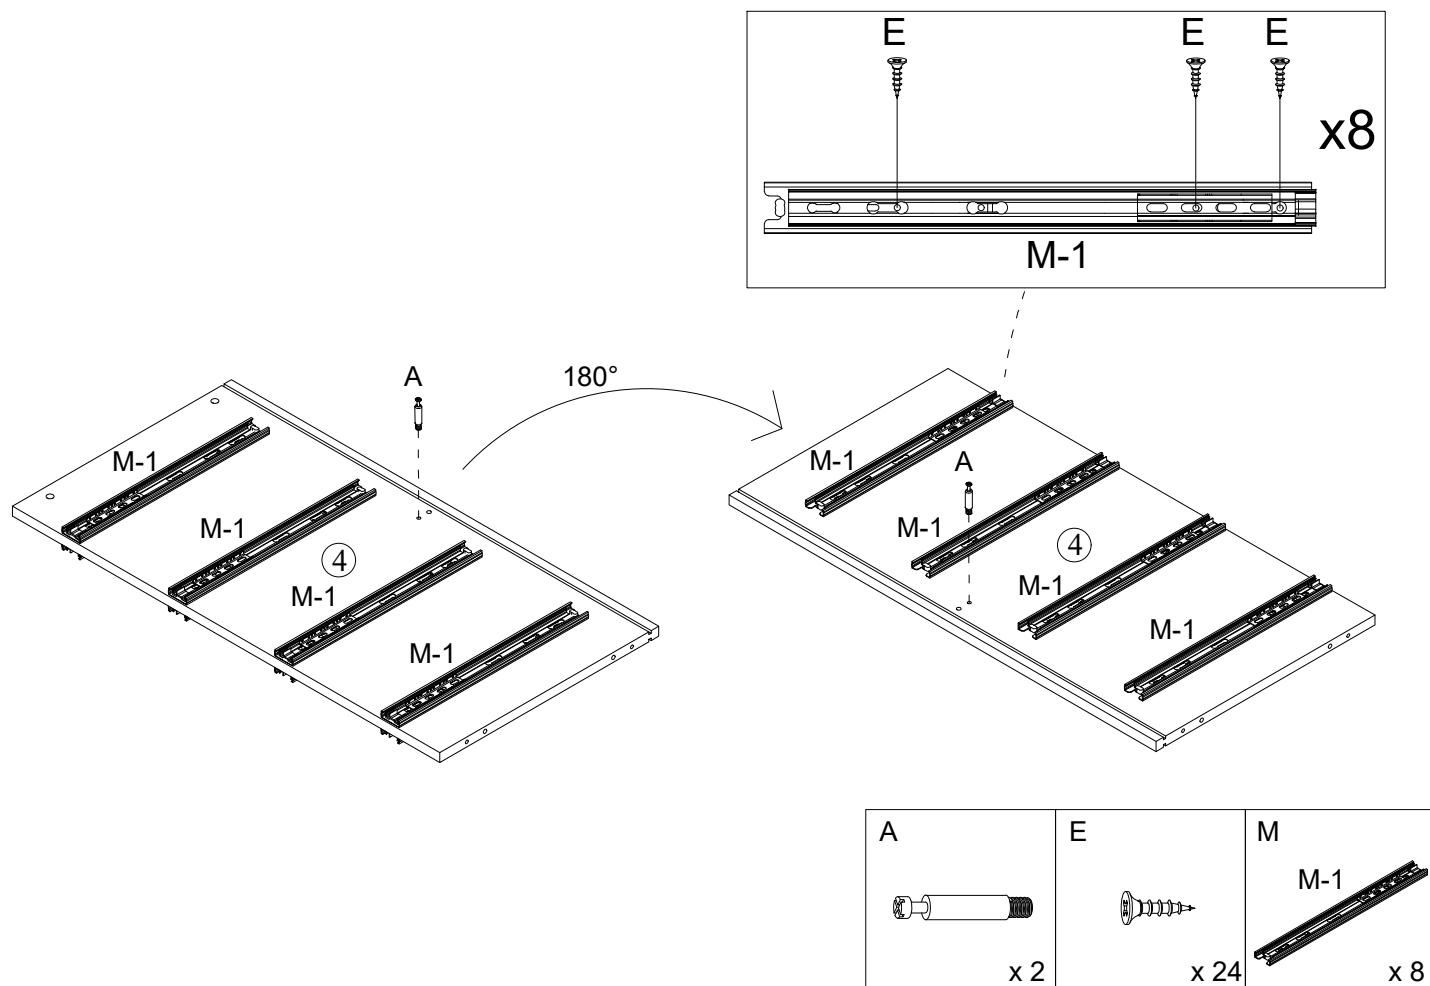 



4

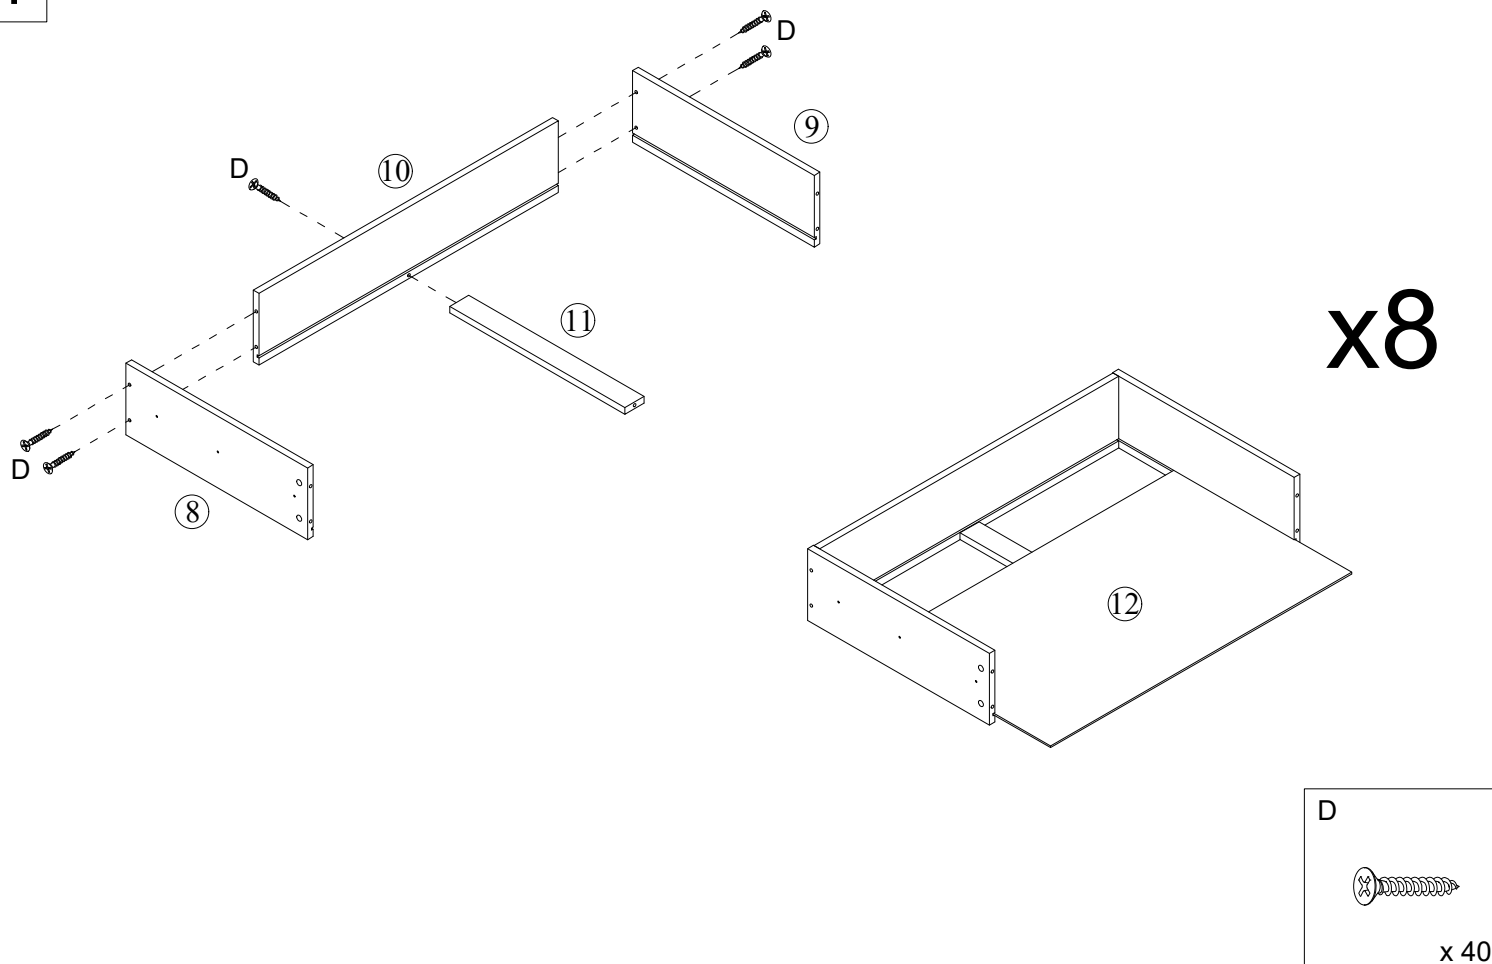 


5

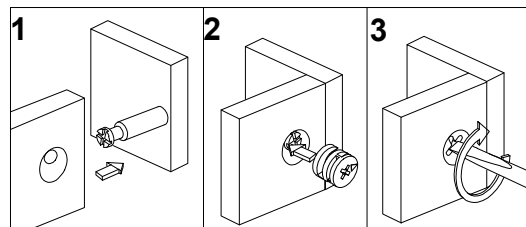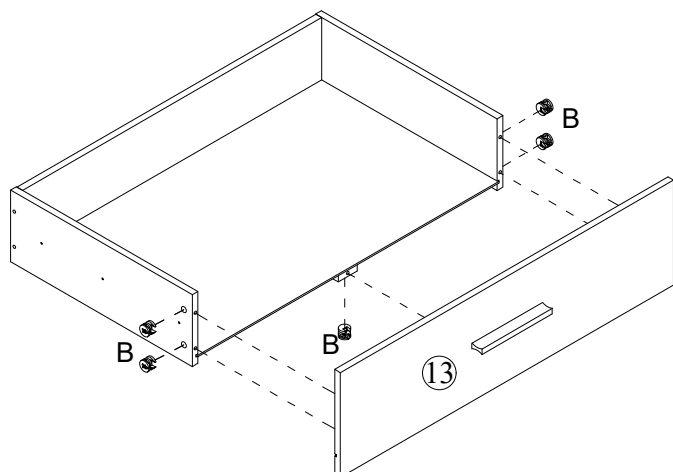  


x4

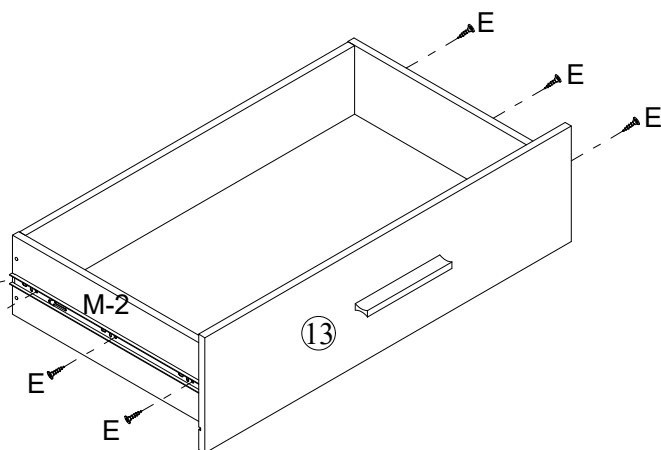 
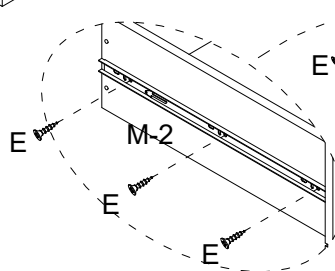 


 
B	E	M
		
x 20	x 24	x 8

 6

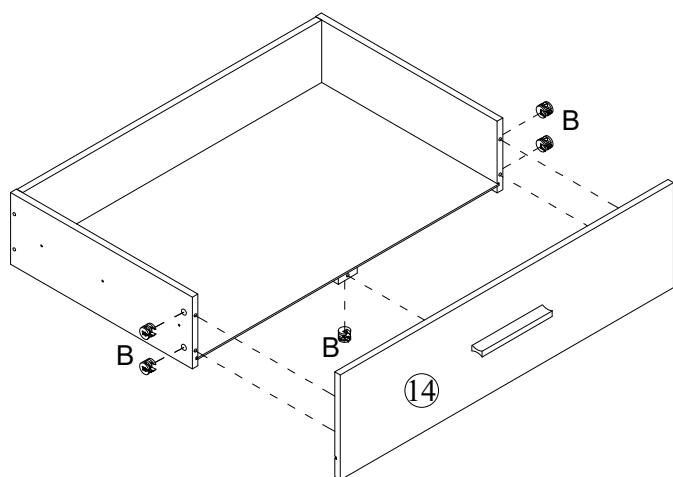



x4

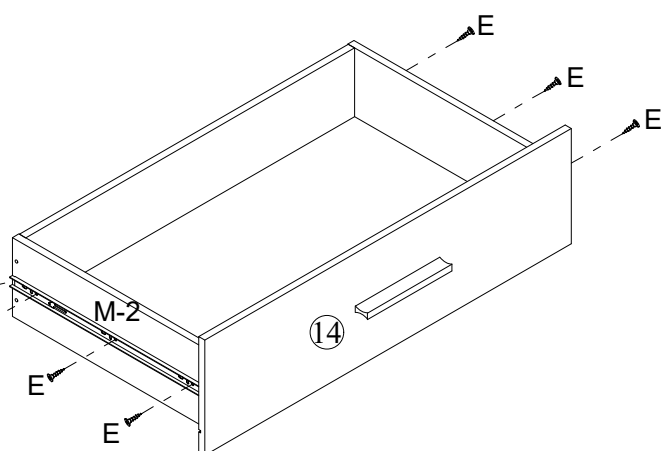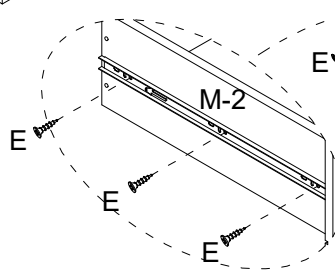  

 
B	E	M
		
x 20	x 24	x 8

  
7

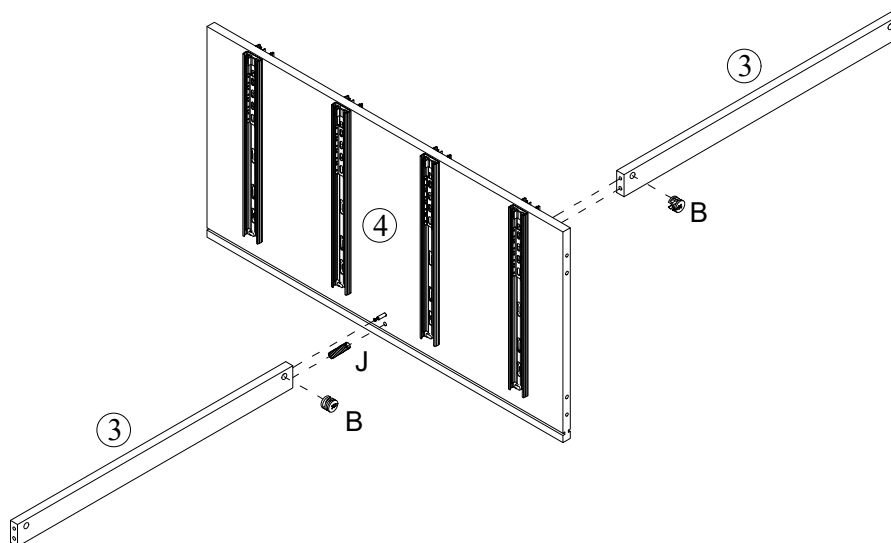


B	J
	
x 2	x 1

  8

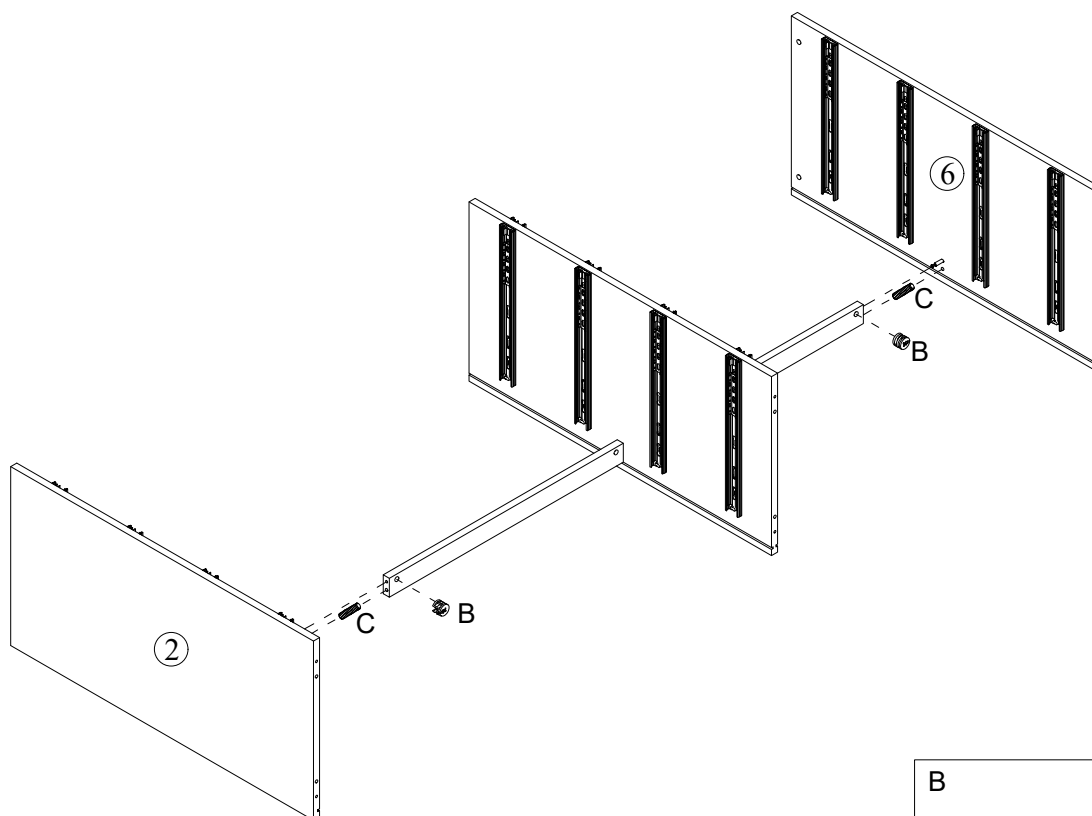


B	C
	
x 2	x 2

 
9

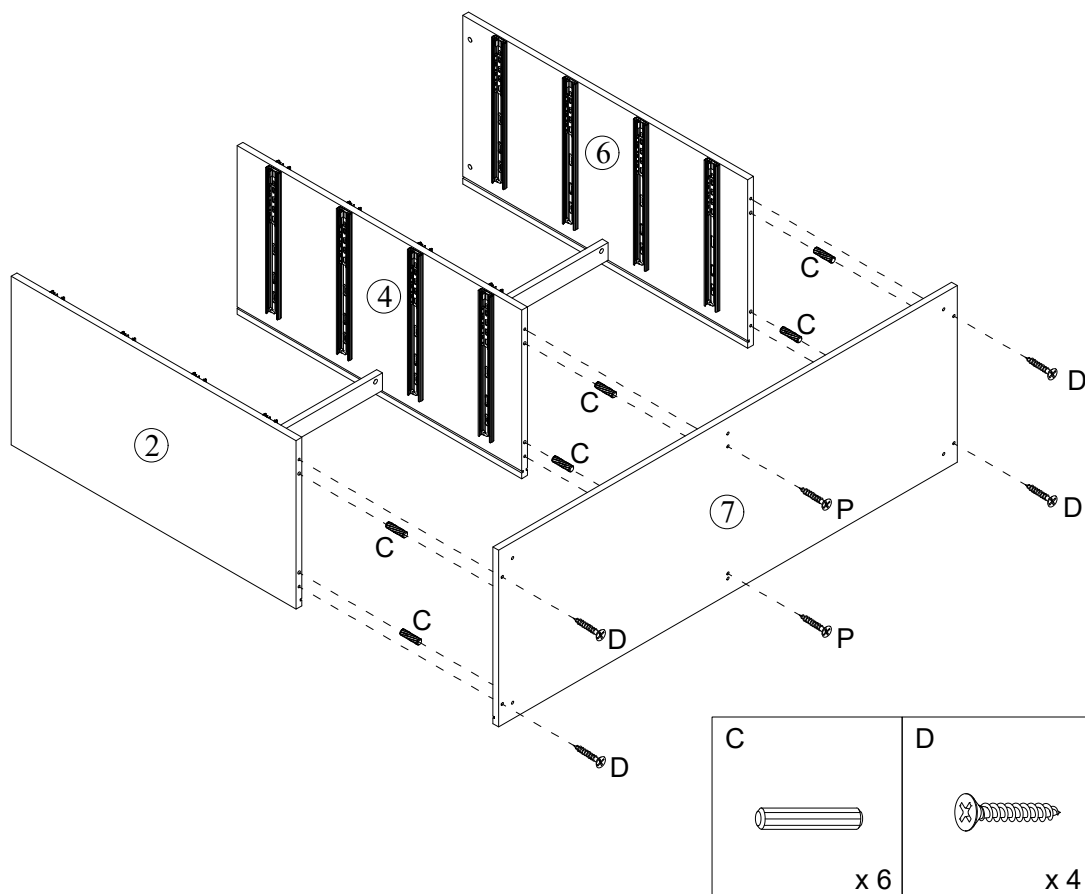


10

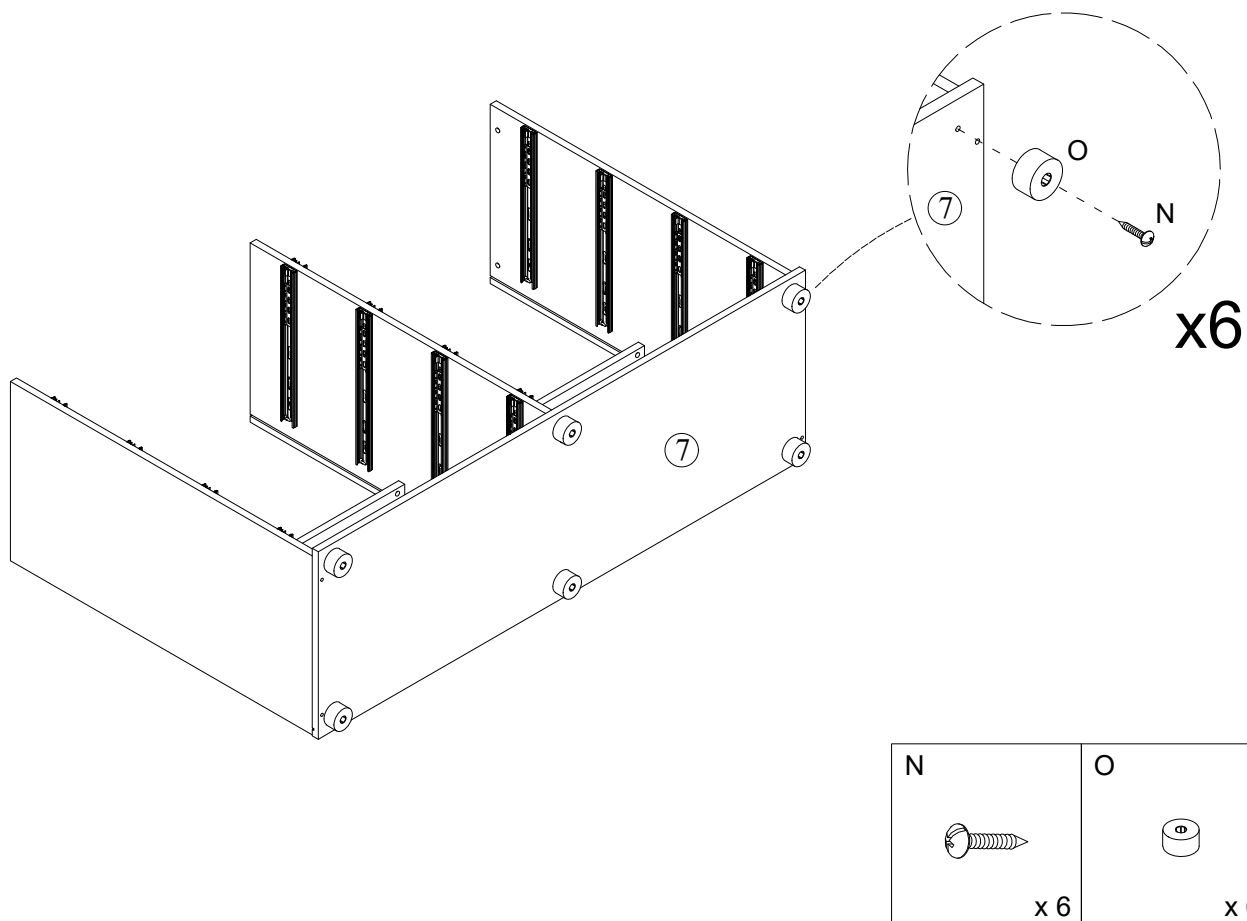 

11

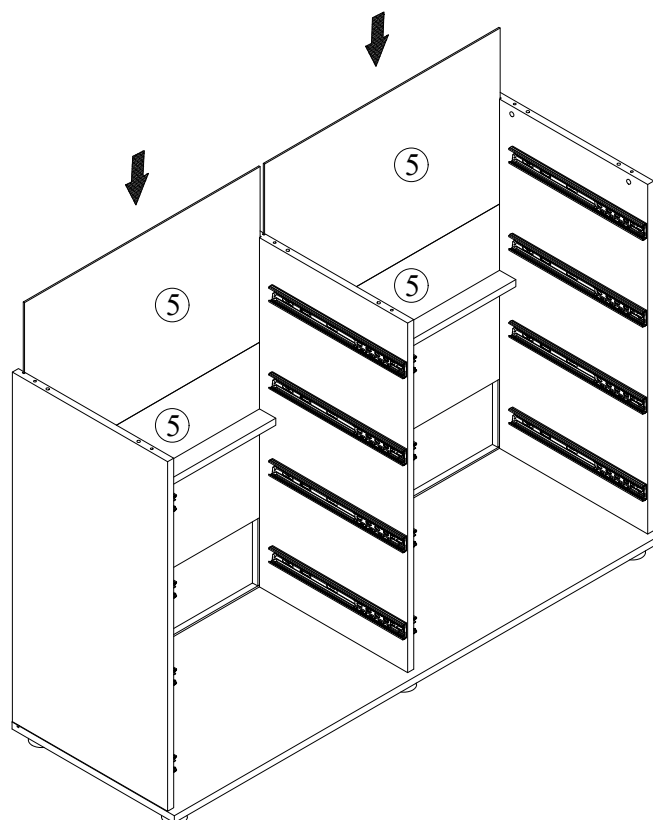 


12

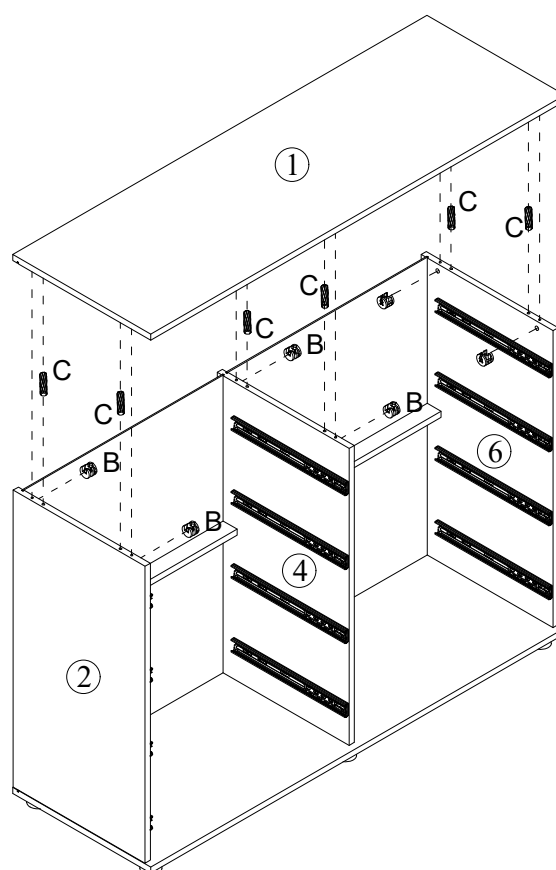 


B	C
 x 6	 x 6

 13

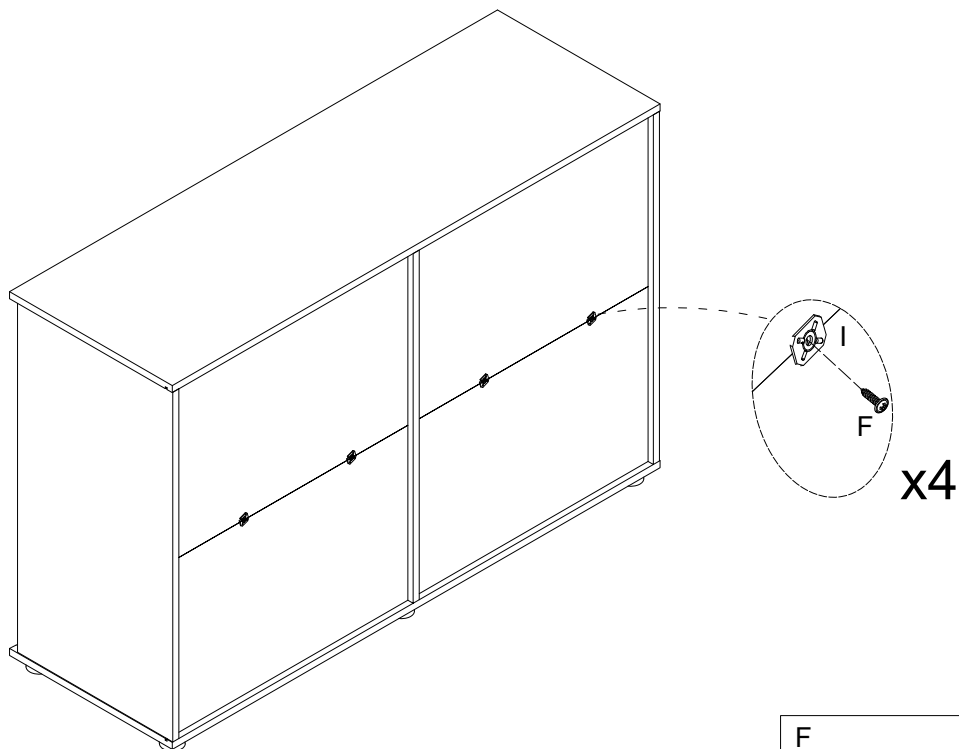


F	I
	
x 4	x 4

 14


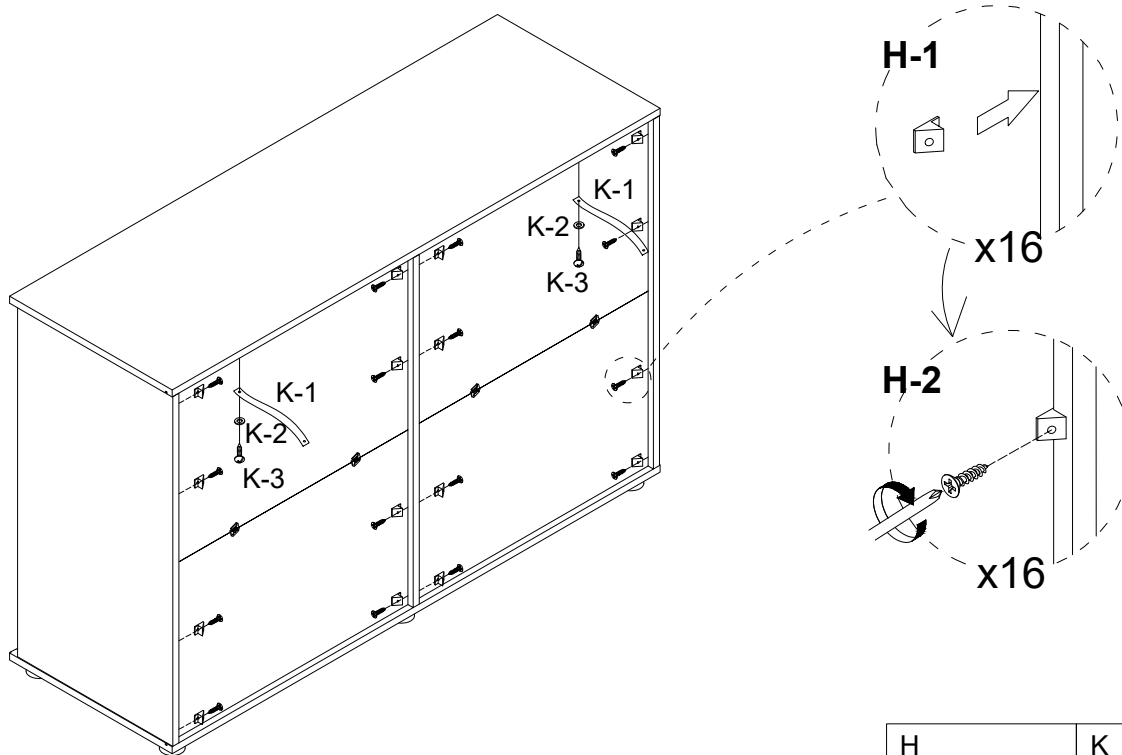


H	K
H-1  H-2 	K-1 K-2 K-3   
x 16	x 2

 15

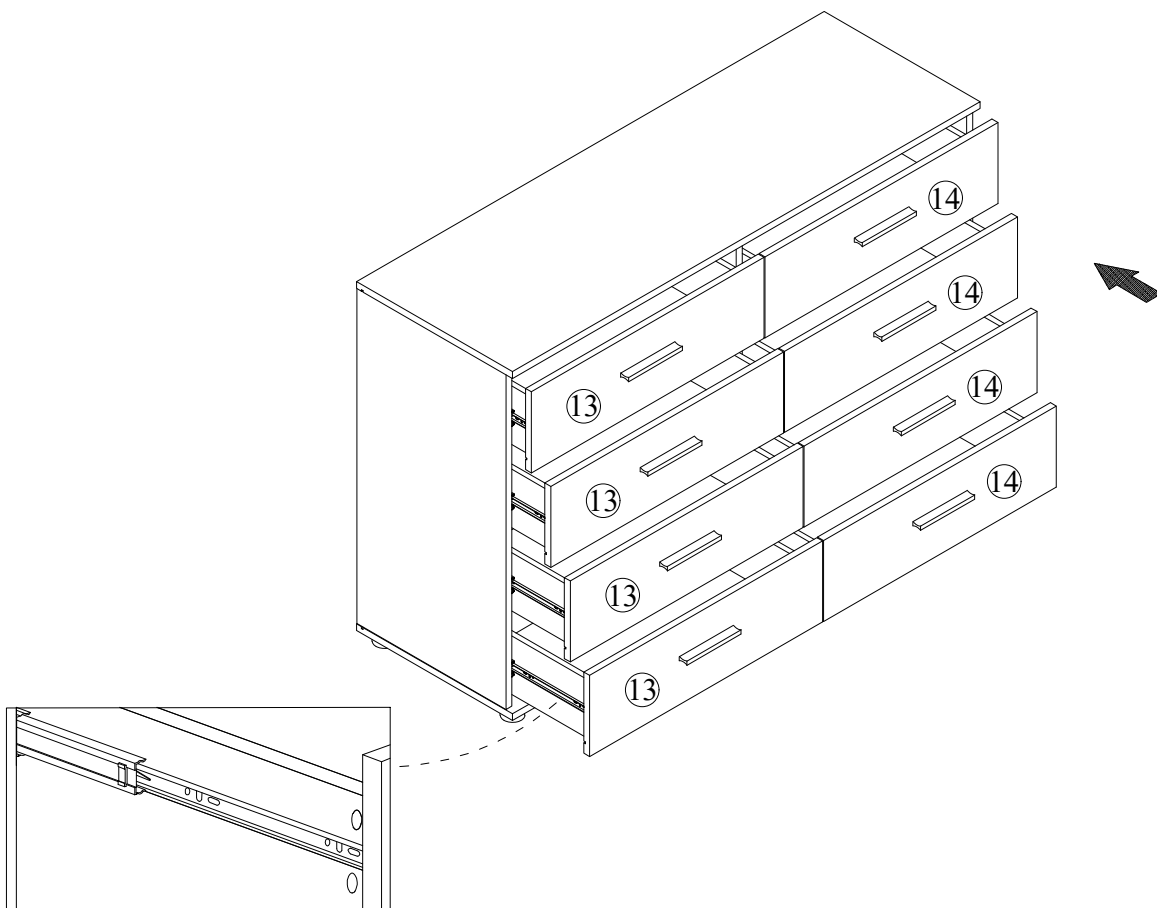

16

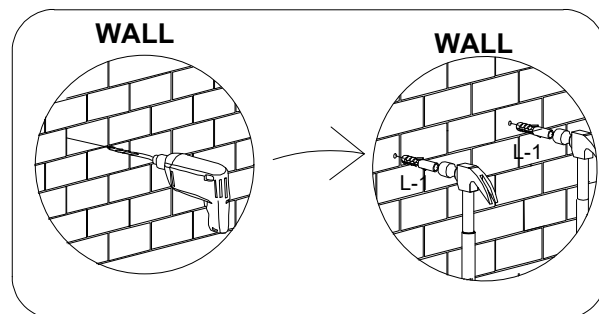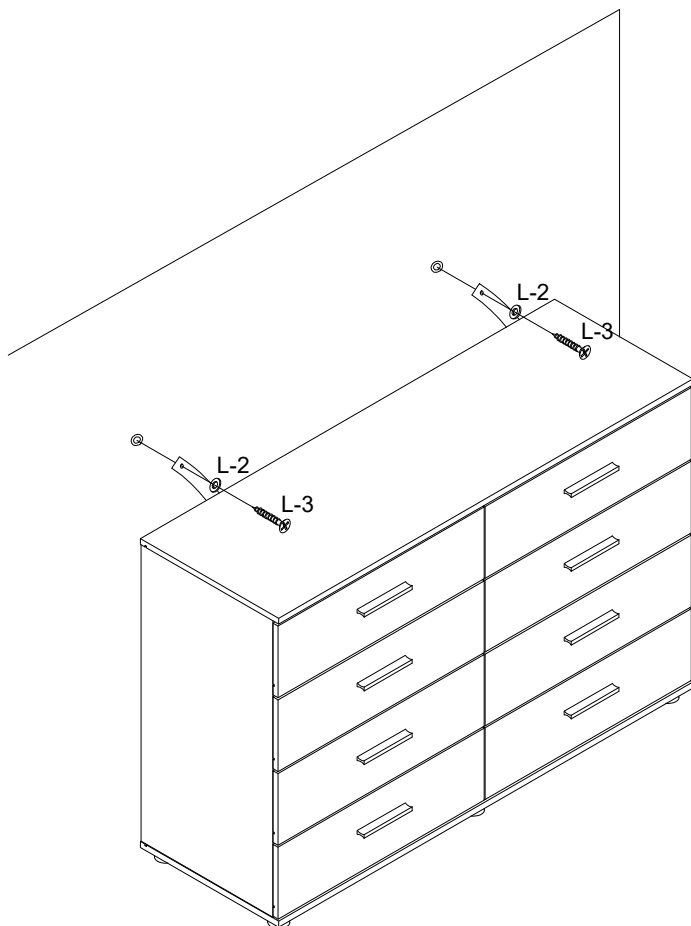  

First, drill two holes in the wall and insert the plastic expansion anchor (L-1) . Then, use screw (L-3) to secure the cabinet to the wall through washer (L-2)

L		
L-1	L-2	L-3
x 2		

Supplementary Instructions for Safe Use

English



WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.
- Do not defeat or remove the drawer interlock system.

This is a permanent label.

Do not remove!

French



ATTENTION



Des enfants sont morts du basculement des meubles. Pour réduire le risque de basculement des meubles:

- TOUJOURS installer la retenue de basculement fournie.
- NE JAMAIS mettre de téléviseur sur ce produit.
- NE JAMAIS permettre aux enfants de se tenir debout, de grimper, ou de s'accrocher à des tiroirs, des portes ou des étagères.
- N'ouvrez JAMAIS plus d'un tiroir à la fois.
- Placez les objets les plus lourds dans les tiroirs les plus bas.
- Ne désactivez pas et ne retirez pas le système de verrouillage du tiroir.

Ceci est une étiquette permanente.

Ne pas enlever!

German



WARNUNG



Kinder sind an einem Möbelkipp gestorben. So verringern Sie das Risiko eines Umkippen von Möbeln:

- Installieren Sie IMMER die mitgelieferte Kipprückhaltevorrichtung.
- Stellen Sie NIEMALS einen Fernseher an dieses Produkt.
- Lassen Sie Kinder NIEMALS an Schubladen, Türen oder Regalen stehen klettern oder hängen.
- Öffnen Sie NIEMALS mehr als eine Schublade gleichzeitig.
- Legen Sie schwerste Gegenstände in die untersten Schubladen.
- Besiegen oder entfernen Sie das Schubladenverriegelungssystem nicht.

Dies ist ein dauerhaftes Etikett.

Nicht entfernen!