
 






 

 


ASSEMBLY INSTRUCTIONS


UMBRELLA

PARTS


Check that you've received
all parts listed below.

					
A 1 PC	B 1 PC	C 1 PC	D 1 PC	E 1 PC	F 8 PCS
					
G 8 PCS	H 1 PC	I 1 PC	J 1 PC		K 1 PC


1

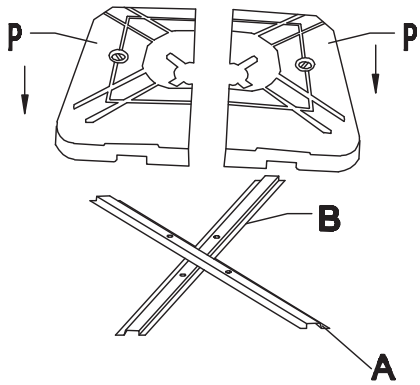


2

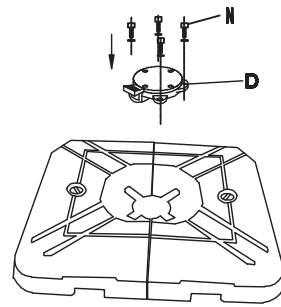


3

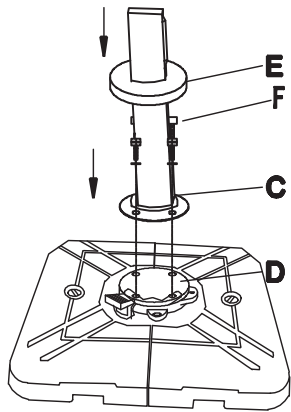


4

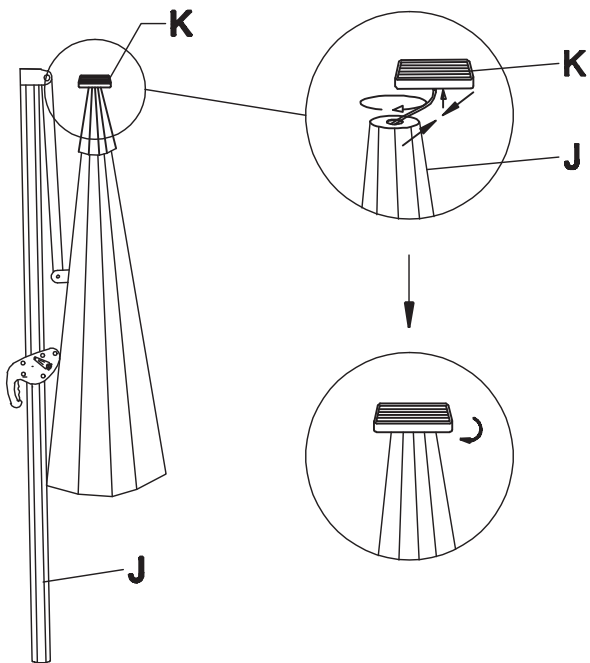


5

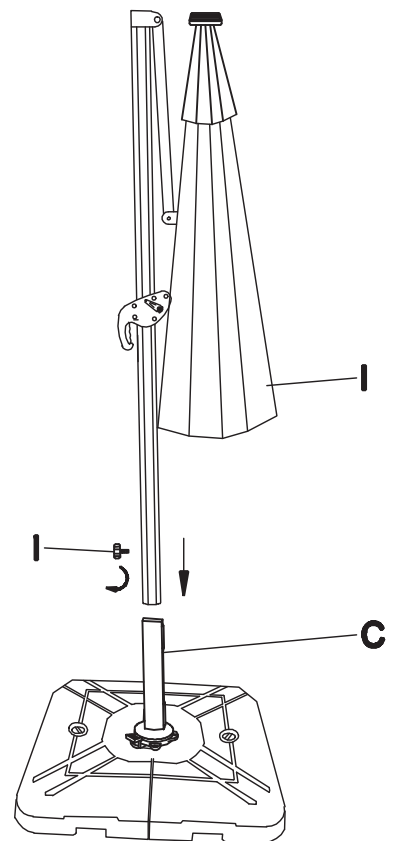

6

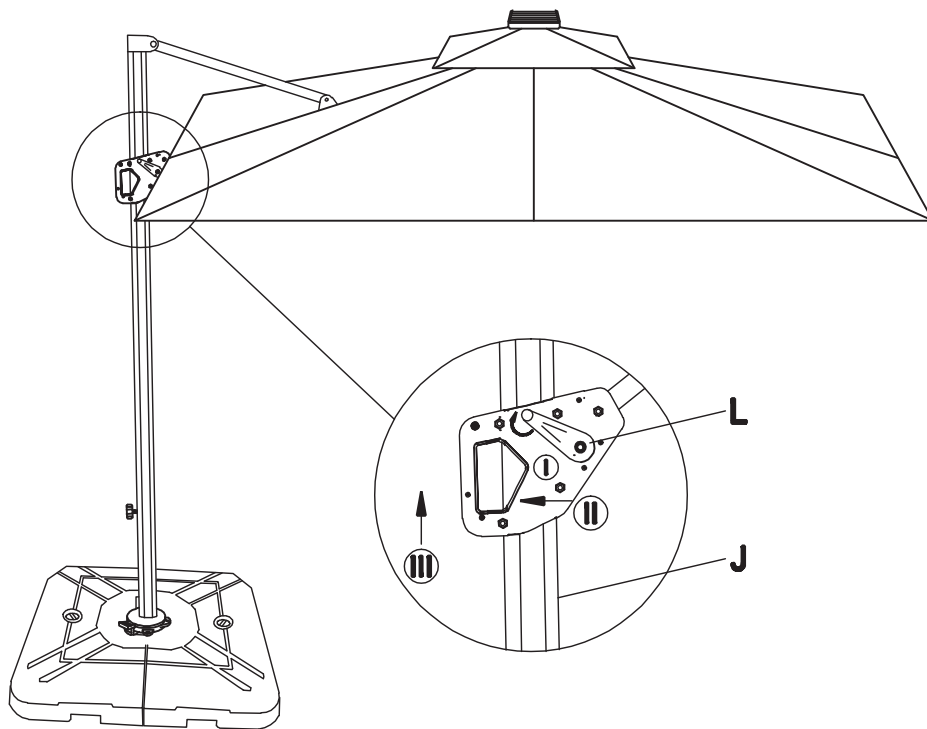

7

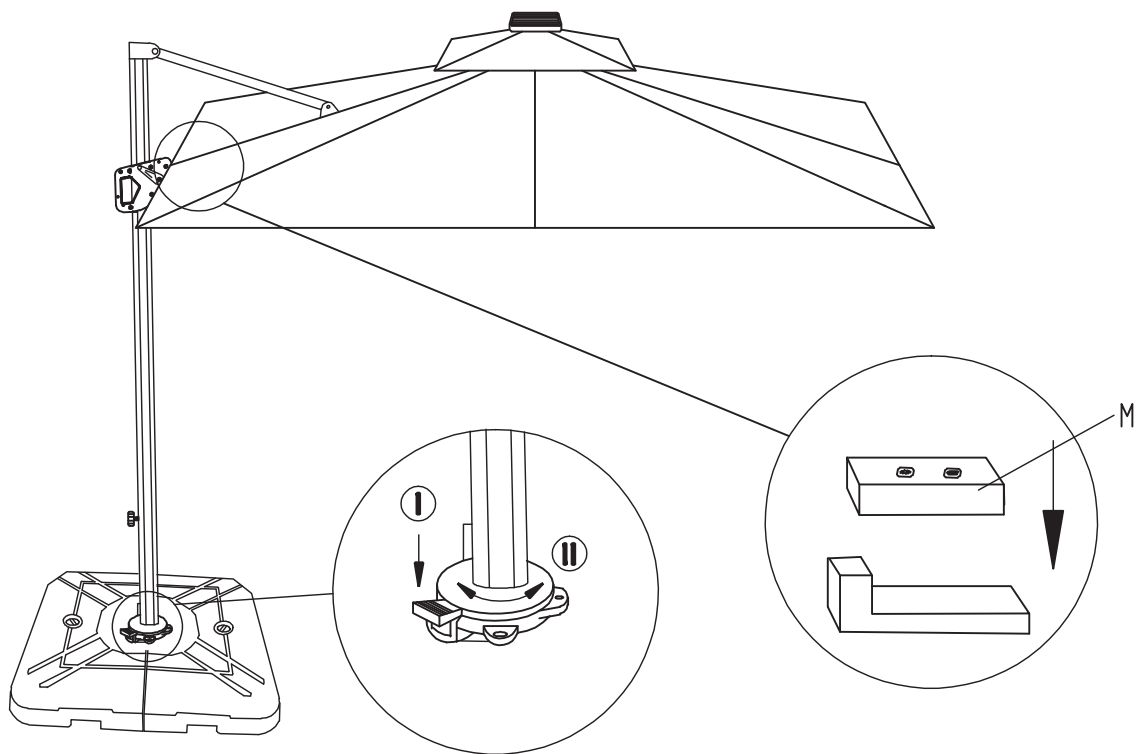

Need some help?

CARE INSTRUCTIONS

Outdoor furniture naturally weathers and shows color variation over time. We recommend the following care for the best results:

- Wipe with a soft cloth.
 - Wash with mild soap and water as needed; do not use abrasive cleaners.
 - Cover furniture with an outdoor cover (not included) when not in use.
 - Store in a dry, covered area during inclement weather or winter season.
-



After assembly is completed, save these instructions and any included tools for future maintenance or re-assembly.

This product is intended for RESIDENTIAL USE ONLY and not for commercial use.

Enjoy.
