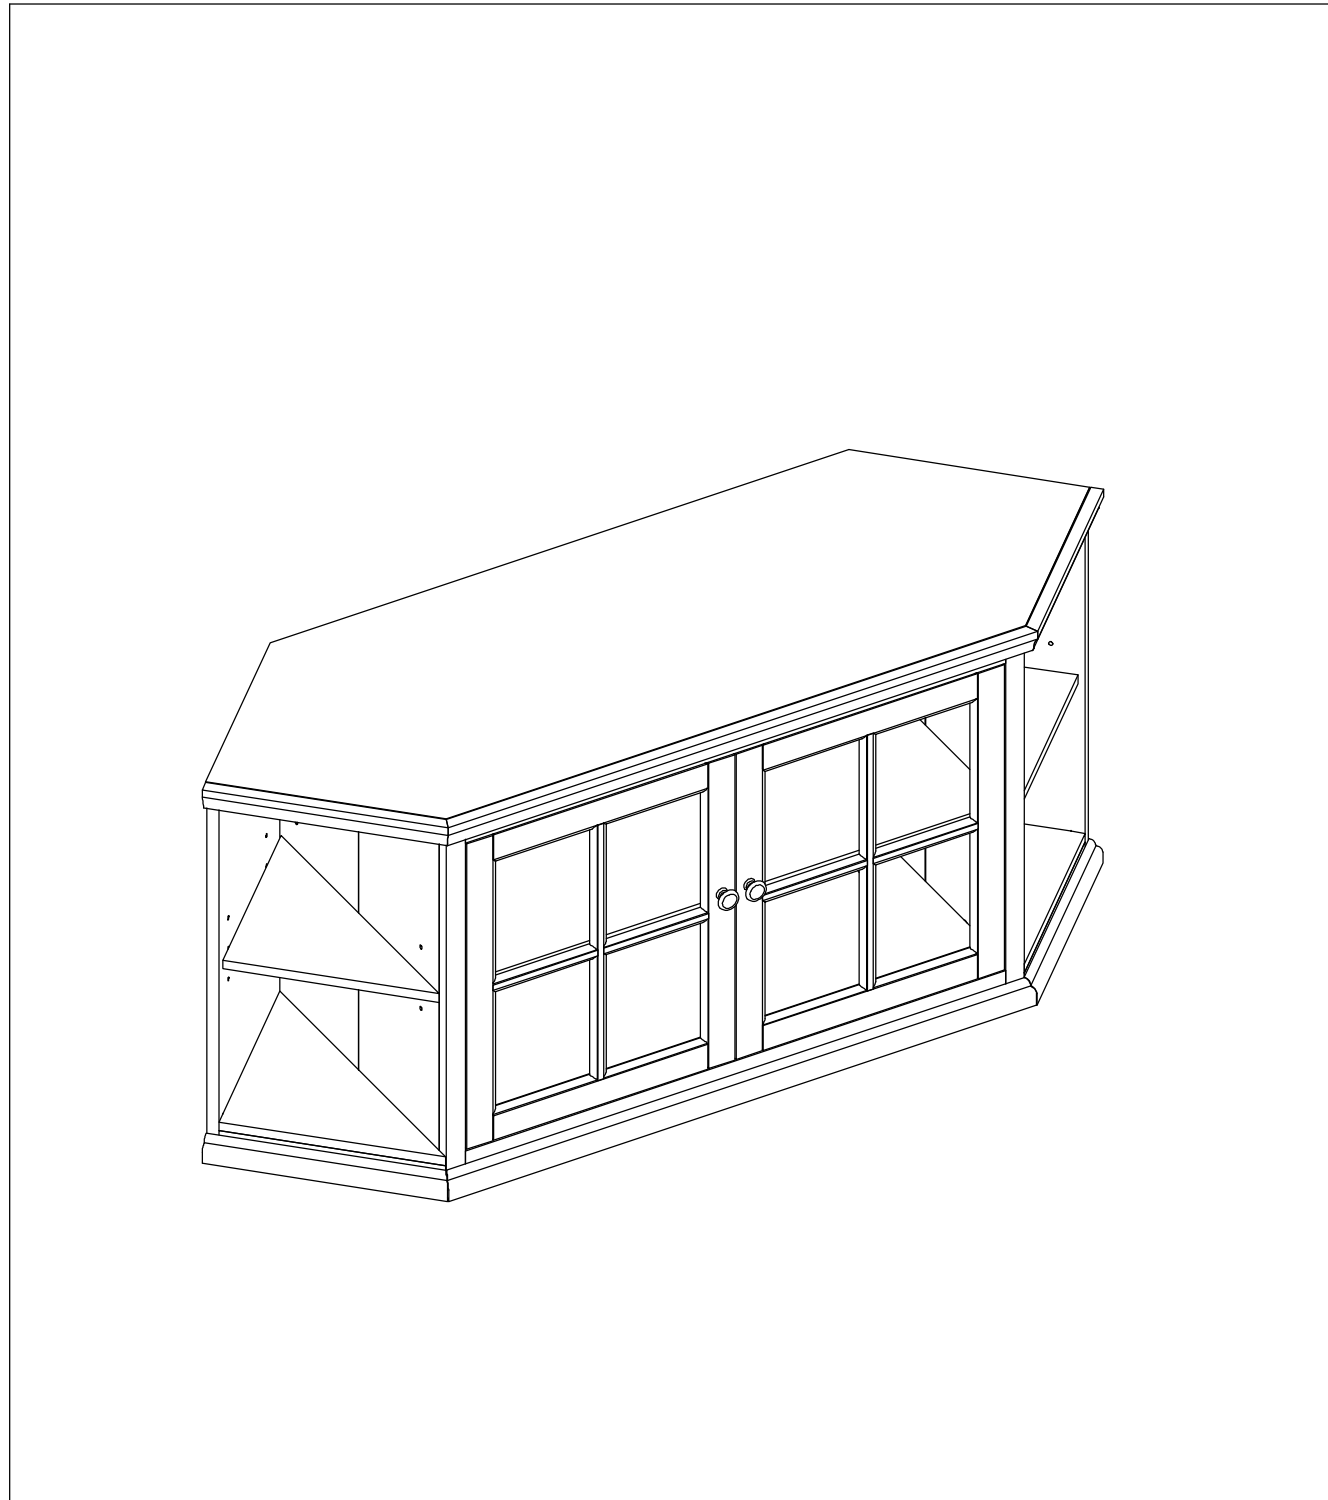 
 

 
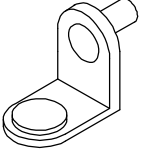 
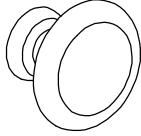 

 


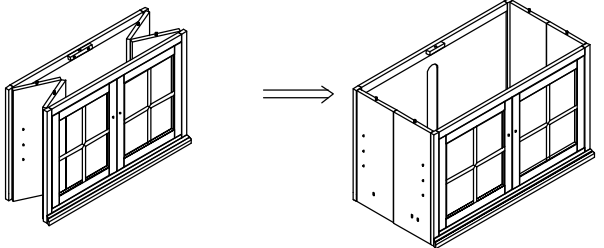 
 
 
 
 
 
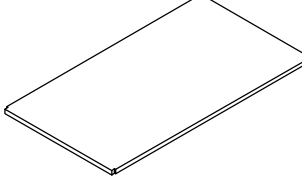 
 
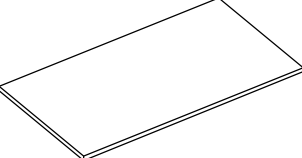 
Cottage White 56" Corner
TV Console with Bookcase/Display



Hardware List

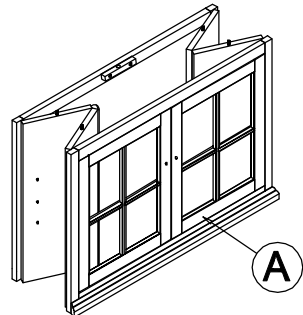 
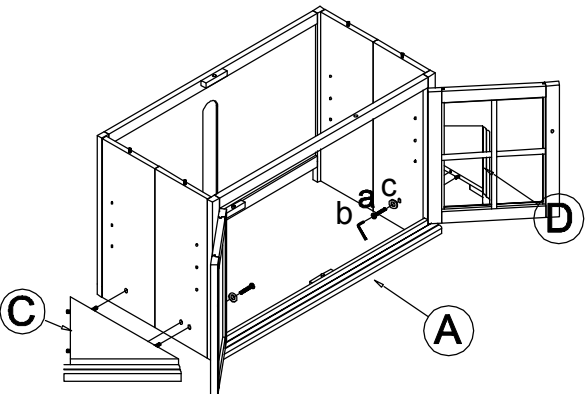 
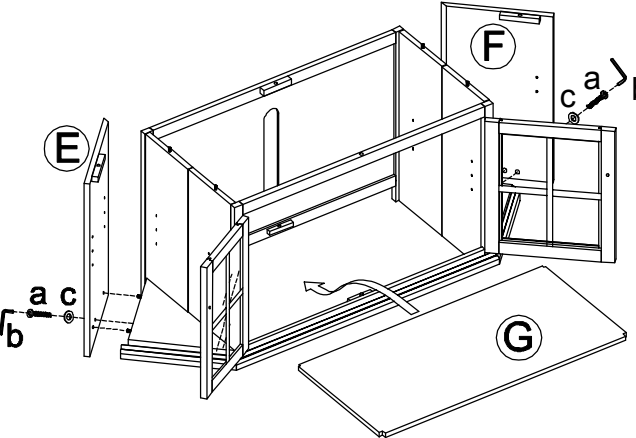 
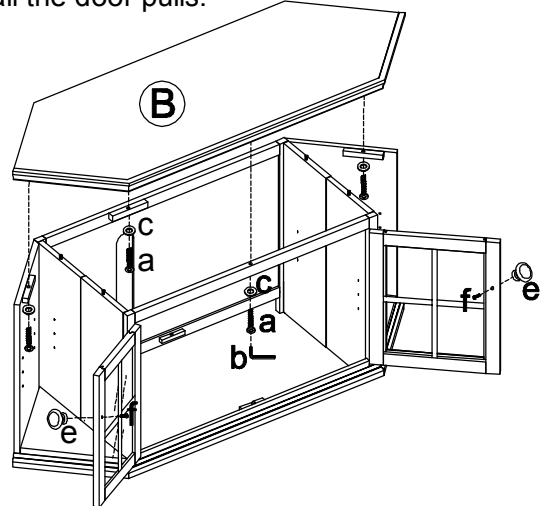 
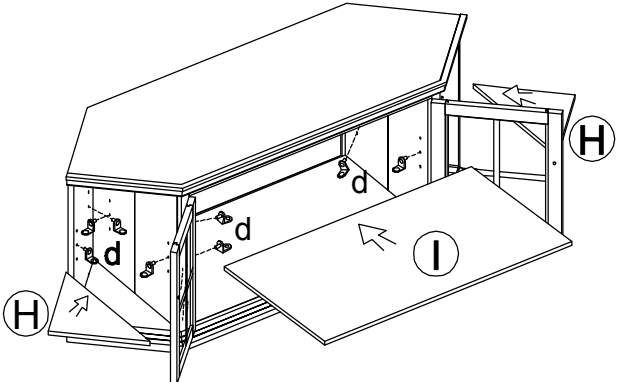 
Item	Description	Qty
a	 Bolt 1/4"*1-1/8"	8PCS
b	 Allen wrench	1PC
c	 Washer 1/4"*12mm	8PCS
d	 Shelf metal clip	12PCS
e	 Door Pull	2PCS
f	 Machine screw for door pull 5/32"*7/8"	2PCS
g	 Wood screw 8#*1"	2PCS

Parts List

Item	Description	Qty
A	 Cabinet	1PC
B	 Top Panel	1PC
C	 Left Side Bottom Panel	1PC
D	 Right Side Bottom Panel	1PC
E	 Left Side Back Panel	1PC
F	 Right Side Back Panel	1PC
G	 Middle Bottom Panel	1PC
H	 Side Adjustable Shelf	2PCS
I	 Middle Adjustable Shelf	1PC

Assembly Instructions

Two person assembly recommended.

<p>step 1 Unfold Cabinet.</p> 	<p>step 2 Insert the side bottom panels and fasten with bolts.</p> 
<p>step 3 Insert the side back panels and fasten with bolts. Insert the middle bottom panel.</p> 	<p>step 4 Fasten the top with 4 bolts. DO NOT OVER TIGHTEN. Install the door pulls.</p> 
<p>step 5 Install shelf clips and insert shelves.</p> 	<p>step 6 Fasten two side back panels with two screws into the cabinet.</p> 