 
 


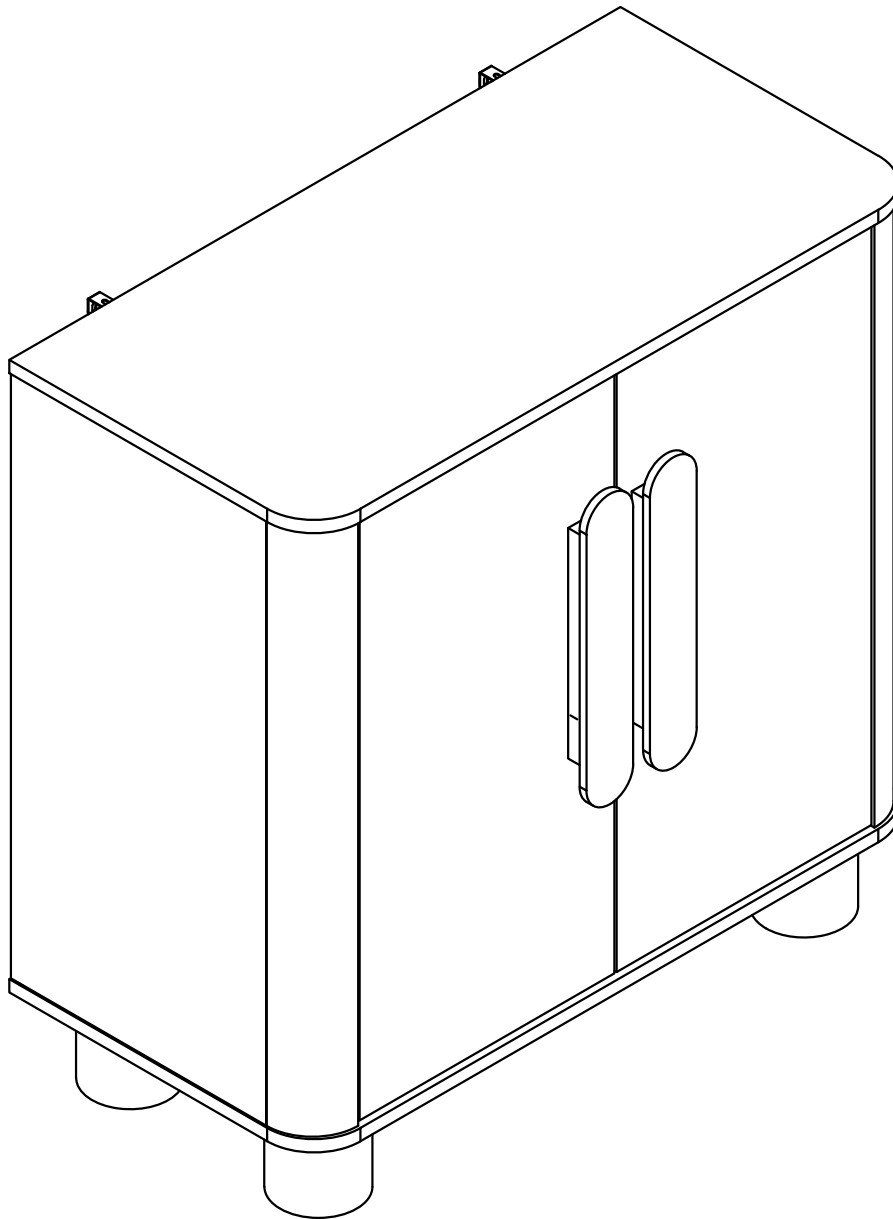 





 
 


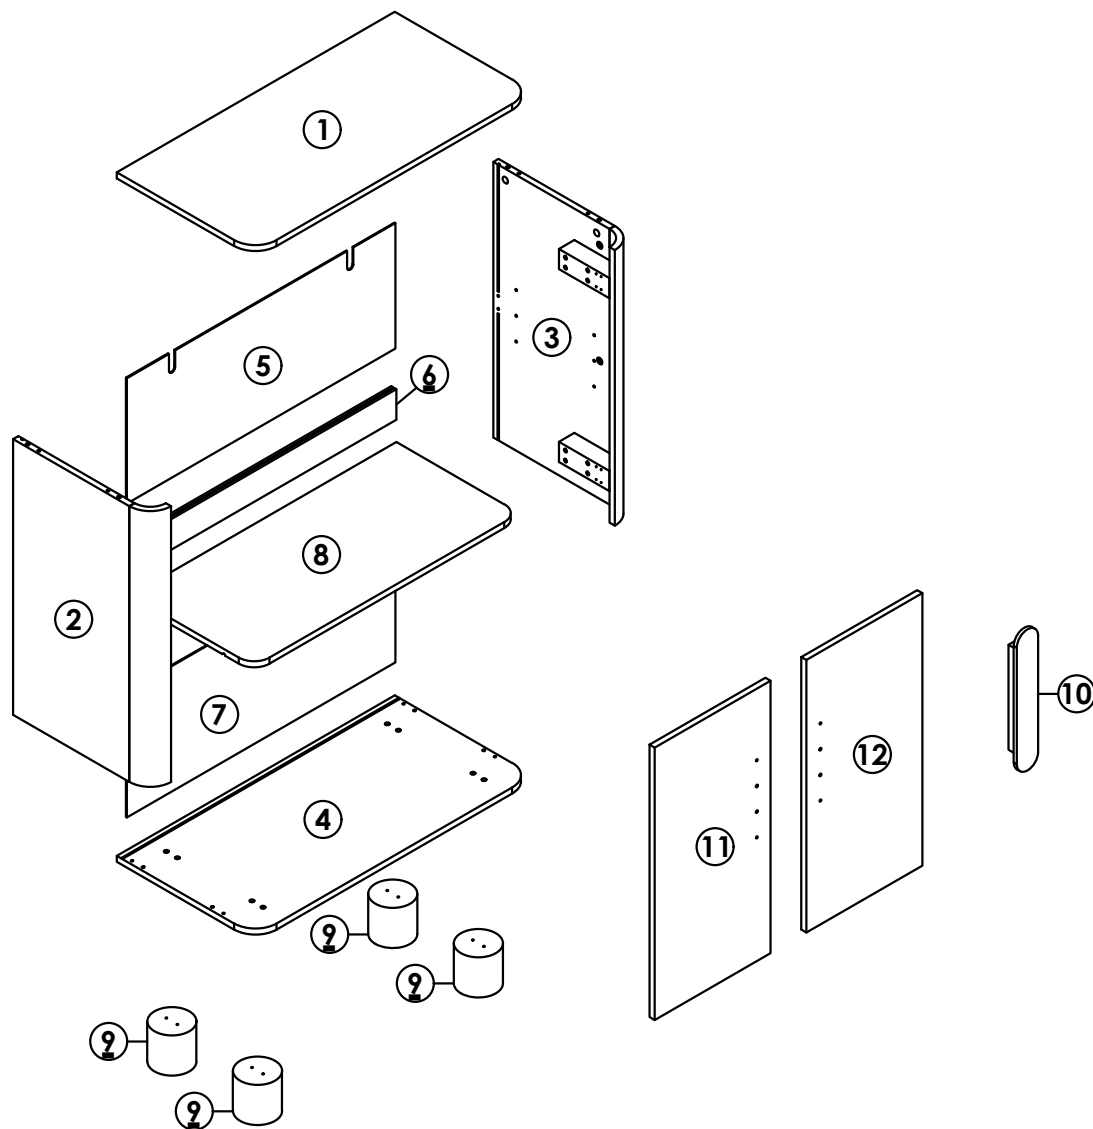




ASSEMBLY INSTRUCTION

If there are any questions during the assembly process.

 
A video and description about the step you were stucked will help us to understand the problem quickly.






Ax8	Bx8	Cx10	Dx12
			
6x35mm	15x9mm	4x40mm	6x30mm
Ex24	Fx8	Gx8	Hx8
			
4x14mm	3x14mm	5x45mm	
Ix4	Jx4	Kx4	Lx4
			
35mm	5x20mm	45x45x5mm	4x12mm
Mx2	Nx2	Ox1	
			
	6x30mm	M4mm	


1

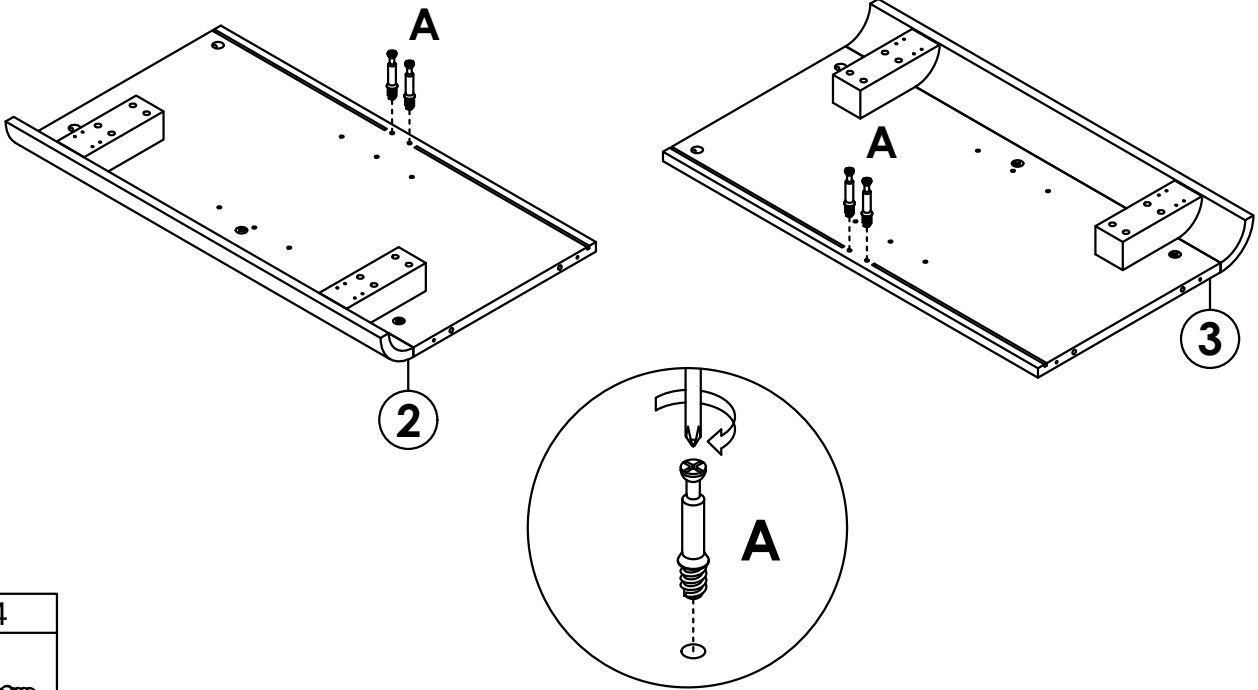

Ax4

 


2

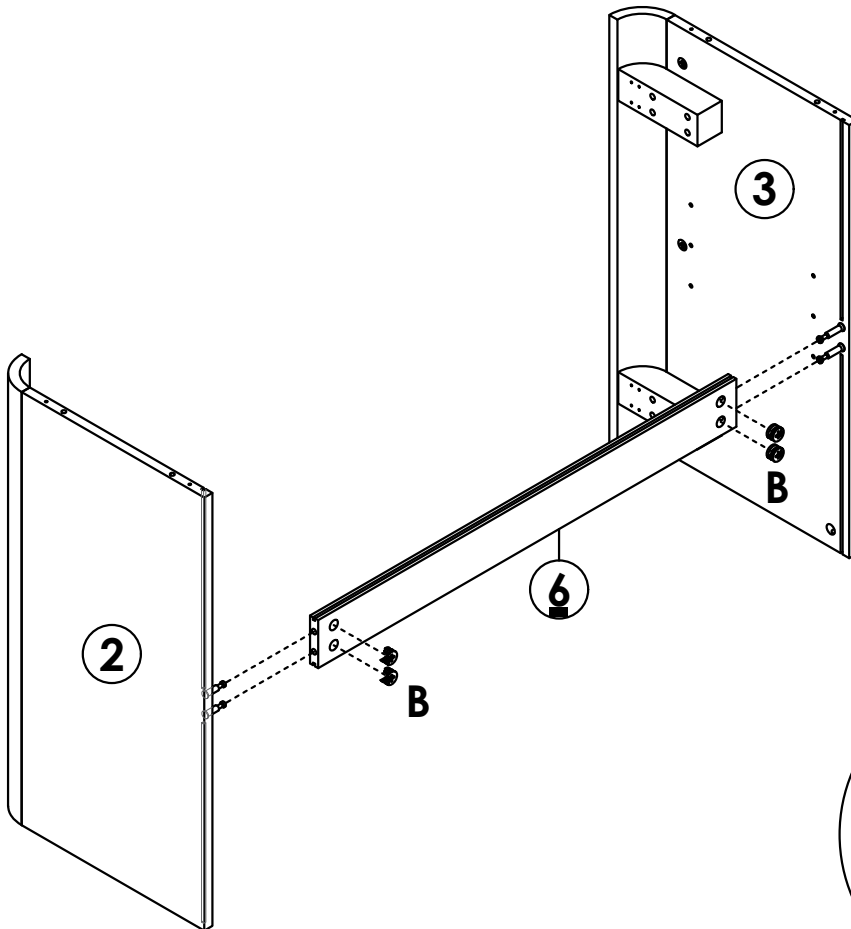 

Bx4




 
3

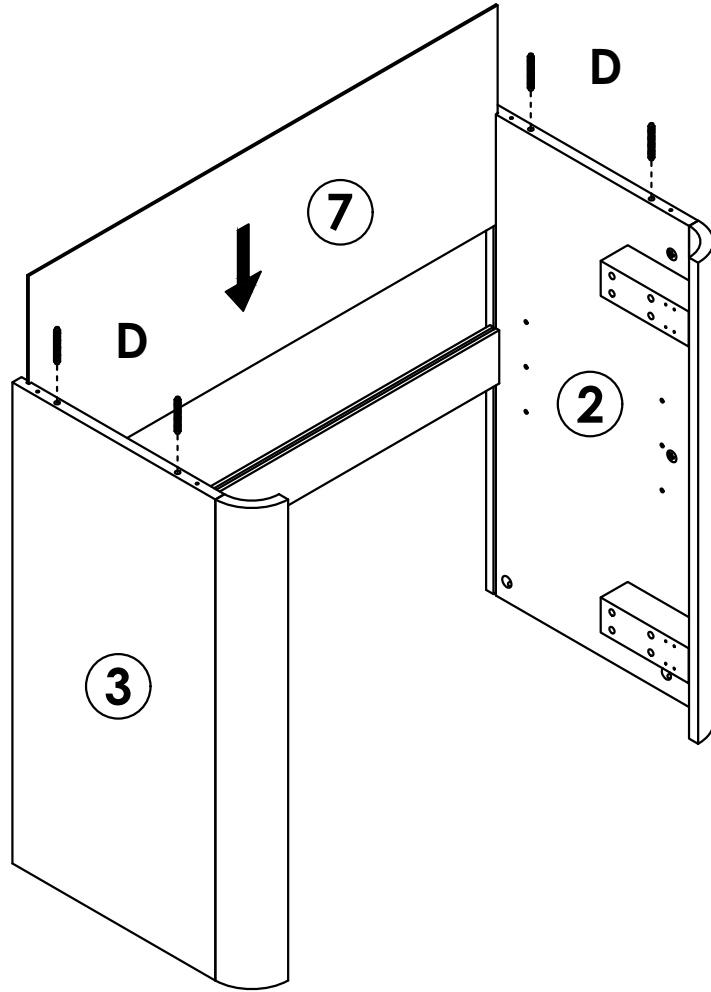

Dx4




  4

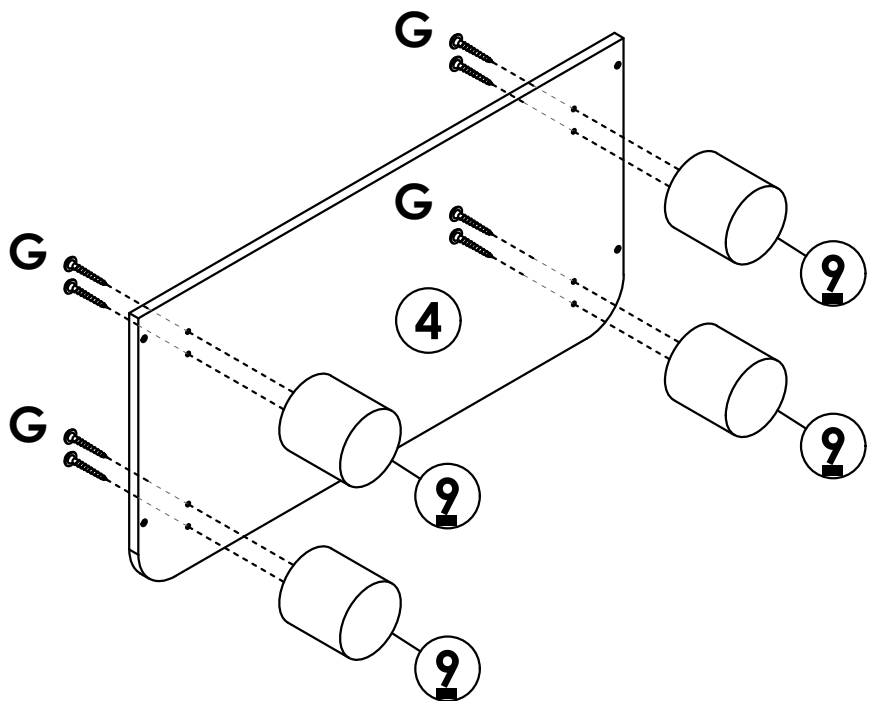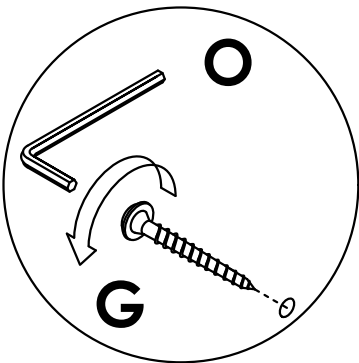


Gx8

 
Ox1






5

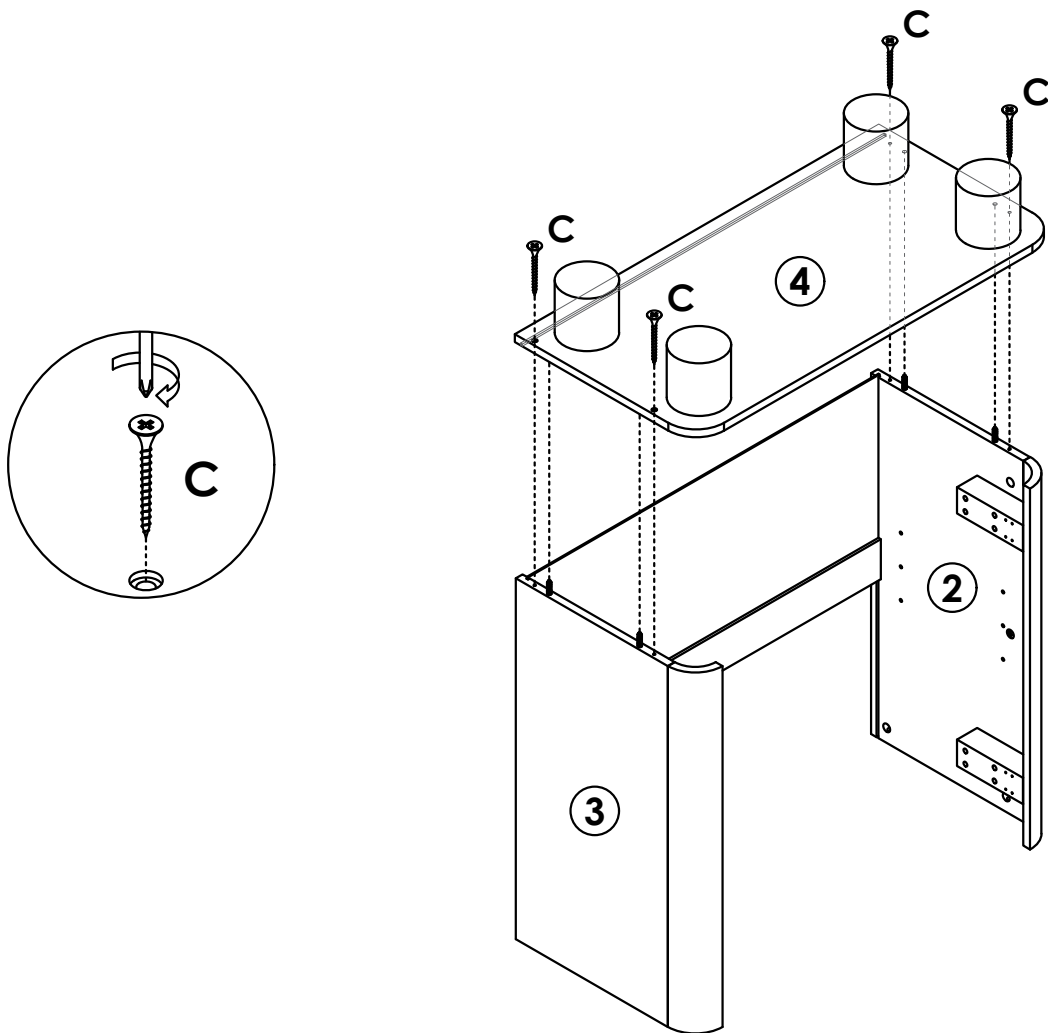 


Cx4

 

6

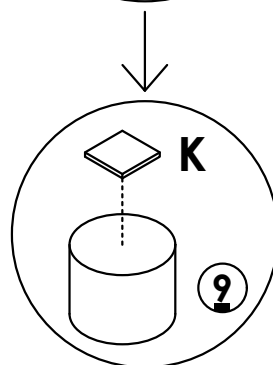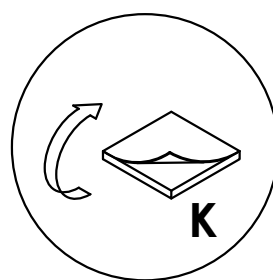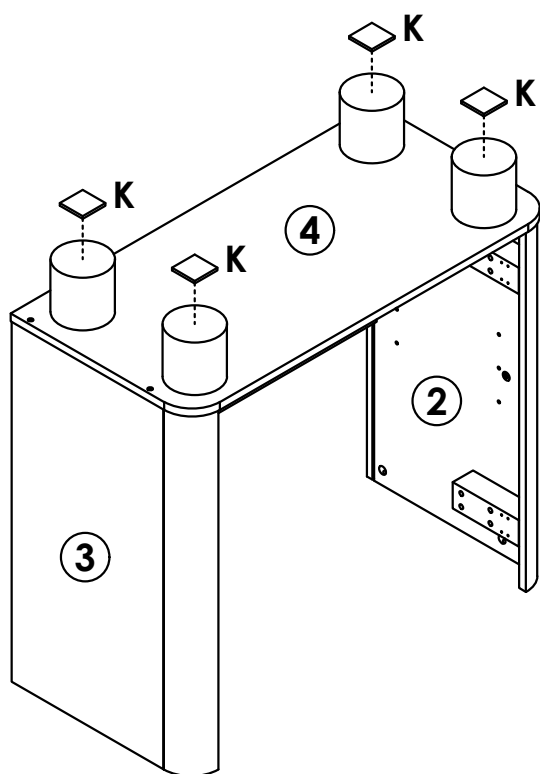   


180°

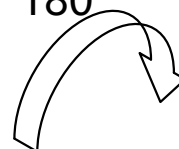 

Kx4







7

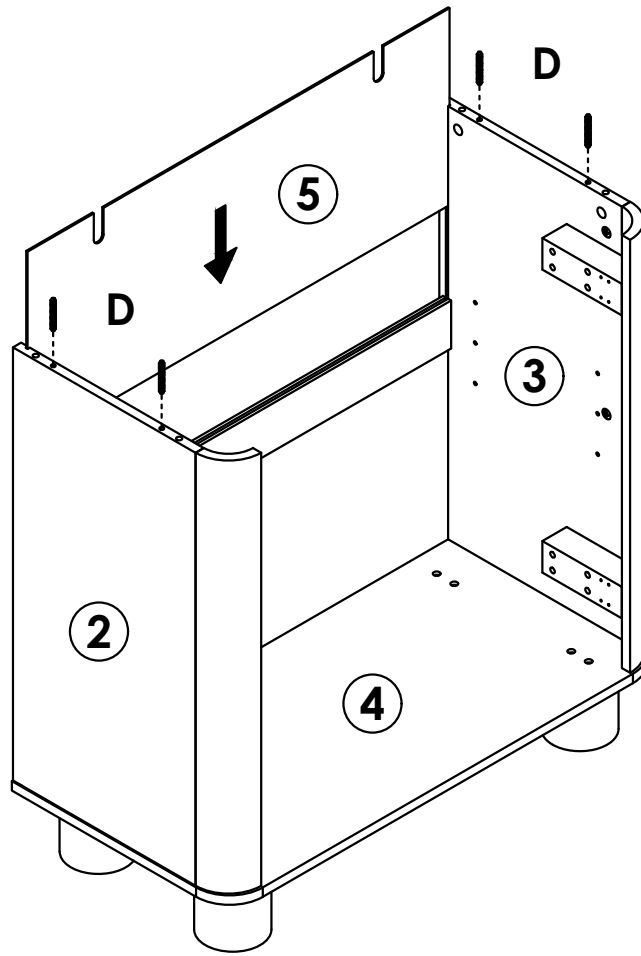

Dx4




8

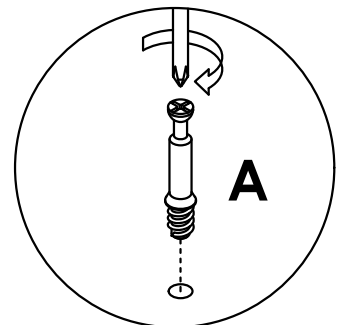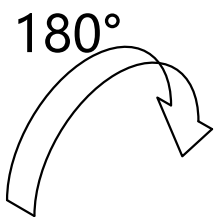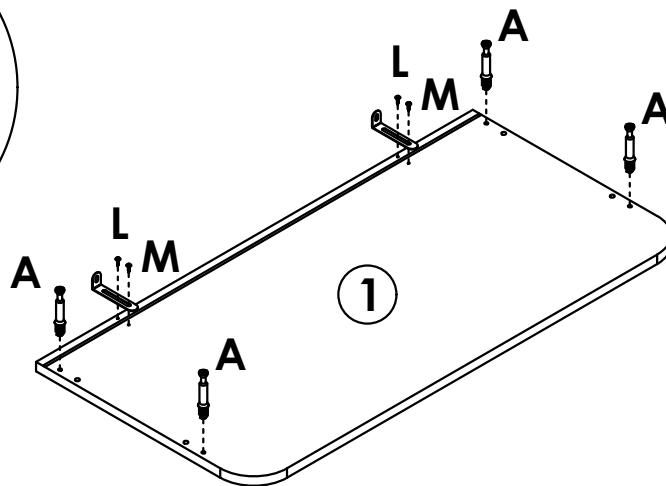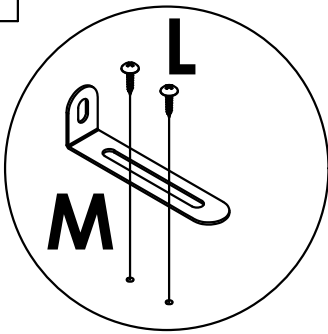



Ax4

Lx4

 Mx2





9

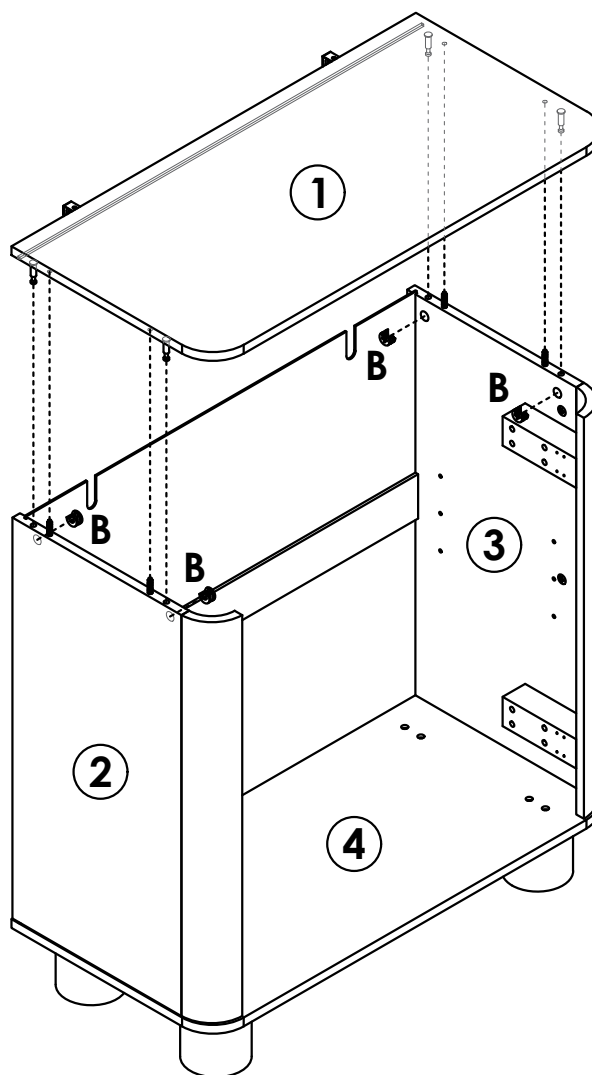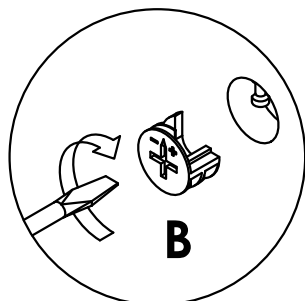  

Bx4




10

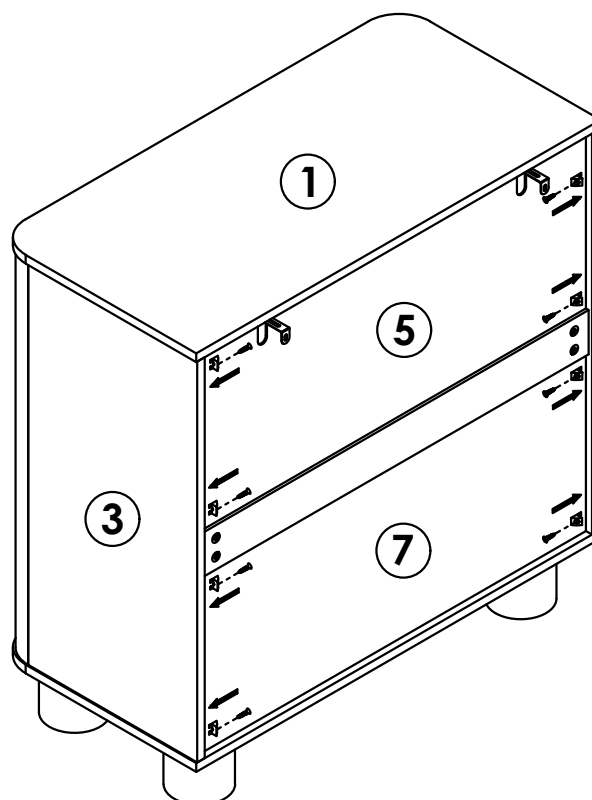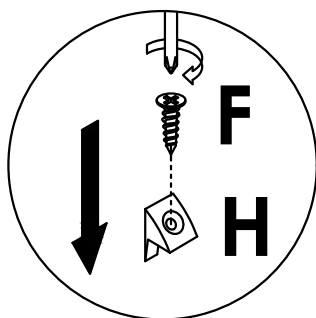

Fx8


 
Hx8



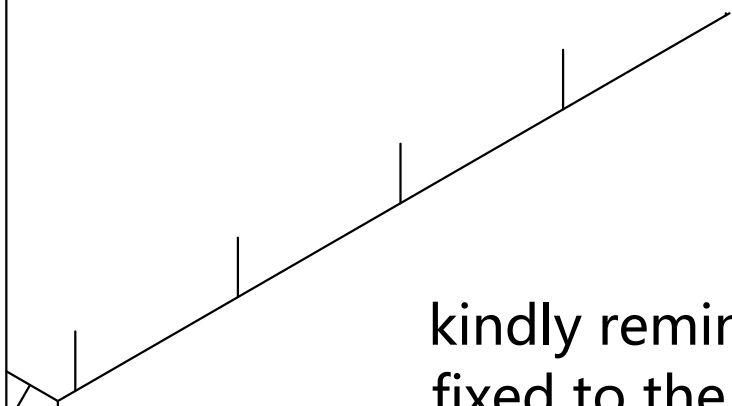

WALL

  kindly remind: This product must be fixed to the wall before use.

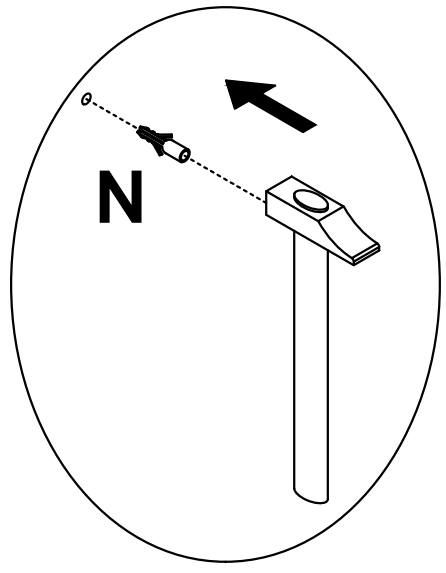
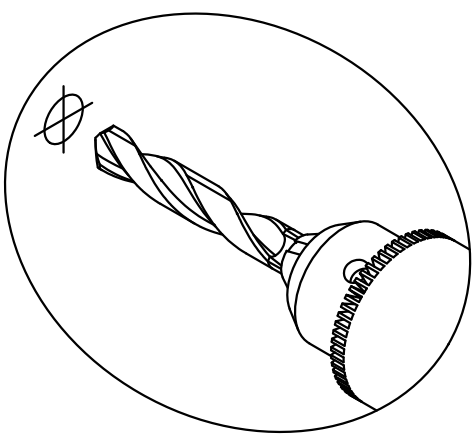


Nx2









12

WALL

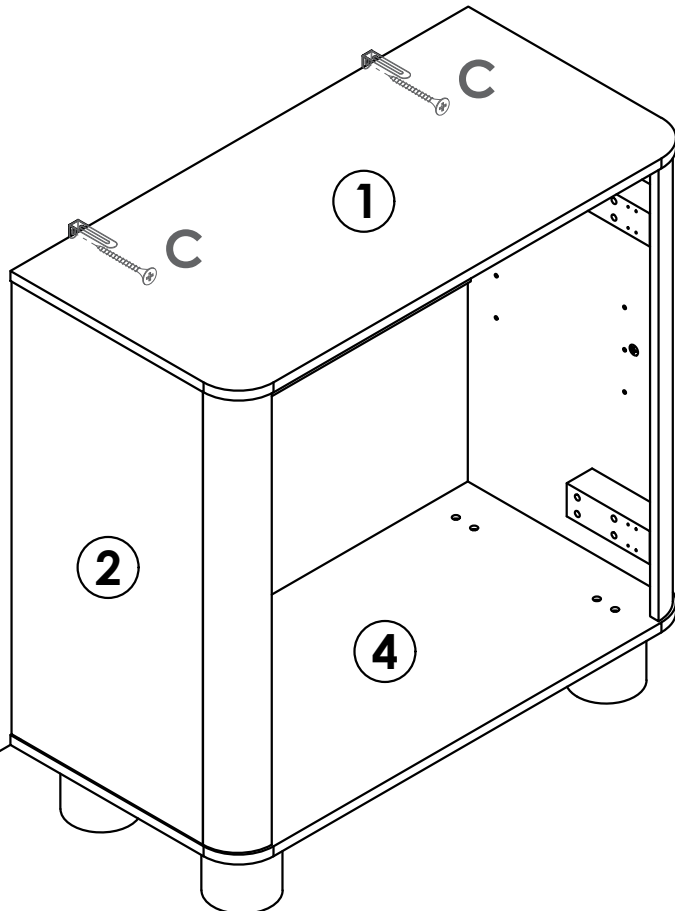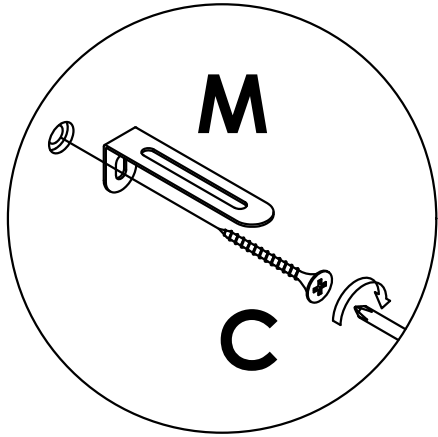

Cx2




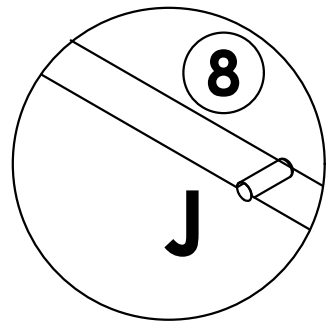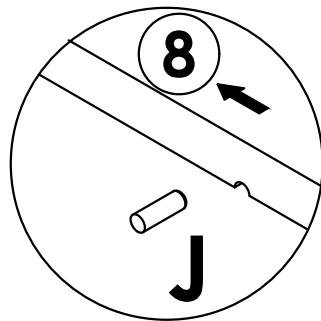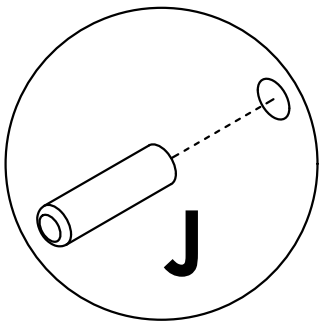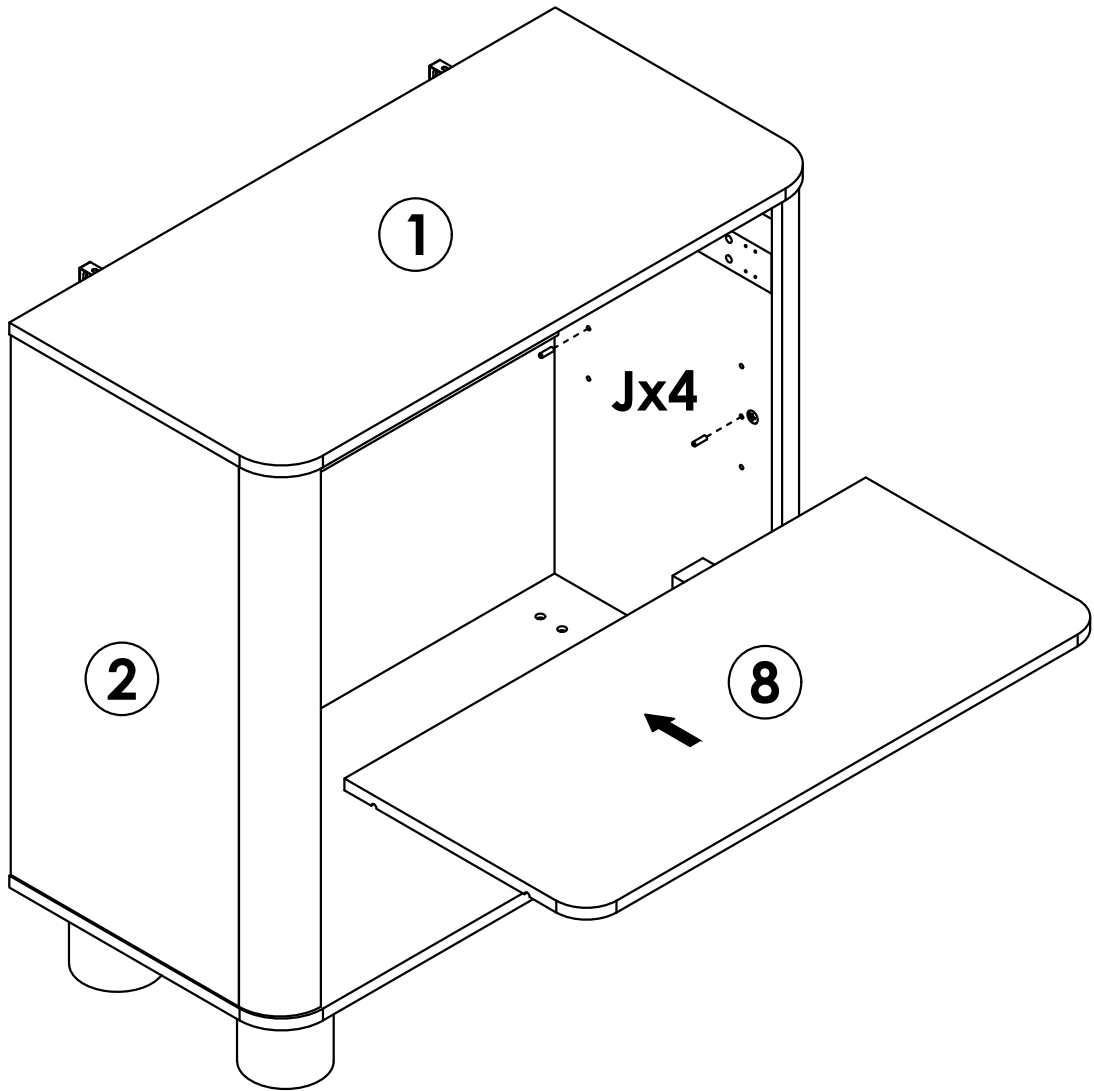  

Jx4



14





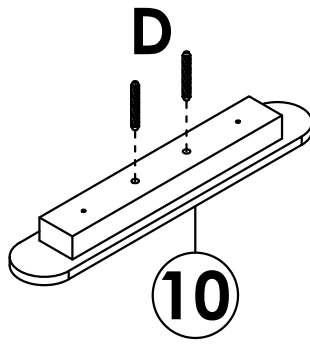





x2



Dx4

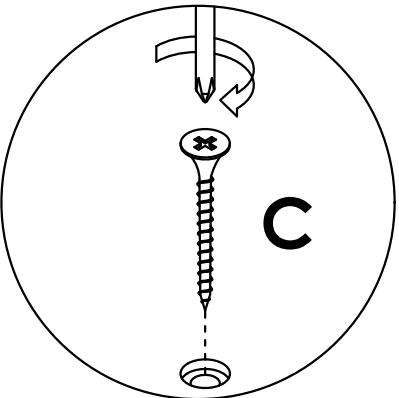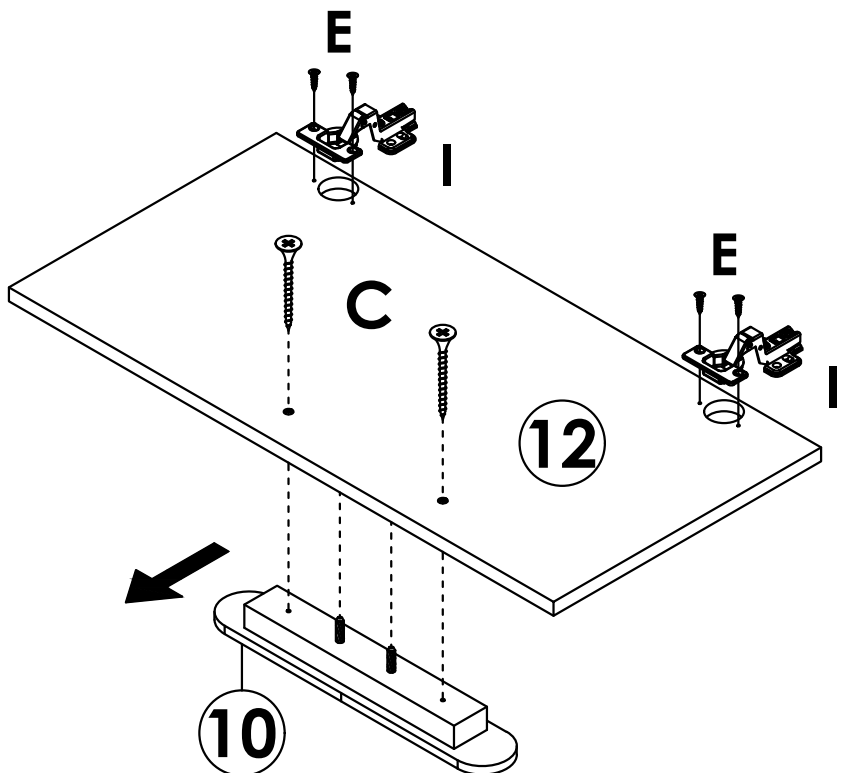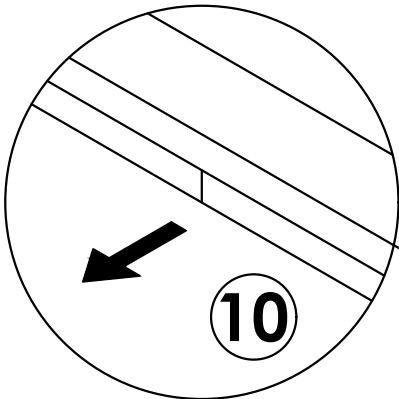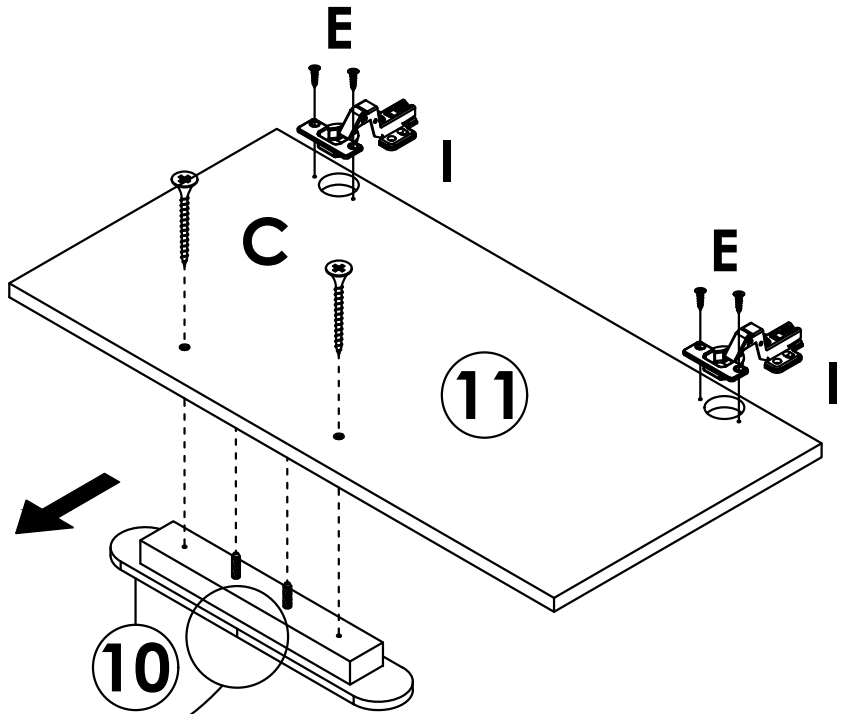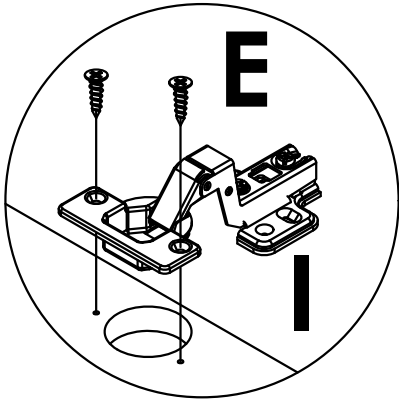

15

 

Cx4	Ex8	Ix4
		


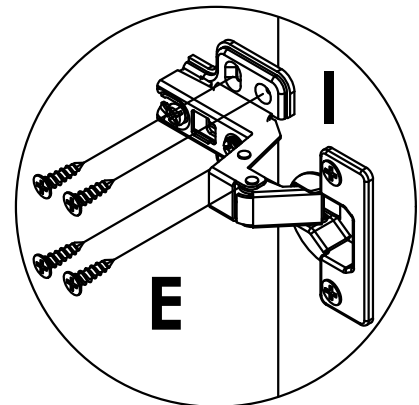
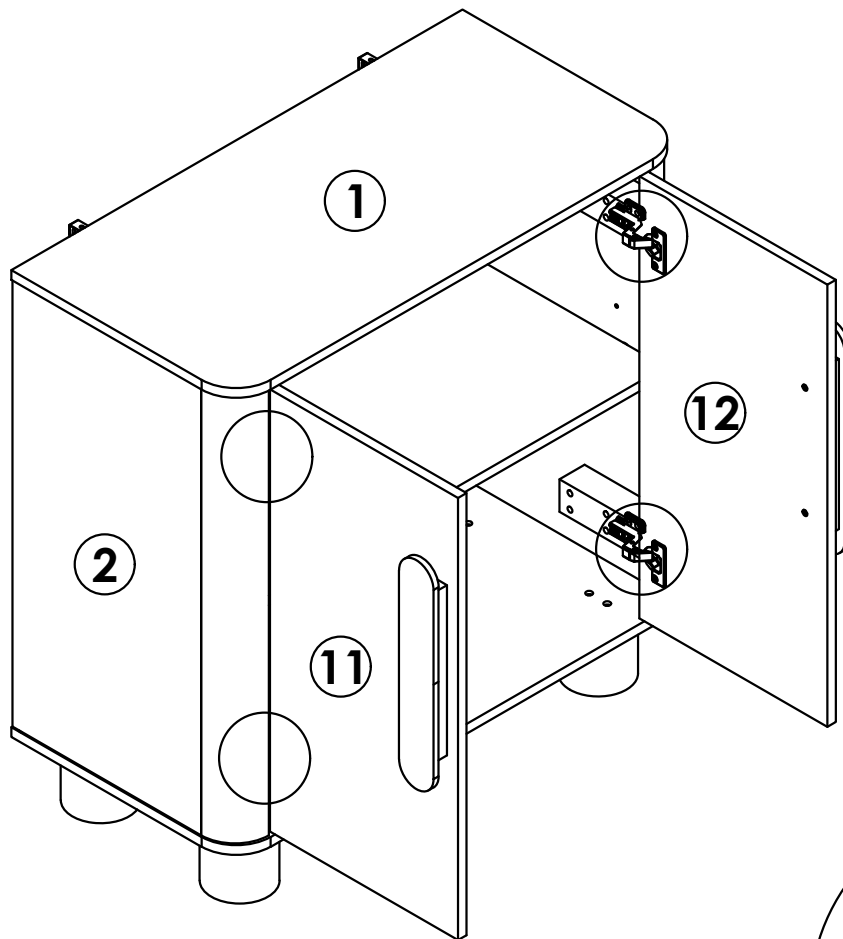


Tip: Use screws to pass through the oval holes on the upper and lower hinges and fix the door panel to the cabinet (do not fully tighten the screws). Adjust the height of the door panel up and down to the appropriate position and then tighten them. After all doors were installed and adjusted to the same height, lock in the remaining screws one by one.

Ex16








YOU WILL USE HINGE ADJUSTMENT INSTRUCTION ON THIS PAGE FOR THE NEXT STEP.

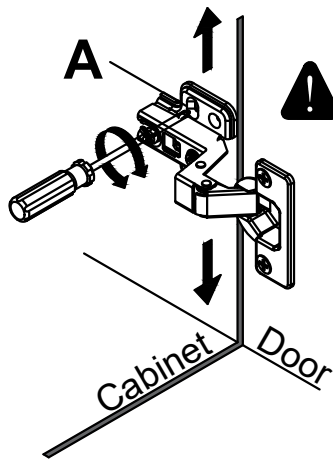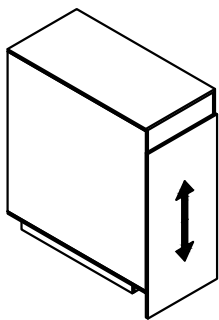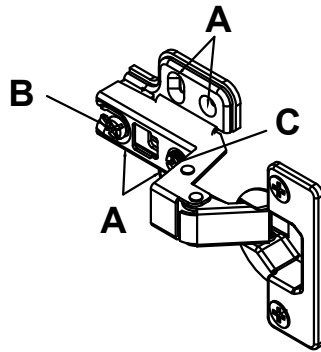

If you find a large gap above or below the door.


To adjust the vertical height. Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

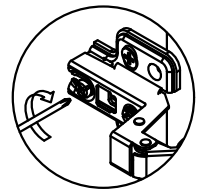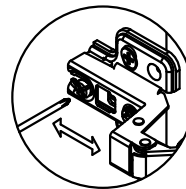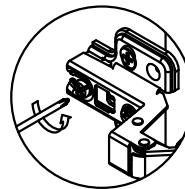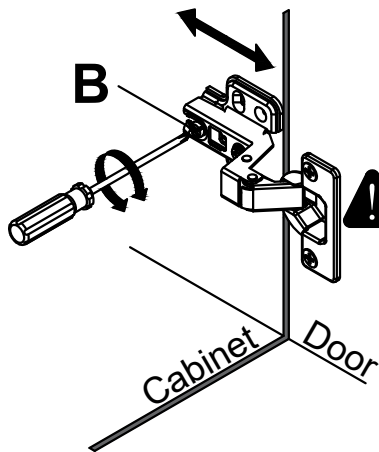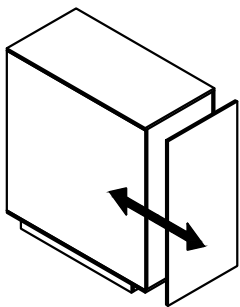



If you find the door is too protruding or too inside.

To adjust depth. Loosen screw "B" on both hinges and move the door to suit. If the door doesn't move, turn screw "C" on both hinges 1-2 turns and try again. Finally, tighten both screw "B" and reset both screw "C".

Have gap

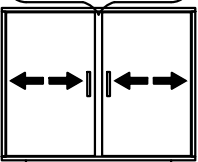

Have gap

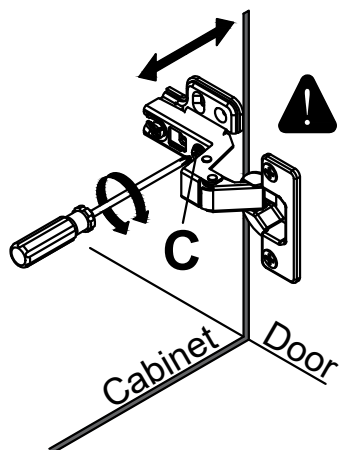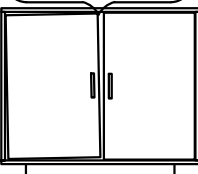

If you find a large gap between or beside the doors. Don't worry, it's not the problem with product.

To adjust side ways. Turn screw "C" clockwise or counterclockwise on both hinges until the door is in the desired position.

18

WALL

