 
 


PARTS

 
A 1pc



B 1pc




C 2pcs




D 4pcs



 
E 2pcs




F 2pcs

 


G 2pcs

 


H 2pcs

 


J 1pc

 


K 1pc

 


L 4pcs

 


M 4pcs

 


N 4pcs

 

O 1pc

 

P 4pcs

 

Q 8pcs



R 2pcs



 
S 2pcs



T 2pcs



U 2pcs



V 2pcs



W 2pcs



X 2pcs



 
Y 4pcs



Z 8pcs




①




35pcs+1pc

 ②



8pcs+1pc

 ③



4pcs+1pc

④

 
 
 
 


4pcs+1pc

M6x30 mm


M6x20 mm

M6

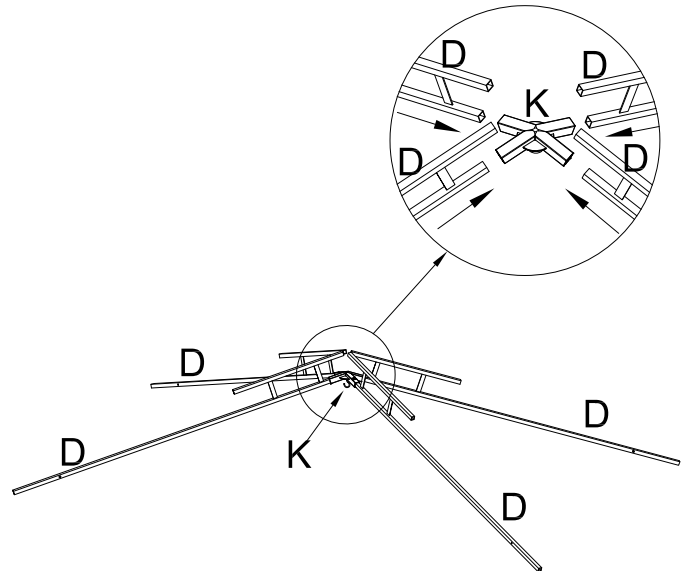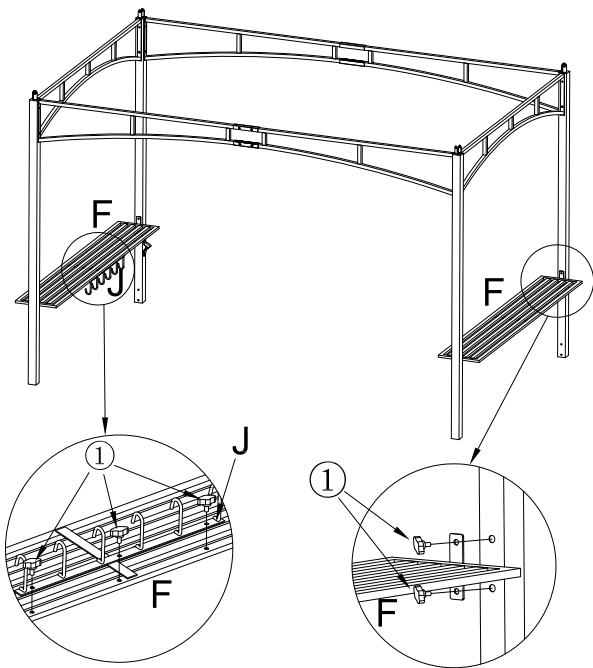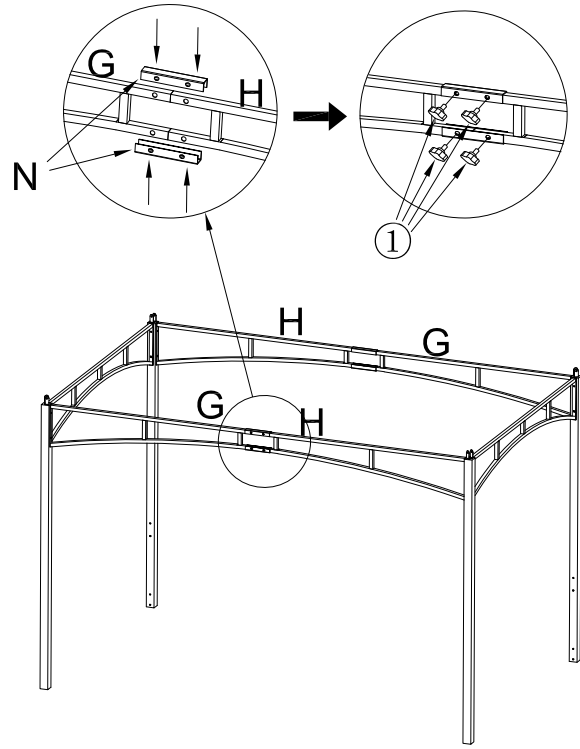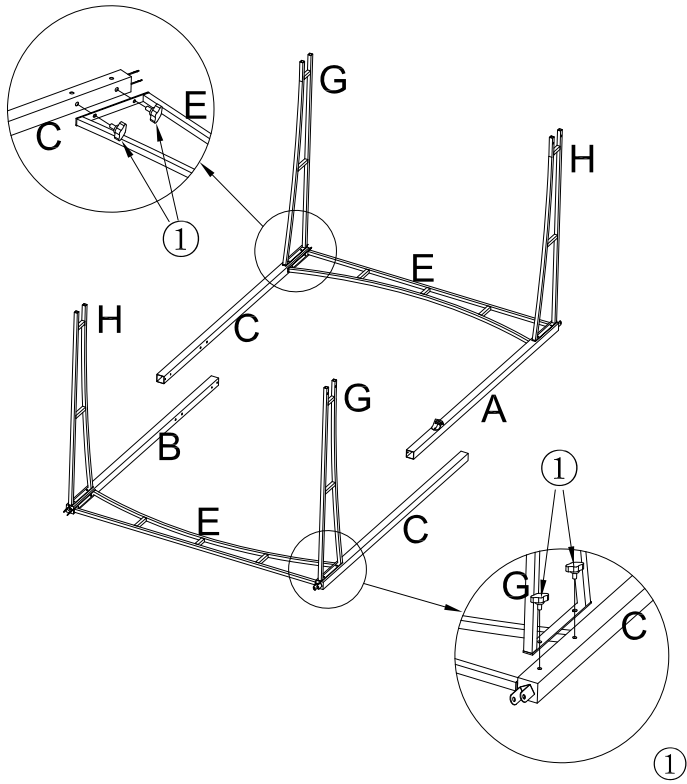


③

 ④

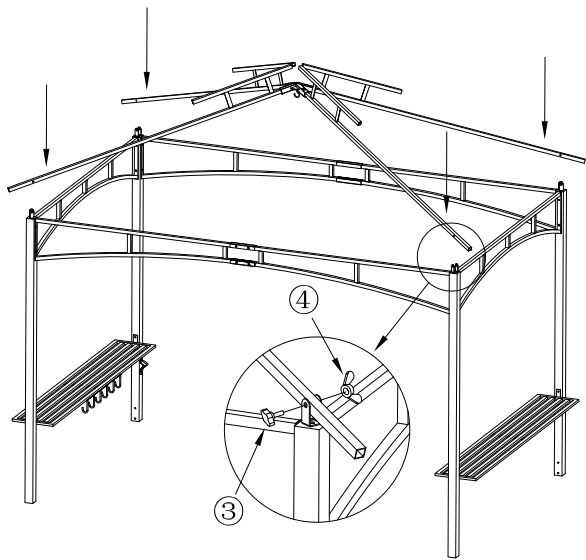


⑤

 
Press the button and push the extension tube (M) up to the end

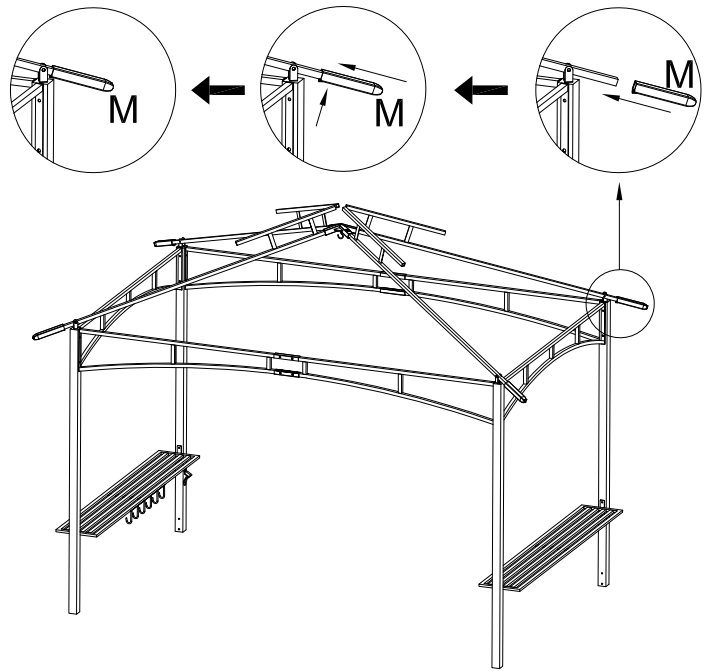

⑥

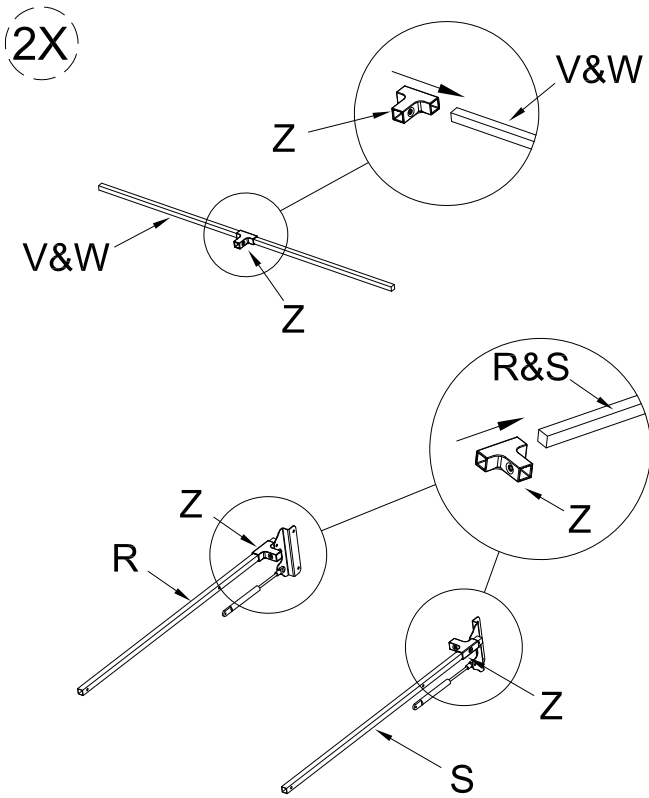 

⑦

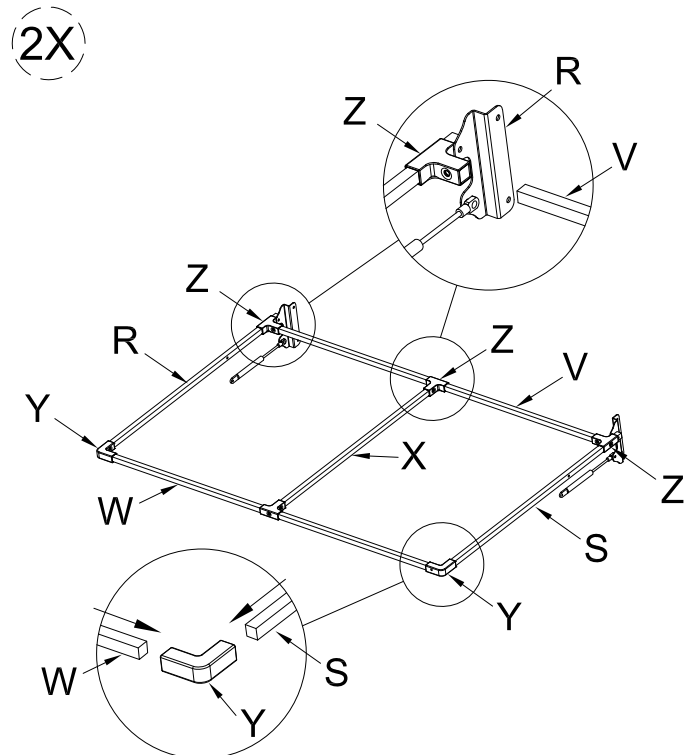 

⑧

