


installation manual

product name: RW-F028


Pay attention to electricity!
Do not operate with
electricity

Installation Notes:


RW-F028-6

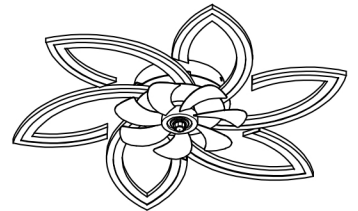

RW-F028-8

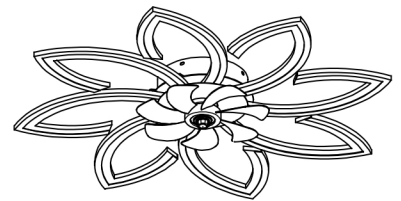

SCAN THE QR CODE TO WATCH
THE ASSEMBLY VIDEO:

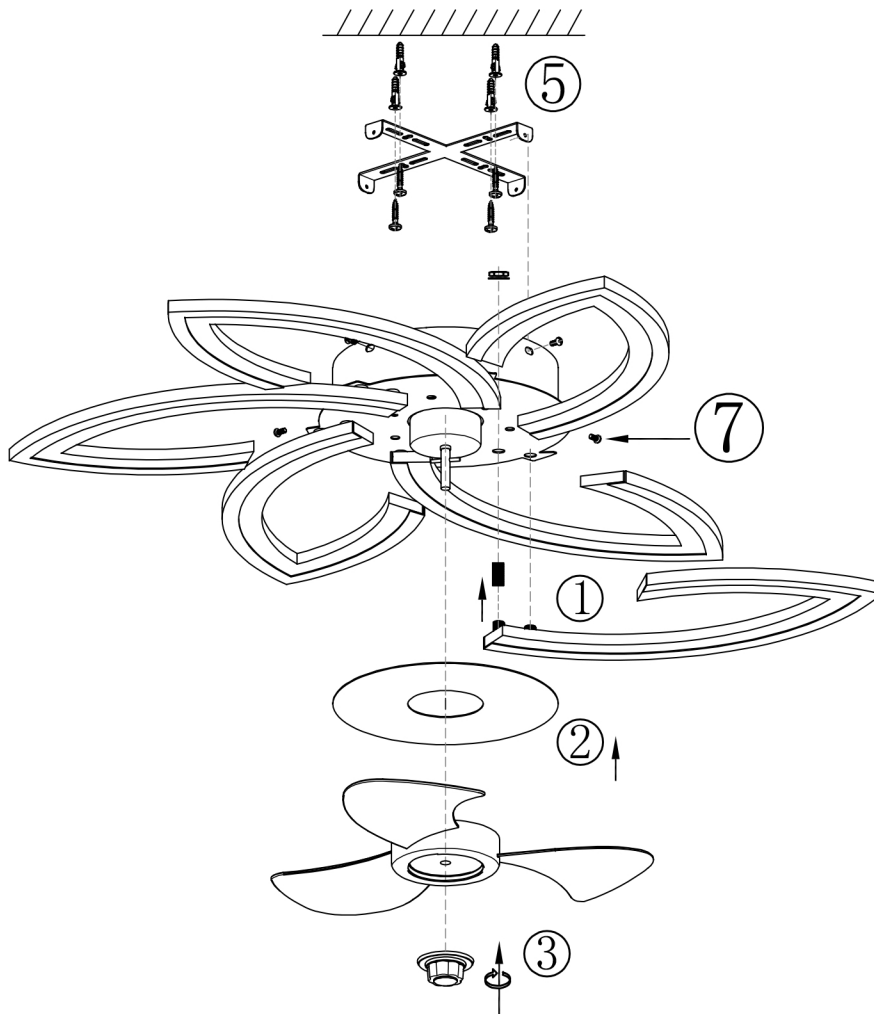

installation steps

1. Install the light head as shown in the figure
2. Install the decorative disc as shown in the figure
3. Install the fan blade and fix the fan blade as shown in the figure
4. Plug each PH terminal into the board, or use the red and white terminals
5. Install the hanging plate
6. Power off the power cord
7. Install the ceiling plate

2.4G DC Fan Lamp Controller Specifications

Product Introduction:

This product uses 2.4G wireless digital remote control technology, remote control one-to-one control, simple and convenient operation, strong anti-interference ability.

Technical Parameters:

Model: 2.4G AC fan light controller

Wall switch sequence:

full light/white light/yellow light

Input voltage:

AC100V – 130V 60Hz

Output voltage: DC70–110V

LED output power: 25–36 W

Motor rated power: <25W


Wind speed: 1 – 6 gears

Timing: 1 hour / 2 hours

Receiving method: RF2.4G

Remote control distance: 8–20 meters

Remote control battery: No. 7 1.5V X2

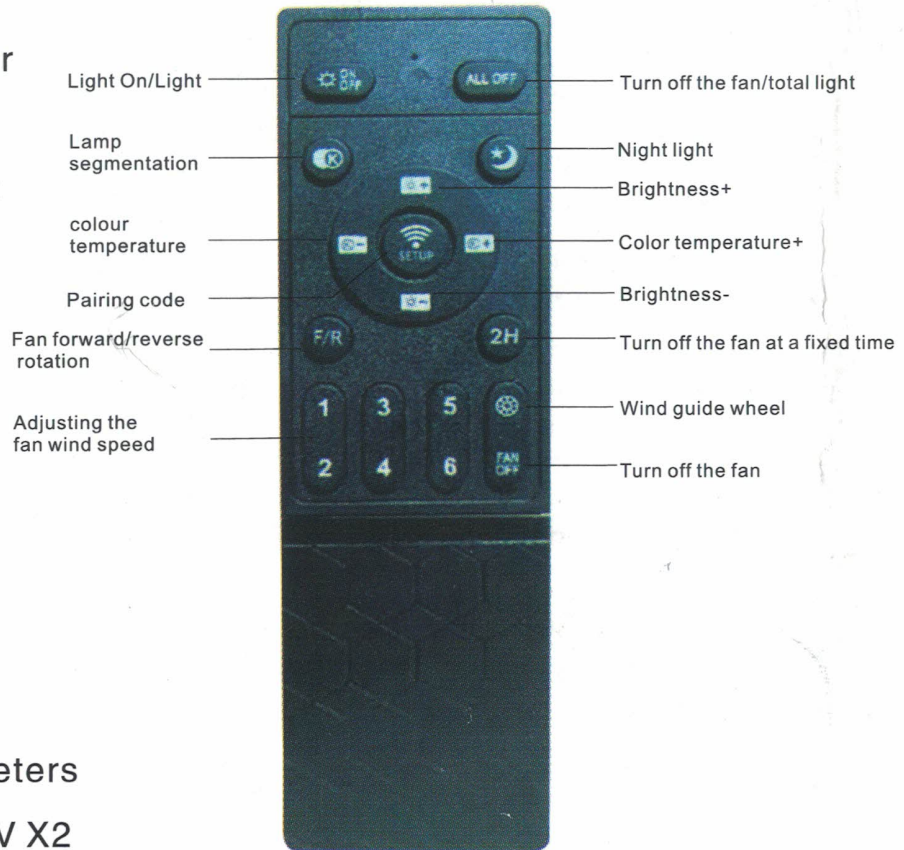

Remote control matching code:

Turn on the power and Press and hold the light pairing key within 5 seconds of the light on, When you hear a beep or a light flashes, the code match is successful. If you need to match the code a second time, you need to wait 30 seconds before turning on the power and repeat the above operation.

CAUTION:

The electronic switch is not an isolated product and needs to be operated by professional personnel during installation.

The electronic switch is triggered by the remote control, and the wireless frequency of the remote control transmitter is 2.4GHz.

