

Assembly Instructions

GAME TABLE

PACKAGED


- | | |
|--------------|---------------------|
| (A) 1 - Top | (C) 8 - Lock washer |
| (B) 4 - Legs | (D) 8 - Flat Washer |
| | (E) 8 - Hex nut |
| | (F) 1 - Wrench |

Read all instruction before starting assembly.

Step #1 Remove all the content from the package, checked that all of the component listed in "Packaged" are included. Prepare a flat, protected work surface where the product can be assembled.

Step #2 place upside down your top (A) on smooth surface with bottom facing up. Align legs (B) and drop into counter bored hole to the top as shown. Place one Lock Washer (C) with one Flat Washer (D) onto hanger bolt in the leg. Align and fasten with Hex Nut (E) and tightened with supplied Wrench (F). Repeat procedure for remaining the other and then securely tighten.

Step #3 Place the table into upright position.

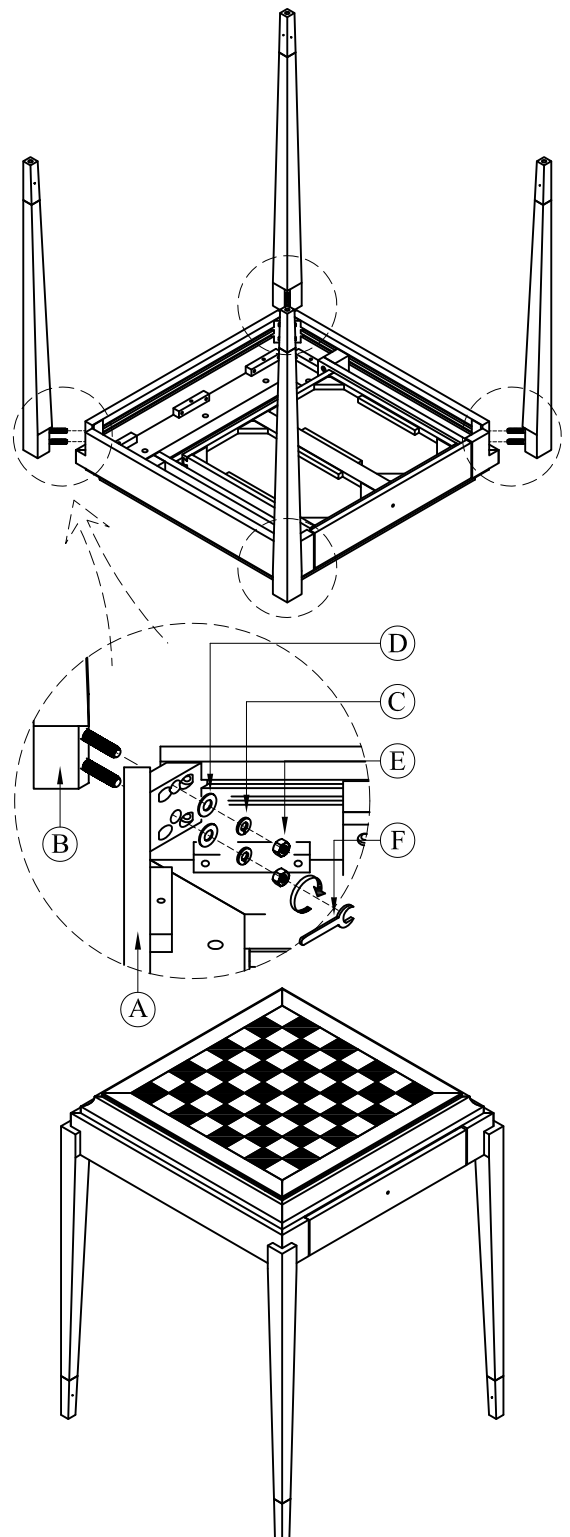

(*) Caution : DO NOT OVERTIGHTEN.

In any correspondence regarding this product, please include the complete identification number located on the underside of the product.

We hope this product will be a useful and decorative addition to your home for years to come.