

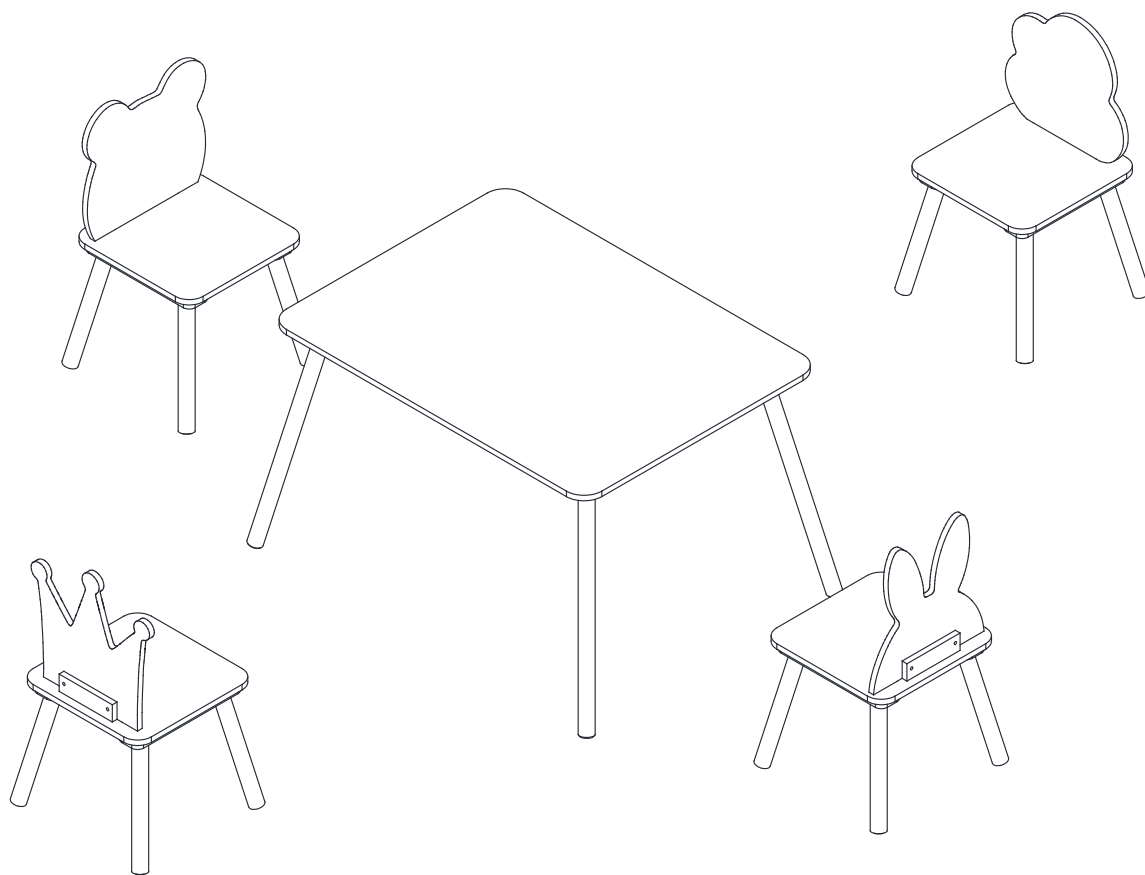
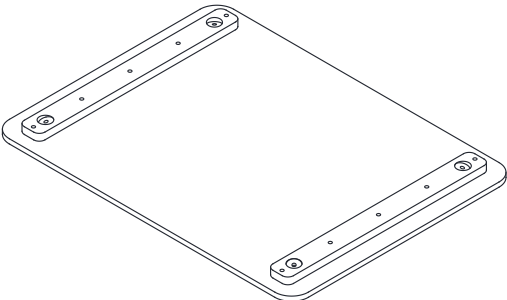
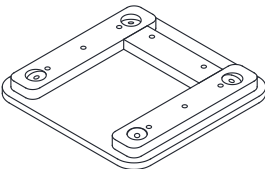
 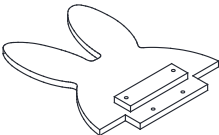
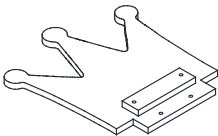

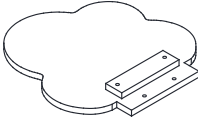



ASSEMBLY INSTRUCTION

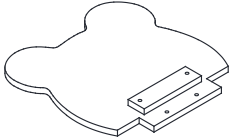

AX1PC		BX4PC	CX1PC	DX1PC
				
		EX16PC	FX1PC	GX1PC
HX4PC	IX8PC			
				
				

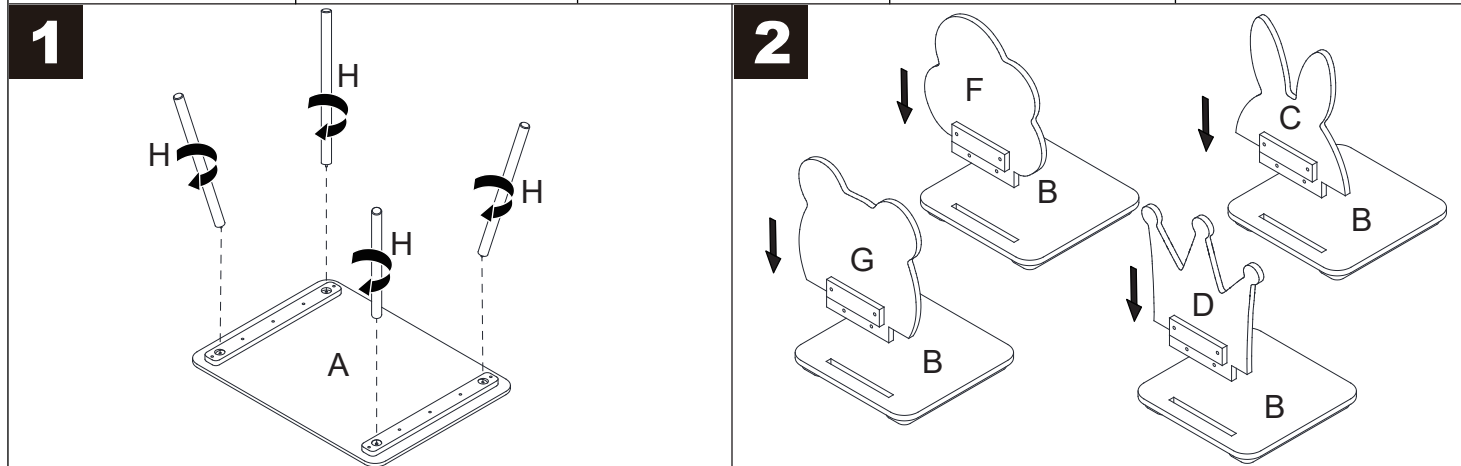

3

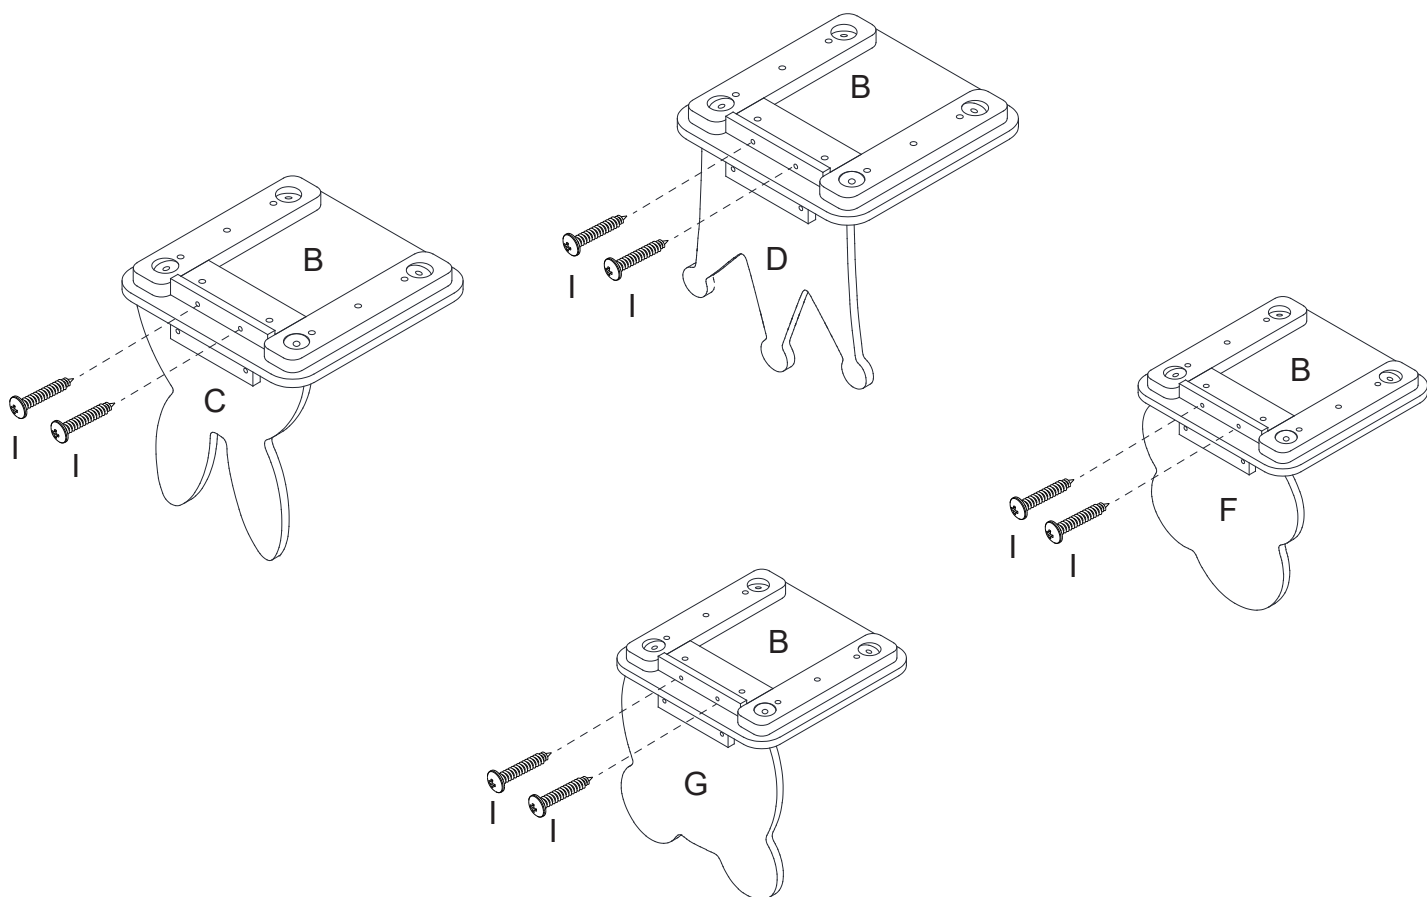

4

