

TREE STRAPS ASSEMBLY INSTRUCTION



○ Wrap the strap around the tree branch.

Pull the D-ring end through the other end's ring.



Tighten the straps by pulling down firmly.

To make the strap shorter, you can loop the strap twice over the tree branch.

Now you can safely Attach the swing to the D-ring with the carabiner.

Operating instructions swing seat

Attention: This is the general user manual of swing,
the actual color refers to the item you purchased.

SAFETY INSTRUCTIONS

1. Please preserve this manual and the packing carefully for later reference. If you give this product to a third party remember to hand over this manual as well.
2. This product is NOT meant for commercial use, but is ONLY intended for domestic use. To be used only under the supervision of adults. Never leave your child unsupervised on the swing, in order to avoid the risk of falling down.
3. Follow the assembly and maintenance instructions, in order to prevent your child from falling, tumbling down and to prevent the tearing of ropes.
4. We recommend that you set up the swing on an even surface and maintain a distance of at least 2m from other structures or obstacles, e.g. fence, garage, house, projecting branches, clotheslines or electric cables.
6. Not suitable for children below 3 years of age. Risk of strangulation!
7. Children below 3 years of age are still unable to maintain their balance.
8. Since children have different development patterns, please check beforehand if your child is able to maintain his balance.
9. The recommend height from the ground to swing seat is 20in (50cm).

MAINTENANCE

1. Always pay attention to the following points if the swing was not in use for a longer period (Especially at the beginning of a new season!).
2. Lubricate all metal parts. Check all the caps on screws and sharp edges and replace them, if required. Check the swing seats, chains, ropes and other accessories for any signs of wear.
3. Check the ropes and rings constantly for decay, wear and tear resistance. The best way to check this is to turn the ropes till their inside becomes visible! Check the knots regularly for tightness. Examine the wood regularly for decay and cracks.
4. Also check if wood shavings are sticking out from the swing board. These should be abraded in order to avoid injuries. **Do not expose the swing to the weather during longer periods of rain and in autumn / winter.**
5. Always replace defective parts with original spares.

PART LIST


Swing seat		1pcs	Spanner		1pcs
suspension ropes and bolts		2pcs	Nut		4pcs
tree strap		2pcs	Spacer		4pcs

Carabiner		2pcs	EVA foam padded tube	8	4 pcs
Nut cap		4pcs			

SWING ASSEMBLY INSTRUCTION

Attention: This is the general user manual of swing, the actual color refers to the item you purchased.

1. Insert 4 Tubes into the swing seat.
2. Connect two joints at the left side of swing, make sure two holes align.
3. Align the pipe ends at the right side of swing, then push down the short tube gently until it is even.

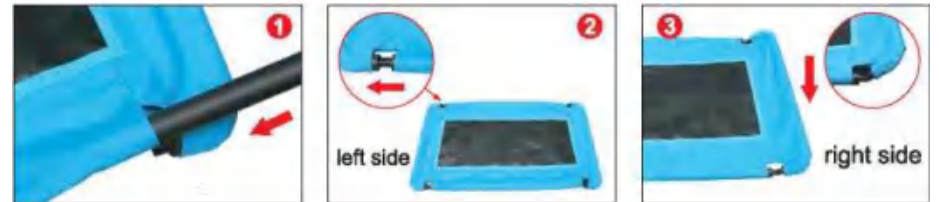

4. Insert the bolt into the hole at the front side of swing.
5. Put the washer and nut onto the bolt, and tighten with a wrench until 3-4 threads of bolts are exposed, then put the nut cap onto the bolt and tighten it. Please make sure all the screws are tightened for your safety. (You need a wrench to fasten nut and nut cap.)
6. Assembly complete.

