


Contents of the Kit and Part Names


Before assembly, check that all parts are complete.

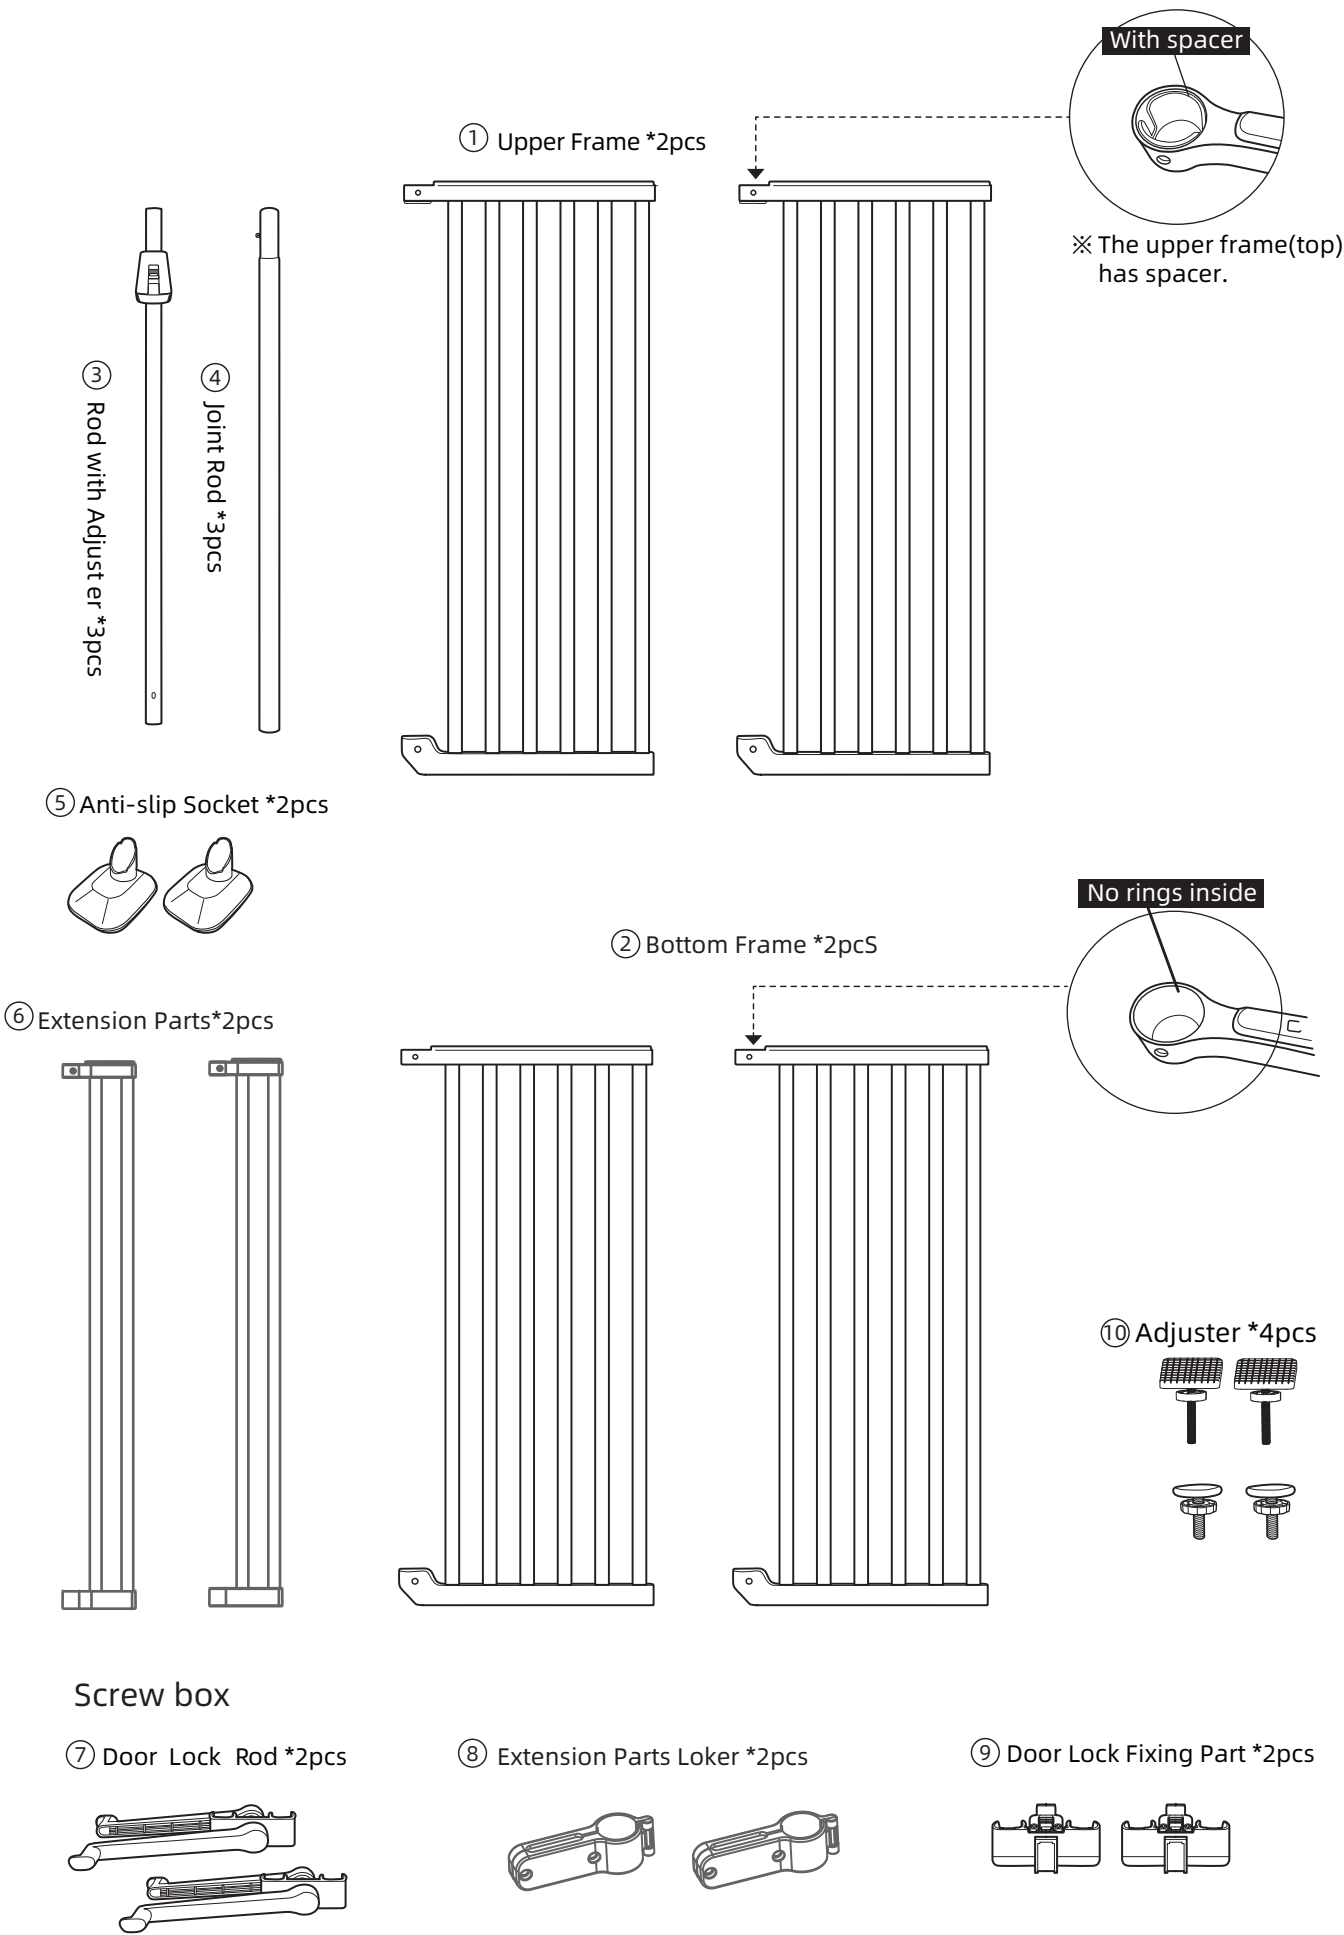

Installation Location


Caution

1. Before you begin the installation, please thoroughly inspect the designated "Installable Locations" and ensure that you proceed with the installation in a correct and safe manner.
2. Please note that the possibility of installation may be affected by the shape of the baseboards on the wall or the edges around the ceiling.
3. Prior to assembly, kindly measure the width and height of the installation area and proceed accordingly.

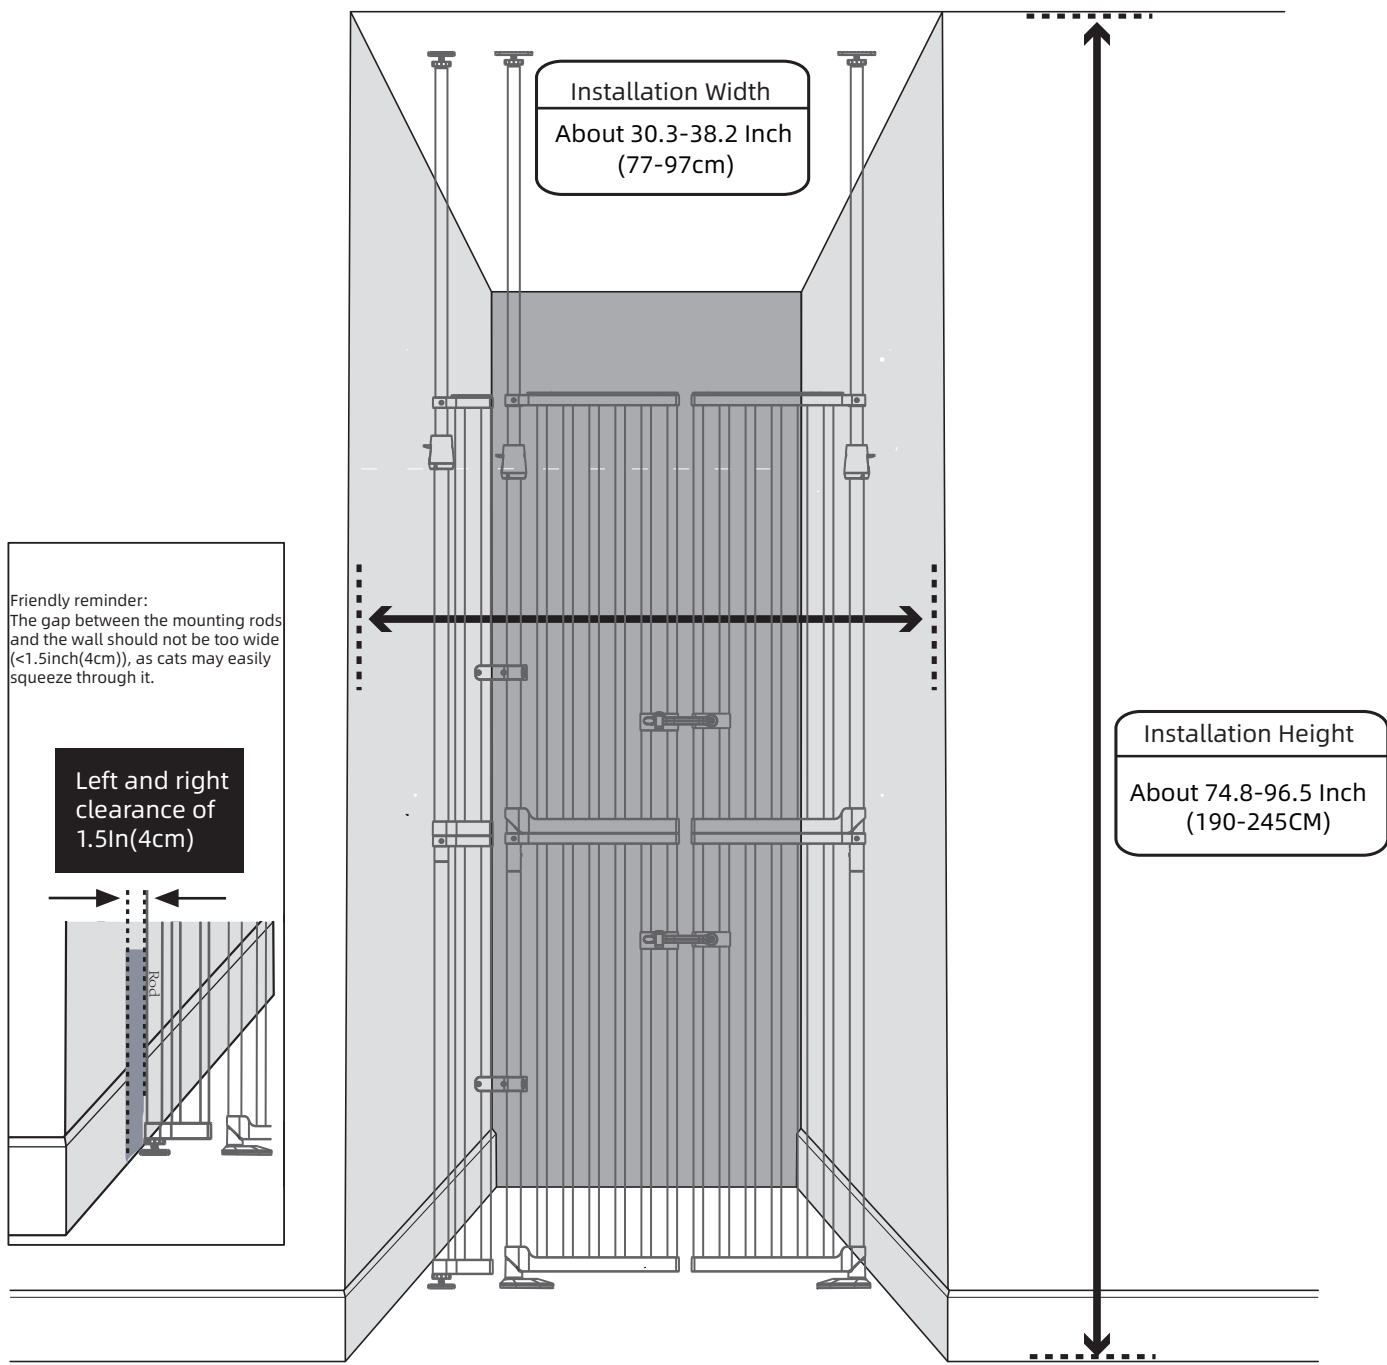

Assembly method (method of mounting rods and frames)


1 Step 1: Connecting the Frame and Rod

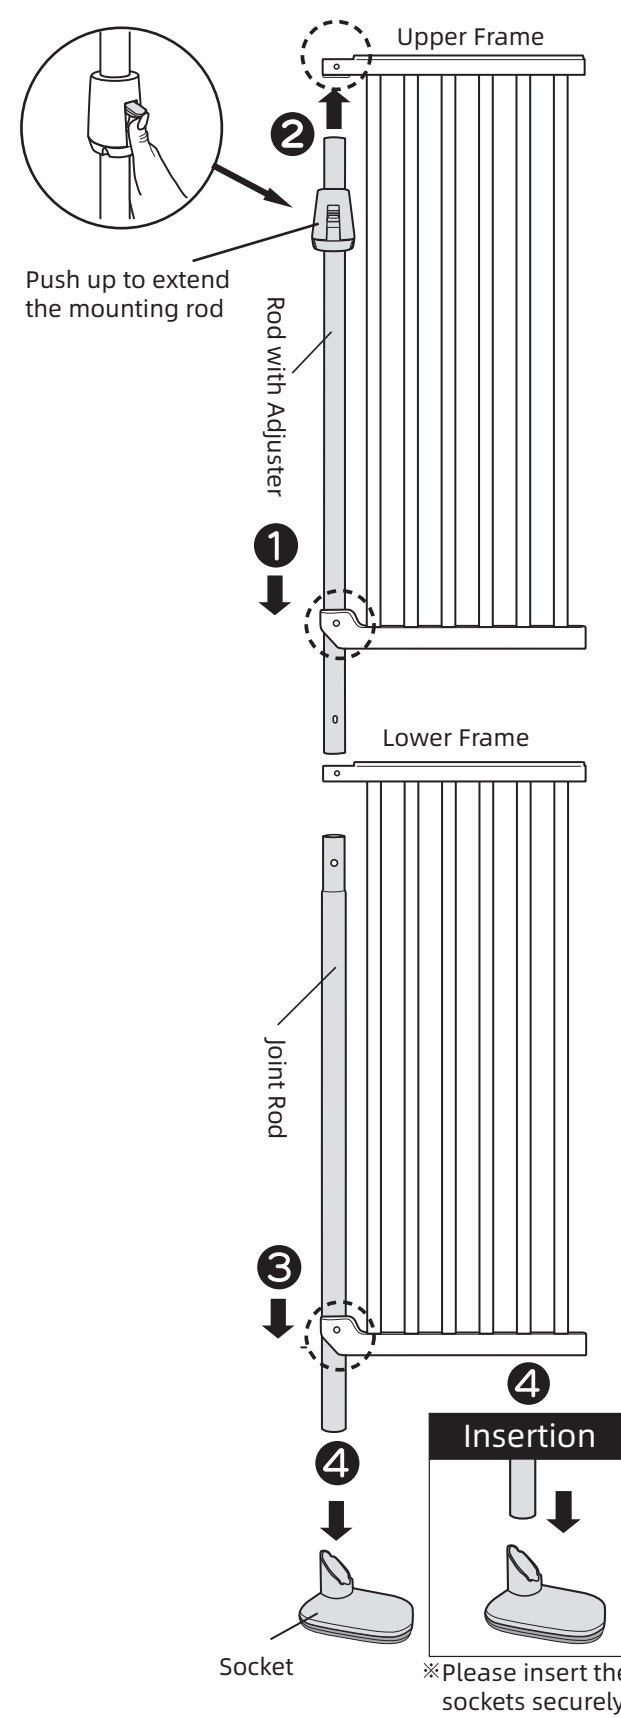

3

Assembly method (method of mounting rods and frames)


※Assemble the right frame in the same way as the left frame

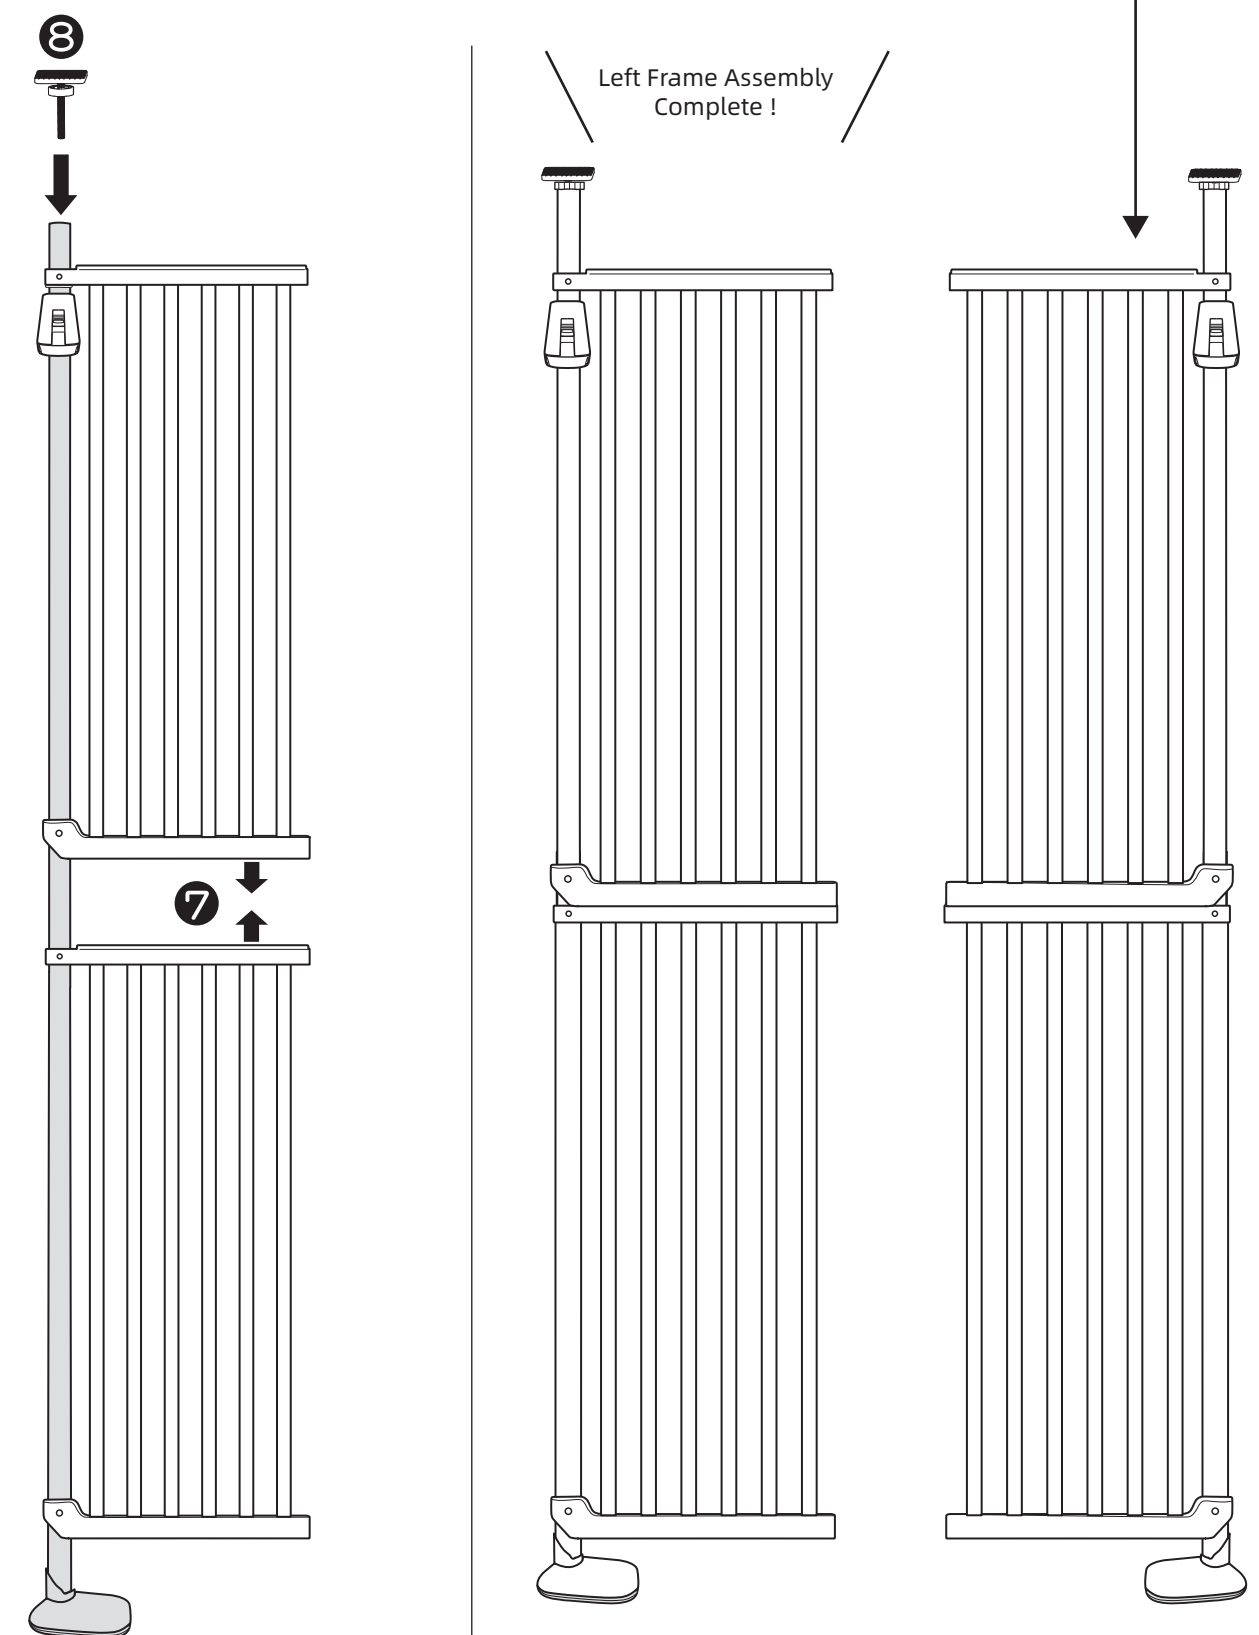

4

Assembly Method (Installation of Door Lock Rod)


- 2** Install the door lock componts on the left, right, upper, and lower doors

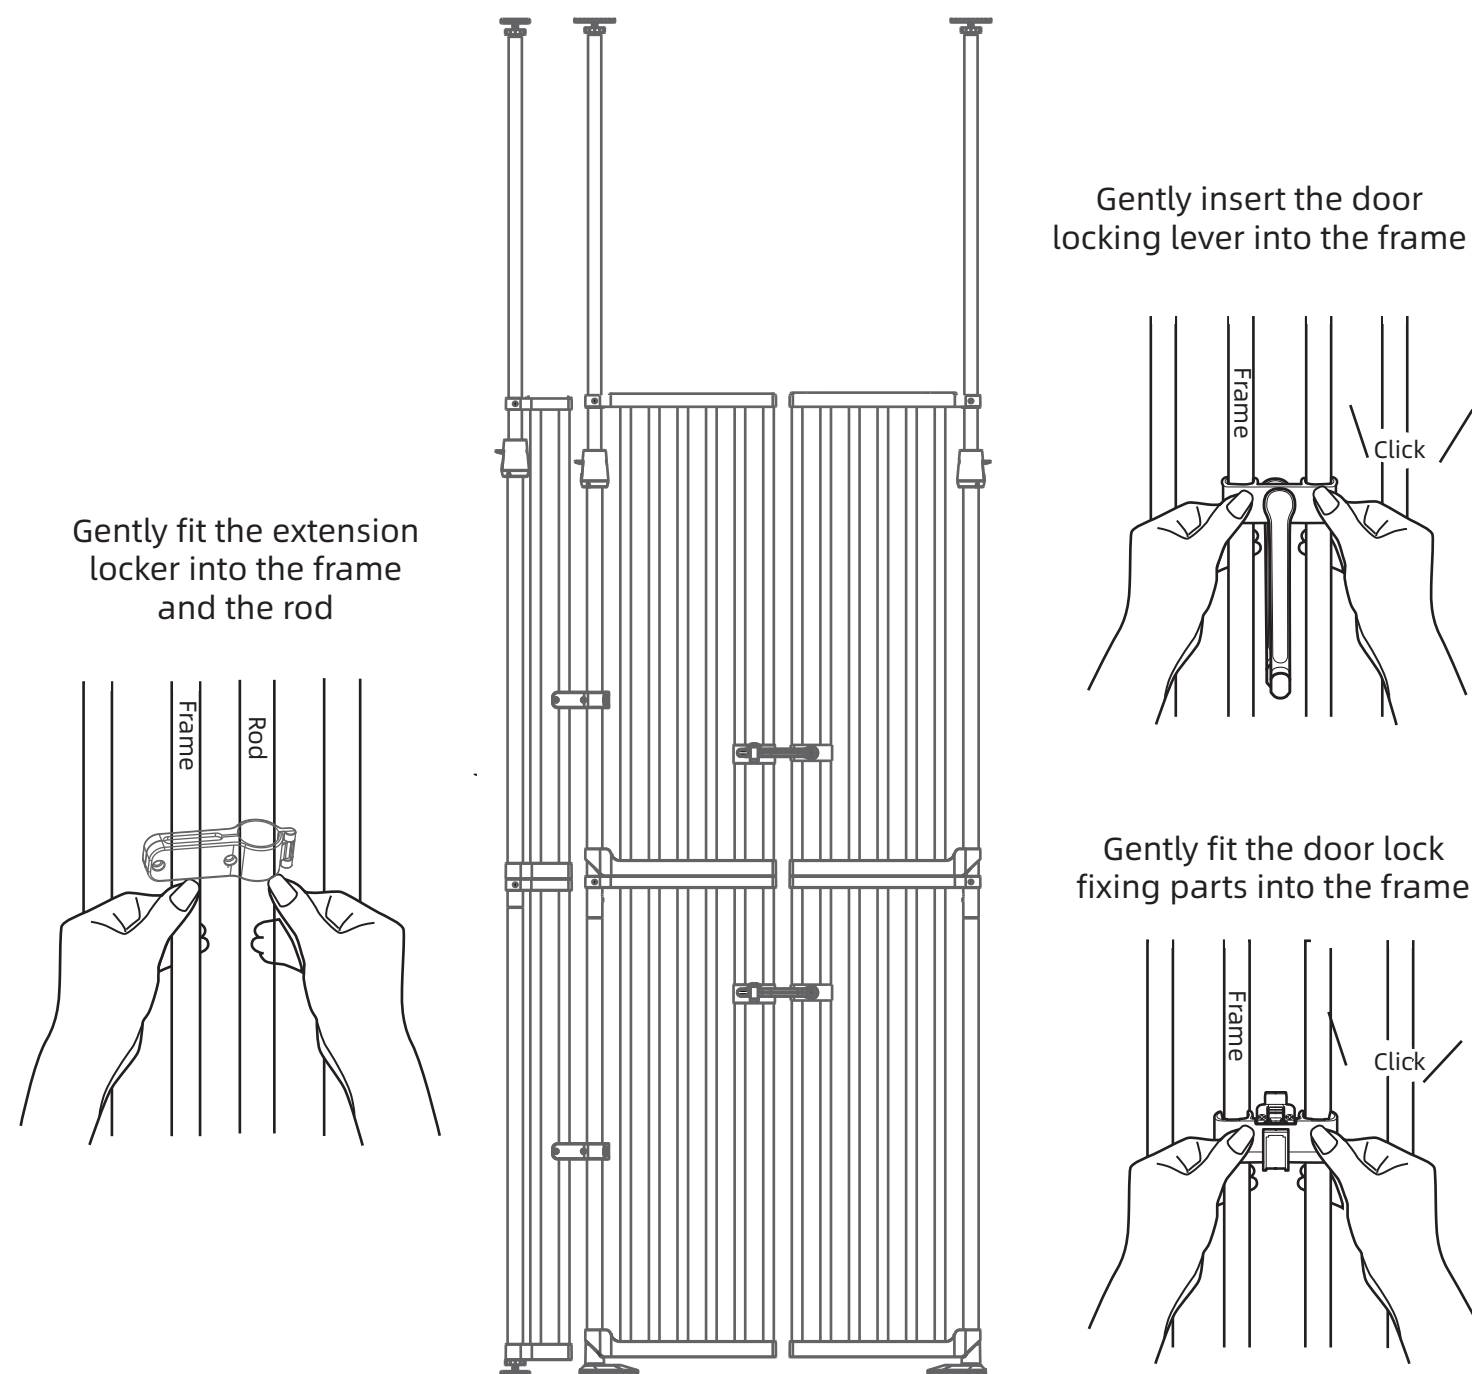

How to Install the Gate

Installing the door on one side

- 1 After determining the installation position, temporarily place the door, ensuring that the rod is vertical.
- 2 While pushing up the adjusting rod, extend the top of the rod, Extend it to the height of the installation position and temporarily secure it.
- 3 Once the position is confirmed, use the adjusting nut to tighten the bolt nut counterclockwise from below to secure it firmly.

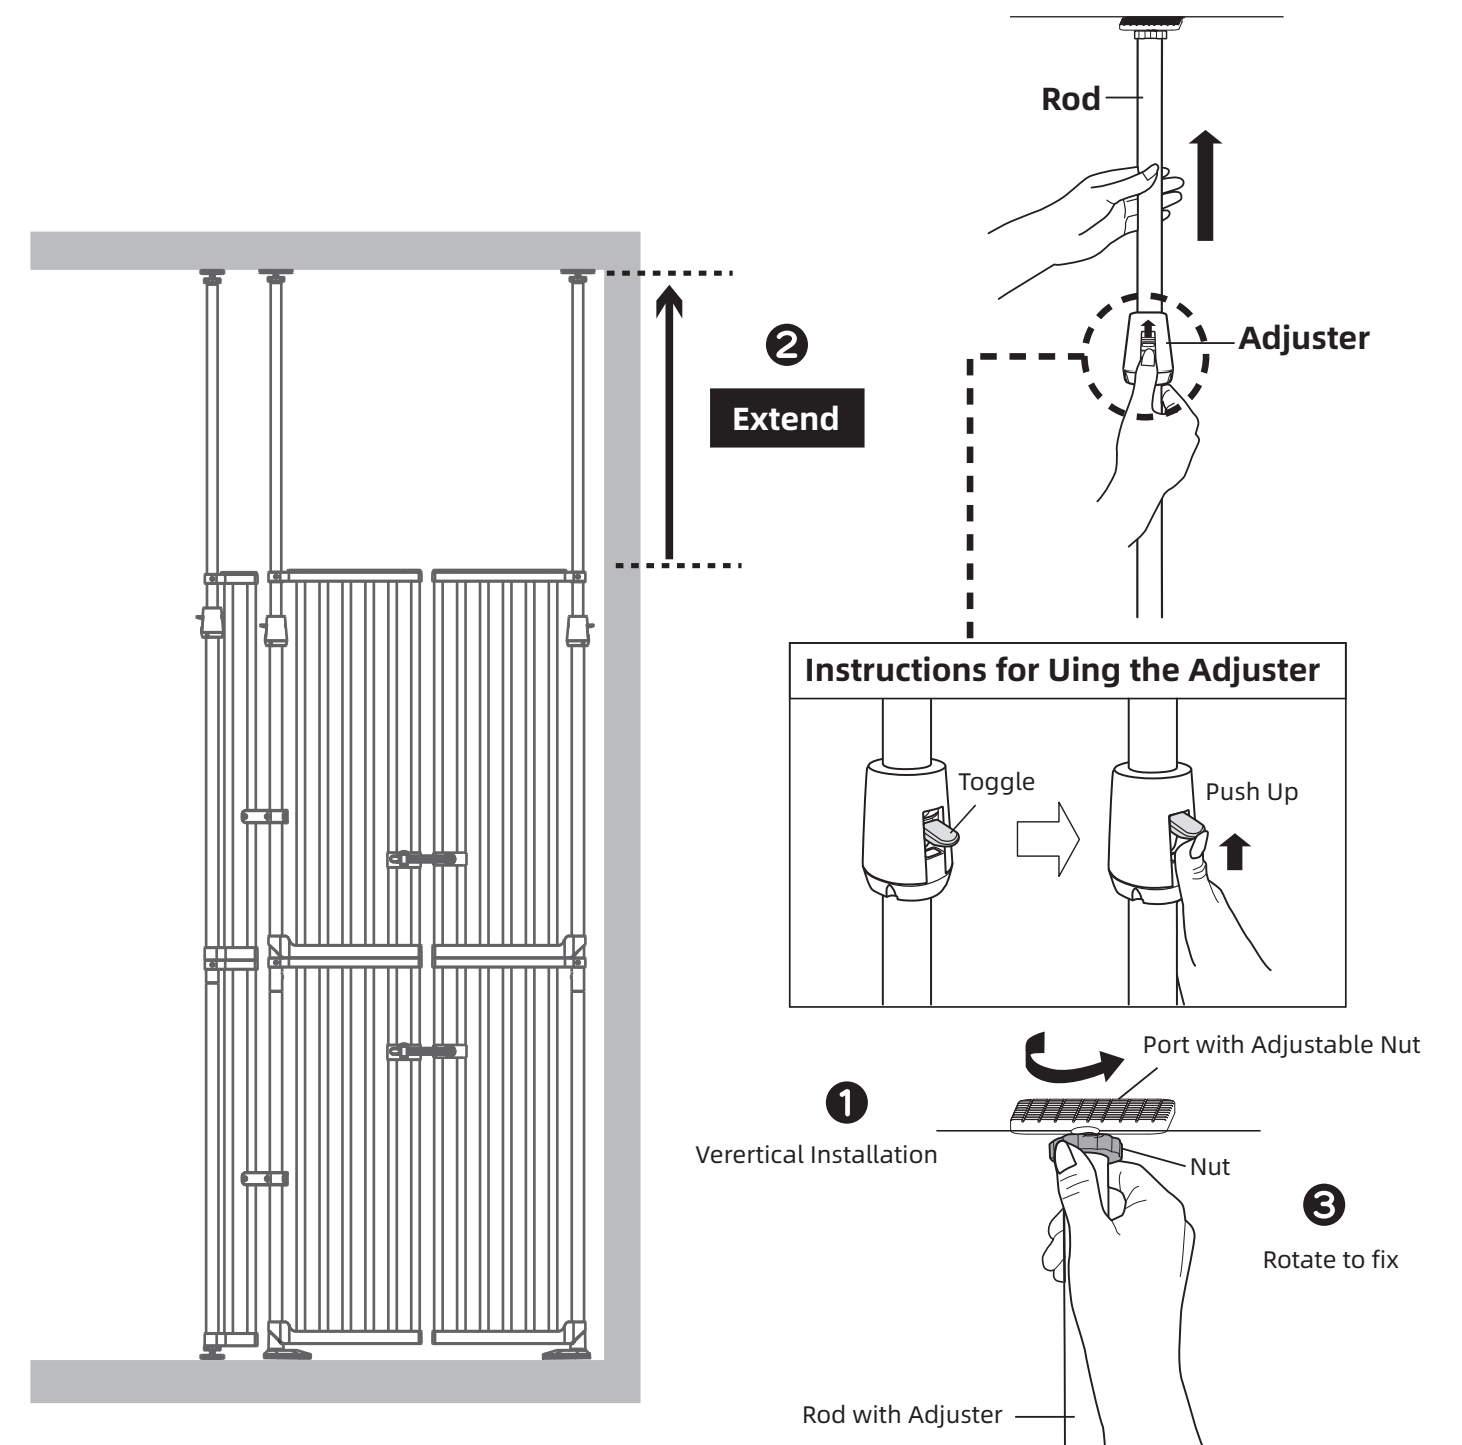


How to Install Gate

2 Install the other cover in the same way

When installing, please pay attention to the spacing between the left and right gates to ensure that the gate locks reliably.

Please adjust the position of the valve stem so that it does not slip through the left and right gaps.

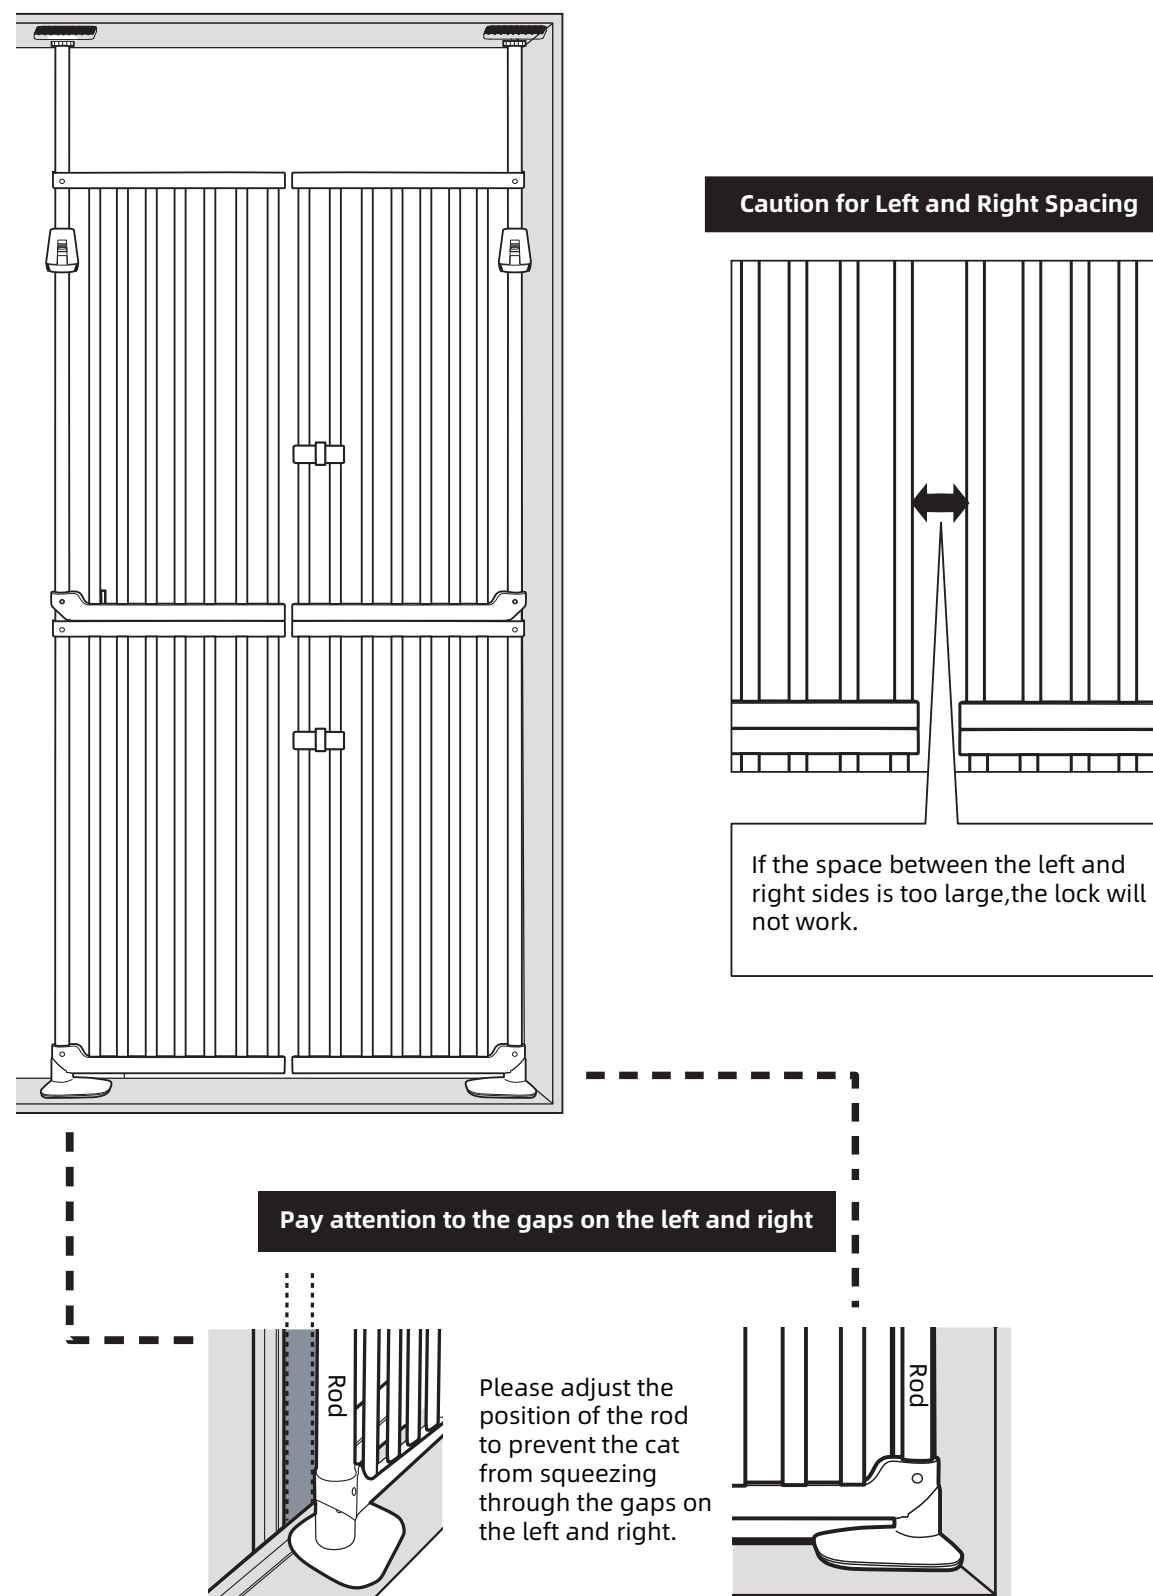


After installation is complete, please turn on and off the lock to check if it is functioning properly.

If the door is shaking or unstable, please tighten the spindle bolts!!!

In order to ensure better use of this product, we recommend tightening the spindle bolts once a month.

How to Remove the Door

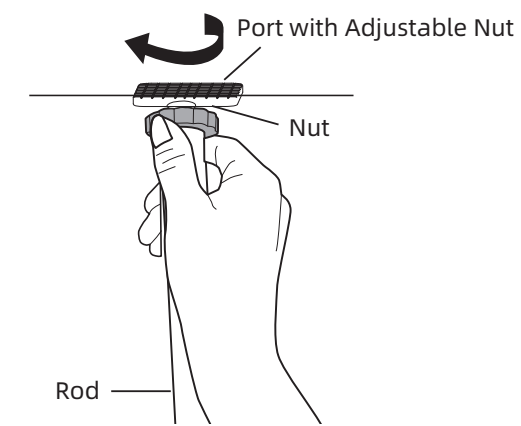

- 1 From below, rotate the nut with the adjustable nut clockwise, then lower the adjusting rod and remove it from the installation position.
- 2 Disassemble the frame and rods in the reverse order of assembly. (Refer to pages 6-7 for assembly instructions.)
- 3 If you want to disassemble the upper and lower frame components of the gate, please shake the two frame pieces in opposite directions at the link. This will make it easier to dismantle the gate.

Note


Please follow the steps to remove it. Doing otherwise may damage the walls and ceiling.

How to Open and Close the Door

Open


1 Unlock

Slide the locking switch to unlock.

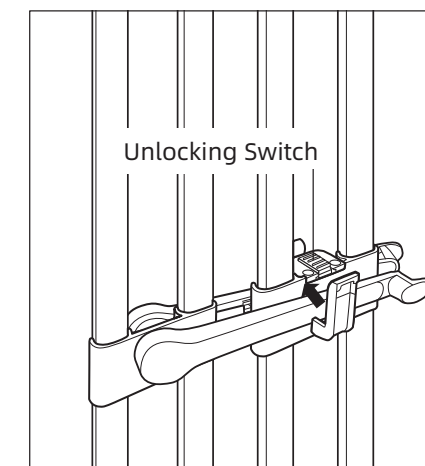

2 Raise The Locking Lever


Lift the door lock rod to open the door

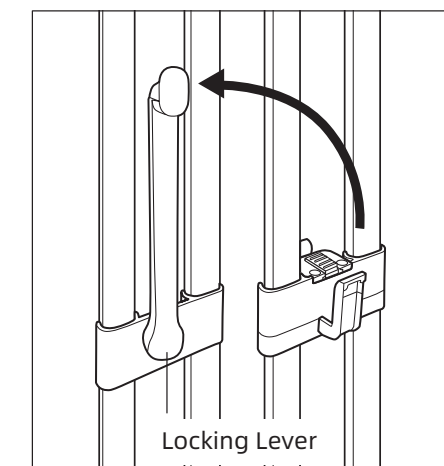

Close


1 Lower the Locking Rod

Lower the door lock rod and hook it onto the door lock fixing part.

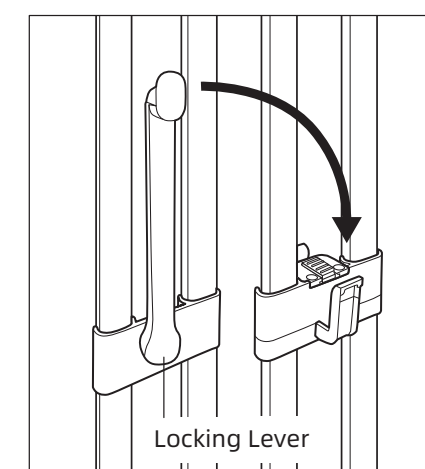


2 Lock

Slide the locking switch to lock.

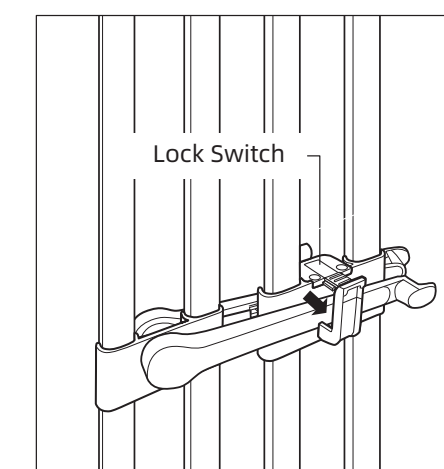

Add Extensions as Opening Width needed

2

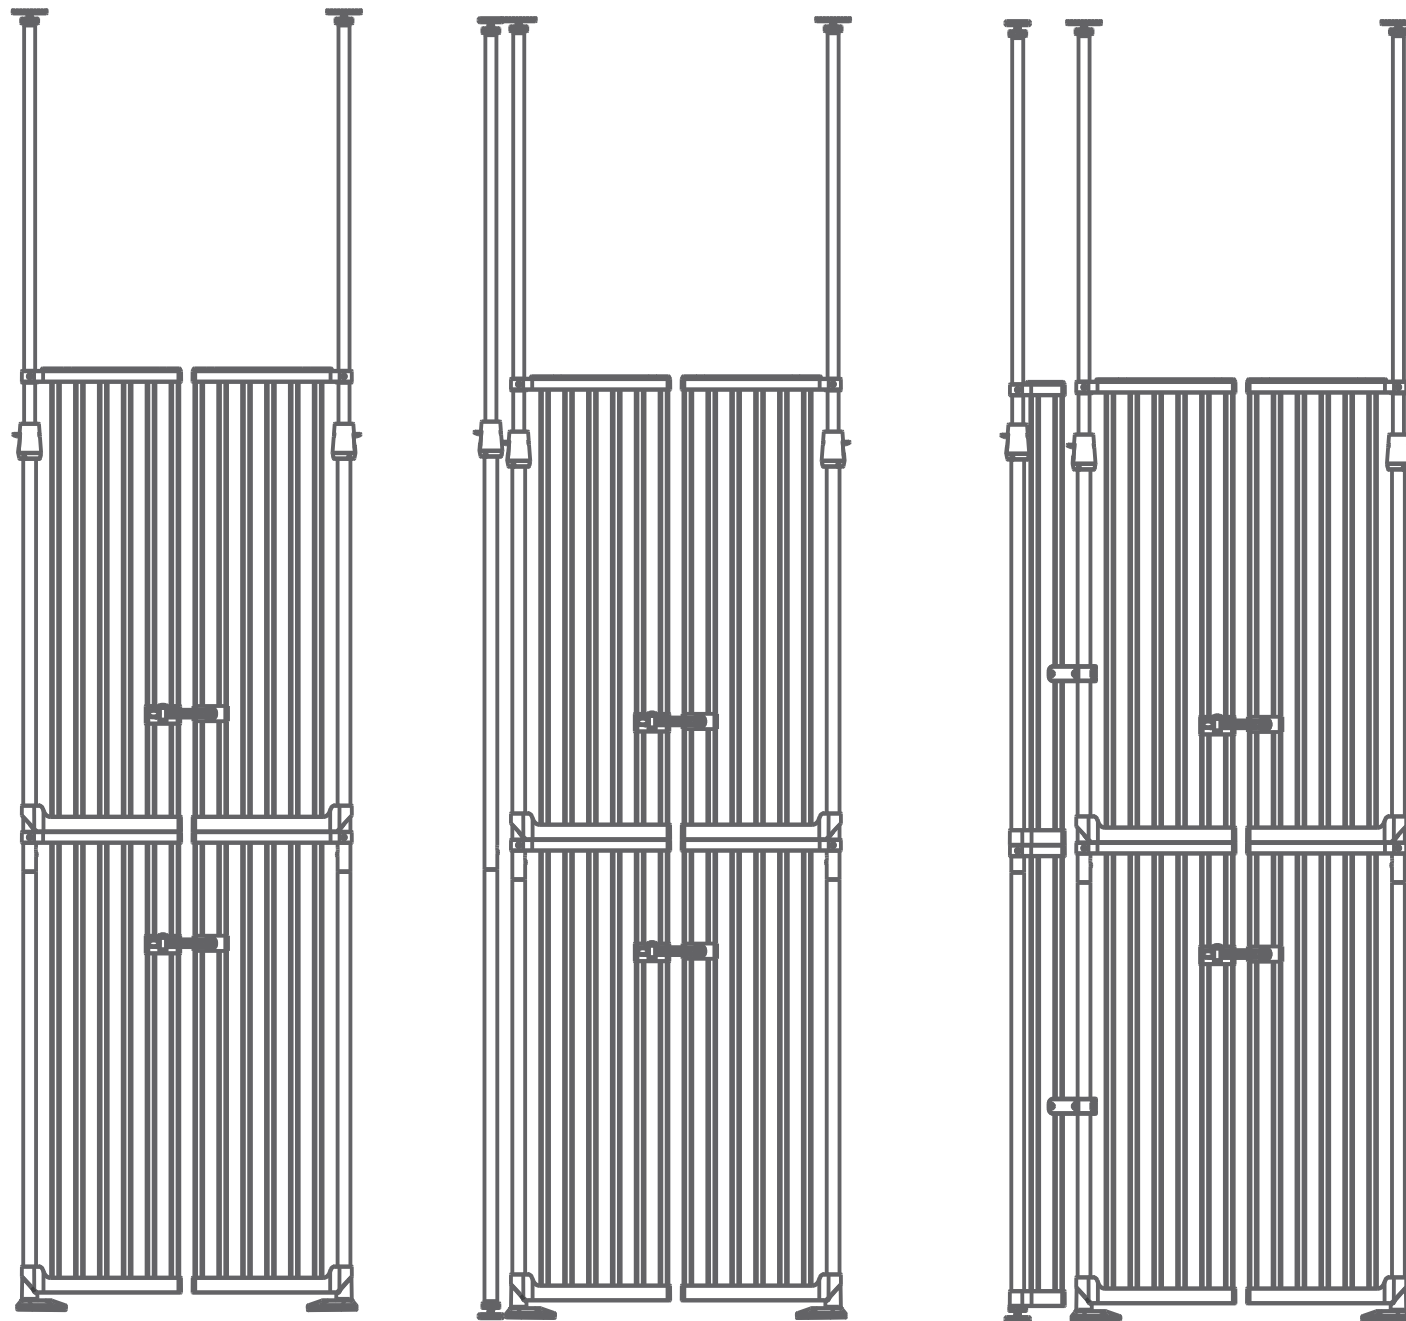

Install Width:

30.31" -31.88"
77cm-81cm

31.88" -34.25"
81cm-87cm

34.25" -38.2"
87cm-97cm