

# 8EYE RED LASER MOVING HEAD LIGHT INSTRUCTIONS



Please read the entire manual carefully  
(Please keep this manual with the lamp for future reference)

## MENU DESCRIPTION

ADDR	A001---A512 Address Code
SLND	MAST, SLAV
SHND	SOUD, AUTO Voice-activated, self-contained
MANU	LASER1---LASER8,STROBE, Manual test
SENS	Audio Sensitivity (0 off, 100 most sensitive)
LED	ON, OFF
TEST	Automatic test
VER	V100 Software version number

## ROUTINE MAINTENANCE

The service life of the equipment depends largely on the operating environment and the daily cleaning and maintenance. Before opening any cover, cut off the power supply optical components to wipe lightly, the coating surface is very fragile, and it is easy to scratch, do not use destructive solvents or they will damage the surface of the plastic or coating. Remove dust from fans and vents with a soft brush, tissue paper, an air cleaner, or a pressure dryer.

## CHANNEL DESCRIPTION

	Function	Description
1	Motor travel	0----255 0---180°
2	Motor speed	0----255 From fast to slow
3	Master switch	0---127 OFF 128---255 ON
4	Laser1	0---127 OFF 128---255 ON
5	Laser2	0---127 OFF 128---255 ON
6	Laser3	0---127 OFF 128---255 ON
7	Laser4	0---127 OFF 128---255 ON
8	Laser5	0---127 OFF 128---255 ON
9	Laser6	0---127 OFF 128---255 ON
10	Laser7	0---127 OFF 128---255 ON
11	Laser8	0---127 OFF 128---255 ON
12	Strobe	0---15 Open the light, 16---255 From slow to flash
13	effects	0---15 Nonfunctional 16---255 Self-walking effect
14	effect speed	0---255 It goes from slow to fast
15	reset	0----249 Nonfunctional, 250---255 Complete machine reset (numerical dwell time 5 seconds)