


INSTALLATION GUIDE


MODELS : BB-8215B

Size:1690×810×580

Voltage / Hz	Power	Current
110V / 60HZ	1.05KW	10 A

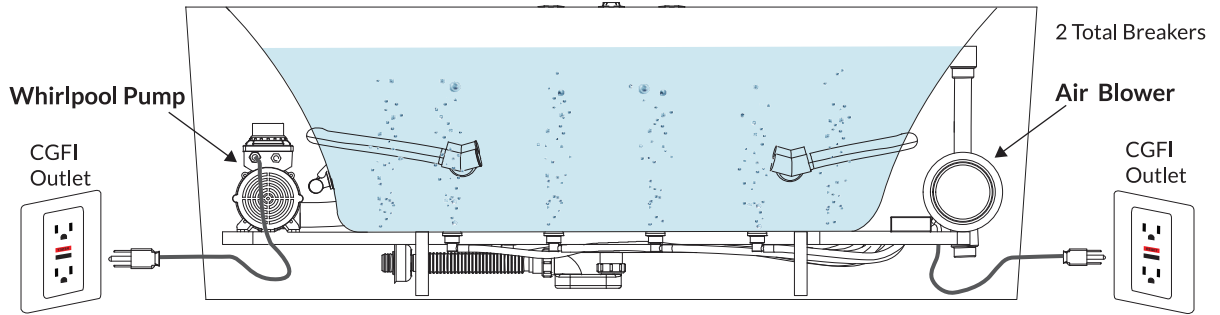

120V 15AMP
Dedicated
GFCI Breaker



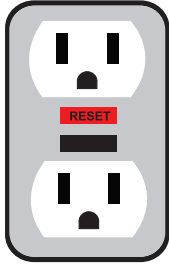


In the example above, there are 2 Dedicated 15AMP 110V GFCI Breakers.

1. One (1) Dedicated GFCI Breaker for the Whirlpool Pump
2. One (1) Dedicated GFCI Breaker for the Air Massage Blower


Each Accessory Requires a Dedicated 120V 15AMP GFCI Breaker.

THESE CANNOT BE SHARED

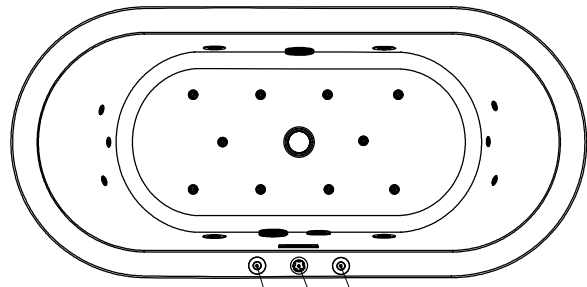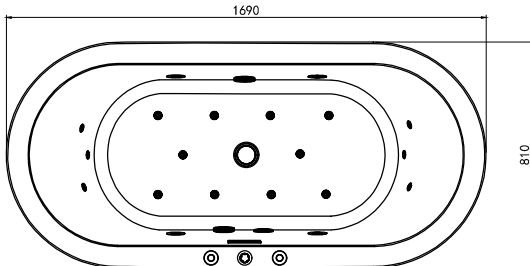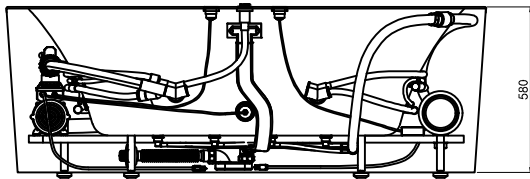

1. Pump turning on key
2. Air pump opening key
3. Adjust pump torque

- 1 for the water pump switch, press once to open and then press once to close
- 2 for the air pump switch, press once to open, then press once to close
- 3 adjust the torque of the pump, turn the massage to the left to weaken the strength, and turn it to the right to strengthen it

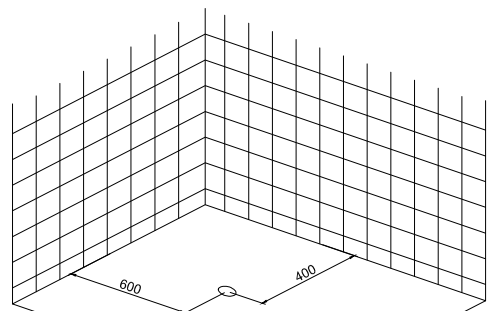

Floor-layout