

ASSEMBLY INSTRUCTIONS:

WARNING: MAKE SURE POWER SUPPLY IS TURNED OFF AT MAIN BREAKER PRIOR TO INSTALLATION. PLEASE READ THOROUGHLY. CAREFULLY UNPACK THIS LAMP AND PLACE ON A SOFT FLAT SURFACE.

1. There are 4pcs of poles (B, C, D) with different length (16"Lx2pcs + 10"L x1pc + 6"L x1pc). Before you install the lamp, please choose the pole length to determine height for your lamp. Then feed the cord through the poles (B, C, D), canopy. All poles (B, C, D) may not be used based on ceiling height.

2. Connect the poles (B, C, D) together and screw the another side of pole onto the fixture body (A) and canopy (E).

3. Fasten the crossbar (O) to the ceiling outlet box with Outlet box screw (P).


4. Connect the NEUTRAL wire (K) from fixture to black wire (K) (NEUTRAL) from driver output using wire connector (M). Connect the LIVE wire (S) from fixture to the RED wire (S) (LIVE) from driver output using wire connector (M).

5. Connect the NEUTRAL wire (N) from driver input to the NEUTRAL wire (N) from power supply using wire connector (M). Connect the LIVE wire (L) from driver input to the LIVE wire (L) from power supply using wire connector (M).

6. Connect the GROUND wire (H) from canopy of fixture to the ground wire (G) from ceiling outlet box, using the wire connector (M) (Or attach them to the crossbar (O) with the green Ground screw (I)).

NOTE: Never connect the ground wire to live or neutral power supply wire. If outlet box does not have ground wire, please connect the ground wire from fixture to crossbar.

7. Attach the canopy (E) to the crossbar (O) and secure with Screw (F).

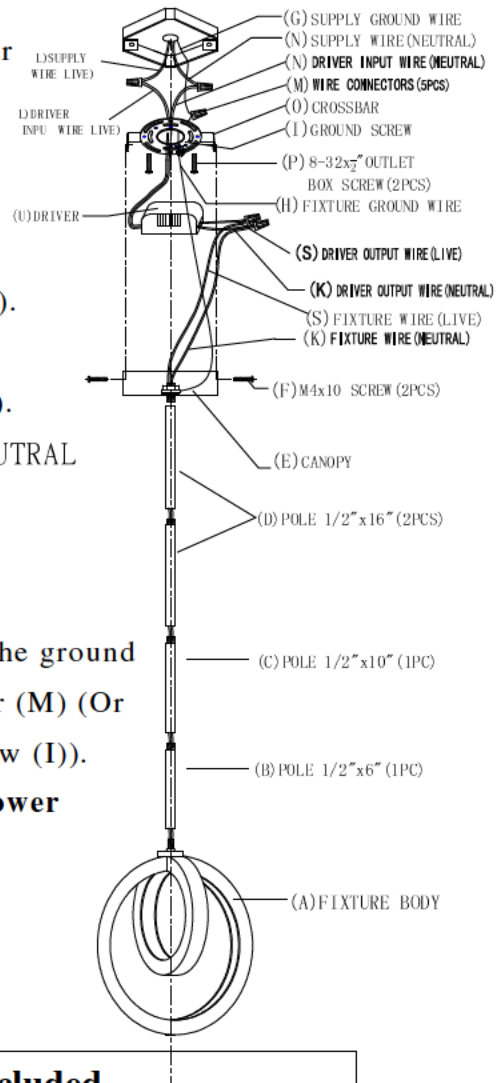

Use a 17W, 3000K LED Panels Included

- ✘ PLEASE INFORM YOUR DEALER IMMEDIATELY IN CASE OF ANY PARTS SHORTAGE.
- ✘ SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.