 
 

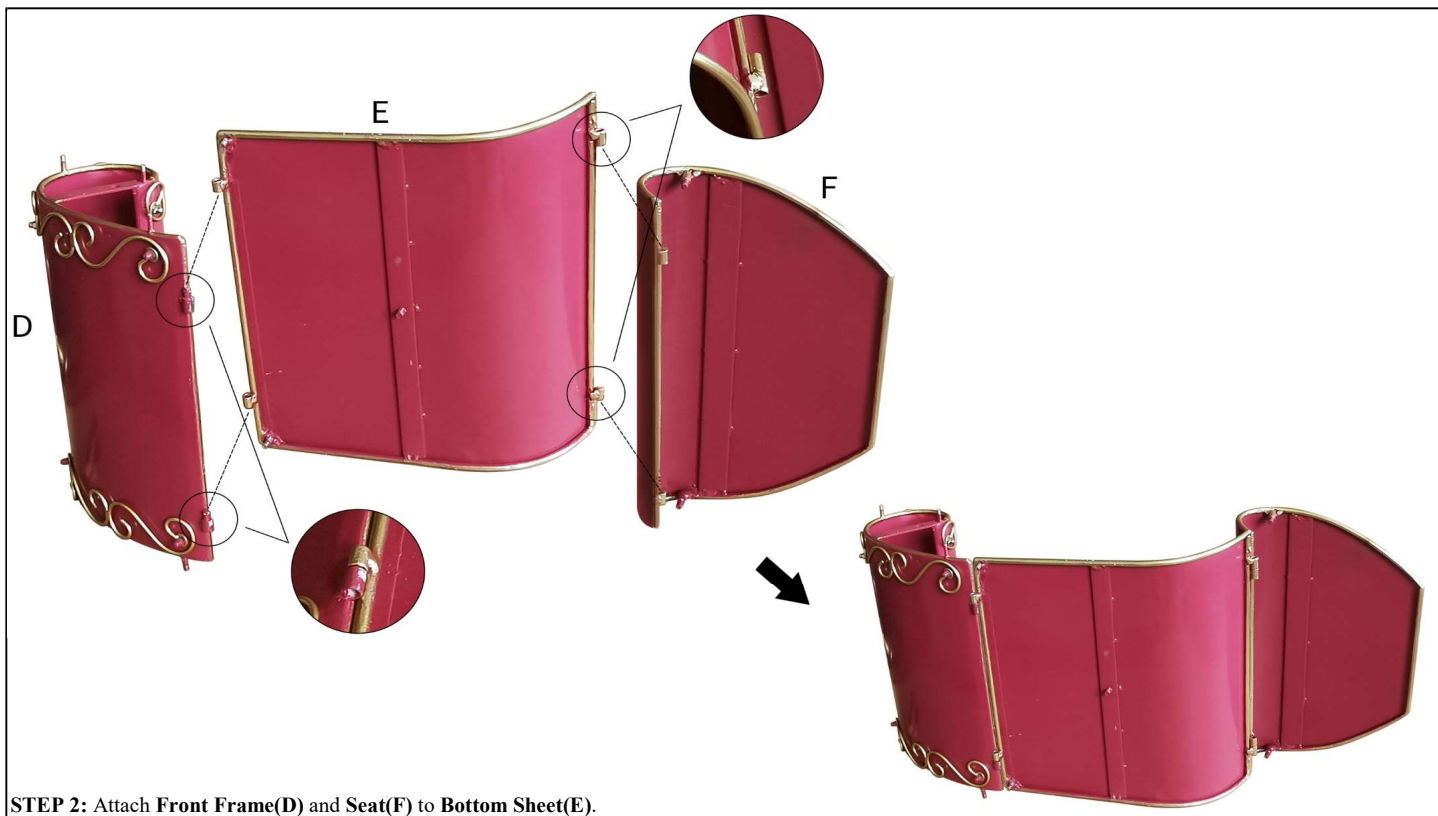



ASSEMBLY INSTRUCTIONS

Please read instructions thoroughly before assembling this product. Familiarize yourself with inventory of parts and the accompanying illustrations to ensure safe and proper assembly.


PARTS LIST

Part	Picture	Qty	Description	Part	Picture	Qty	Description
A		2	Runner Top	B		2	Runner
C		1	Seat Support	D		1	Front Frame
E		1	Bottom Sheet	F		1	Seat
G		2	Side Frame	H		1	Back Frame
I		2	Wreath	J		2	Bell
K		6	Nut Φ4mm	L		5	Nut Φ5mm
M		4	Nut Φ6mm	N		3	Screw Φ5mmX8mm
O		2	Screw Φ5mmX10mm	P		4	Washer Φ10mm
Q		1	Wrench	R		1	Hex Key

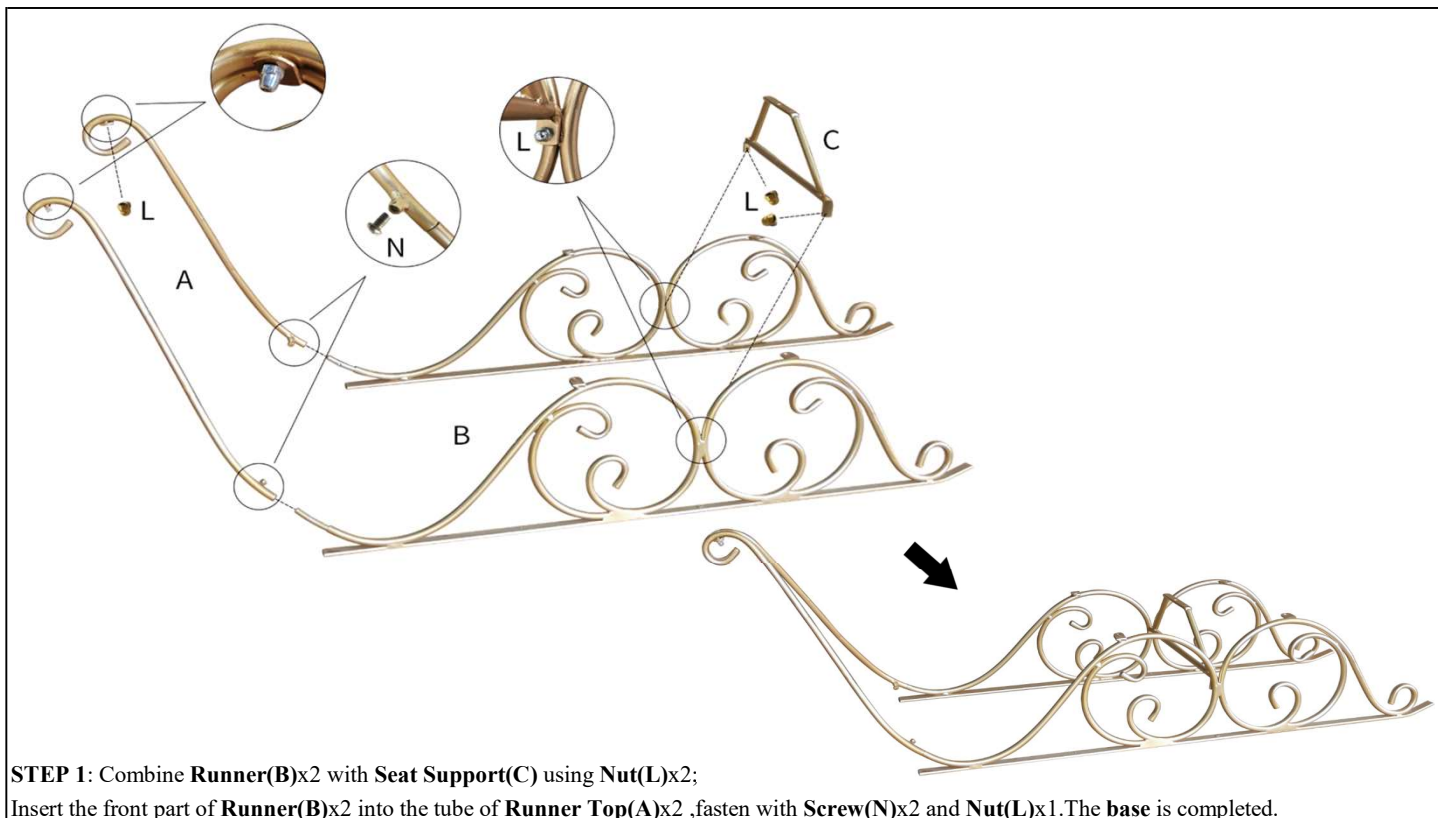

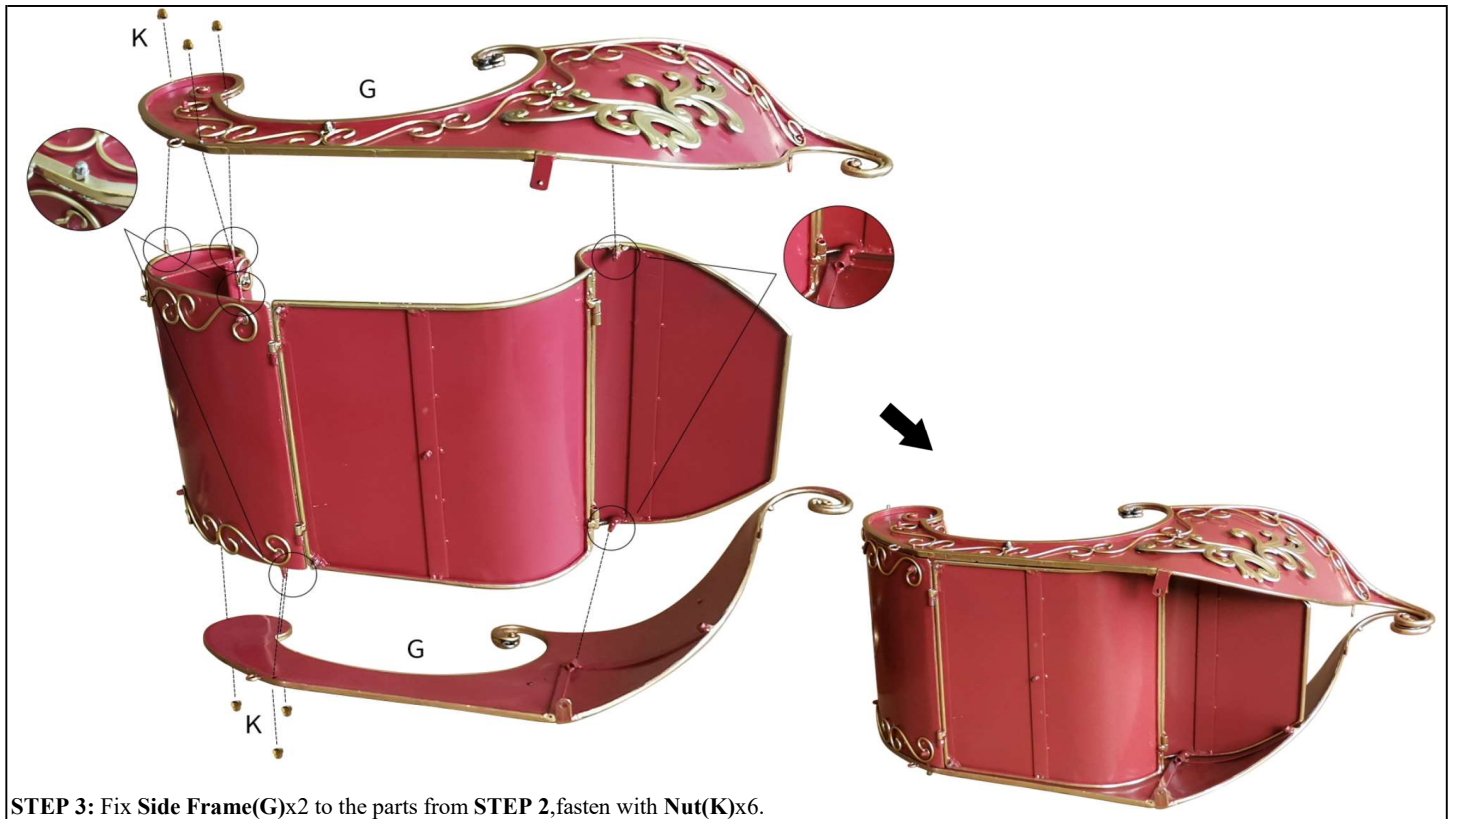


STEP 3: Fix Side Frame(G)x2 to the parts from STEP 2, fasten with Nut(K)x6.

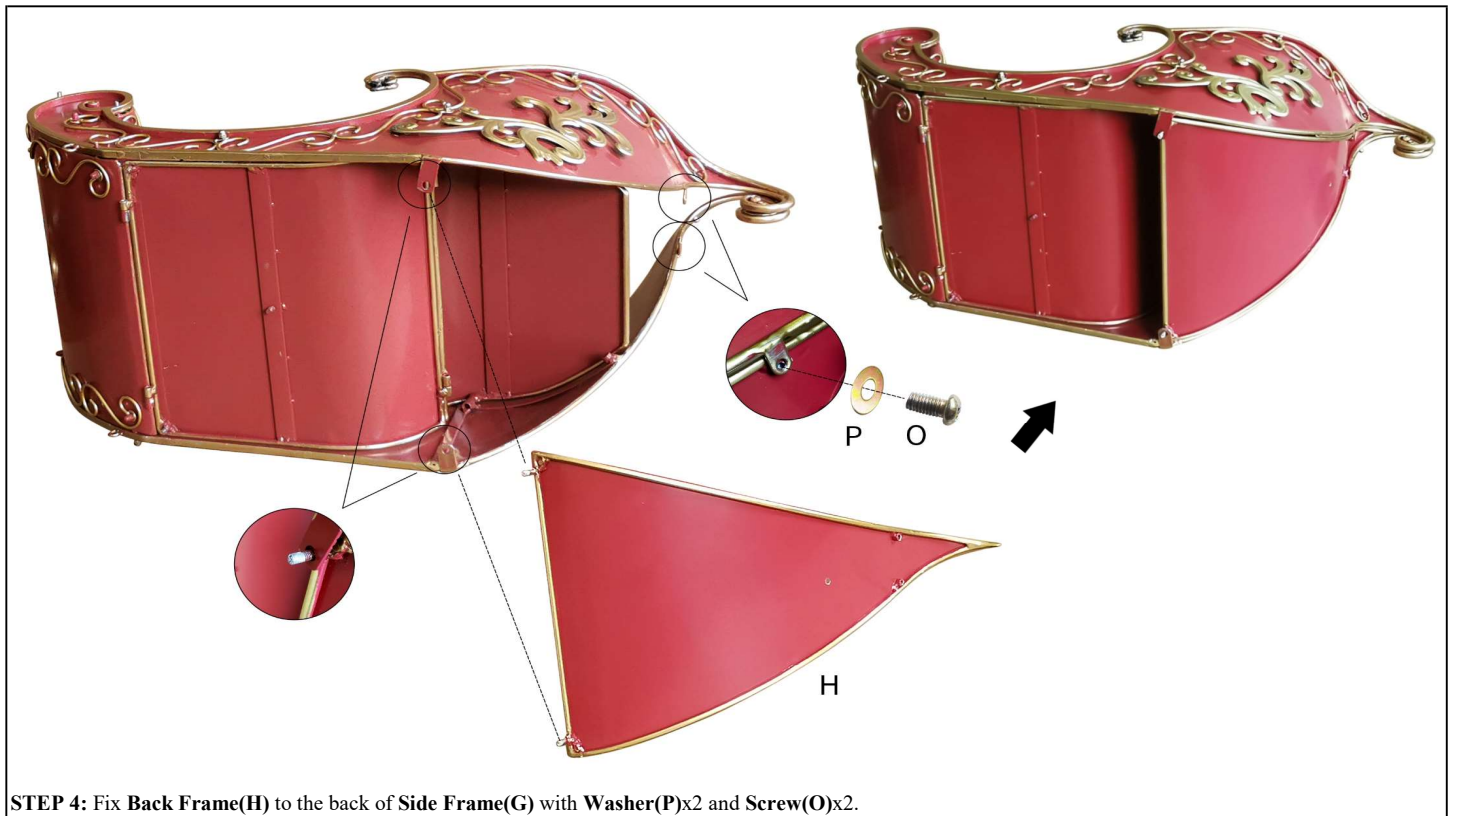

STEP 4: Fix Back Frame(H) to the back of Side Frame(G) with Washer(P)x2 and Screw(O)x2.



STEP 5: Turn over the Sleigh on the side and fix the **base** from **STEP 1** to the bottom of the Sleigh with **Nut(M)x4** and **Nut(L)x2**.

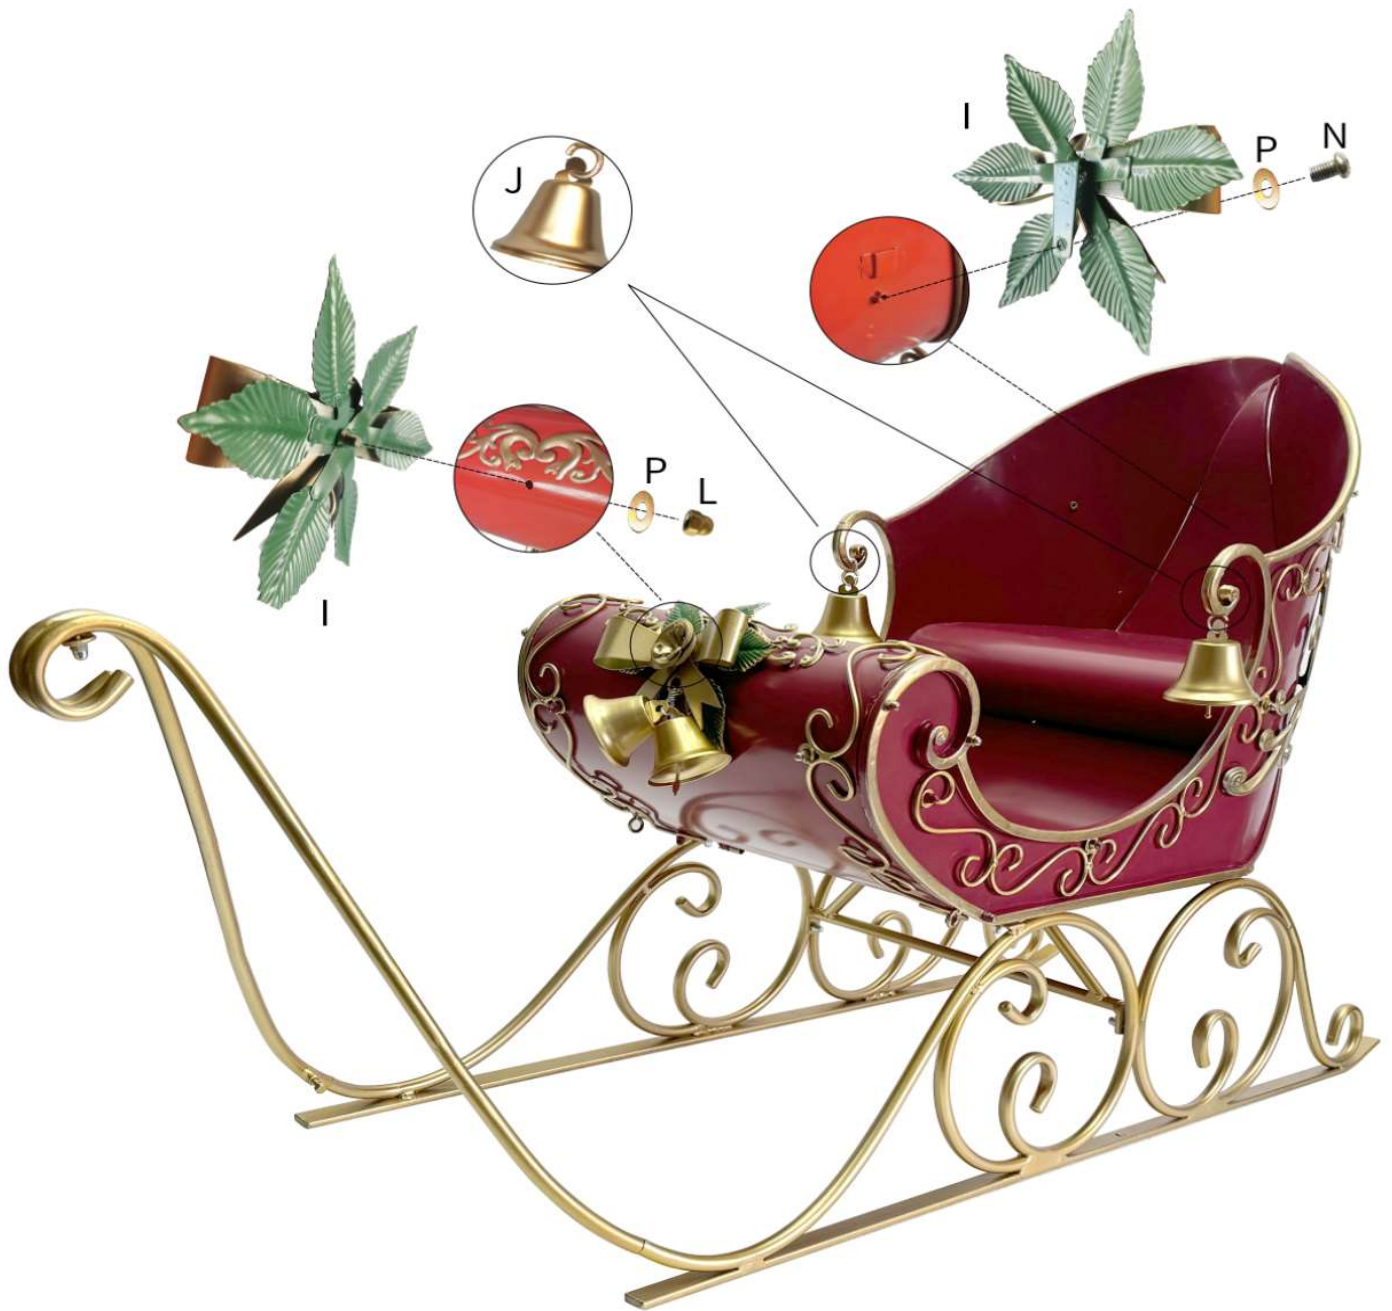

STEP 6: Hang **Bell(J)**x2 to the scrolls on the sides;Fix **Wreath(I)**x2 to the back and front of the Sleigh, with **Washer(P)**x2,**Nut(L)**x1 and **Screw(N)**x1.

CONGRATULATIONS!

