 


蒸汽棒贴纸
尺寸: 10*15cm
带背胶

Steam Wand Guide



① Prep

Press STEAM button → slow blinking = preheating
Solid light = ready (small water drops are normal)

② Purge Routine

Turn knob fully counterclockwise
→ close when pure steam comes

③ Milk Setup

Use 12oz pitcher with 7oz cold whole milk (the fatter, the creamier!)

④ Positioning

Anchor wand at pitcher spout
Nozzle tip barely touching milk surface, never go beyond the marked line on the steam wand.

⑤ Angle Magic

Tilt pitcher 20°
Nozzle at 3 o'clock position, 1cm from wall



⑥ Start Steaming

Open steam fully → listen for paper-tearing sound (not screeching!)

Troubleshooting:

Screeching? → Raise pitcher slightly
No spin? → Move closer to wall

⑦ Foam Control

Keep nozzle 1cm below rising foam
→ pitcher lowers automatically

⑧ Finish Strong

When foam rises 1-1.5cm → sink wand halfway → heat until pitcher feels warm

⑨ Post-Steam Care

Critical cleanup:

1. Wipe wand immediately with damp cloth
2. Quick 3-second steam purge

⚠ Note: Never touch metal parts - they stay hot 15+ mins!

⑩ Turn off the STEAM button

⚠ Heads-up:

Steam may keep coming for 3-5 seconds after switching off - this is normal. If you see continuous dripping, double-check that the steam knob is fully closed (clockwise).