 


 
 
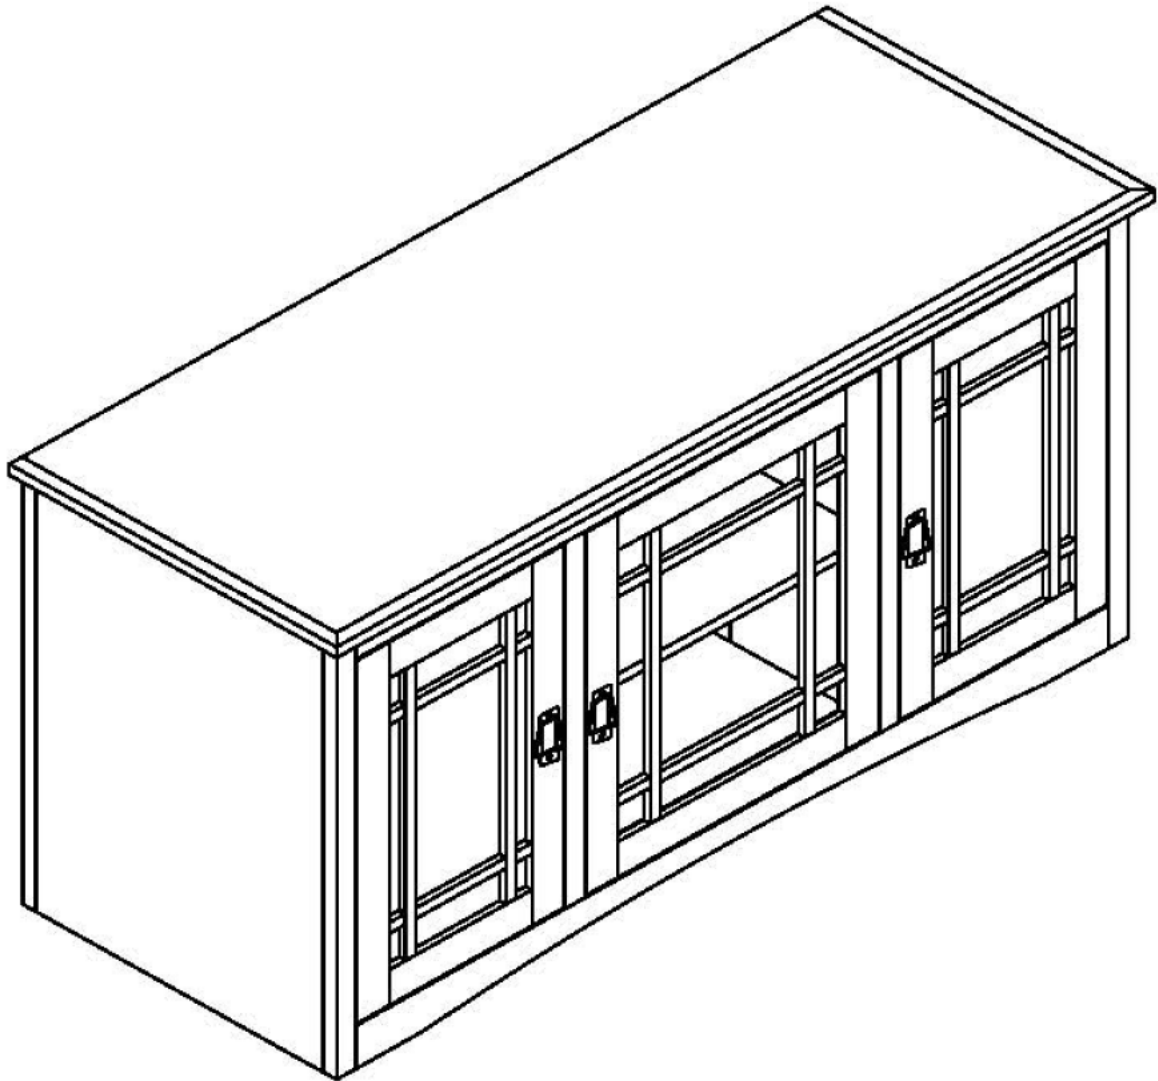 



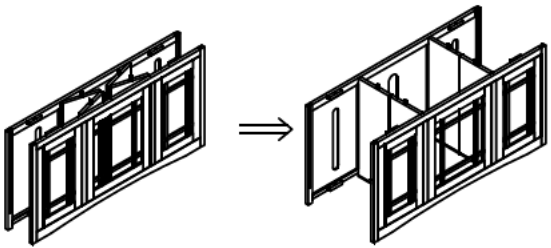 

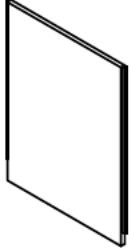 
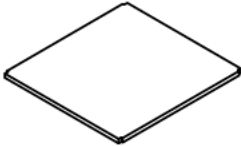 
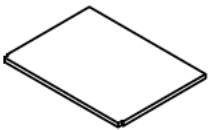 
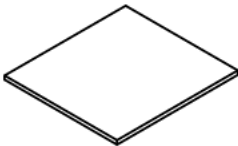 
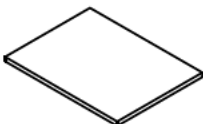 
Mission OAK 25" H, 50" W TV Cart



Hardware List

	Item	Description	Qty
a		Bolt 1/4" * 1-1/8"	4PCS
b		Allen wrench	1PC
c		Washer 1/4" * 12mm	4PCS
d		Shelf metal clip	12PCS
e		Door Pull	3PCS
f		Machine screw for Door pull 5/32" * 3/4"	6PCS

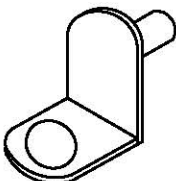Parts List


Item	Description	Qty
A	 Cabinet	1PC
B	 Top Panel	1PC
C	 Side Panel	2PCS
D	 Middle Bottom Panel	1PC
E	 Side Bottom Panel	2PCS
F	 Middle Adjustable Shelf	1PC
G	 Side Adjustable Shelf	2PCS

Assembly Instructions

Two person assembly recommended.


step 1

 Unfold Cabinet.

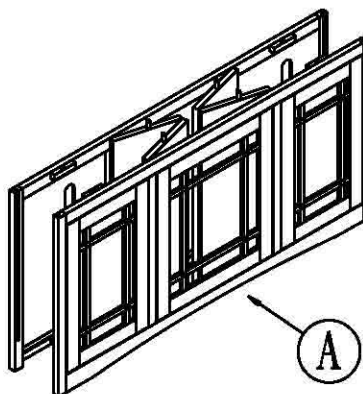


step 2

 Open 3 doors,
Insert the center bottom panel first,
then insert the side bottom panel.

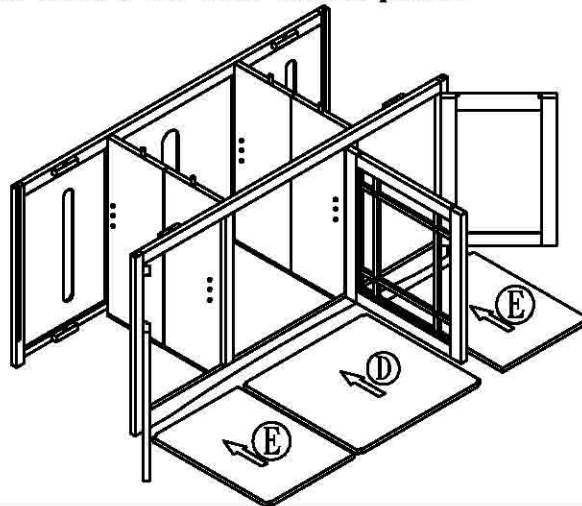


step 3

 Insert two side panels.

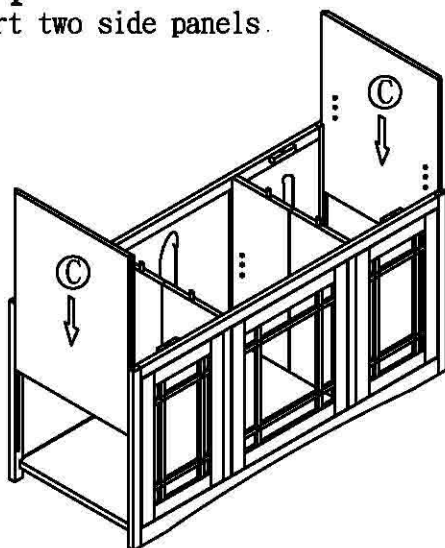


step 4

 Bolt on top with 4 bolts.
DO NOT OVER TIGHTEN.

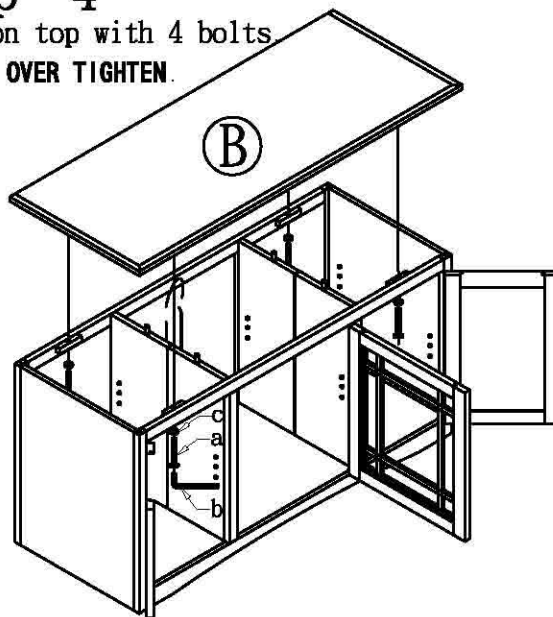

step 5

 Install shelf clips
and insert shelves.

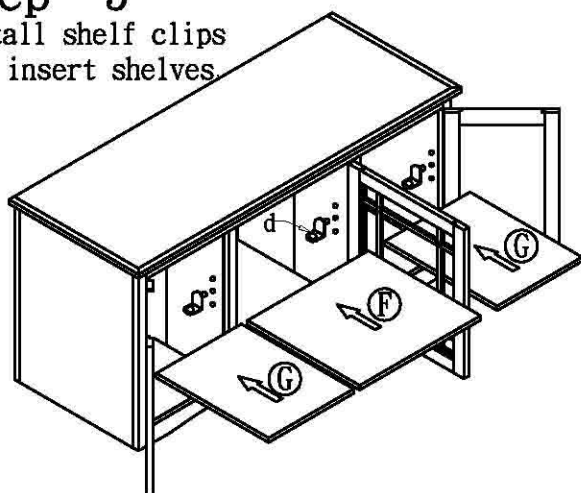

step 6

Install door pulls.

