



Canopy Instruction Manual





 

Making The Best Outdoor Furniture For You

MADE IN CHINA




Product Specifications

SIZE (AT BASE) 10x10 ft	CANOPY FRAME Powder-Coated Steel
SIZE (Canopy Top) 12x12 ft	TOP CLOTH FABRIC Oxford Cloth
SHADED AREA 144 sq ft	TARPAULIN MATERIAL Oxford Cloth
PACKAGE SIZE 125x21.5x24 CM	MAXIMUM PEAK HEIGHT 8.8 ft
PACKAGE WEIGHT 19.8 KG	MAXIMUM VALANCE CLEARANCE HEIGHT 6.8 ft

Packlist

Description	QTY	Part image
canopy frame	1	
canopy top	2	
mosquito netting	1	
stake 5*170	8	

hardware pack

Description	QTY	Part image
rope L=3000	4	
HAND BAG	1	
SANDBAG	4	

Caution

1. Take care not to pinch your finger in the frame during setup and take down
2. Do not setup the canopy in rainy or windy weather.
3. Do not leave the shelter unattended and take it down in bad weather; this product is not intended to withstand extreme/high winds or bad weather.
4. Do not use fire near the gazebo or place it near a heat source.
5. Do not install the gazebo on uneven ground. When installing the gazebo, you need to ensure that the frame is locked and that the tent is properly secured with a heavy object.

Tips

STORAGE



Before storing the canopy, make sure that the parts are not wet or damp, so as not to cause mold.

CLEANING



Clean the canopy and mesh with mild detergent and water.

INSTALLATION



Do not open the gazebo roughly. Improper force may result in damage to the parts or connectors.


MAINTENANCE



Clean the canopy and mesh with mild detergent and water.

How To Set Up

It is recommended that two or more people complete the installation of the pop-up canopy tent. Follow these instructions and be careful to avoid getting your fingers caught in any moving parts when opening and closing the frame.

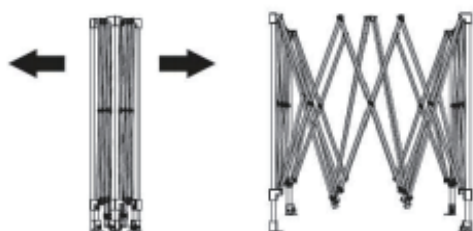


Step 1: Pull out the canopy frame

A. Place the canopy frame in the center of the area that needs shade.

B. With your partner on the other side of the frame, grab both outer legs and lift the frame slightly off the ground, then pull the frame back so that it opens to 3/4 of its full opening size, then place the frame back on the ground.

NOTE: Do not open the gazebo violently; improper force may cause damage to the brackets or connectors.

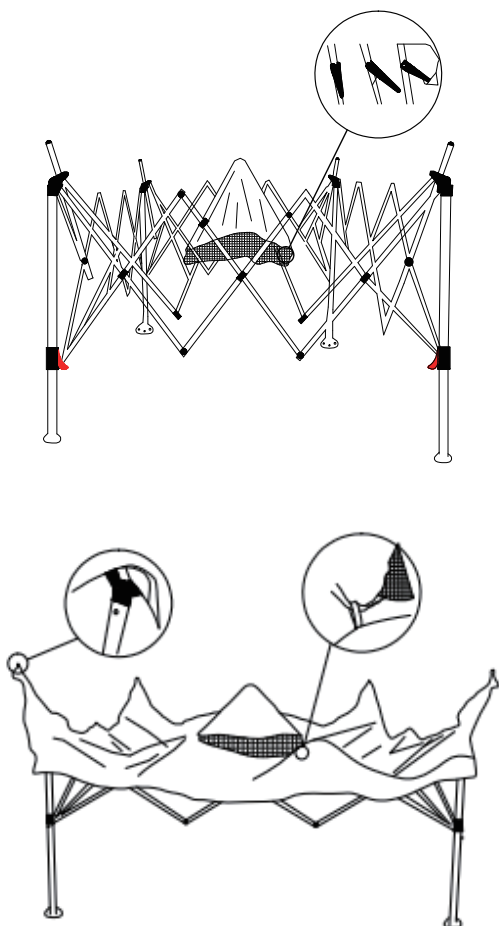

Step 2: Attaching the Pop up canopy top


A. The gazebo canopy has a 2-tiered design with four eave brackets in the center of the frame for the small canopy mounting. The small canopy has four corners with a small pocket at the edge of the corner. You must slide the four corners of the canopy onto the eave brackets.

B. The corners of the frame have integral extended metal rods with a plastic buckle at the top of the rod. And there is an elastic tape built into the pocket at the four corners of the canopy. Gently unfold the big canopy, place it on the frame, align the four corners of the canopy with the four corners of the frame, and place the elastic tape into the plastic buckle recess.

C. Gently press down the eave bracket

D. Tie the small canopy to the large canopy with straps.

If the cloth does not seem to fit, you need to adjust the degree of opening of the tent frame.



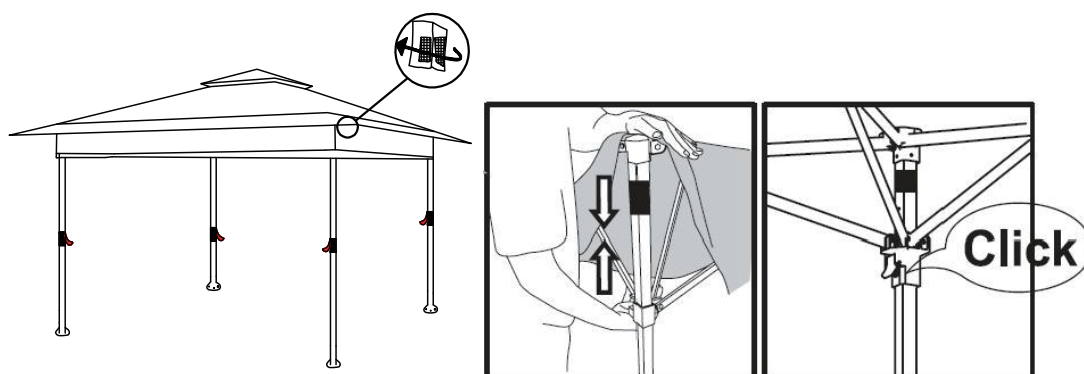


Step 3: Locking the frame

A. At this point stand with a partner on the opposite side of the frame and grab the outside bar and pull it back until the shelter is fully open.


B. Then push upward with one hand while holding the top of the leg with the other hand to engage the slider at each corner. Repeat this procedure on the other legs.

Lift all the corners upward until they click and the snap goes into the positioning hole.

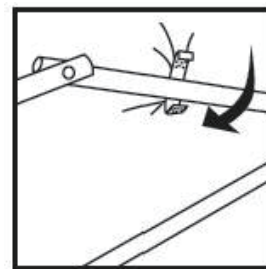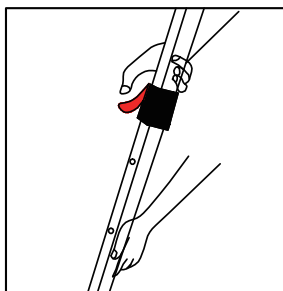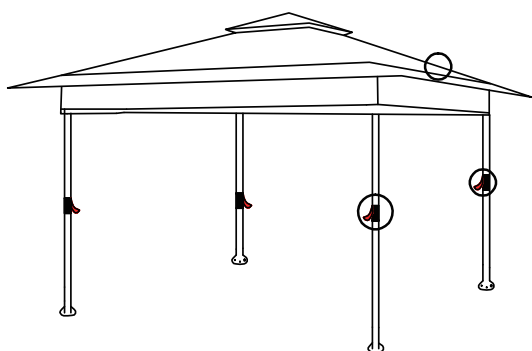

Step 4: Adjust the canopy height


Press the red button on each leg and push the leg up or down to adjust the height of the gazebo (3 height available).

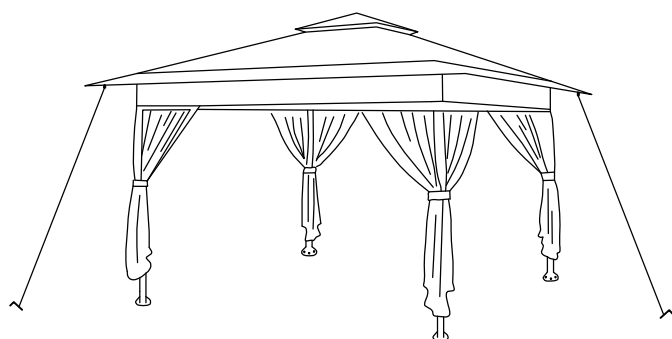

Step 5: Secure the canopy in place

A. There are 4 rope loops at the corners of the roof for tying weatherproof ropes to secure the tent. Tie the ropes to the rings, straighten the ropes, tie a stake to the other end of the rope, and then insert the stake into the floor/dirt.

B. At the end of the poles there are 3 holes for drilling holes in the concrete to hold the canopy in place, pushing stakes through the pegs on each leg foot-board into the soil/floor and then tying weight bags to the side poles to secure the tent.

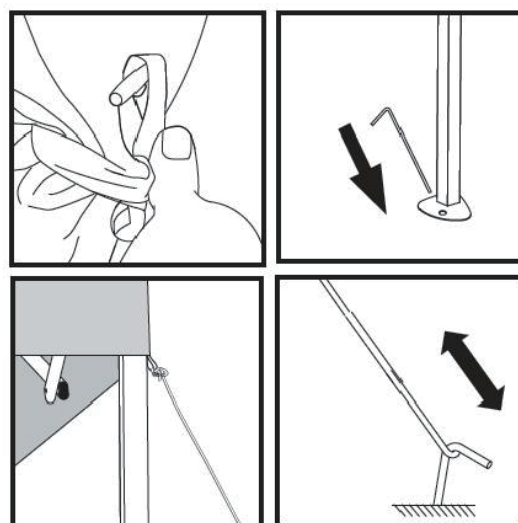

Step 6: Hanging the mosquito net

A. Hang the screen on the canopy with hooks. The mosquito net is a one-piece design with 4 zippers. To make sure each zipper is in the middle of each side, you can start hanging the net from the middle of one side.

B. The top of the mosquito net must be close to the top of the frame, make sure the net goes around the metal pole, straight and flat to ensure no gaps

How To Take Down

Step 1

Detach the mosquito netting

Step 2

Removing the stake and Lower the tent height.

Step 3

Unlocking the frame

Step 4

Folding the frame.

Step 5

Put it back to the carry bag

TIPS: Before storing the canopy, make sure the parts are not wet or damp to avoid causing mold. And put the parts into the Roller Bags.

Brand:HOTEEL

Number :AMA005920

MADE IN CHINA

Informationen zum Produkt	
Modell Nr:	FG030DT
Marke:	HOTEEL
<div>EC REP</div> Informationen für EU-Vertretern	
Name:	Like Sun GmbH
Contact	Ke Li
Adresse:	Planckstr.59 45147 Essen
Telefon:	+49 471 39156605
E-mail:	ec-connection@web.de  

EN	⚠	Warning! Do Not use under strong wind
DE	⚠	Warnung! Nicht bei starkem Wind verwenden
FR	⚠	Avertissement! Ne pas utiliser par vent fort
IT	⚠	Avvertimento! Non utilizzare in condizioni di vento forte
ES	⚠	Advertencia! No usar con viento fuerte



HOTEEL

2024-2025