

ASSEMBLY AND INSTALLATION INSTRUCTIOS

For indoor use only



Trouble shooting

Missing/Wrong/Broken parts and installation issues



Send email with your question,pic and order



Respond within 24 hours



Issue resolved

WARNING - Risk of Fire and Electric Shock:

1. Read all instructions and warning tags included with this tree.
2. Do not place near barbecues, candles, outdoor heaters, or other similar sources of heat.
3. Do not install near pools, fountains, tubs, sinks, or other areas of standing water that the tree may fall or blow into.
4. Before use, disconnect tree's light sets from power source.
5. Keep wires clear of being pinched or cut during assembly or installation. Discard sets with cut or pinched insulation.
6. Do not press or grasp bulbs during assembly or installation.
7. Make sure that after final assembly that tree is stable and upright.
8. Do not use candles on tree.
9. Do not overload extension cords or power strips.
10. Always fully insert electrical plugs into a outlet.
11. This product is for decoration use only. Not to be used by children as a toy. Keep out of reach of small Children.
12. Artificial trees are made from small fibers and have small parts, which may pose a choking hazard if detached from the branches.

Before You Start

1. Decide on an appropriate location for your product, please read Warning carefully.
2. Retain the instructions for future use and save the carton for storing your tree.

Assembly and Instruction Procedure:

Every carton should contain a top section, middle section and bottom sections.

Also included metal stand. Remove all Packaging (i.e. cardboard or plastic) before beginning.

1. Choose a location where the tree is to be displayed. Take out the metal stand. Carefully insert the tree into the metal stand. (Figure 1)
2. Insert the bottom section into the middle section and put the tree top on middle section and push down into position. (Figure 2)
3. CONNECTING THE STRINGS WITH POWER: Carefully connect the plug to end-connector between any two sections of tree as shown by figure 2b. Connecting from upper through lower parts is advised.

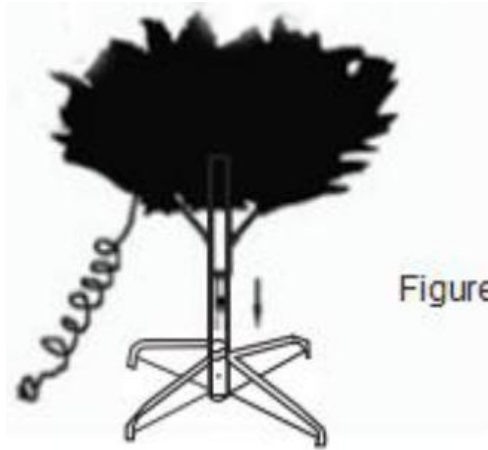 


Figure 1



Figure 2

Figure 1

 
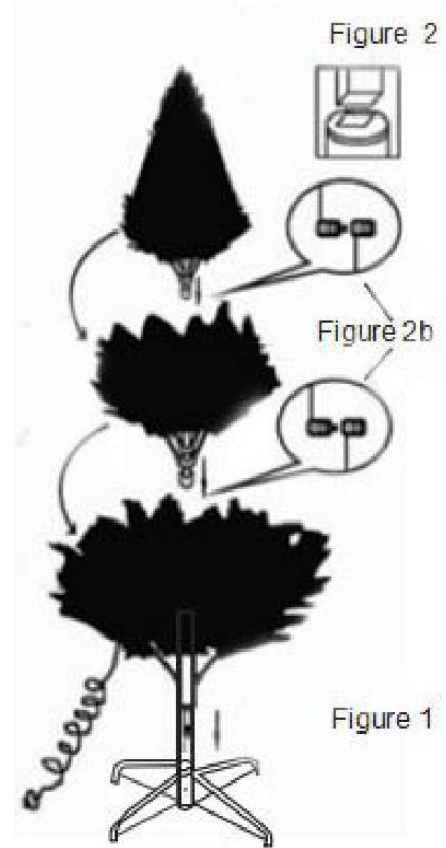 


Figure 2

Figure 2b

Figure 1

Figure 2b detailed diagram

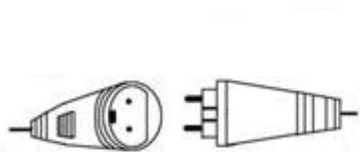

Connect the chains by fitting the male and female connectors together. Then screw the plastic cap on. Ensure that the connectors are securely tightened. (as per Figure 2b) Tips: 2 pairs of connectors in total for the light chain (between the tree sections).

4. Gently lower all main branches on tree sections (figure 3). Take care not to place unnecessary pressure on the branches when assembling. The branches on your tree can be adjusted to give tree the desired amount of fullness. For best results, straighten and separate all branch tips, then bend them slightly upward (figure 4)
5. Plug tree lights into a power outlet.



Figure 3



Figure 4

YOUR TREE IS NOW READY TO ENJOY!

Storage Tips:

1. Warning - Disconnect cord from power source.
2. Remove all decorations.
3. Starting from the top, press the tips back up against the stem.
4. Disassemble and place the branch sections back into the carton, putting the longest one on the bottom.
5. Disassemble the base.
6. STORE THE PRODUCT IN A COOL, DRY LOCATION PROTECTED FROM SUNLIGHT, AND WHERE THE TEMPERATURE DOES NOT EXCEED 40°.

INSTRUCTIONS



1. Combination
2. Led1 steady on
3. Led2 steady on
4. Led1 Slo-Glo
5. Led2 Slo-Glo
6. Led1&Led2 sequential
7. Led1&Led2 twinkle
8. Led1&Led2 slow fade
9. Slo-Glo
10. Off

AVERTISSEMENT: Risque de choc électrique. Installez seulement à un réceptacle de CLASS A GFCI aver entrée qui est à l'épreuve des intempéries avec un chapeau de prise, inséré ou enlevé, attaché. Elevez l'unité à un niveau plus élevé du sol de 1 pied. Ne pas utiliser avec réceptacles qui sont seulement à l'épreuve des intempéries quand ils sont recouvert(chapeau de prise non-insérez et couvercle du réceptacle fermé).

WARNING: Risk of Electric Shock. Install only to a covered Class A GFCI receptacle that has an enclosure that is weatherproof with the attachment plug cap inserted or removed. Mount the unit at a height greater than 1 foot from the ground surface.
Not for use with receptacles that are weatherproof only when the receptacle is covered (attachment plug cap not inserted and receptacle cover closed).

2308

1. Keep the product away from heat sources or any flammable substances. Stay away from young children and pets to avoid danger.
2. Please carefully inspect the product before use. Connect the chain by installing the male and female joints together. Then tighten. Open the plastic cover. Ensure that the connector is securely tightened.
3. During use, press the button once to display a corresponding function mode. There are a total of 8 modes to choose from. When not in use, press the button again to the "off" position.