


How To Measure Panel Lengths

Panel Length = 

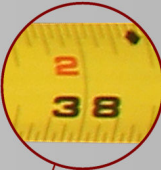

Before measuring, remove the endcaps as shown.

Panel Length =  - 3"

Panel Length =  - 3"



Before measuring, remove the endcaps as shown.