 
 
 
 
 
 
 
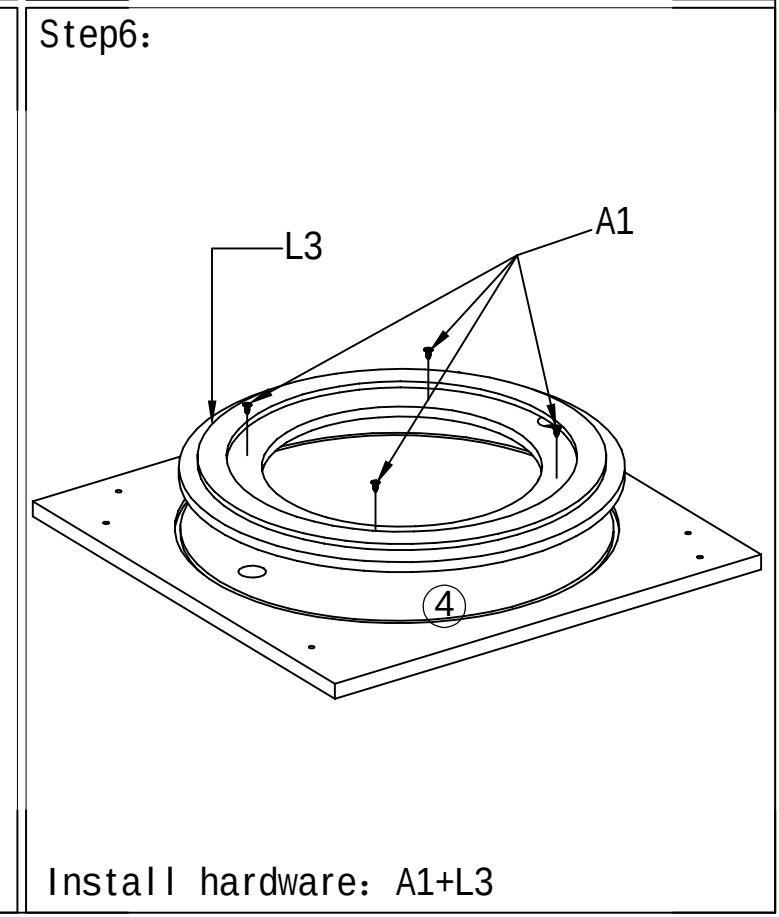 
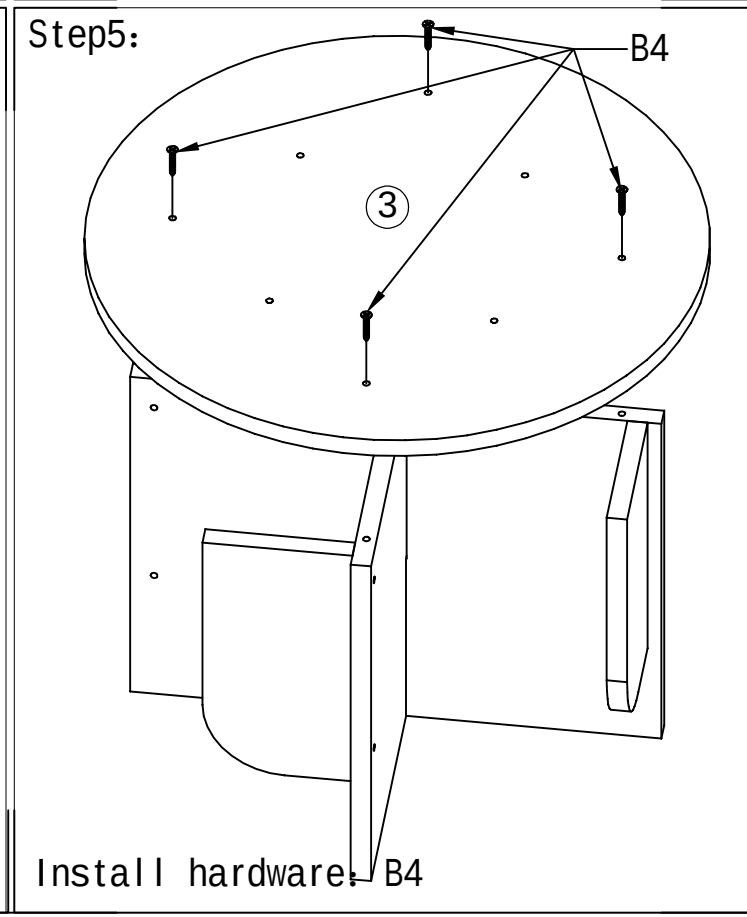 
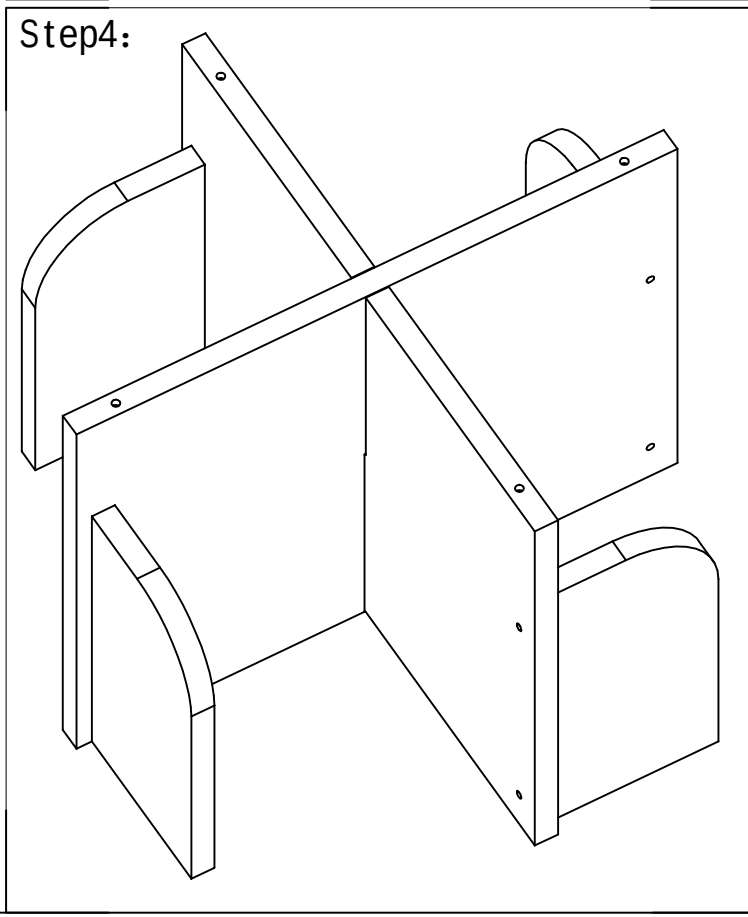 
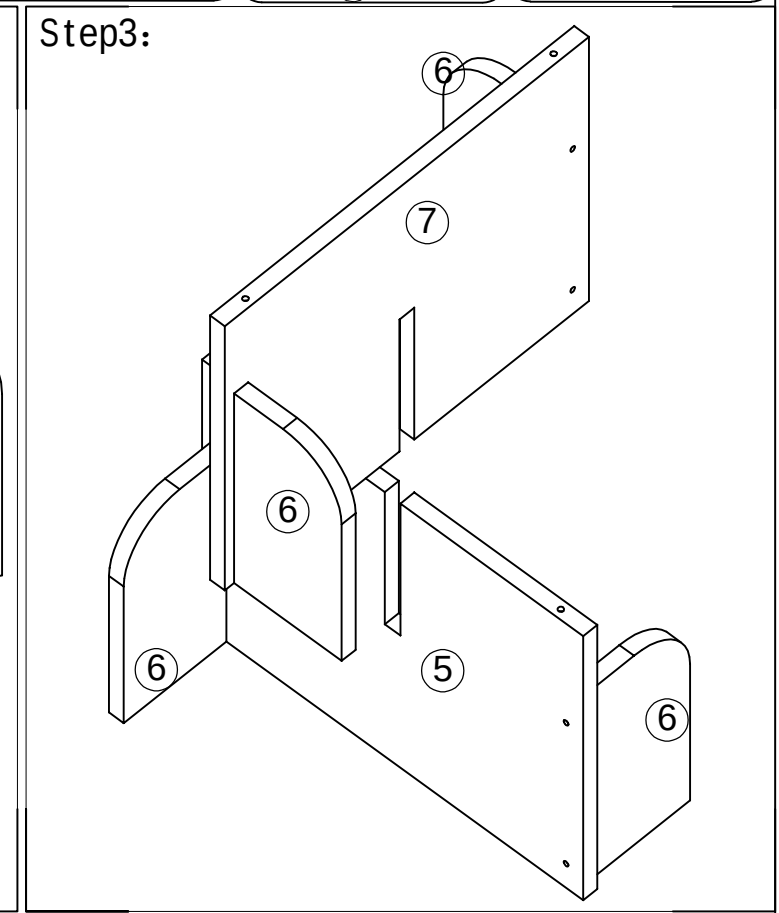 
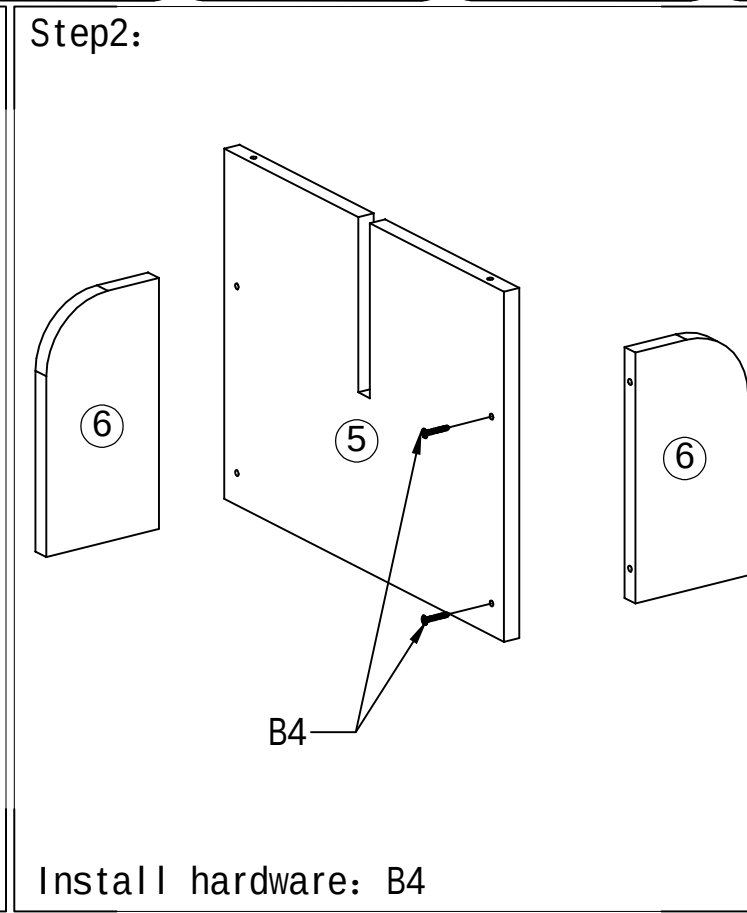 
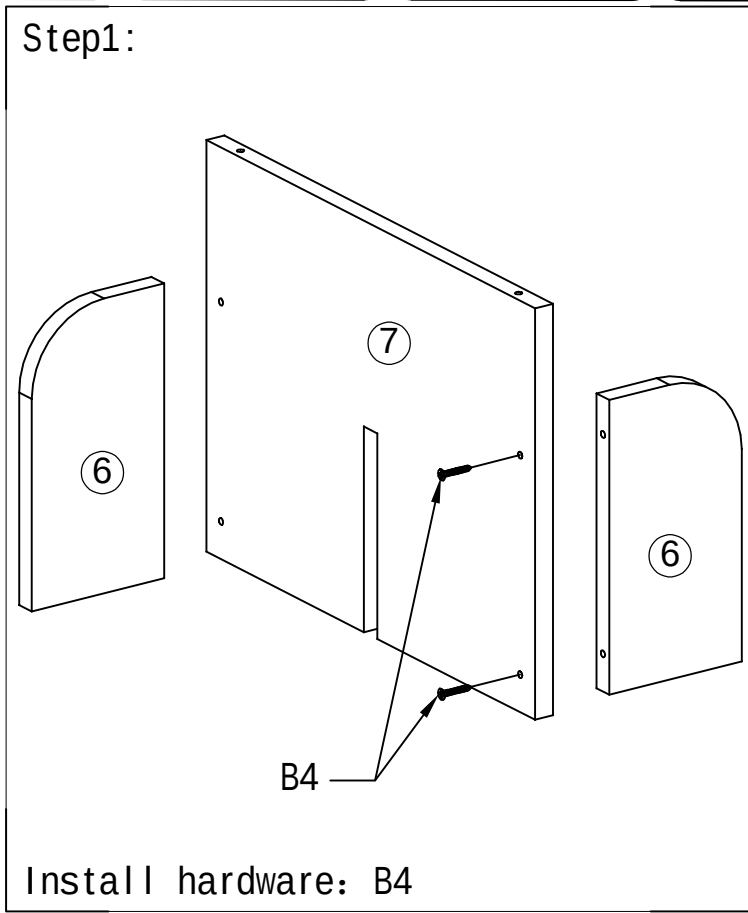 
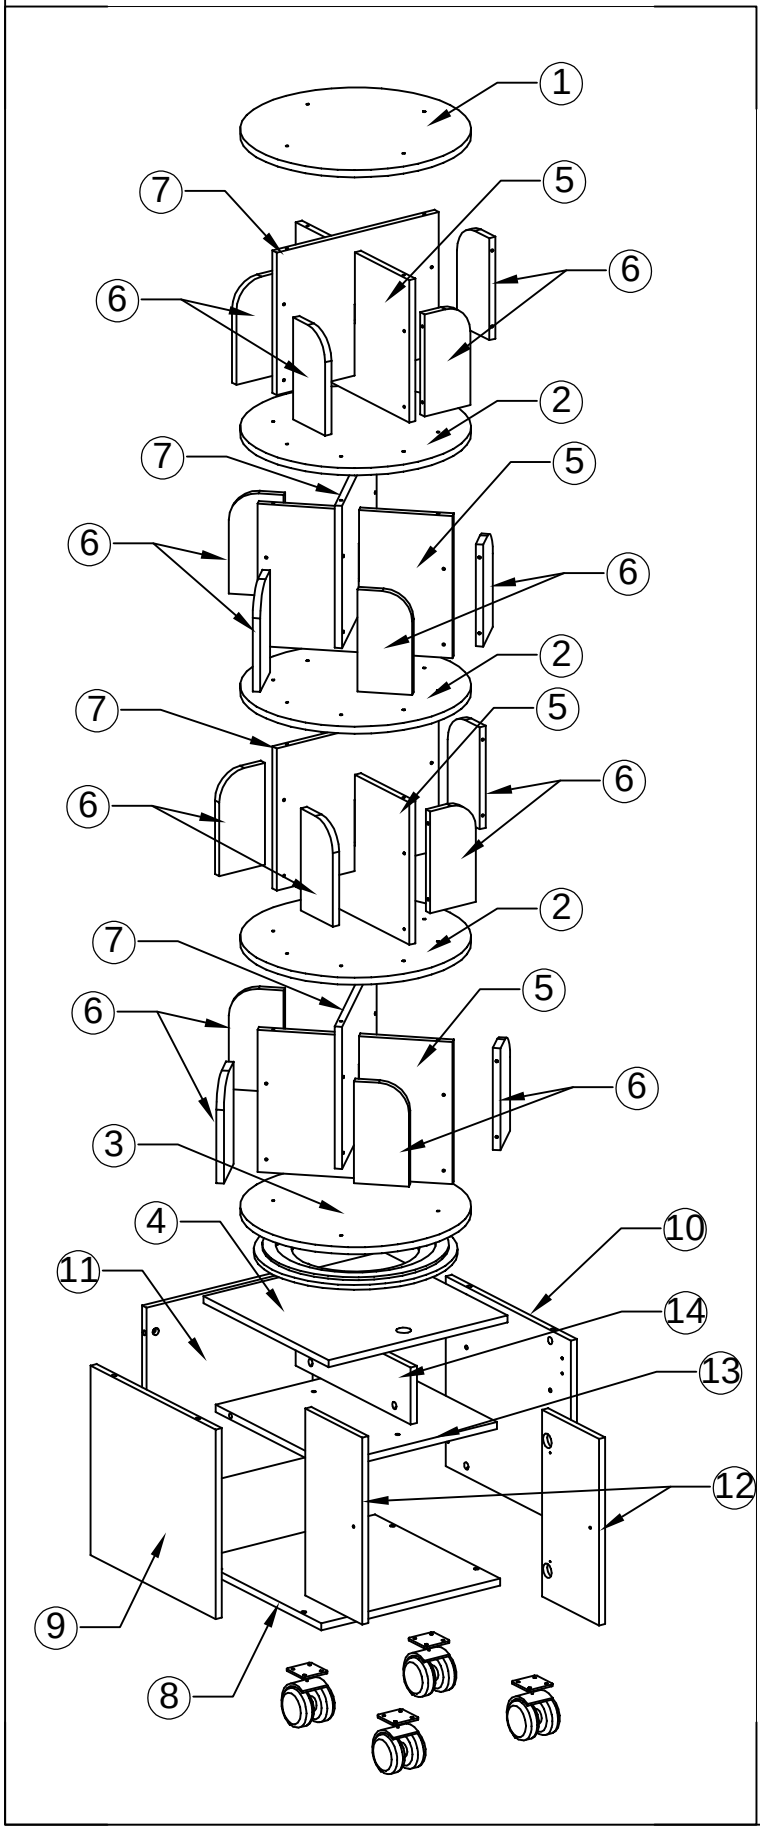 
 
 
 
 
 
 










double door five-layer rotating bookcase installation diagram-p1

Screwdriver	B1*14	B2*6	B4*70	A16*18	A1*36	J15*2	B0*2	L1*4	L2*4	L3*1
										









double door five-layer rotating bookcase installation diagram-p2


Screwdriver	B1*14	B2*6	B4*70	A16*18	A1*36	J15*2	B0*2	L1*4	L2*4	L3*1
										

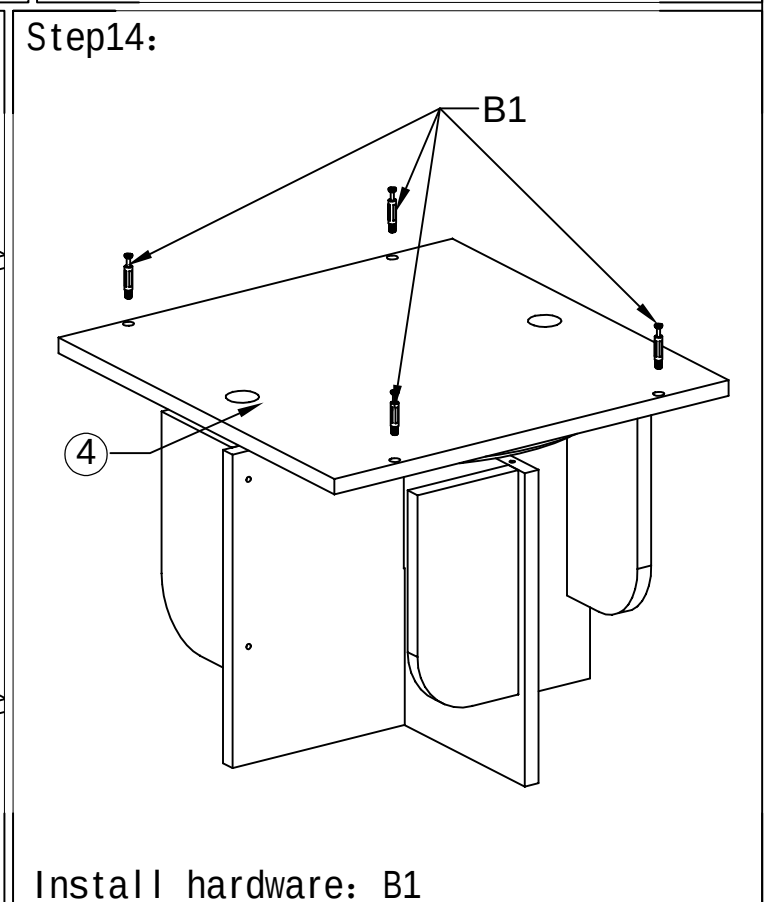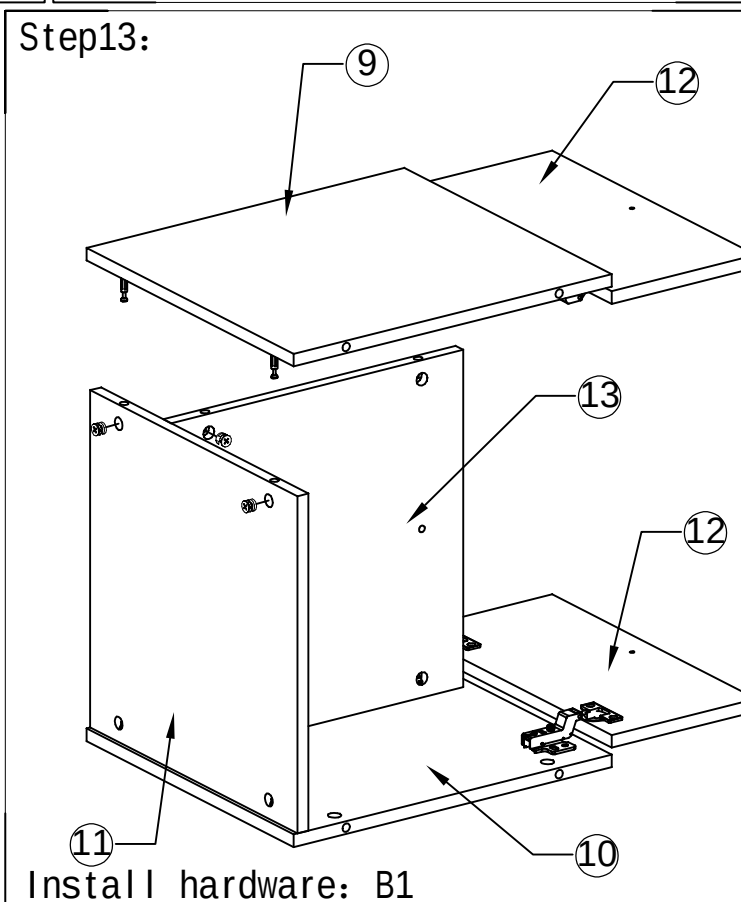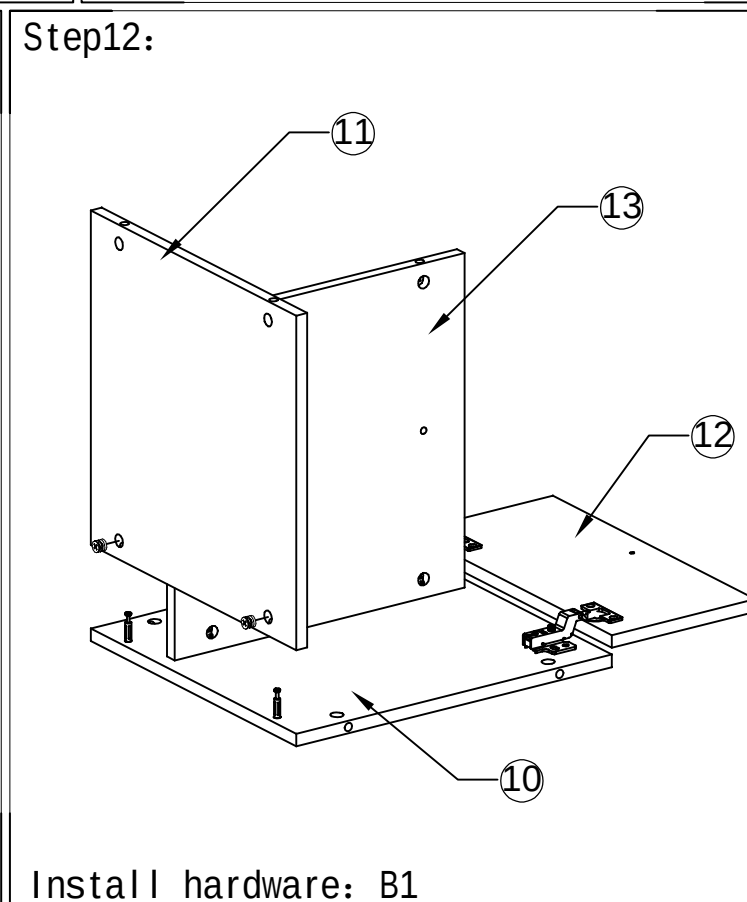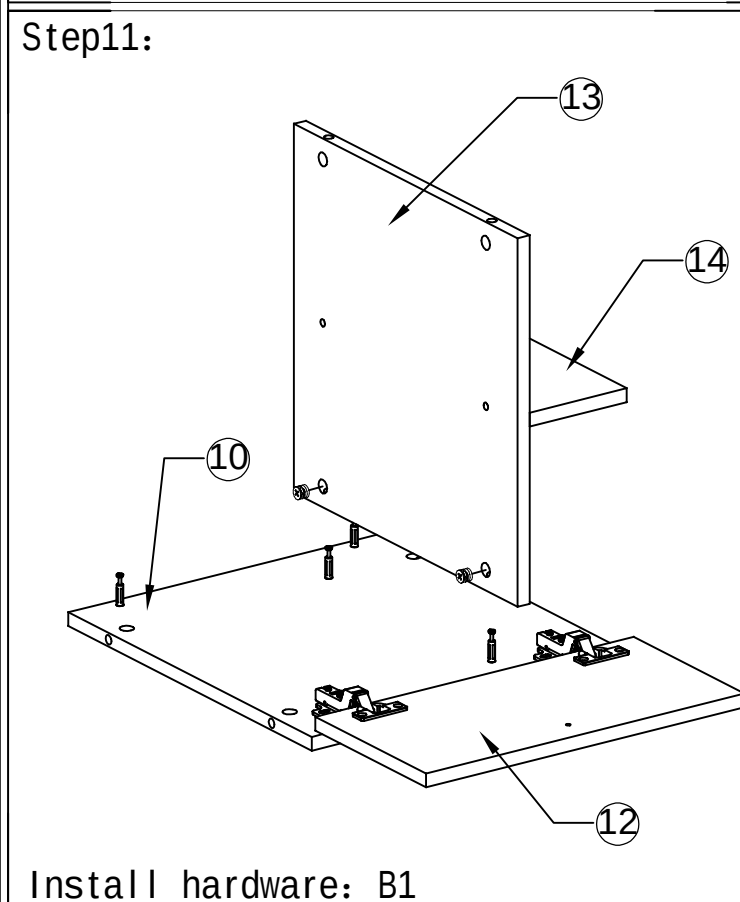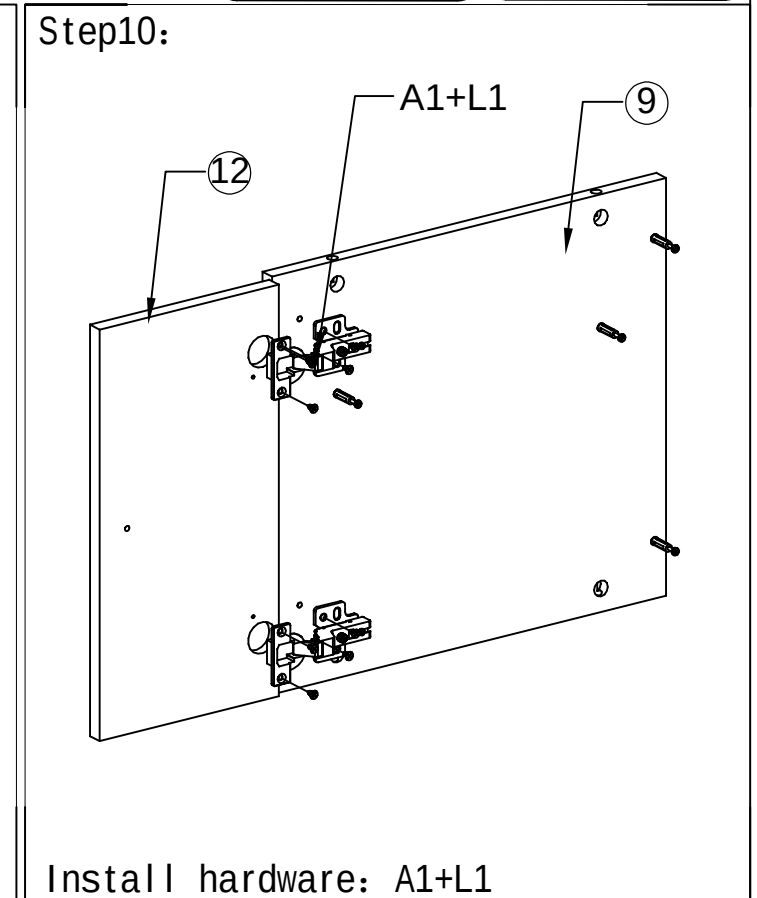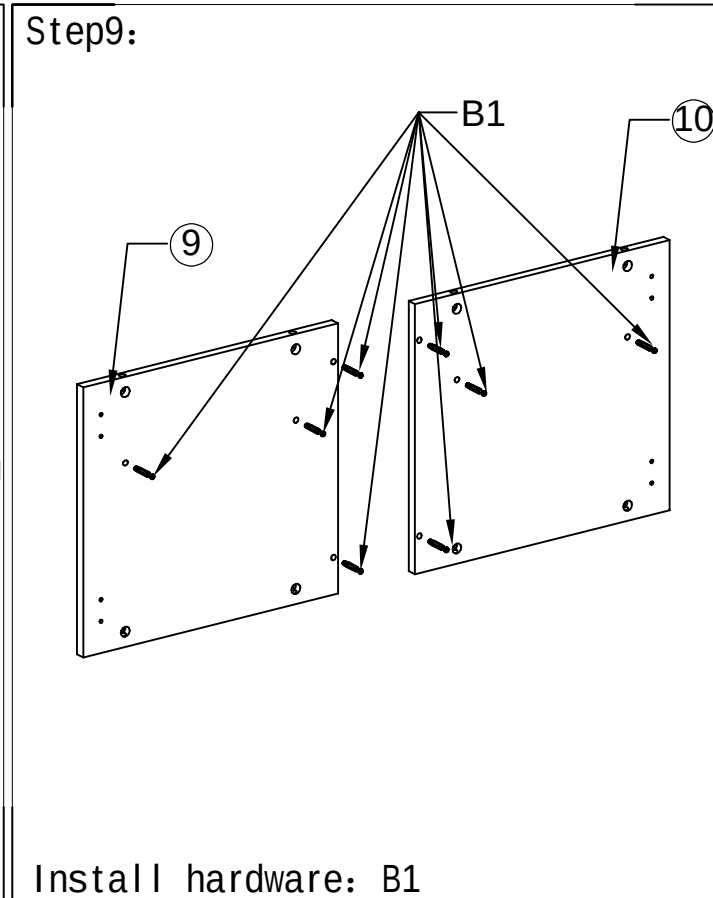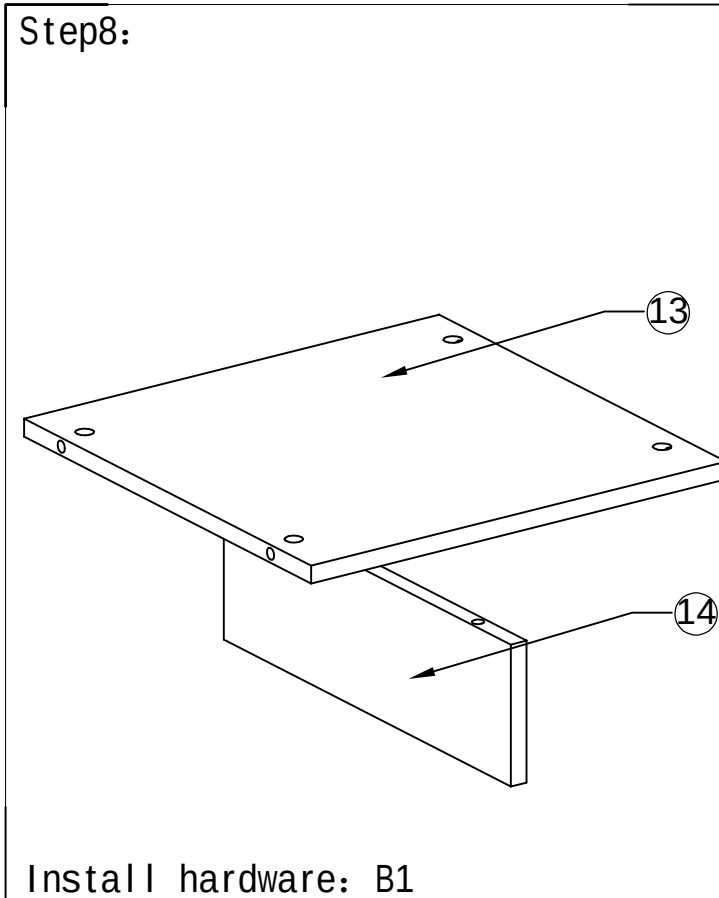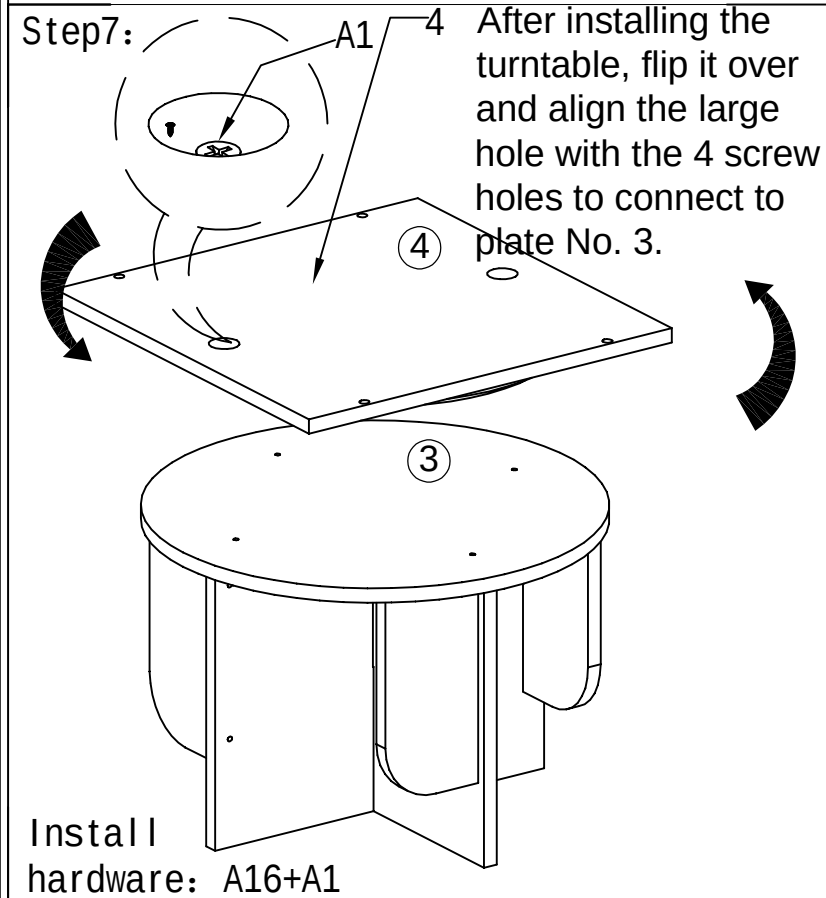        

      double door five-layer rotating bookcase installation diagram-p3


Screwdriver	B1*14	B2*6	B4*70	A16*18	A1*36	J15*2	B0*2	L1*4	L2*4	L3*1
										

 Step15:

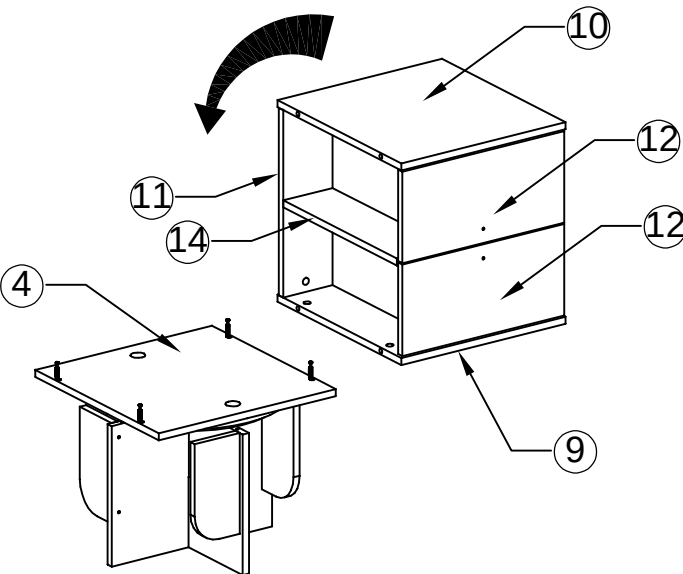


Install hardware: B1

 Step16:

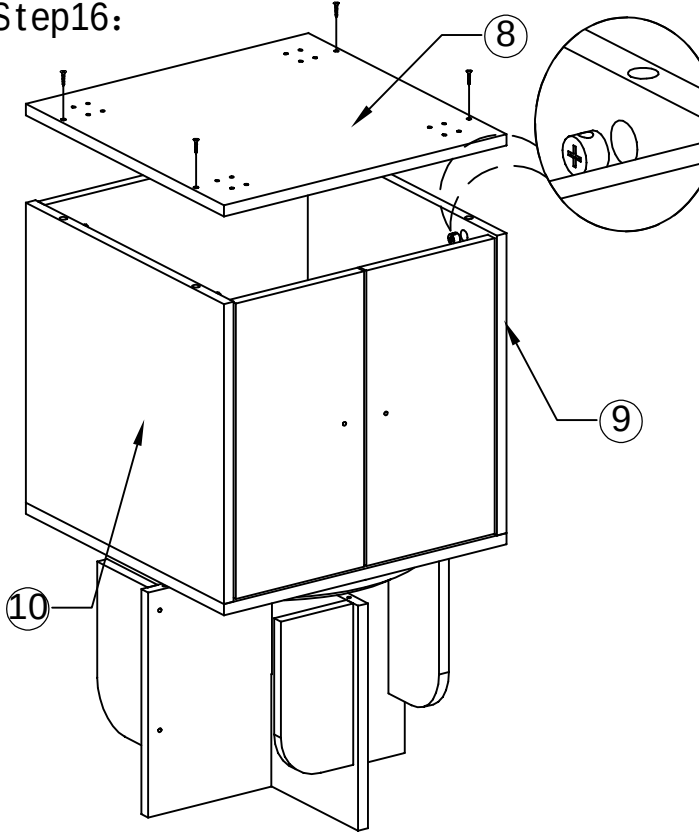


Install hardware: B2

 Step17:

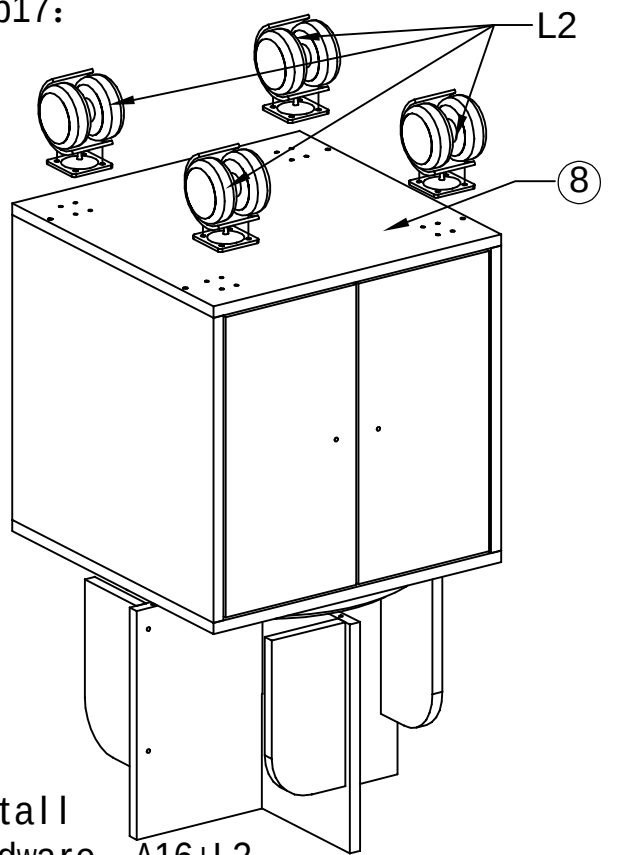


Install hardware: A16+L2

 Step18:

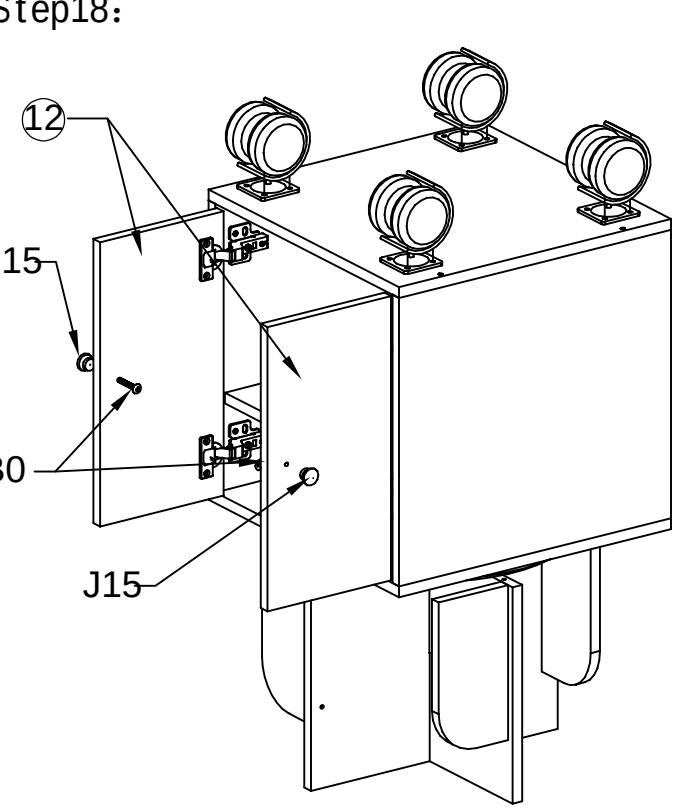

Install hardware: J15+B0

 Step19:

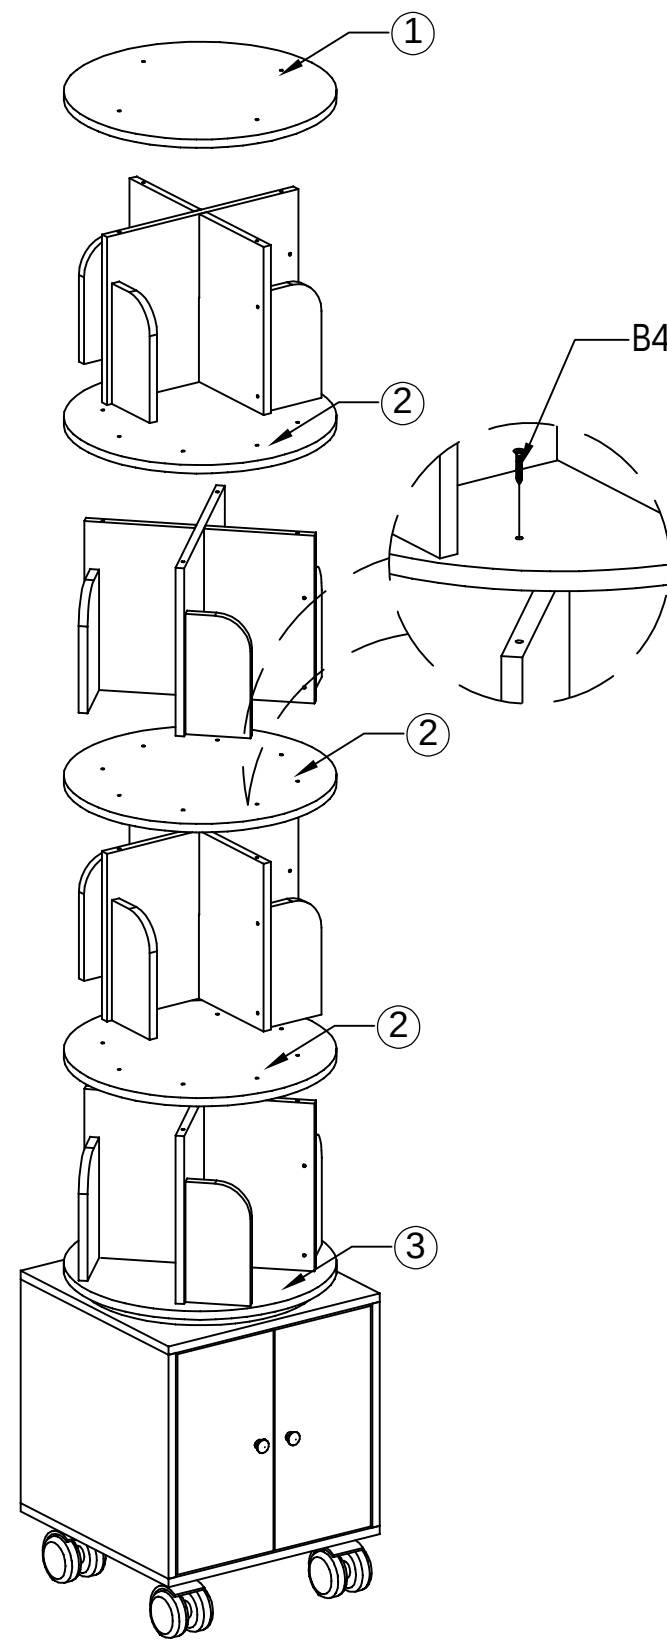

Install hardware: B4

