

ASSEMBLY INSTRUCTIONS

 
2 DOOR 2 DRAWER CABINET

ASSEMBLY REQUIREMENTS:

2-Person Assembly

2.5Hours Assembly Time (Approximate)

Tool Required (Not Provided)



We appreciate your business!



ASSEMBLY PREPARATION:

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Part List and Hardware List and ensure parts and hardware are correct before assembly.
Contact customer service for missing parts.
3. Place all wooden parts on clean ,flat and soft surface (e.g. carpet or rug)to prevent scratch and damage to parts.

SAFETY PRECAUTION:

1. Keep ALL HARDWARE PART OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS

TIPS FOR ASSEMBLY:

1. Allow ample room for assembly and assemble the product near where the product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Identify all the parts ,hardware and quantities required for each step.
4. During assembly ,do not over-tighten any fittings as this may cause damage.
5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
6. Always place the product on a flat ,level surface.
7. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE:


- Wipe clean with a soft, dry cloth; avoid the use of harsh chemicals or household cleaners as they may damage the exterior finish of the furniture.
- **Hardware may loosen over time. Periodically, check that all connections are tight; re-tighten as necessary.**
- Solid wood is impacted by heat and humidity fluctuations which may cause small joint separations or hairline cracks; place the furniture away from direct sunlight and air conditioning vents, heating vents or units to protect the furniture.

PARTS LIST


NO	PART NAME	QTY
1	TOP PANEL	1
2	LEFT PANEL	1
3	RIGHT PANEL	1
4	BOTTOM FRAME	1
5	LEG	4
6	CENTER RAIL	2
7	PARTITION	1
8	LEFT DOOR	1

NO	PART NAME	QTY
9	RIGHT DOOR	1
10	BACK PANEL	1
11	SHELF PANEL	1
101	DRAWER FRONT PANEL	2
102	DRAWER LEFT PANEL	2
103	DRAWER BACK PANEL	2
104	DRAWER BASE PANEL	2
105	DRAWER RIGHT PANEL	2

 PARTS ASSEMBLY OVERVIEW

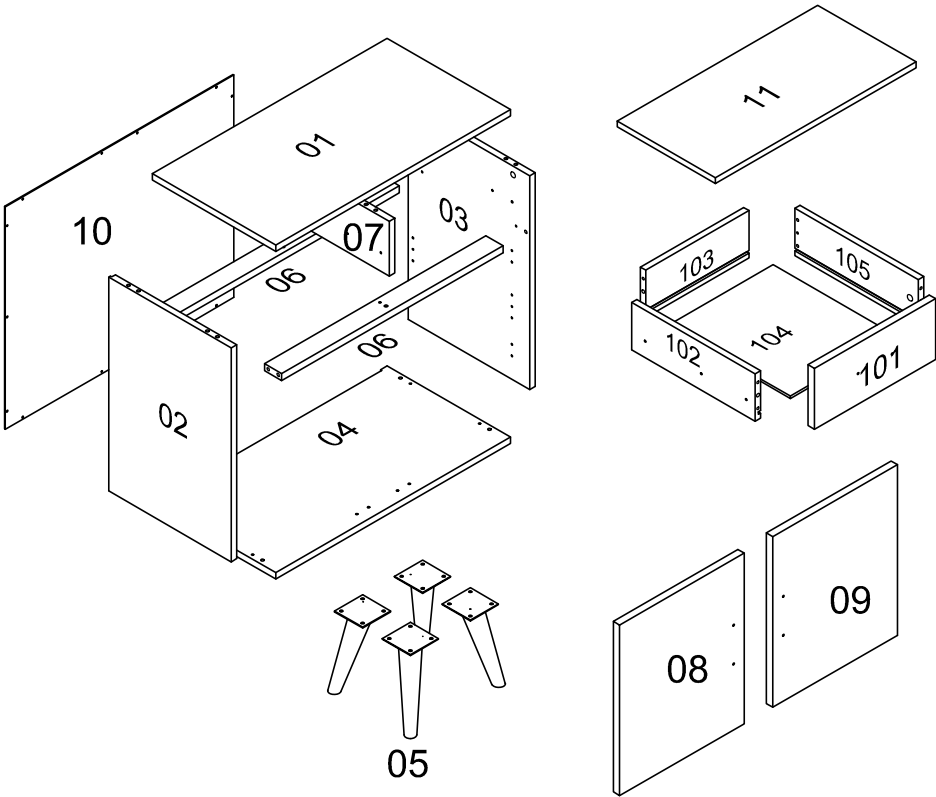


HARDWARE LIST

 NO	DESCRIPTION		QTY	EXTRA
A		CHIPBOARD SCREW M3 x 16MM	24	1
B		CHIPBOARD SCREW M4 x 16MM	20	1
C		WOOD DOWEL M8 x 35MM	16	1
D		WOOD DOWEL M6 x 30MM	16	1
E		CAM-LOCK 15 x 12	18	1
F		CAM-BOLT 5 x 25	18	1
G		CAM-LOCK COVER 17 x 5	18	1
H1		DRAWER SLIDE 350MM	2 SET	
H2				
I		HANDLE	4	
J		PANHEAD SCREW M4 x 25MM	8	


**EXTRA HARDWARE FOR SPARE USE

NO	DESCRIPTION		QTY	EXTRA
K		CHIPBOARD SCREW M4 x 38MM	6	1
L		PANHEAD CHIPBOARD SCREW M4 x 16MM	14	1
M		FLAT WASHER M8	16	1
N		JCBC SCREW M6 x 16MM	16	1
O		ALLEN KEY M4	1	1
P		HINGES H7	4	
Q		MAGNET CATCH	2	
R		METAL WARE	2	
S		CHIPBOARD SCREW M3 x 12MM	4	
T		SHELF PIN	4	

 DRAWER SLIDE DISASSEMBLE STEPS:

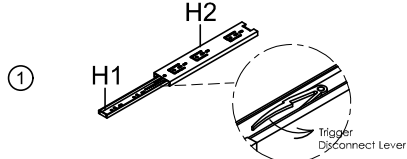

 - A) Distinguish between Slide Track (H2) and Slide Runner (H1) of Drawer Slide.
- B) Slide out H1 from H2 until Trigger Disconnect Lever is visible.
- C) Depress the Trigger Disconnect Lever in the groove of H1 and at the same time slide out H2 completely from H1.



INSTRUCTION FOR CAM-BOLT & CAM-LOCK

 
 


CAM-BOLT




CAM-LOCK


Tool Required (Not Provided)




INSERTING AND TIGHTENING CAM-BOLT

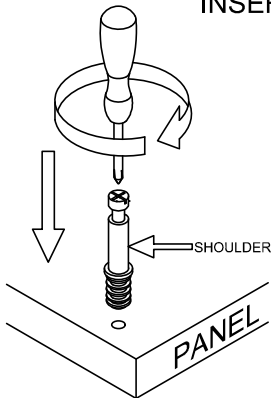 

 Place Cam-bolt on pre-drilled hole and screw in vertically

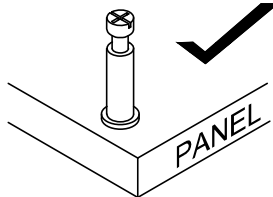

 
Shoulder is flushed (on the same level) with the panel

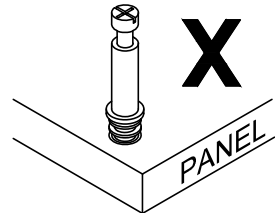

Shoulder is above the panel

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.

 INSERTING CAM-LOCK

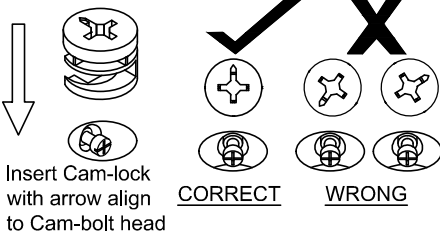


Insert Cam-lock with arrow align to Cam-bolt head

CORRECT

WRONG

 TIGHTENING CAM-LOCK

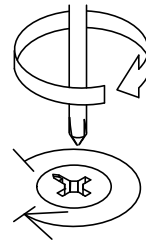


CAM-LOCK

Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted



Use a Screwdriver to turn Cam-lock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.

 STEP 1

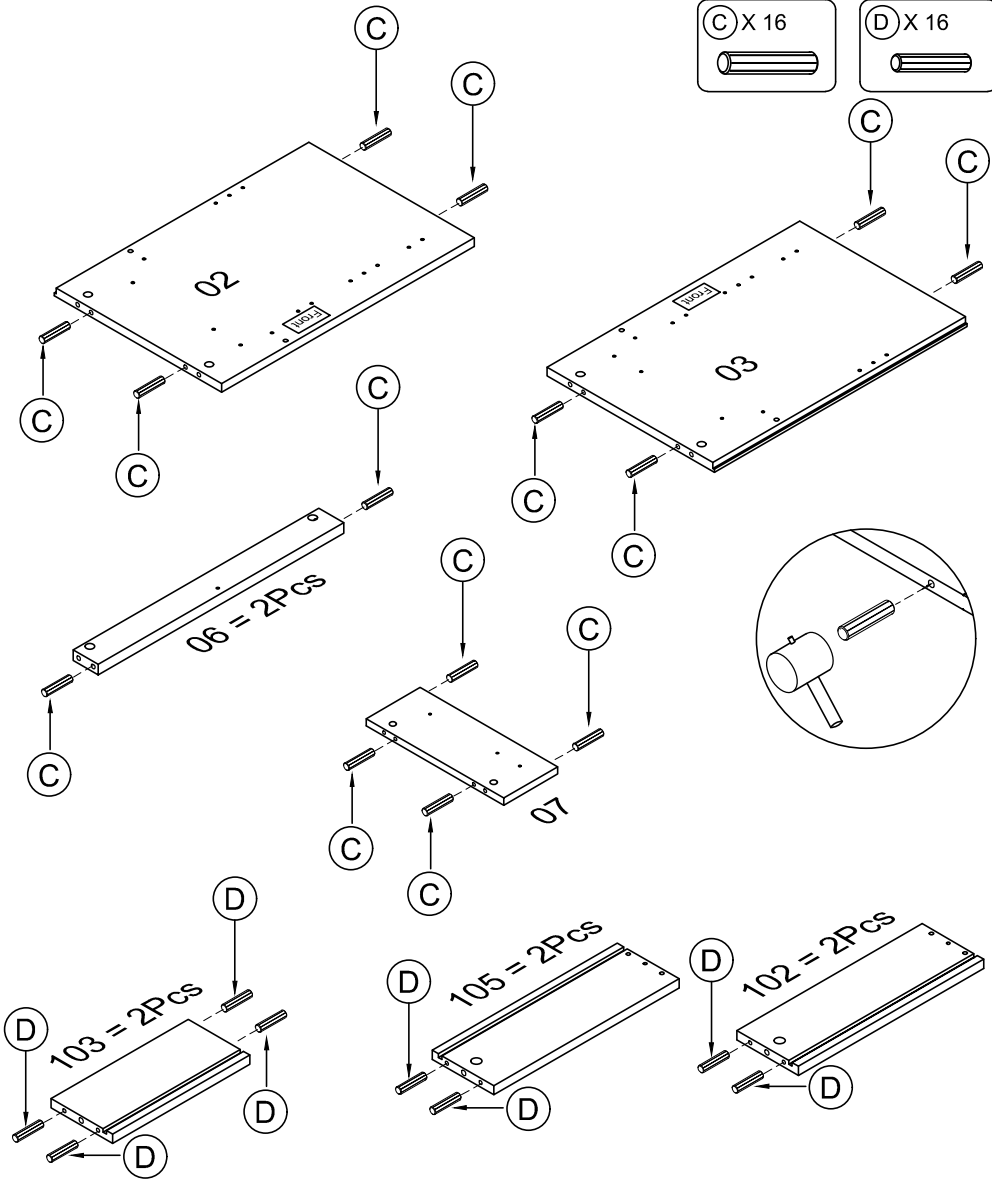

- A. Lay Left & Right Panel (2 & 3), Center Rail (6), Partition (7), Drawer Back Panel (103), Drawer Left & Right Panel (102 & 105) as shown on a material that does not scratch or damage the parts.
- B. Identify the designated holes for Wood Dowel (C or D) on each part.
- C. Insert Wood Dowel (C or D) into the designated holes of the respective parts, use a mallet to lightly tap in Wood Dowel (C or D) if necessary.


 
 
STEP 2

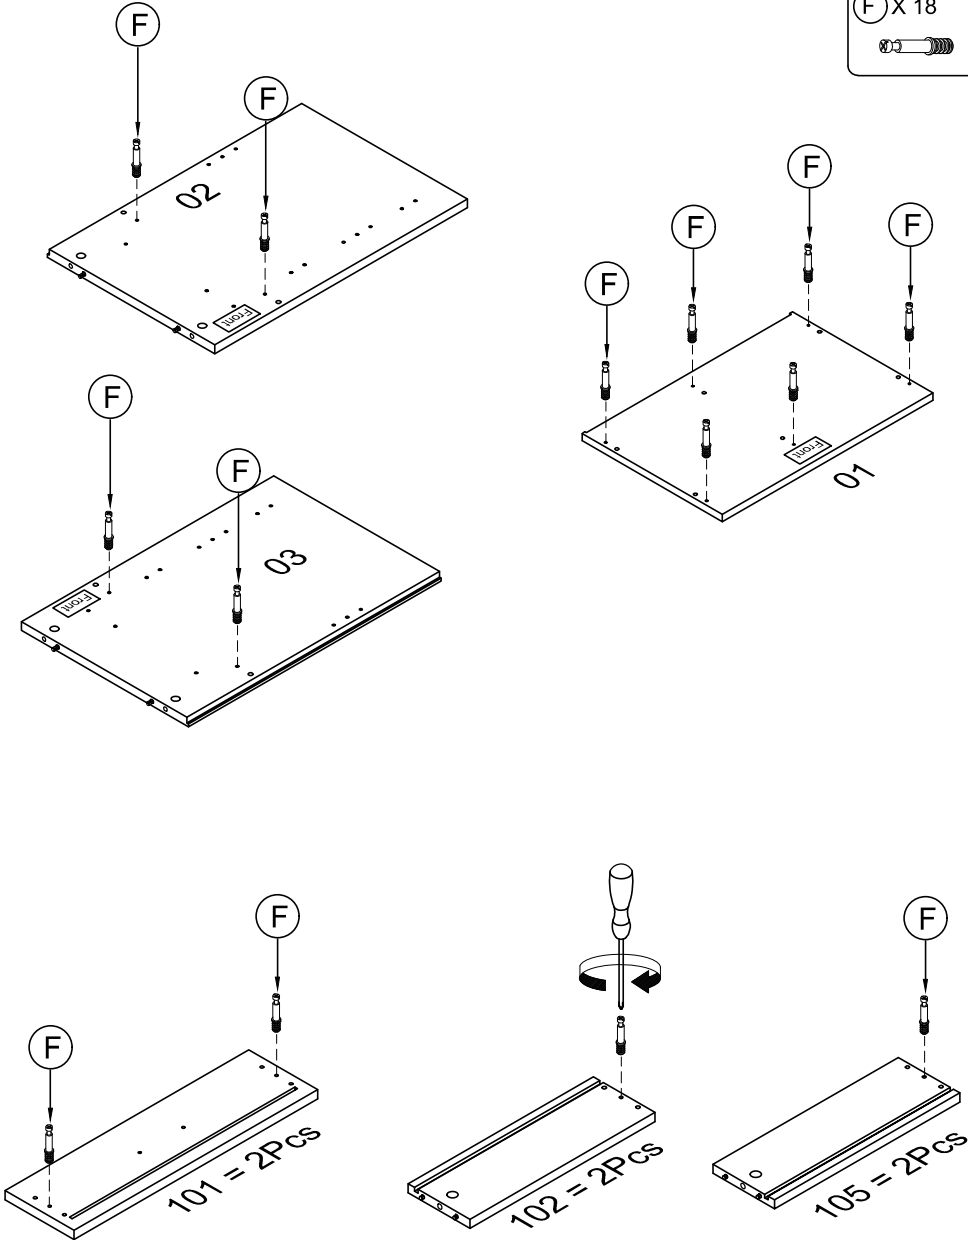

- A. Lay the parts as shown on a material that does not scratch or damage the parts.
- B. Screw in Cam-Bolt (F) into the designated holes on Top Panel (1), Left & Right Panel (2 & 3), Top Drawer Front Panel (101), Top Drawer Left & Right Panel (102 & 105).



Refer to page 4 for instructions on inserting and tightening Cam-Bolt (F).

   STEP 3




STEP 3A

  Identify the pilot holes on Top Drawer Left & Right Panel (102 & 105) and install Slide Runner (H1) using Chipboard Screw (A) - ensure that the screws are screwed in vertically. Do not tighten the screw completely until all three screws are in place. Note: The sequence of fastening Screw (A) is from the front to the back.


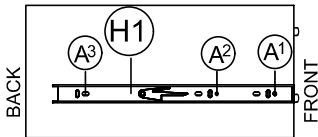
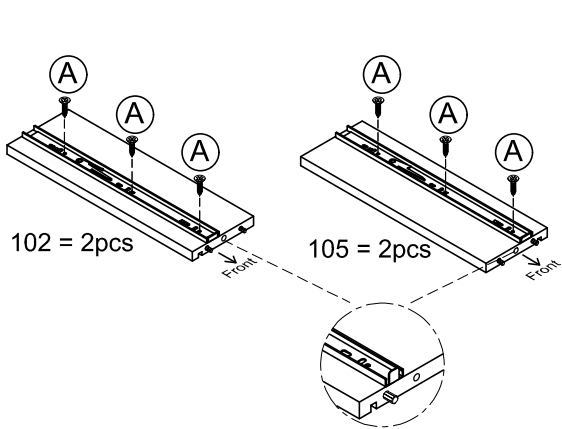


DRAWER SLIDE DISASSEMBLE STEPS:

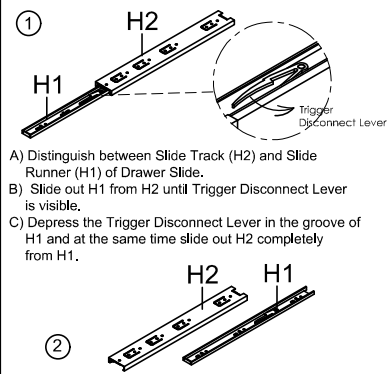 

STEP 3B

   
Identify the pilot holes on Left & Right Panel (2 & 3) for Slide Track (H2) Use Screw (A) to fasten (H2)- ensure that the screws are screwed in vertically. Do not tighten the screw completely until all three screws are in each track.

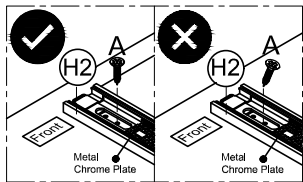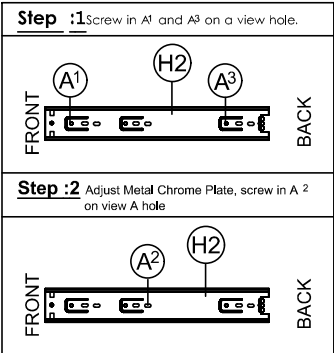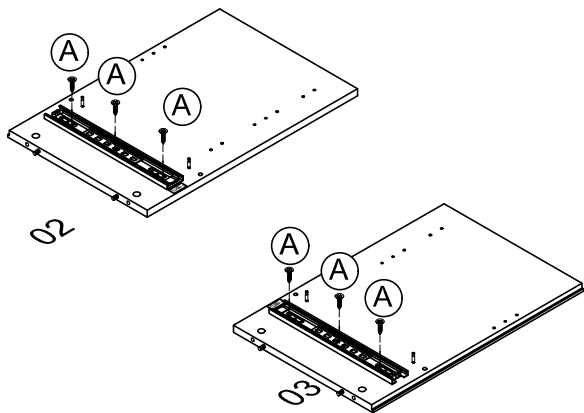

STEP 3C

Identify the pilot holes on Partition (6) for Slide Track (H2) Use Screw (A) to fasten (H2)- ensure that the screws are screwed in vertically. Do not tighten the screw completely until all three screws are in each track.

 Note the sequence of using Screw (A) to fasten (H)2

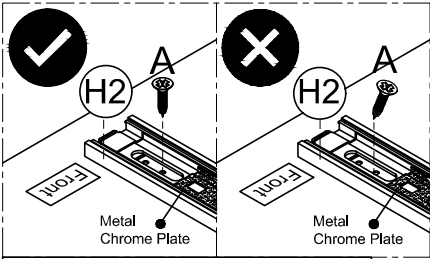


Step :1Screw in A¹ and A³ on a view hole.

A diagram of a track with three screws labeled A¹, H2, and A³. The track is oriented with 'FRONT' on the left and 'BACK' on the right.

Step : 2Adjust Metal Chrome Plate, screw in A² on view A hole

A diagram of a track with two screws labeled A² and H2. The track is oriented with 'FRONT' on the left and 'BACK' on the right.

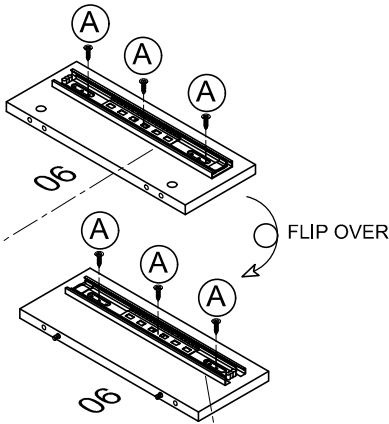 






Step :1 Screw in first & third screw (A¹ & A³) through view hole.

A diagram of a track with three screws labeled A¹, H2, and A³. The track is oriented with 'FRONT' on the left and 'BACK' on the right.

Step :2 Adjust Metal Chrome Plate, screw in A² through view hole


A diagram of a track with two screws labeled A² and H2. The track is oriented with 'FRONT' on the left and 'BACK' on the right.

     STEP 4

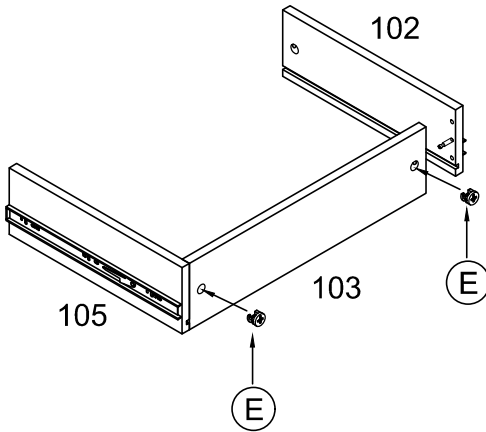



STEP 4A

 - Attach Top Drawer Left & Right Panel (102 & 105) to Top Drawer Back Panel (103) via Wood Dowel and Cam-Bolt on each part respectively.
- Insert Cam-Lock (E) to designated hole on Top Drawer Back Panel (103) then turn clockwise to lock onto Cam-Bolt.
- Insert Cam-Lock Cover (G) to conceal Cam-Lock (E).

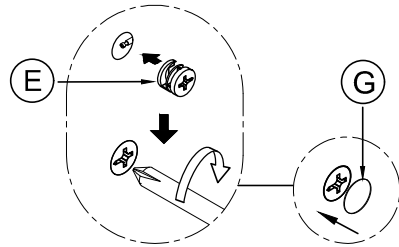

STEP 4B

  
- Fit Drawer Base Panel (104) via groove on Top Drawer Side and Top Drawer Back Panel.
- Attach Top Drawer Front Panel (101) to Top Drawer Left & Right Panel (102 & 105) via Cam-Bolt and Wood Dowel on the respective parts. Check that Drawer Base Panel (104) fits into the groove on the inside face of Top Drawer Front Panel (101).
- Insert Cam-lock (E) into designated holes on Top Drawer Left & Right Panel (102 & 105) and turn clockwise to lock onto Cam-bolt.
- Insert Cam-lock Cover (G) to conceal Cam-lock.

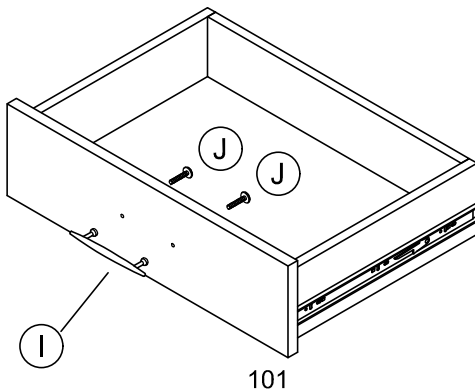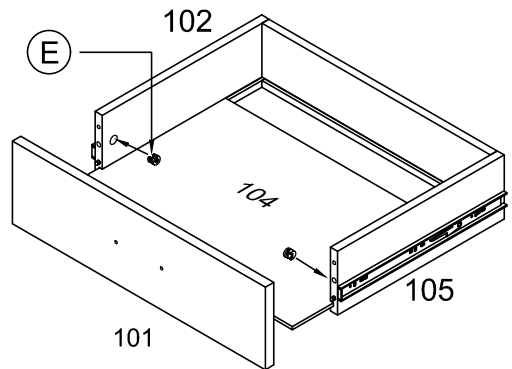

STEP 5


Affix Handle (I) to Top Drawer Front Panel (101) with Panhead Screw (J)

 STEP 6

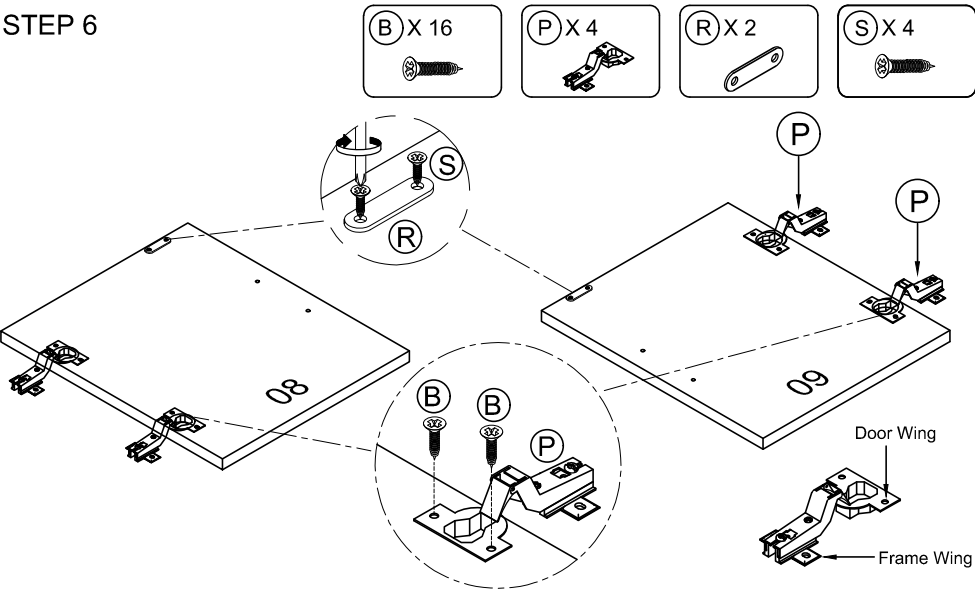


- A. Identify the pilot holes on Left & Right Door (8 & 9) and align the screw holes on Frame Wing to pilot holes. Next, use Chipboard Screw (B) to fasten Door Wing of Hinges (P).
- B. Identify the pilot holes on Left & Right Door (8 & 9), using Chipboard Screw (S) to fasten Metal Ware (R) to Door (8 & 9).

 STEP 7

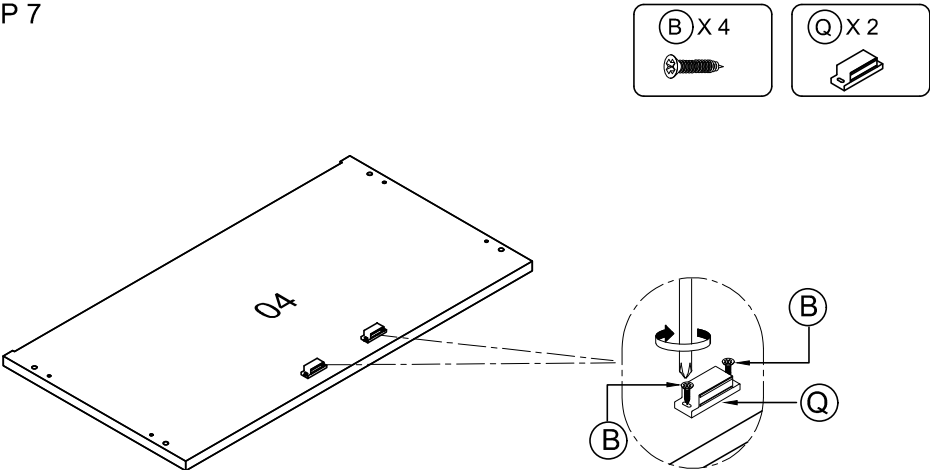


- A. Identify the pilot holes on Bottom Panel (4) for Magnet Catch (Q). Use Screw (B) to fasten Magnet Catches (Q)

 STEP 8

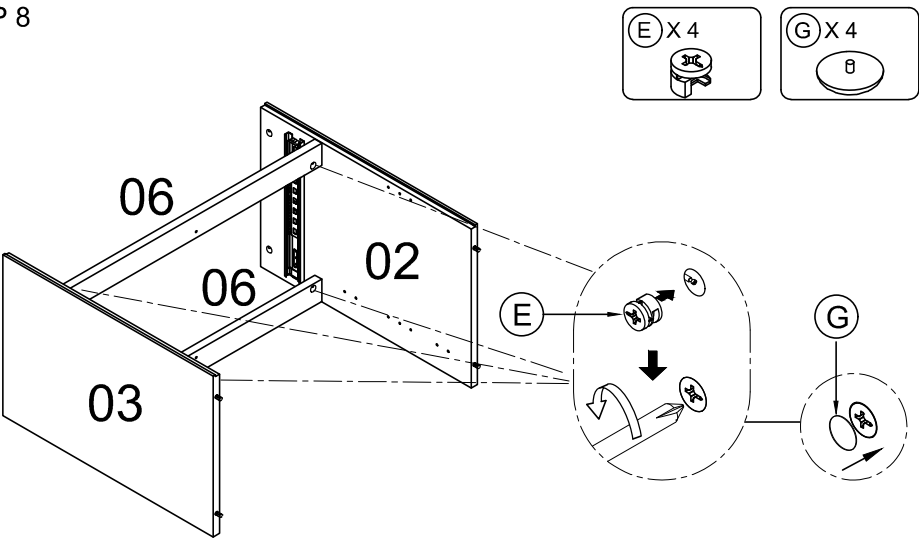


- A. Attach Center Rail (6) to Left & Right Panel (2 & 3), via Cam-Bolt and Wood Dowel on respective parts.
- B. Insert Cam-lock (E) into designated hole on Left & Right Side Panel (2 & 3), then turn clockwise to lock onto Cam-Bolt.
- C. Insert Cam-Lock Cover (G) to cover Cam-Lock (E).

 STEP 9

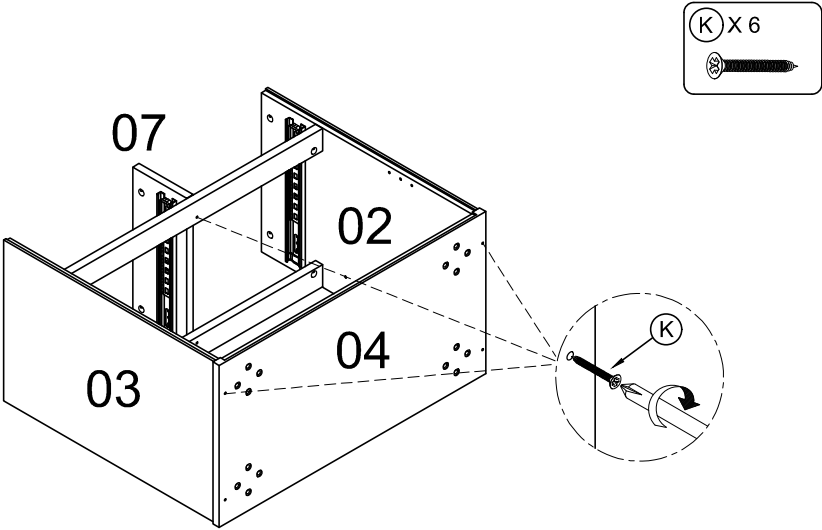


- A. Use Chipboard Screw (K) to fasten Bottom Panel (4) to Left & Right Panel (2 & 3) and Center Rail (6) to Partition (7). Do not tighten Screw (K) completely until all the screws are in place.

 STEP 10

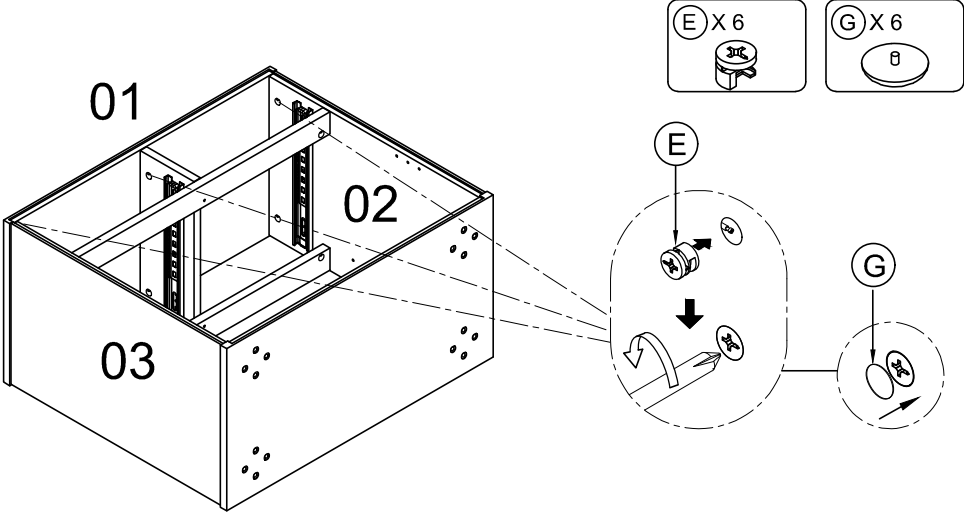



- A. Attach Top Panel (1) to Left & Right Panel (2 & 3) and Partition (7), via Cam-Bolt and Wood Dowel on respective parts.
- B. Insert Cam-lock (E) into designated hole on Left & Right Side Panel (2 & 3) and Partition (7), then turn clockwise to lock onto Cam-Bolt.
- C. Insert Cam-Lock Cover (G) to cover Cam-Lock (E).

 STEP 11

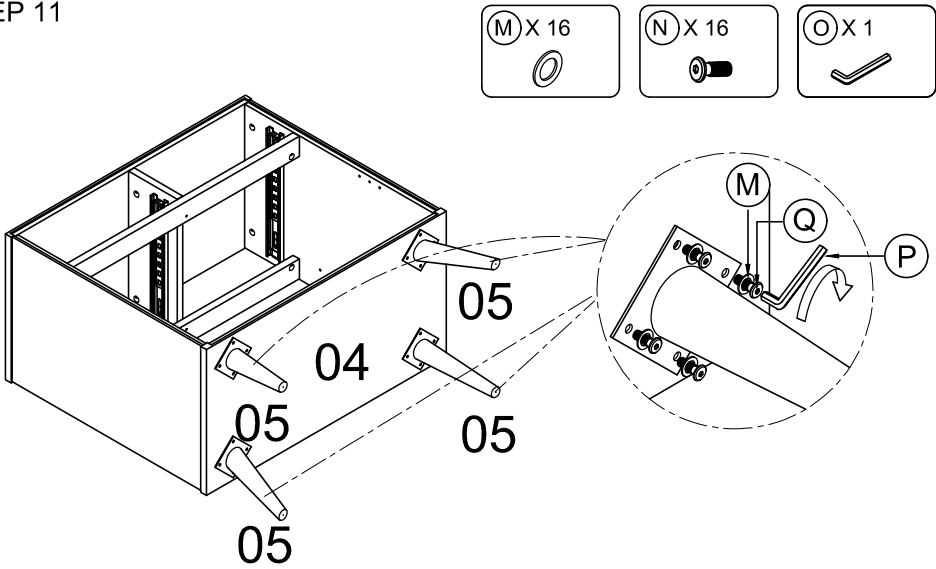



- a) Position Post (5) to Bottom Panel (4) as shown. Check that each Leg is angles outwards. Use JCBC Screw (N), Filled with Flat Washer (M) to fasten (9). Use Allen Key (O) to drive JCBC Screw (N). Do not tighten (N) completely until all 4 screws are in place on each Post.
- b) With assistance, set the assembly right-side up when all the Post are installed.

  STEP 12

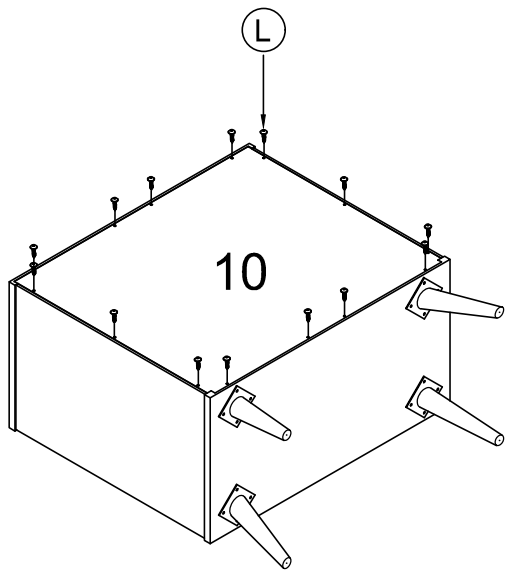



Attach Back Panel (10) squarely to Left & Right Panel, Top Panel and Bottom Panel and fasten with Panhead Chipboard Screw (L).

  STEP 13

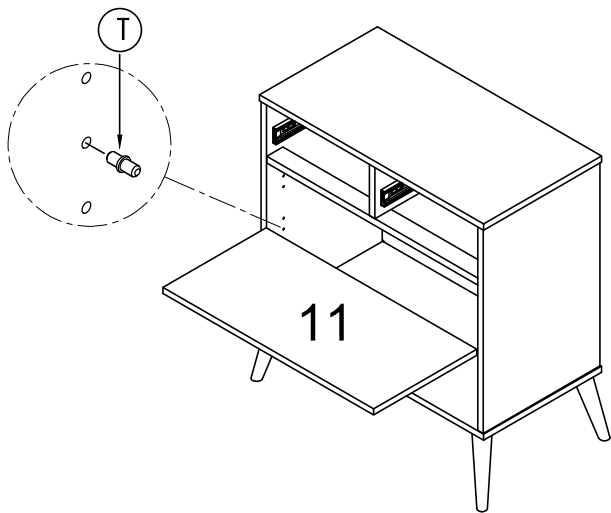


A. Insert Shelf Pin (T) into the designated holes on the same level at the desired height on Left & Right Panel (2 & 3). Place Shelf Panel (11) by tilting it to fit between Side Panels and then level it to sit on Shelf Pin (T).

  STEP 14

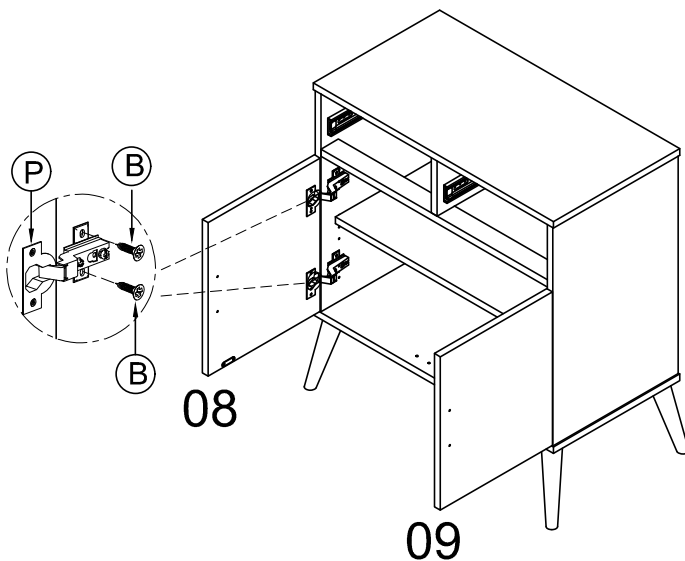


- A. Position Left & Right Door (8 & 9) as shown and place Frame Wing of Hinge (P) against the Left & Right Panel. Next, align the screw holes on Frame Wing to pilot holes on the Left & Right Panel.
- B. Use a Philips Screwdriver to drive Screw (A) to fasten Frame Wing of Hinge (P) to the Left & Right Panel. Do not tighten the screw completely until both screws are in place.

 
HINGE ADJUSTMENT: if the door does not appear square or misaligned, loosen or tighten the appropriate screws on each case hinge as illustrated.

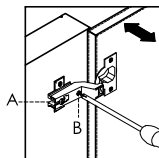

 - 1) Side to side adjustment :
Loosen Screw A, adjust gap with screw B and re-tighten Screw A



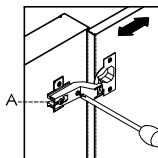


 - 2) Depth adjustment:
Loosen Screw A, push hinge arm forwards or backwards, re-tighten screw A.

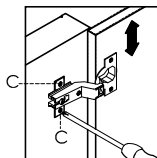


- 3) Height adjustment:
Loosen Screw C, adjust door height and re-tighten screw C.

   STEP 15

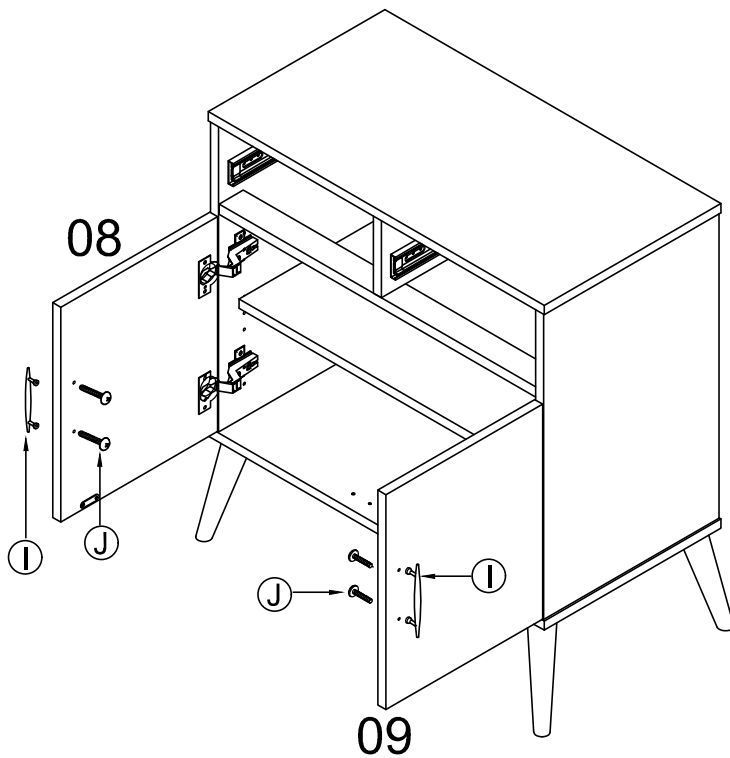


A. Affix Handle (I) to Left & Right Door (8 & 9) with Panhead Screw (J).

 STEP 16

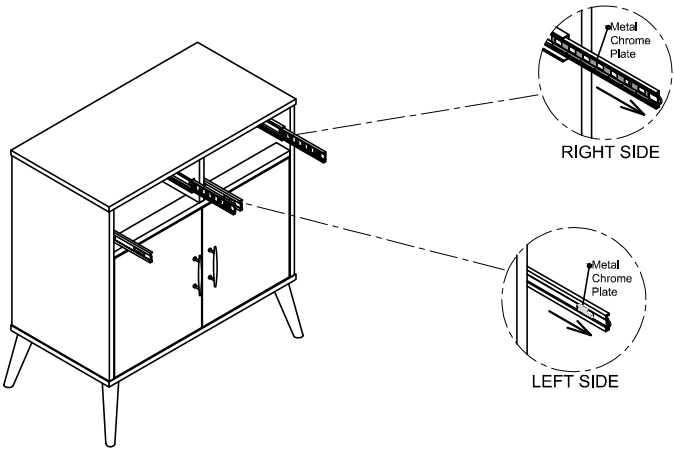

a. Slide out Metal Chrome Plate (ball bearing slider) on both sides of Slide Track (H2).

 STEP 17

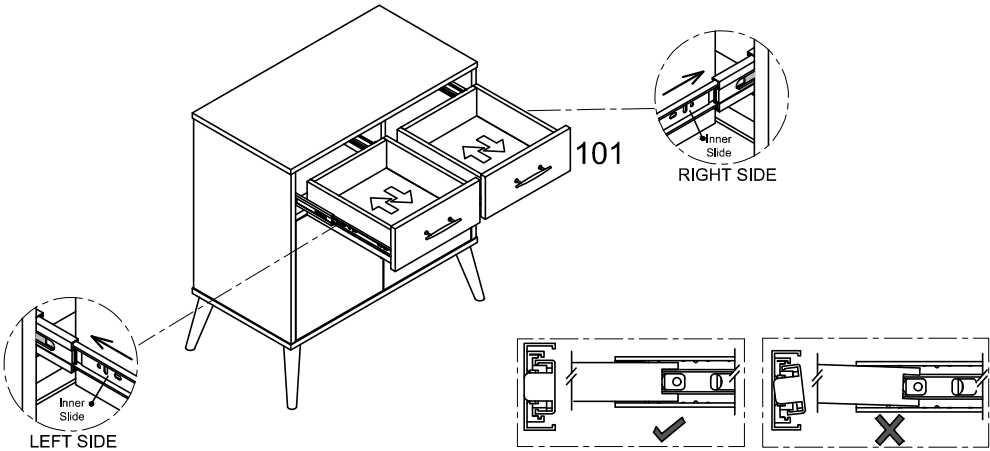


Align the back open-end of the Slide Runner (H1) on each side of the drawer to fit squarely into the groove on the open front-end of the chrome plate on Slide Track (H2) on the Side Panels.

Be sure the drawer/(H1) is not tilted or angled and push in the drawer slightly and squarely.

Push in the drawer further in gently - when the Trigger Disconnect Lever on (H1) is engaged onto (H2) there will be a slight resistance - this is normal. Pull out the drawer a little bit and gently push in the drawer again to engage the Trigger Disconnect Lever to the slide mechanism on (H2). The drawer should now slide smoothly.

If the drawer cannot be pushed in or stuck, do not force it in. Remove the drawer and repeat the steps above.

 STEP 18

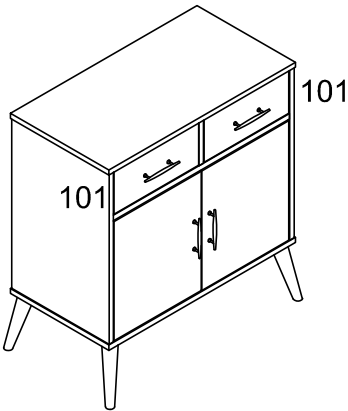

Drawers should be assembled as follows
The assembly of the Night Stand is complete.