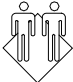 
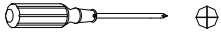 



ASSEMBLY INSTRUCTIONS

TV STAND

ASSEMBLY REQUIREMENTS	1 Hours Assembly Time (Approximate)	2 -Person Assembly 	Tools Required (Not Provided): Phillips Screwdriver  Flat Head Screwdriver 
-----------------------	---	---	---

Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product.
Contact our customer service department in case there are any missing or damage parts or hardware.
Replacement parts are normally shipped within 2 or 3 days.

PRODUCTS PURCHASED THROUGH OUR AUTHORIZED VENDORS ONLY ARE ELIGIBLE FOR REPLACEMENT PARTS.

We appreciate your business!

THIS PRODUCT IS FOR INDOOR AND HOUSEHOLD USE ONLY - NOT FOR COMMERCIAL USE.

ASSEMBLY PREPARATION

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List and ensure they are correct before assembly.
Contact customer service for missing parts.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

SAFETY PRECAUTION

1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

 
TIPS FOR ASSEMBLY

1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Identify all of the parts, hardware and quantities required for each step.
4. During assembly, do not over-tighten any fittings as this may cause damage.
5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
6. Always place the product on a flat, level surface.
7. Do not sit or stand on the partially assembled product; only use the product for which it is intended.





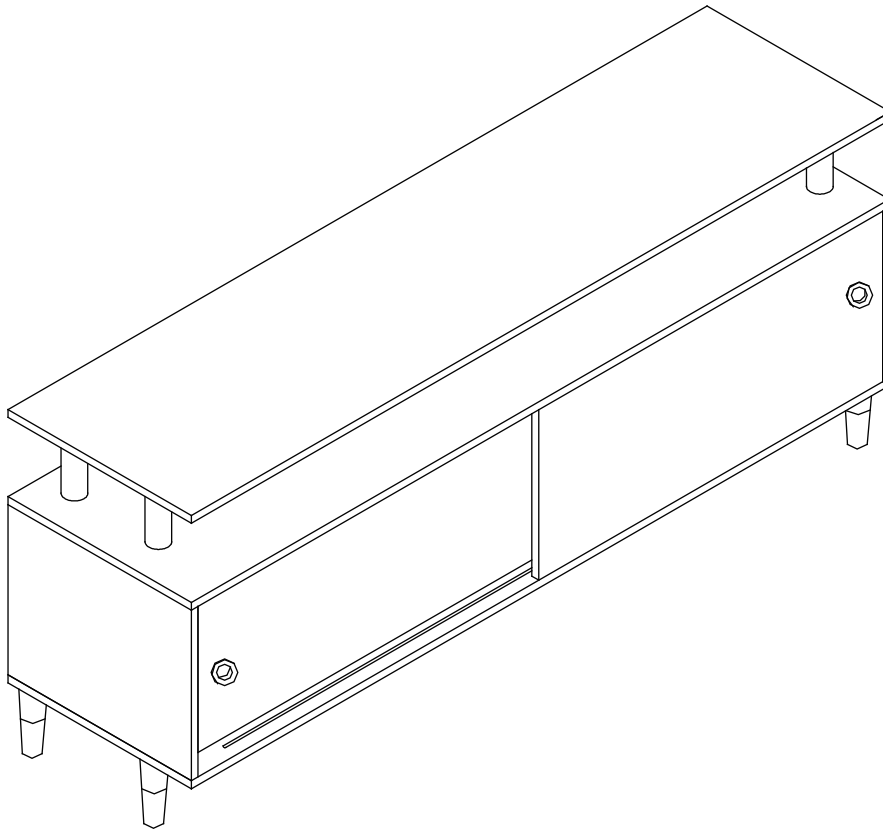

CARE AND MAINTENANCE

- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g. hot drinks) directly onto the wood surface.
- Do not drag and/or pull the furniture.

ASSEMBLY INSTRUCTIONS














Hardware List


ITEM	DESCRIPTION	PART	QTY	ITEM	DESCRIPTION	PART	QTY
A	Cam-Bolt	 6*35mm	6 pcs	E	Allen Wrench		1 pc
B	Cam-Lock	 15*10mm	6 pcs	F	Screw	 2.5*10mm	19 pcs
C	Wood Dowel	 8*30mm	12 pcs				
D	Screw	 7*40mm	10 pcs				

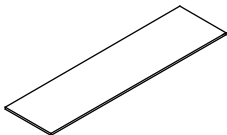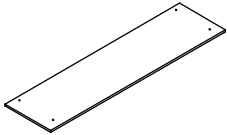    ASSEMBLY INSTRUCTIONS

 
Parts List

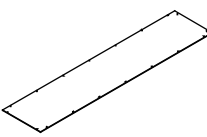 ITEM	DESCRIPTION	PART	QTY	ITEM	DESCRIPTION	PART	QTY
1	Top Panel		1 pc	7	Left Door		1 pc
2	Middle Shelf		1 pc	8	Right Door		1 pc
3	Bottom Panel		1 pc	9	Spacer		4 pcs
4	Divide Panel		1 pc	10	Leg		4 pcs
5	Left Panel		1 pc	11	Back Panel		1 pc
6	Right Panel		1 pc				

 ASSEMBLY INSTRUCTIONS

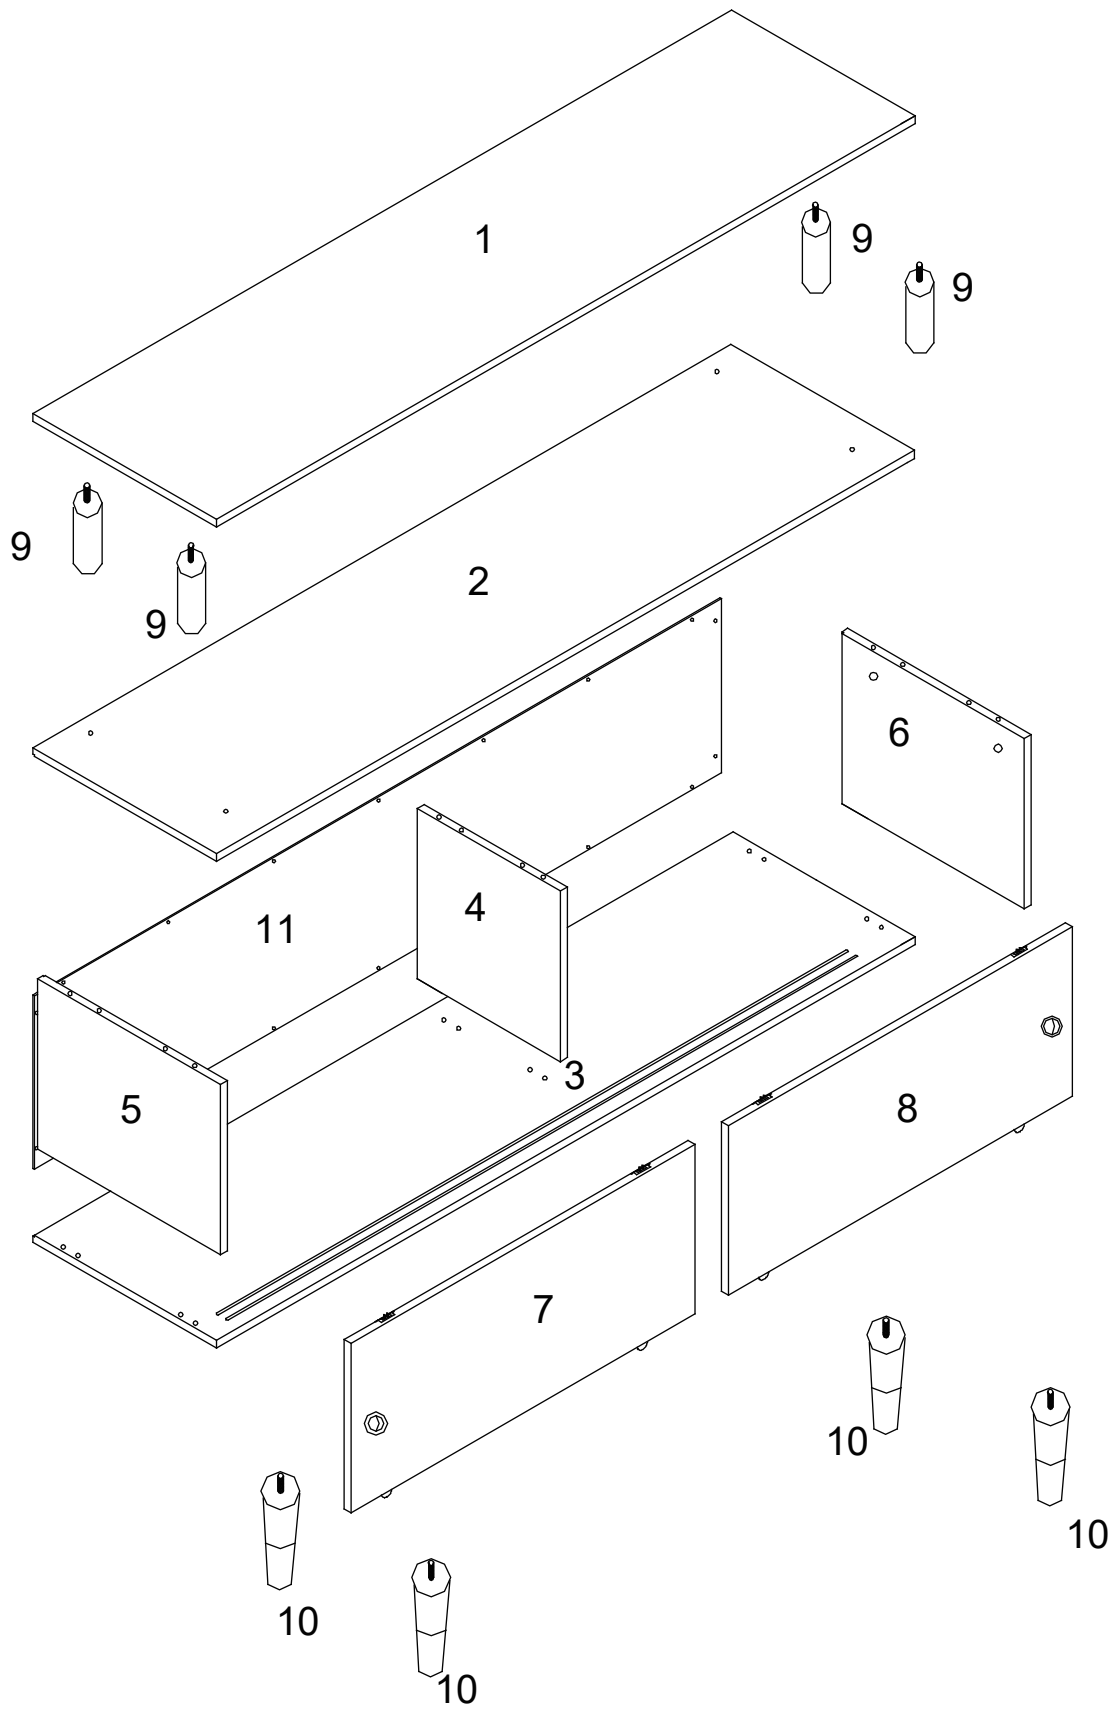

 Instructions For Fastening CAM-BOLT AND CAM-LOCK




CAM-BOLT




CAM-LOCK

 
Tools Required

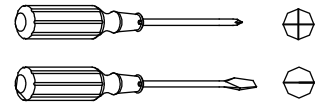


INSERTING AND TIGHTENING CAM-BOLT

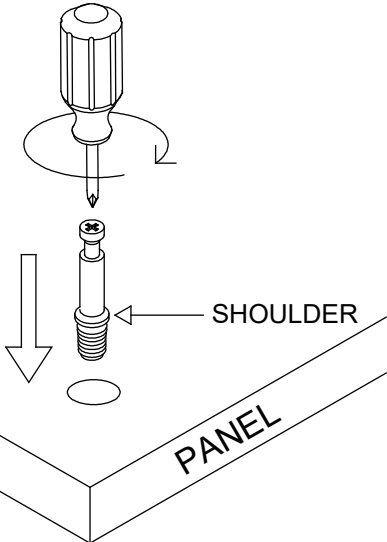 

 Place Cam-bolt on pre-drilled hole and screw in vertically.

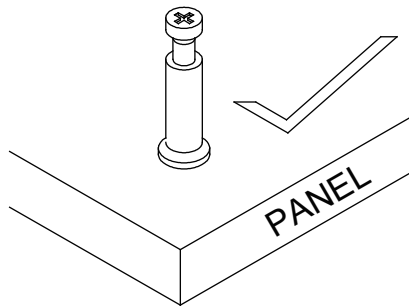

 
Shoulder is flushed (on the same level) with the panel.

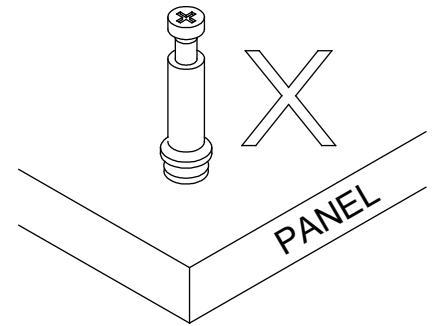

Shoulder is above the panel.

Place Cam-bolt to the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to tighten Cam-bolt vertically until shoulder is flushed (on the same level) with panel. Do not over-tighten or under-tighten.

 INSERTING CAM-LOCK

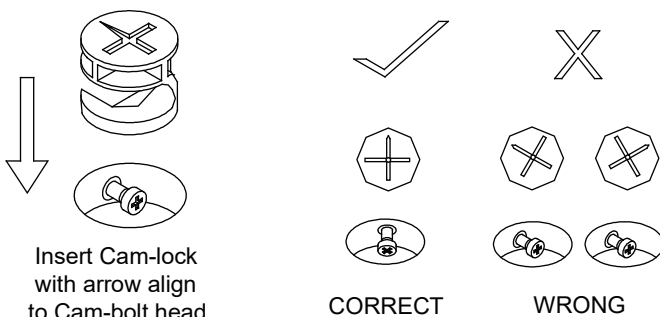


Insert Cam-lock with arrow align to Cam-bolt head.

CORRECT

WRONG


Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

 TIGHTENING CAM-LOCK

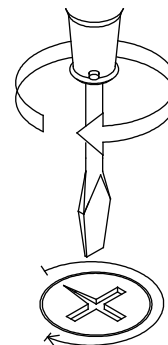


Use a Flat-head Screwdriver to turn Cam-lock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.

 STEP 1

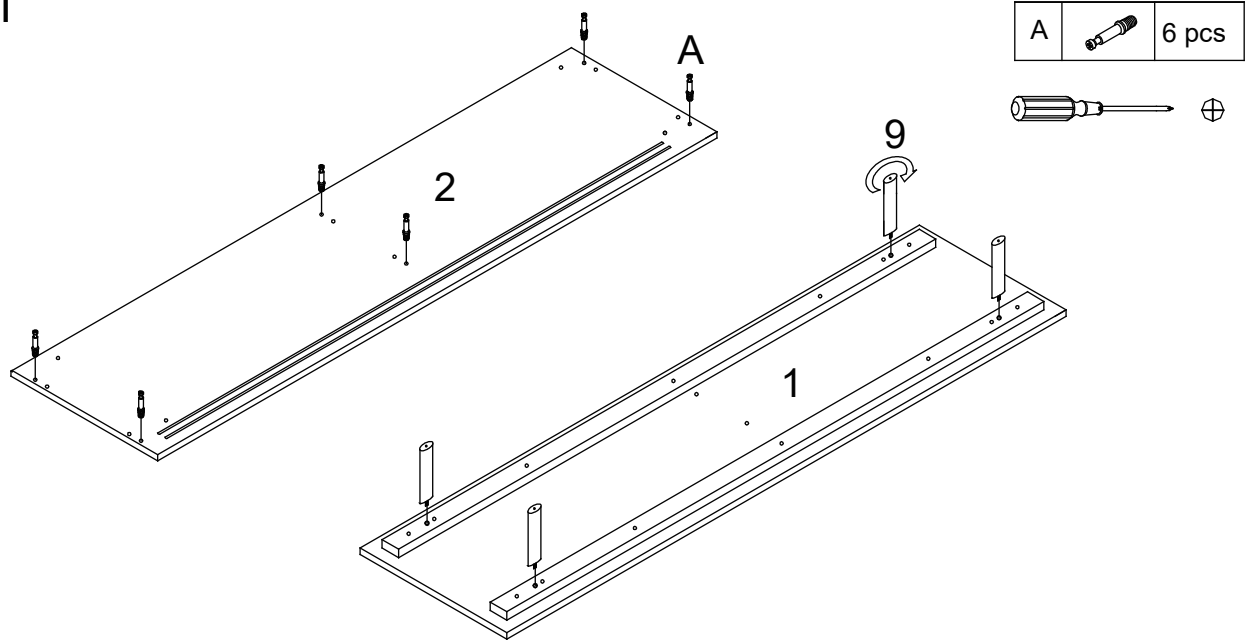


- Lay Top Panel (1), Middle Shelf (2) with the inside-face facing up as shown on a material that does not scratch the surfaces of the parts.
- Place Cam-bolt (A) on the designated pre-drilled holes on (1 & 2) as shown, and use a Phillips screwdriver to drive cam-bolts. Refer to Page 5 for Instructions on fastening Cam-bolt.
- Screw in Spacer (9) in clockwise direction into the designated holes on Top Panel (1).

 STEP 2

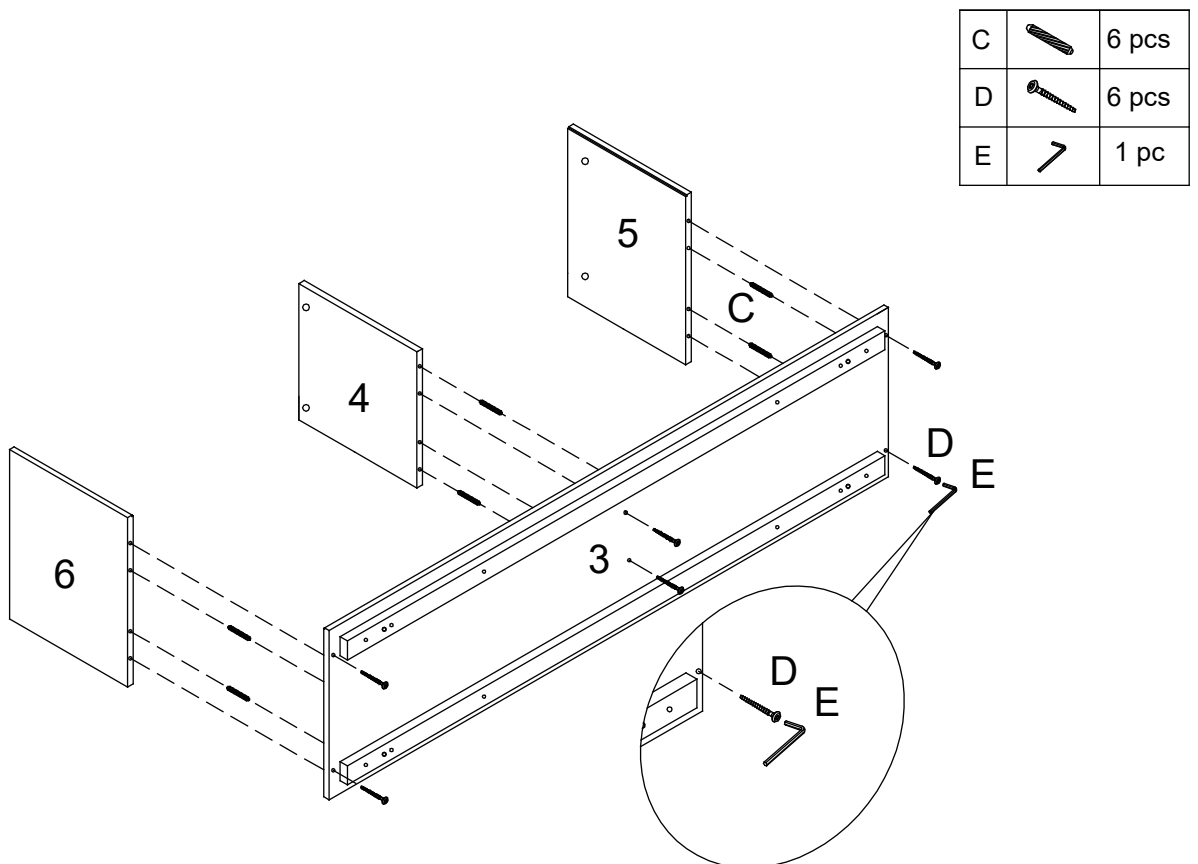



- Insert Wood Dowel (C) to Divide and Side Panels (4, 5 & 6) as shown.
- Attach (4, 5 & 6) to Bottom Panel (3) via Wood Dowel (C) and Screw (D).
- Tighten (D) with Allen Wrench (E). Do not tighten (D) completely until all 2 screws are in place on each panel.

 STEP 3

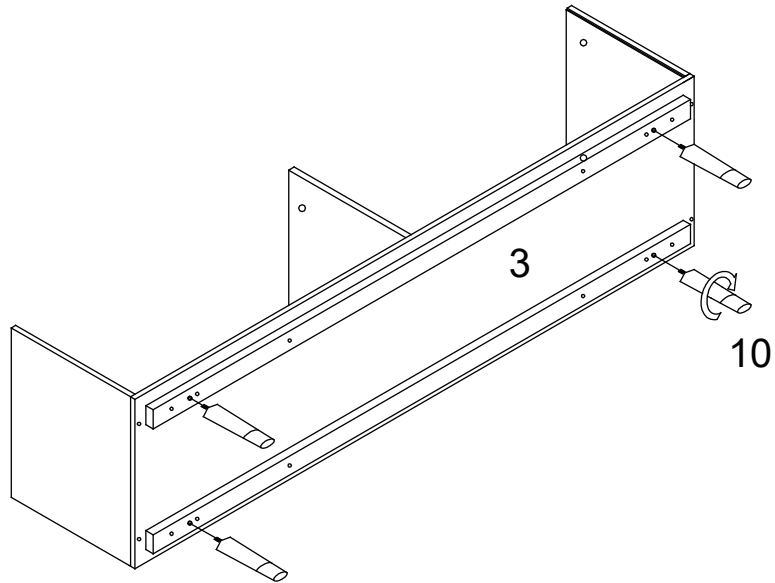

  
Screw in Leg (10) in clockwise direction into the designated holes on Bottom Panel (3).

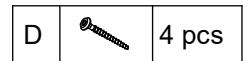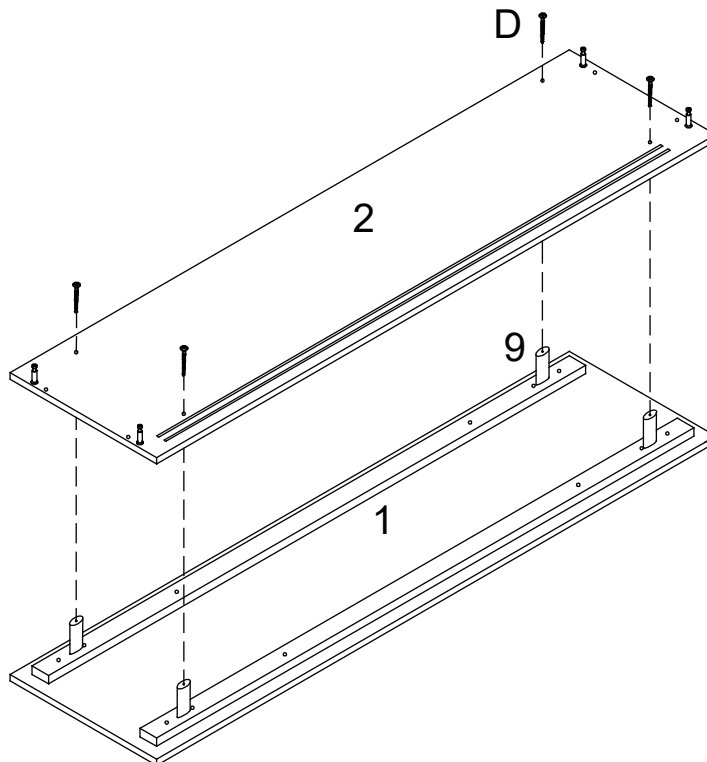

STEP 4




 - Position Top Panel (1) and Middle Shelf (2) from STEP 1 as shown. Insert Screw (D) through the screw holes on (2) to thread into screw hole on Spacer (9).
- Tighten Screw (D) using Allen Wrench (E). Do not tighten the screws completely until all 4 screws are in place.

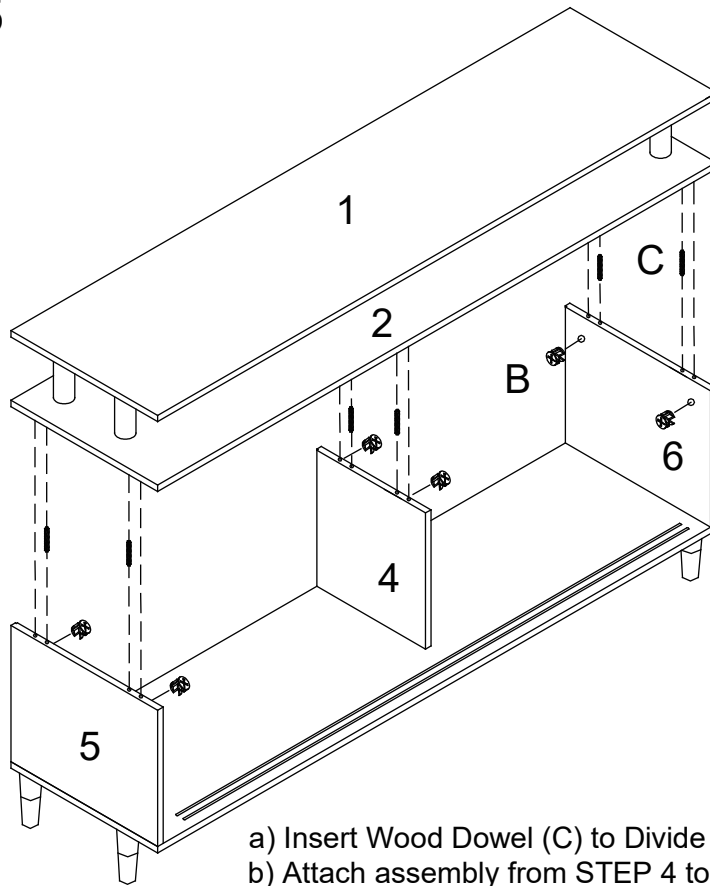STEP 5




B		6 pcs
C		6 pcs

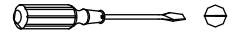 


- Insert Wood Dowel (C) to Divide and Side Panels (4, 5 & 6) as shown.
 - Attach assembly from STEP 4 to (4, 5 & 6) via Cam-bolt and Wood Dowel.
 - Insert Cam-lock (B) into designated holes on (4, 5 & 6) then turn clockwise to lock onto Cam-bolt.
- Refer to Page 5 for Instructions on inserting and tightening Cam-lock.

 STEP 6

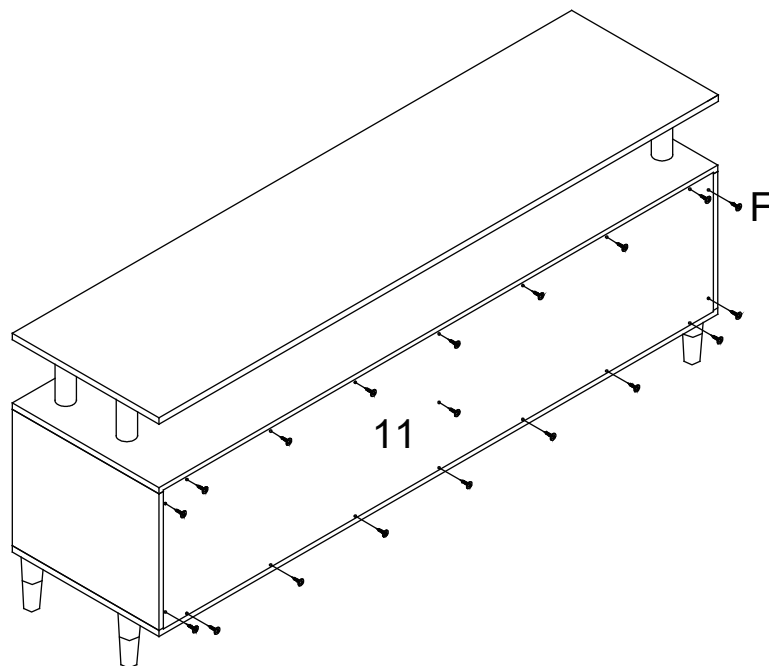


F		19 pcs
---	---	--------

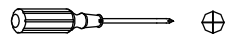 

Affix Back Panel (11) to the side, middle and bottom panel with Screw (F).

 STEP 7

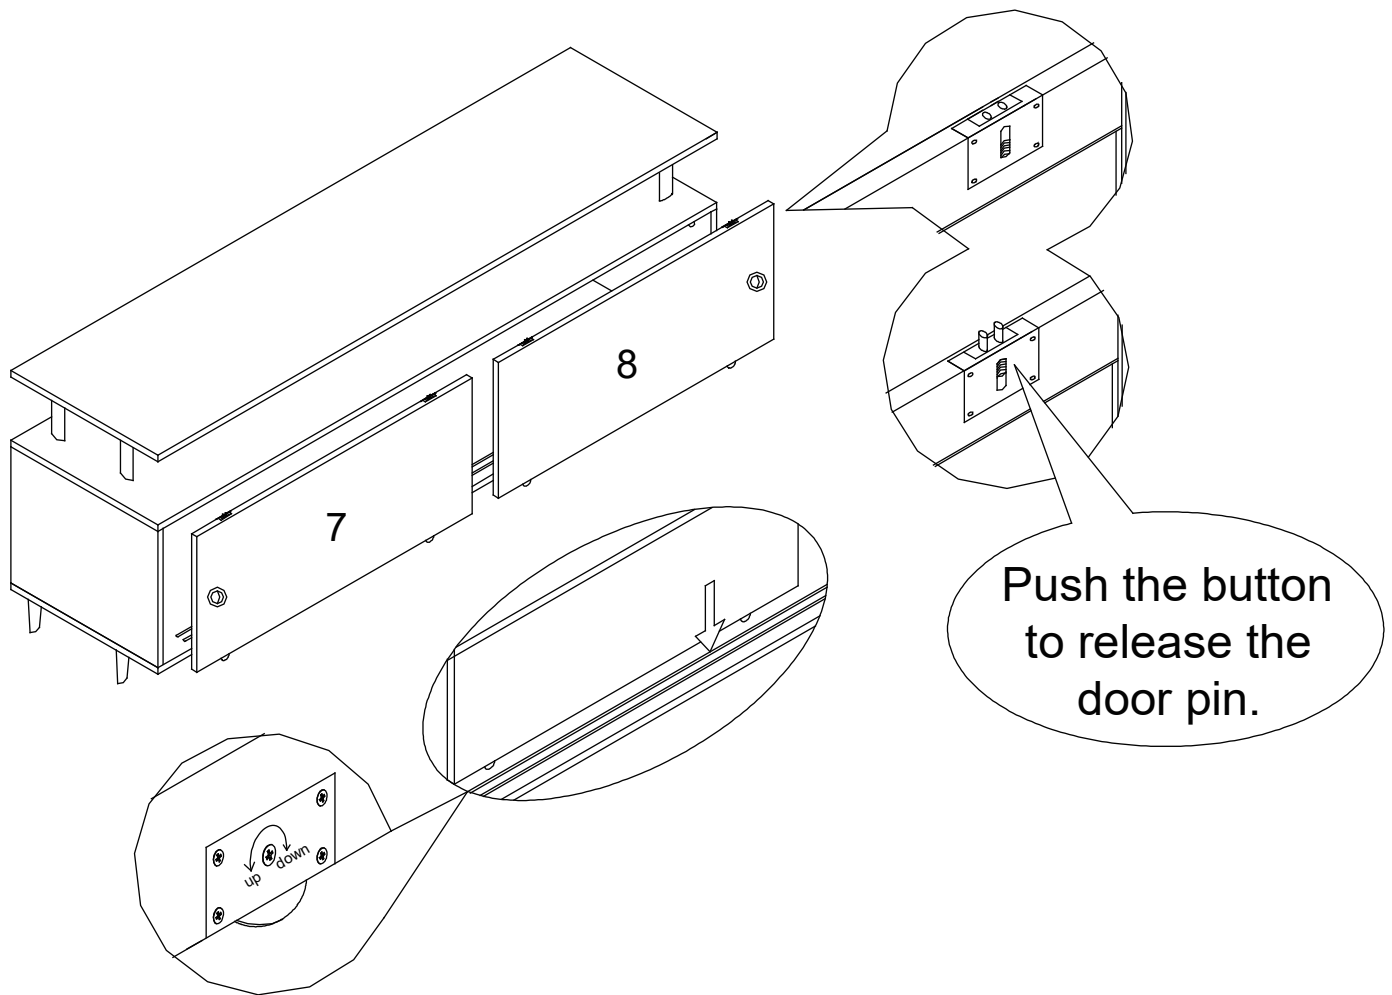

Install sliding door (7 & 8) by fitting the wheel on the door to sit on the groove on the Bottom Panel and fitting the door pin into the groove on the bottom side of Middle Panel.

Important: Turn the middle screw above each wheel to adjust the height of the wheels as shown to ensure door fits properly and does not fall-off.

The Assembly of the TV Stand is complete.