 


Classic Cuisine

INSTRUCTION
BOOKLET

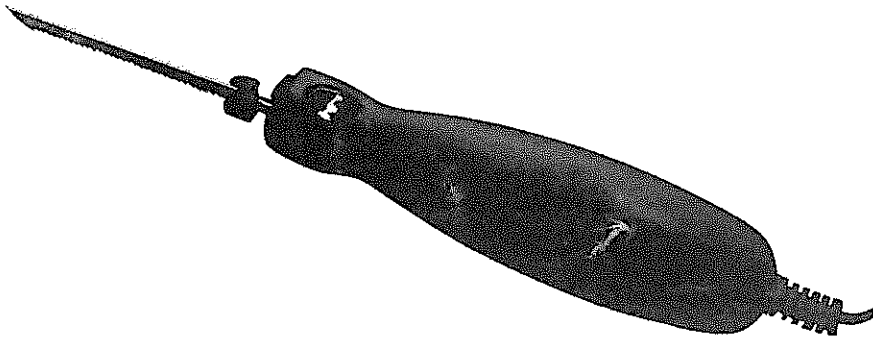

ELECTRIC CARVING KNIFE - BLACK HANDLE	82-KIT1015
---------------------------------------	------------

PLEASE READ CAREFULLY BEFORE USE AND RETAIN INSTRUCTIONS FOR FUTURE REFERENCE

KEEP THIS MANUAL IN A SAFE PLACE FOR FUTURE REFERENCE.

This product is for household use only. Before plugging in ensure that your electricity supply is the same as shown on the underside of the appliance.

To reduce the risk of personal injury or property damage when using electrical appliances, basic safety precautions should always be followed, including the following:

Read all instructions before using the appliance.

To protect against the risk of electrical shock, never put the power handle, cord or plug in water or other liquids. Do not operate knife in water or under running water. Unplug from the power outlet when not in use, when cleaning and when changing blades.

Avoid contact with moving parts, particularly the blades.

Do not operate with a damaged cord or plug. In the event of malfunction, or damage in any manner, it must be repaired by a qualified technician.

The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock or injury.

Only use the appliance for its intended purpose, such as, cutting Ready to Roast joints, thick bread crusts, cheese, sausages, and other meats and fish. Do not attempt to slice bones, frozen or other hard foods, packaging or any other material.

Never exert excessive force when slicing food.

Do not use the same blades on raw and cooked meat without washing them thoroughly.

Do not use outdoors.

Do not let the cord hang over edge of table or counter, or touch hot surfaces.

Blades are sharp - handle carefully. Always handle and store blades with the cutting edges turned away from you.

THIS APPLIANCE MUST NOT BE USED BY CHILDREN AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES, OR LACK OF EXPERIENCE AND KNOWLEDGE.

DO NOT USE THE APPLIANCE FOR ANYTHING OTHER THAN THE INTENDED USE.

AVOID CONTACT WITH MOVING PARTS. KEEP HANDS, HAIR, CLOTHING AND OTHER UTENSILS AWAY FROM MOVING BLADES DURING USE TO PREVENT INJURY AND/OR DAMAGE TO THE KNIFE.

BEFORE USE:

Before first use, and after each subsequent use, wash the knife blades in warm soapy water and dry thoroughly. **Blades are sharp - handle carefully.**

Wipe the power handle with a damp cloth to clean.

Never immerse the power handle in water or any other liquid.

ADDITIONAL SAFETY PRECAUTIONS - PRECAUTIONS

1. Do not place heavy objects on the cables or heat sources close to them . The cables may be damaged;
2. Before carrying out any cleaning or maintenance, disconnect the appliance from the mains by removing the plug;
3. Do not use aerosols sprays (eg . insecticides , hair spray , etc.), it may cause damage to the housing;
4. In case of abnormal situations immediately turn off the power and contact your dealer or service center;
5. Do not use this unit connected to programmers, external timer , remote control system of separate timer or any other device that can switch automatically;
6. Hold the plug firmly when you pull it out from power supply to avoid electric shock, short circuit or fire;
7. Do not attempt to repair electric products yourself.
8. Do not use the appliance near a bathtub, shower, swimming pool;
9. Do not use the machine near flammable objects;
10. Do not insert objects through the slots of the unit;
11. Before connecting to the main supply, make sure the voltage is correct as reported on the label of the product and that the installation complies with current regulations;
12. Do not touch the power connection with wet hands;
13. Do not use the product for purposes other than those for which it is intended.
14. This appliance is not intended for use by children.
15. If the external flexible cable is damaged it must be replaced by a qualified technician in order to avoid accidents;
16. Children should be supervised to ensure that they do not play with the appliance;
17. Care shall be taken when handling the sharp cutting blades and during cleaning;
18. Always disconnect the unit before cleaning.
19. Turn off and unplug the appliance before changing accessories or attempting to repair the item.

**PLEASE READ CAREFULLY BEFORE USE AND RETAIN
INSTRUCTIONS FOR FUTURE REFERENCE**

KEEP THIS MANUAL IN A SAFE PLACE FOR FUTURE REFERENCE.

This product is for household use only. Before plugging in ensure that your electricity supply is the same as shown on the underside of the appliance.

To reduce the risk of personal injury or property damage when using electrical appliances, basic safety precautions should always be followed, including the following:

Read all instructions before using the appliance.

To protect against the risk of electrical shock, never put the power handle, cord or plug in water or other liquids. Do not operate knife in water or under running water. Unplug from the power outlet when not in use, when cleaning and when changing blades.

Avoid contact with moving parts, particularly the blades.

Do not operate with a damaged cord or plug. In the event of malfunction, or damage in any manner, it must be repaired by a qualified technician.

The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock or injury.

Only use the appliance for its intended purpose, such as, cutting Ready to Roast joints, thick bread crusts, cheese, sausages, and other meats and fish. Do not attempt to slice bones, frozen or other hard foods, packaging or any other material.

Never exert excessive force when slicing food.

Do not use the same blades on raw and cooked meat without washing them thoroughly.

Do not use outdoors.

Do not let the cord hang over edge of table or counter, or touch hot surfaces.

Blades are sharp - handle carefully. Always handle and store blades with the cutting edges turned away from you.

THIS APPLIANCE MUST NOT BE USED BY CHILDREN AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES, OR LACK OF EXPERIENCE AND KNOWLEDGE.

DO NOT USE THE APPLIANCE FOR ANYTHING OTHER THAN THE INTENDED USE.

AVOID CONTACT WITH MOVING PARTS. KEEP HANDS, HAIR, CLOTHING AND OTHER UTENSILS AWAY FROM MOVING BLADES DURING USE TO PREVENT INJURY AND/OR DAMAGE TO THE KNIFE.

BEFORE USE:

Before first use, and after each subsequent use, wash the knife blades in warm soapy water and dry thoroughly. **Blades are sharp - handle carefully.**

Wipe the power handle with a damp cloth to clean.

Never immerse the power handle in water or any other liquid.

Instructions

IMPORTANT NOTES

Maximum continuous use 5 minutes

Only handle blades by the plastic guards or by the blunt edge of the knife.

The blades are extremely sharp. Keep fingers away from the cutting edges.

The blade cover should be retained and reused when blades are not in use.

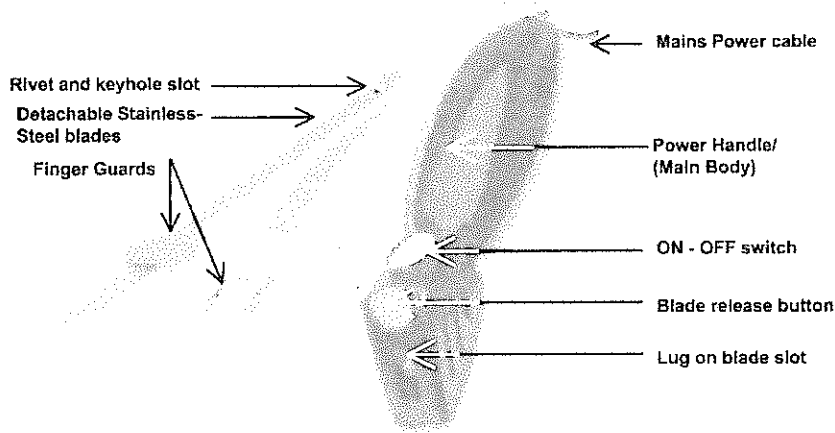


Fig 1 – Main components

Blade Assembly (see Figs 2a & 2b)

1. Hold blades by the non serrated ends with the plastic guards either side.
2. Make sure that the serrated edges are on the same side.
3. Slide the rivet of one blade into the keyhole slot on the other blade.



Fig 2a – Blade Assembly

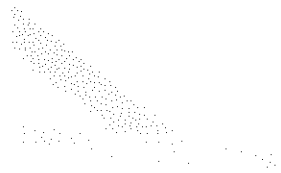


Fig 2b – Rivet and keyhole

Inserting Blades into Power Handle (see Fig 3)

1. Make sure the knife is unplugged.
2. Hold the assembled (see page 3 for blade assembly) blades by the plastic guard in one hand (serrated edges facing downwards) and the motor unit in the other hand (with power button uppermost).
3. Carefully insert the blades (serrated edges facing downwards) into the slot on the power handle (with buttons facing upwards) and push gently until they click securely.

Note: You will notice that the blades should be 4-5mm apart and on either side of a small lug at the point that they enter the Power Handle.
Take extra care to make sure the blades are still connected at the tip.

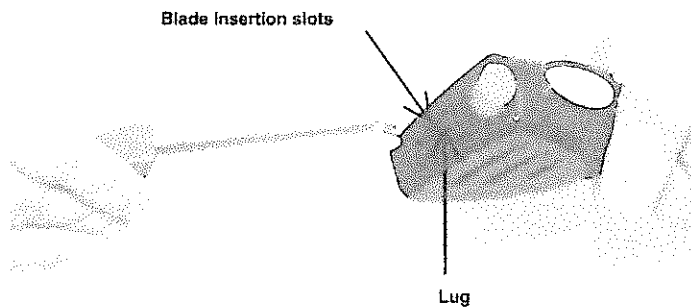


Fig 3 – Insertion of Blades into Power Handle

How to use

1. Plug into power outlet

2. Ensure that the product to be carved is secure, for example, by using a carving fork.
3. Press and hold down the ON-OFF switch.
4. Simply guide the blades through the food ensuring body parts, clothing and utensils are away from moving blades. It is not necessary to use a sawing motion or use excessive pressure.
5. To stop the blades, release the ON-OFF button.

Note: Your electric knife is designed to cut through 'Ready to Roast' joints, but can also be used to cut thick bread crusts, cheese, sausage and other meats and fish with ease. Do not attempt to slice bones, frozen or other hard foods, packaging or any other material.

- If the blade release button is accidentally pushed during operation, the blades will disengage. As a result, the knife may stall or will not cut properly.
- **BE SURE TO POSITION YOUR HAND BEHIND THE BLADE RELEASE BUTTON DURING OPERATION.**
- **CHILDREN MUST NOT OPERATE THE APPLIANCE.**

Hints for use

- Carve on a wooden board. Metal or china cutting boards or your work surface may be scratched by the knife.
- Use a carving fork to hold the food securely.
- Before carving cooked meats, allow meats to stand for 15 minutes after removal from oven to set juices. This makes for easier and cleaner slicing.
- Do not cut through hard objects, such as bones or solidly frozen foods as blades may become damaged or may break.
- For best results when cutting through thick crusts, such as bread machine bread, hold the knife at a slight angle while cutting the crust. Once you have cut through the crust, finish slicing the bread with the knife blade parallel with the bread.
- When cutting meat it is recommended that the user tilts the meat during the final cutting movement (to prevent cutting through chopping board).

Removal of Blades from Power Handle

1. Unplug knife.
2. Holding the plastic guards press the blade release button (A) on the power handle body.
3. Pull blades away (B) from the power handle body.
4. Separate the blades by sliding the rivet from one blade out of the key hole slot of the other blade.

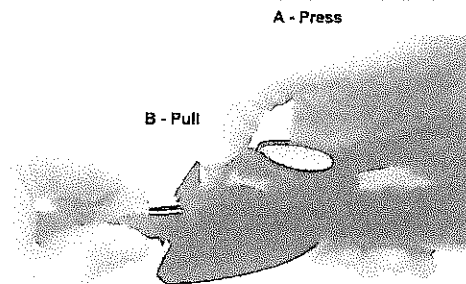


Fig 4 – Blade Removal

Care and Cleaning

- 1. ENSURE THE POWER OUTLET IS SWITCHED OFF. THEN UNPLUG THE PRODUCT BEFORE REMOVING THE BLADES AND/OR CLEANING.**
2. Remove the blades as detailed in fig 4 on page 5.
3. Separate the blades by sliding the rivet from one blade out of the keyhole slot of the other blade.
4. Carefully wash the blades in warm soapy water.
5. Dry thoroughly and carefully and slide the plastic safety sheath over the blades.
6. Wipe the power handle with a damp cloth. **Never immerse the power handle in water or any other liquid.**

