 


Chicago Deluxe Theater Style Motion Corner with Adjustable Headrest

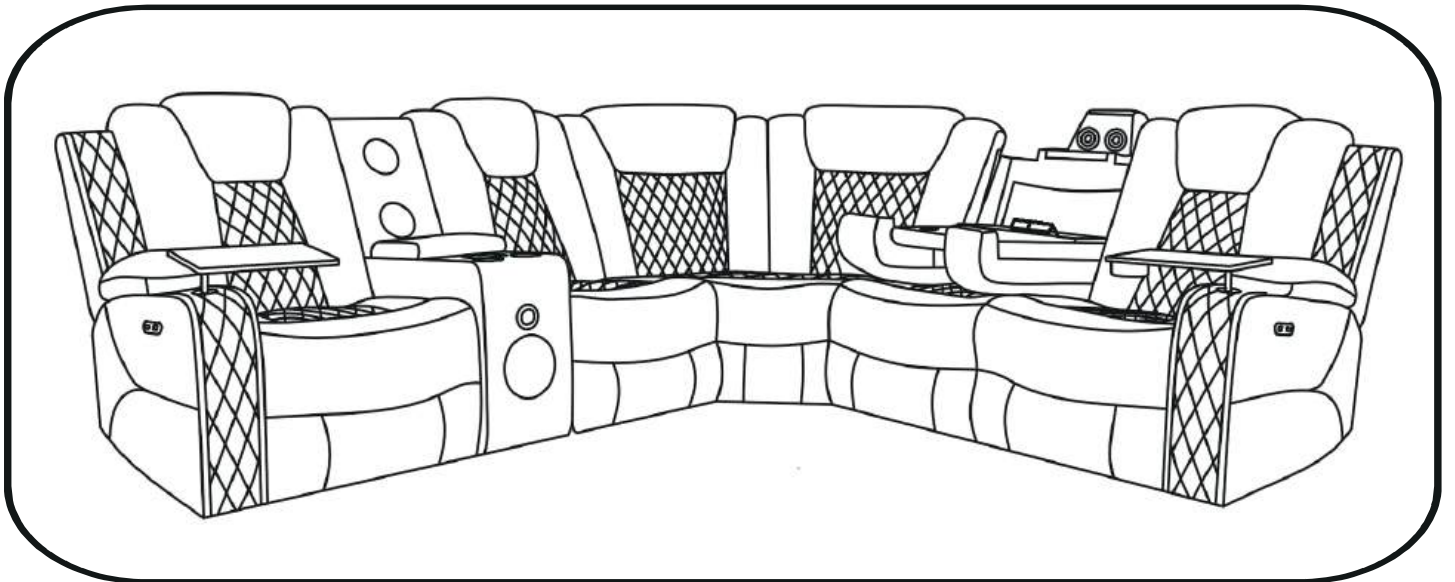

Assembly Instructions

Product Dimensions:
150.00"L×39.37"D×41.34"H

Please take a moment to read through the entire instruction booklet before assembly to familiarize yourself with this product. Once you feel ready to start, follow the instructions step by step and this should make this process as easy as we could make it for you.

WARNING CAUTION

ADULT ASSEMBLY REQUIRED CHOKING HAZARD

- This product includes small parts, sharp points and sharp edges in its unassembled state. Keep unassembled parts away from children under 3 years of age, and animals.

SAFETY WARNINGS

- Follow the information on the warnings appearing on table and on the carton. Do not remove warning label from Corner.
- Do not allow children under 3 years of age to use the Corner.
- Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.

FURNITURE TIP-OVER HAZARD

Children have died from furniture tip-over

To reduce the risk of furniture tip-over:

- ALWAYS install tip-over restraint especially if used by a wall or in the open.
- NEVER put a TV on this product
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- ALWAYS place heaviest items in lowest Corner.

PARENTAL SUPERVISION IS REQUIRED

- Parents or Guardians should supervise use under the intended age specifically regarding children that may have access to it and climb on the unit.
- Do not allow horseplay on, under, or behind the unit and prohibit jumping on the Corner. If used improperly, your table may be pulled over or fall, creating risk of injury or damage. Children should not be permitted to climb or pull on the Corner.

USE, MAINTENANCE & ASSEMBLY

- Periodically check and ensure that the components are in their proper position, free from damage, and that all connectors are tight.
- Use on level surfaces only. Assemble on a soft level surface to avoid damage to unit or floor.
- Do not use this item if any components are missing or damaged.
- Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
- Only clean using damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- Check you have all components and tools listed on page 4
- Do not stand or put weight on this product during assembly, this could cause damage.
- Remove all hardware from the plastic bags and separate them into groups.
- Assemble the item as close to its final position (in the same room) as possible.
- Certain assembly steps may be easier with 2 people.
- Dispose of all packaging carefully and responsibly.
- We do not recommend power screwdrivers. Only use hand screwdrivers to prevent damage to unit.
- Keep these instructions for future reference.

Enfants morts suite au basculement d'un meuble.

Afin de limiter le risque de basculement de meuble:

- TOUJOURS utiliser les fixations anti-basculement.
- NE JAMAIS installer de TV sur ce produit.
- NE JAMAIS laisser d'enfants se tenir debout sur les tiroirs, portes ou etageres, y grimper ou s'y suspendre.
- NE JAMAIS ouvrir plus d'un tiroir a la fois.
- TOUJOURS placer les choses les plus lourdes dans les tiroirs du bas.

Han muerto niños por el vuelco de muebles.

Para limitar el riesgo de vuelco de los muebles:

- Utilizar SIEMPRE las fijaciones antivuelco que suministran.
- NUNCA instalar un TV sobre este producto.
- NUNCA permitir que los niños se pongan de pie, trepen o se cuelguen de los cajones, puertas o baldas.
- NUNCA abrir mas de un cajon a la vez.
- Colocar los objetos mas pesados en los cajones inferiores.

CONNECTING ELECTRICITY

WARNING ELECTRICAL SHOCK HAZARD

Misuse Can Result in **FIRE** Or **DEATH** by **ELECTRICAL SHOCK**.
Please read carefully and Follow All Directions



BEFORE USE:

A Cord Set Not to be Marked For Outdoor Use is To Be Used Indoors Only.

Inspect Thoroughly Before Each Use.
DO NOT USE IF DAMAGED.

Look for the **NUMBER OF WATTS** ON Appliances to Be Plugged Into Cord.

See **PRODUCT** or **LABEL** Markines fo **SPECIFIC WATTAGE**.

Do Not Plug More Than the **SPECIFIED NUMBER OF WATTS** Into This Cord.

Do Not Run Through Doorways, Holes in Ceilings, Walls or Floors.

Make sure Appliance is **OFF** Before Connecting Cord into Outlet.

FULLY INSERT Plug into Outlet.

Do Not Remove, Bend or Modify Any Metal Prongs or Pins of Cord.

Do Not Use Excessive Force to Make Connections.

Do Not Connect a Three-Prong Plug to a Two-Hole Cord.

THIS IS A POLARIZED CORD

DURING USE:

- Keep Away From Water.
- **DO NOT USE WHEN WET.**
- Keep Children and Pets Away from Cord.
- Do Not Plug one Extension Cord into Another.
- **AVOID OVERHEATING.** Uncoil Cord and Do Not Cover it with Any Material.
- Do Not Drive, Drag or Place Objects Over Cord.
- Do Not Walk On Cord.

 
AFTER USE:

- **GRASP PLUG** to Remove from Outlet.
- Always Store Cord **INDOORS**.
- Always Unplug When Not In Use.
- Do Not Unplug By Pulling on Cord.

DO NOT REMOVE THIS TAG.

READ AND SAVE THESE INSTRUCTIONS

⚠ WARNING -- CHILD CRUSH HAZARD
DO NOT ALLOW CHILD TO PLAY ON
AROUND OR UNDER FOOTREST or CHAISE.

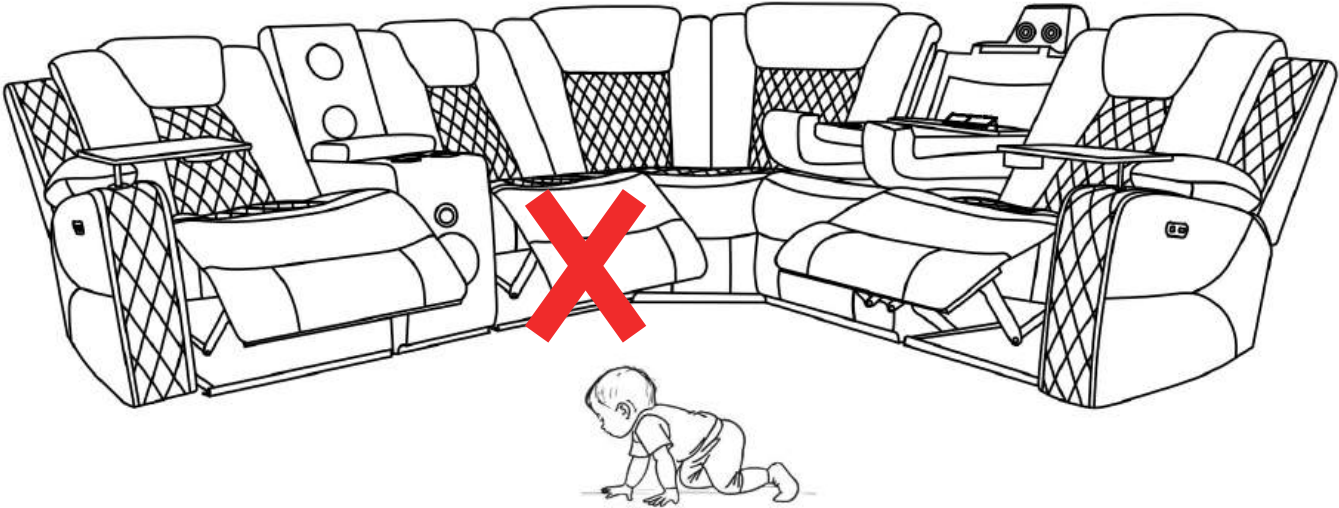


⚠ AMPUTATION HAZARD

⚠ TIP-OVER HAZARD

Chair can fold when buttons are pressed. Moving parts can amputate child's fingers. Keep fingers away from moving parts Completely. Unfold chair and fully engage before allowing child to sit in chair. Never allow child to operate chair.


To prevent tip-over: Do Not Stand on the Corner recliner unit or the arms. This Motion Reclining Corner is not a toy.

 WARNING

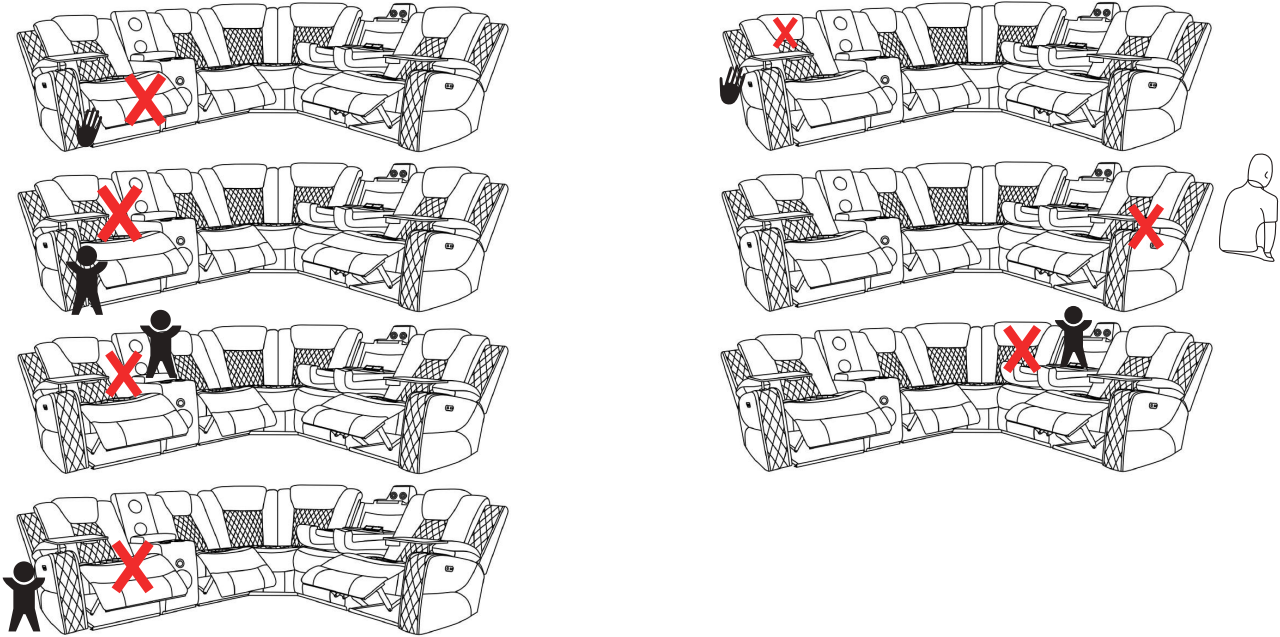

ASSEMBLY AT A GLANCE

 Please take a moment to read through the whole instruction booklet before assembly to familiarize yourself with this product. Once you feel ready to start, follow the instructions step by step and this should make this process as easy as we could make it for you.


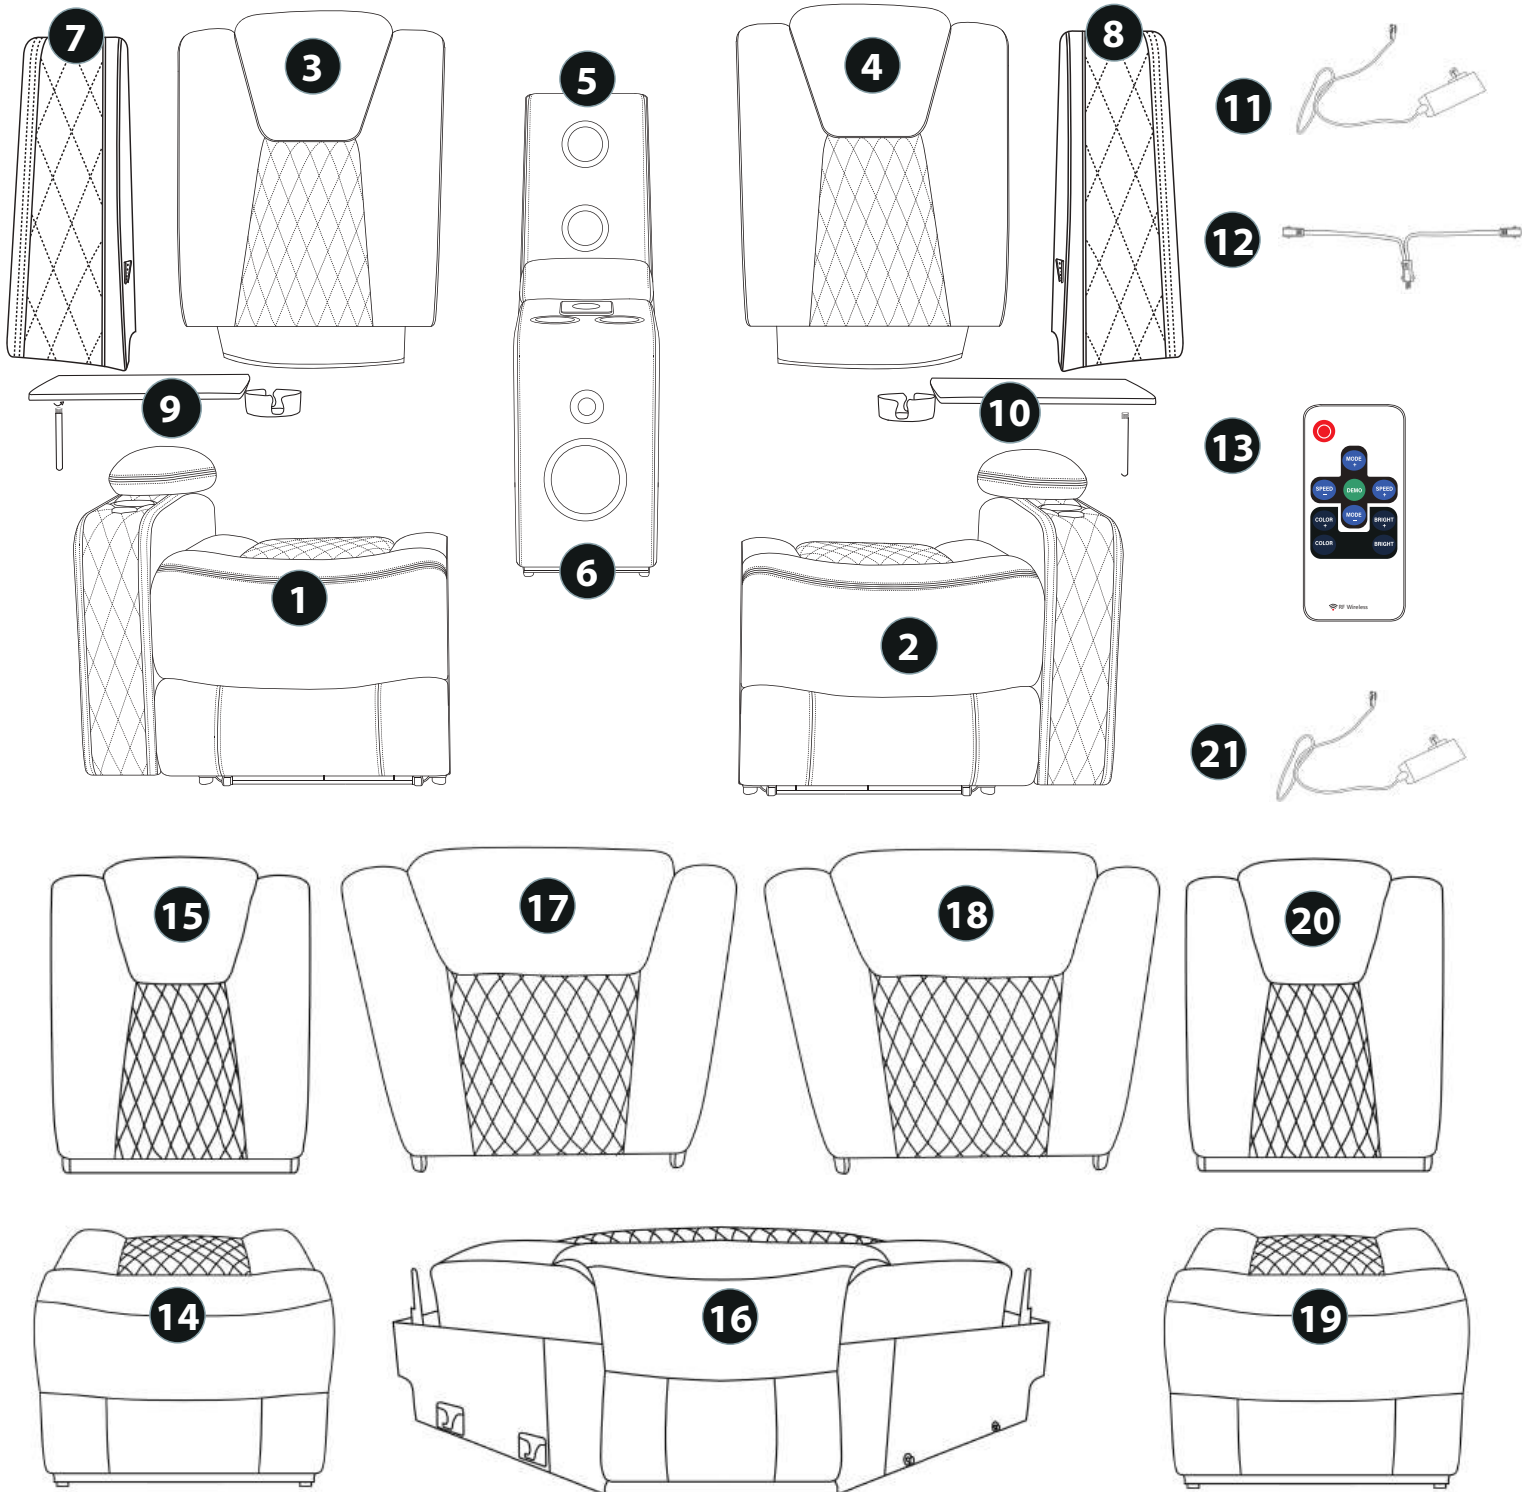


This drawing is to give you an overall idea only of how this assembly will go together and does not replace the assembly instructions.

COMPONENT PARTS

Please check that you have all the parts listed below

  
1. Left Seat x1
2. Right Seat x1
3. Backrest Left x1
4. Backrest Right x1
5. Center Console Upper Speaker x1
6. Center Console Base x1
7. Ear Left x1
8. Ear Right x1
9. Left Tray x1
10. Right Tray x1
11. Power Adapter x1
12. Y Cord x 1
13. Remote Control x 1
14. Power Armless Seat x1
15. Armless Backrest x 1
16. Wedge Seat x 1
17. Wedge Backrest Left x 1
18. Wedge Backrest Right x 1
19. Armless Seat x1
20. Armless Backrest W/ Dropdown Table x 1
21. Remote Control x 1

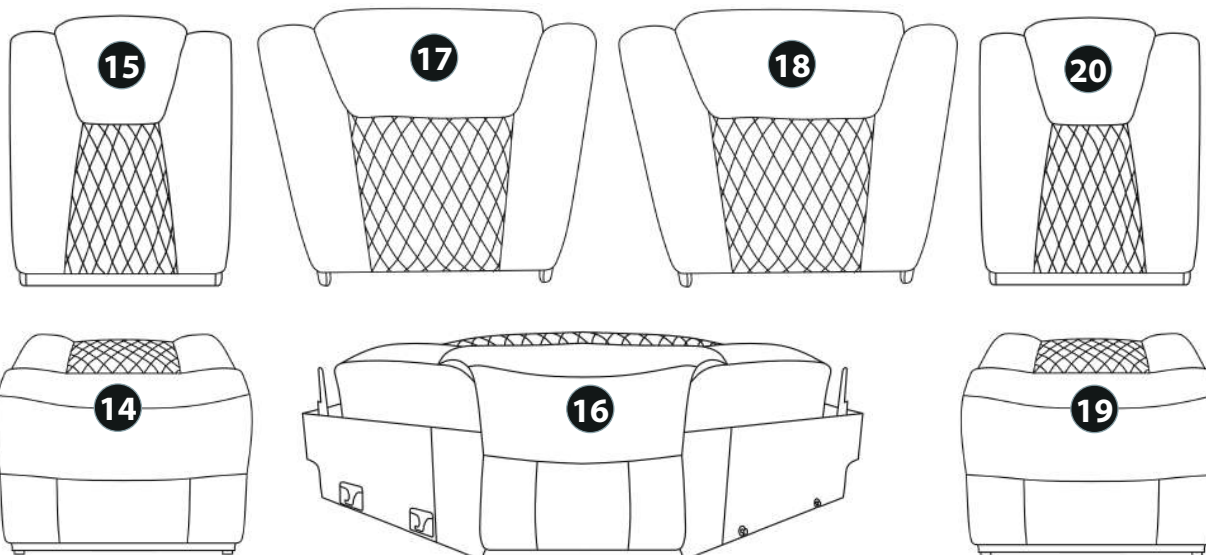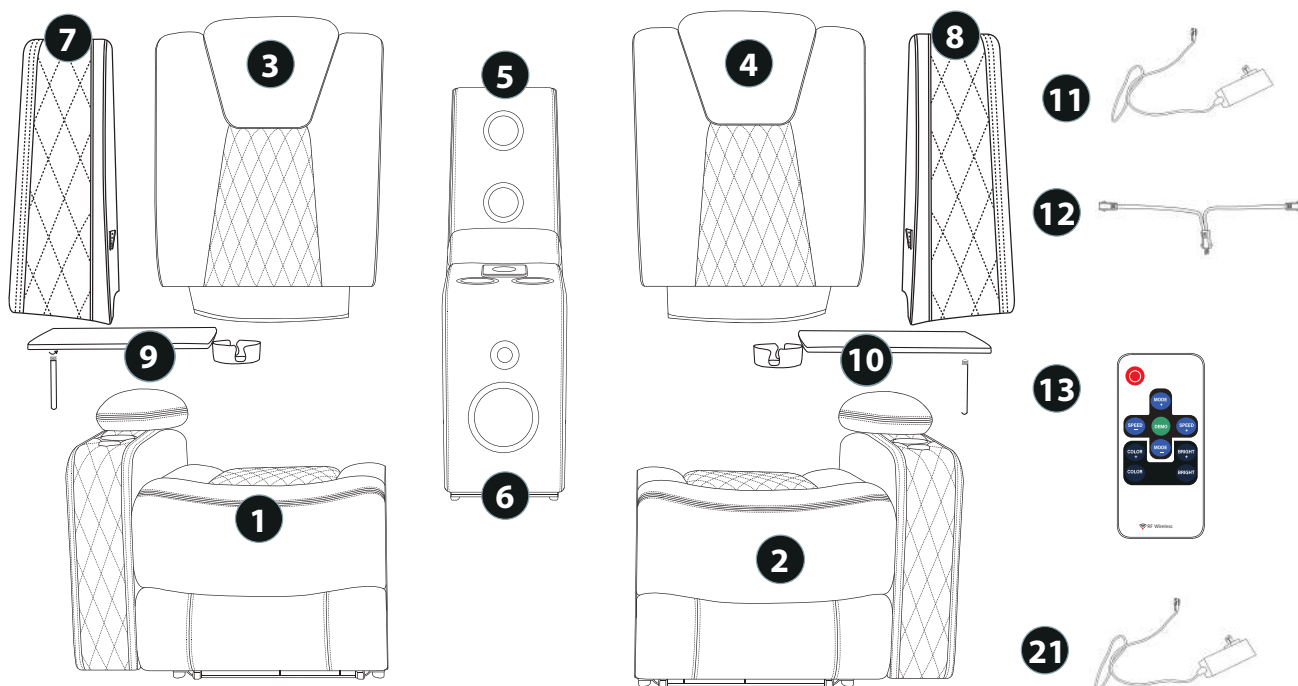

ASSEMBLY INSTRUCTIONS


1

 Unzip and remove 5 from the bottom of 6.
Insert 5 into 6 with connecting cable heads .

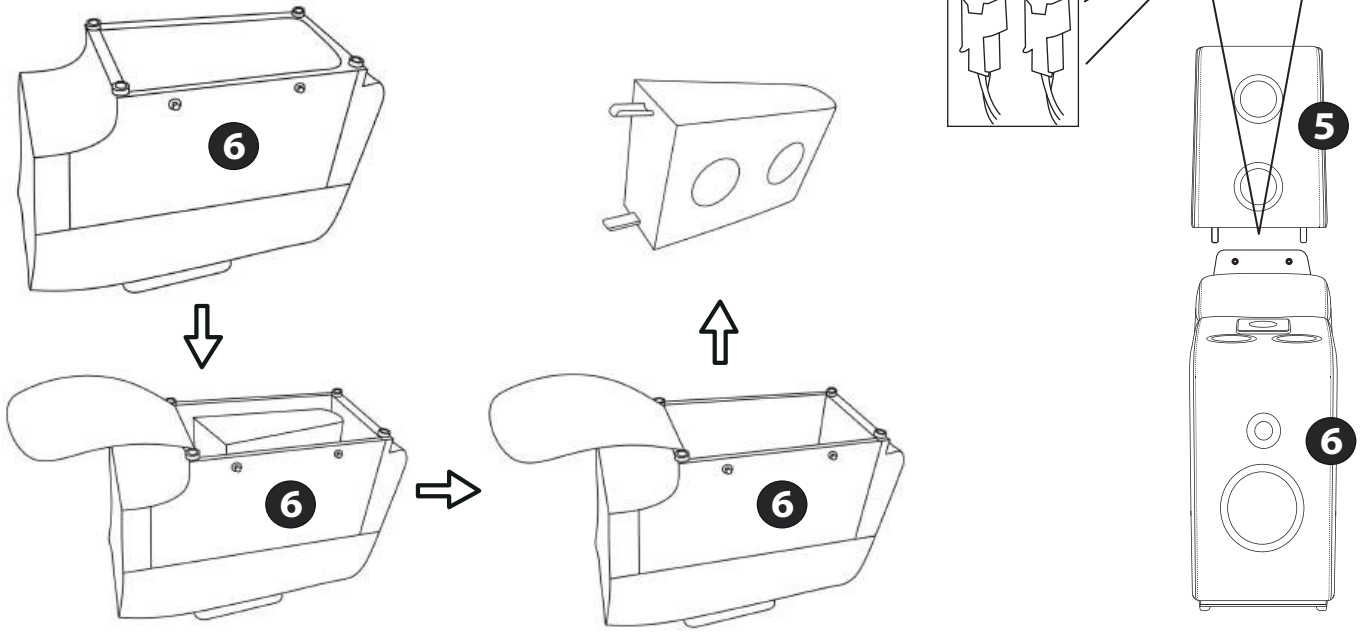


2

 Insert 19 into one side of 2 with the buckles. Repeat for other seats.

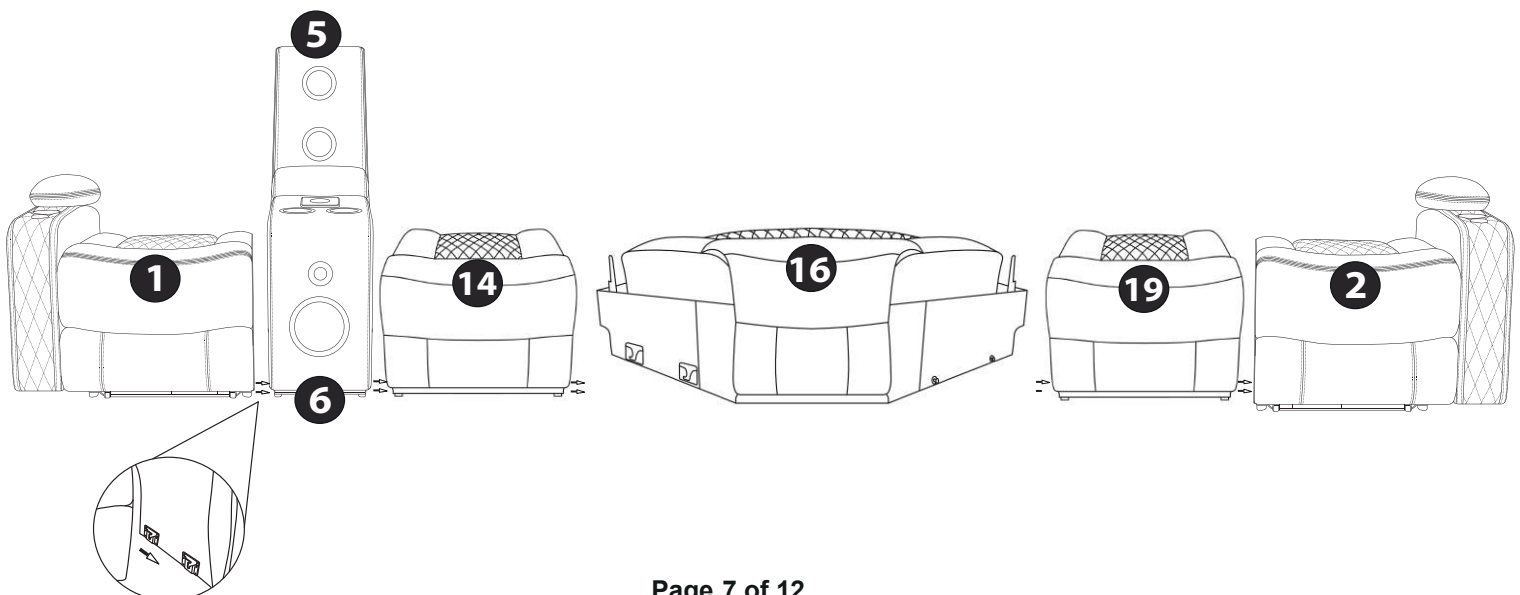


ASSEMBLY INSTRUCTIONS

 - 3**
- Install 3(×1) into 1 with the buckles.Repeat for 15 into 14, 17 and 18 into 16, 20 into 19, 4 into 2.

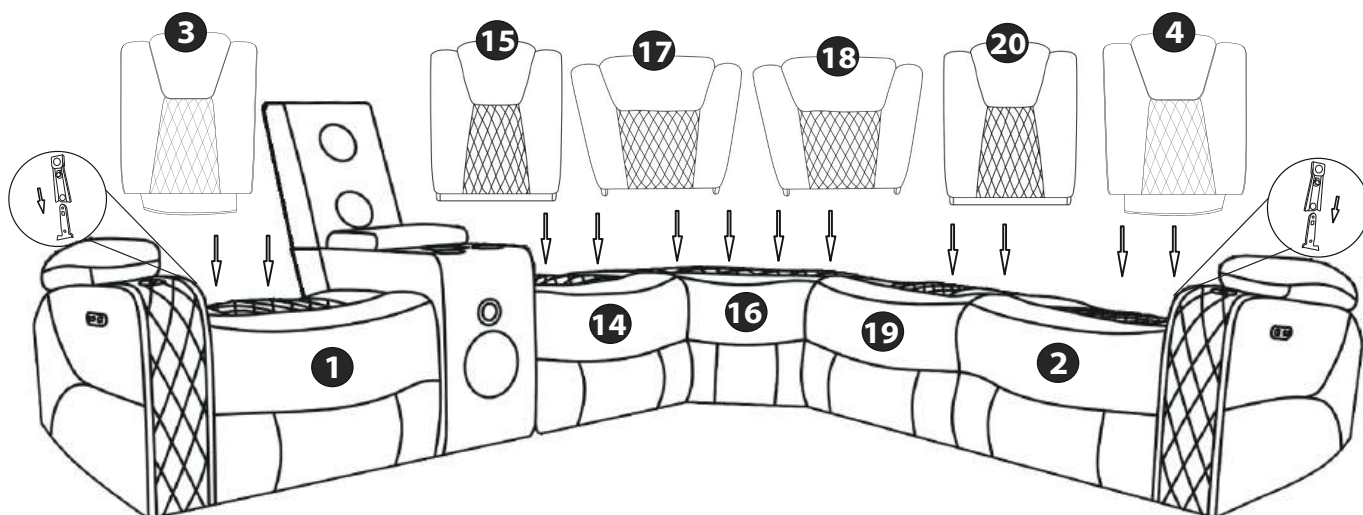


 
- 4**
- Insert 7 into 3 with the buckles.Repeat for 8 and 4.

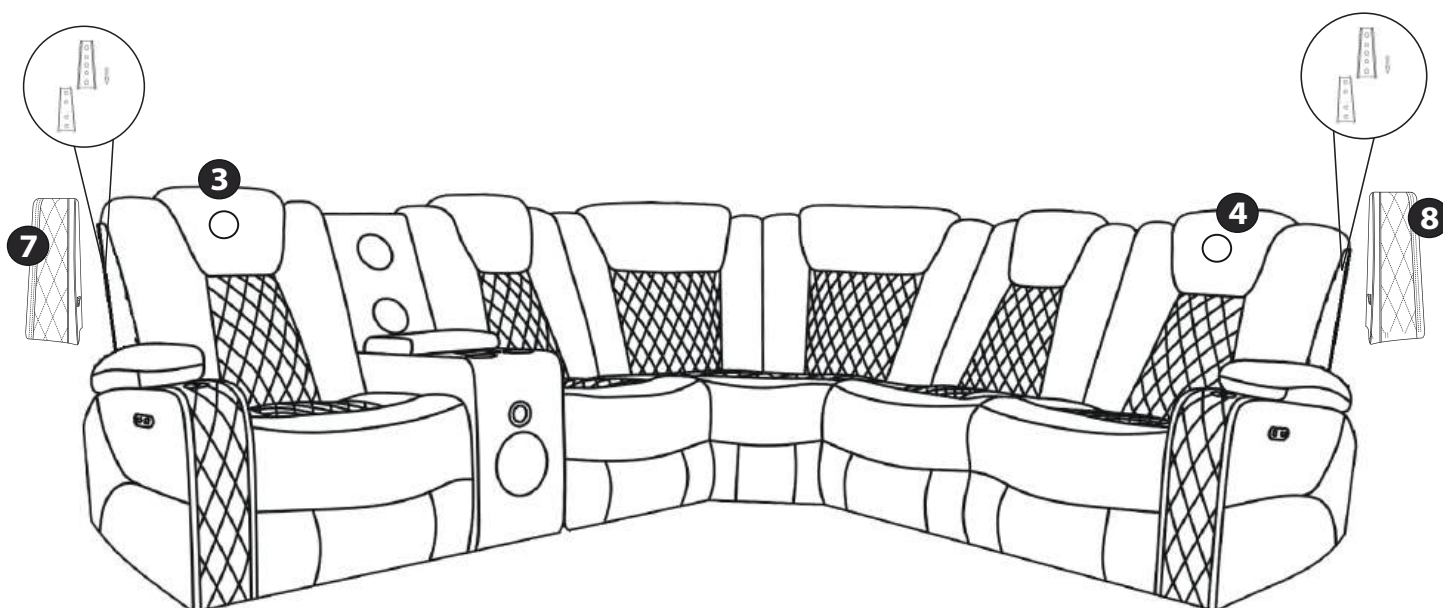

ASSEMBLY INSTRUCTIONS

5

  
The armrest of the Corner can be opened and you can put things in it. The headrest can be turned up then the backrest can be dropped down.

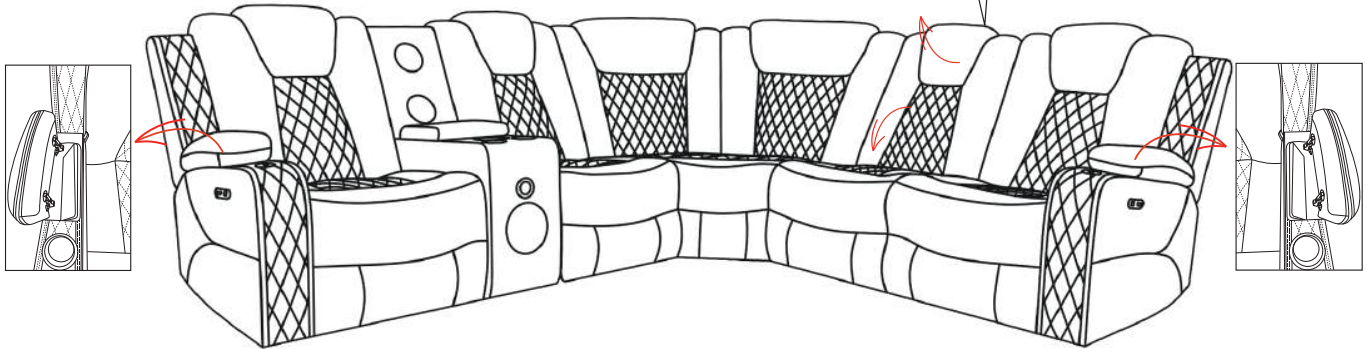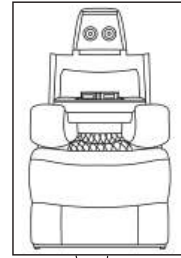

6




The power supplies are located in 1,2,6,14 and 19.

 Insert the connecting rod into the small table and insert the small tableboard into the armrests . Repeat for 9 and 10.

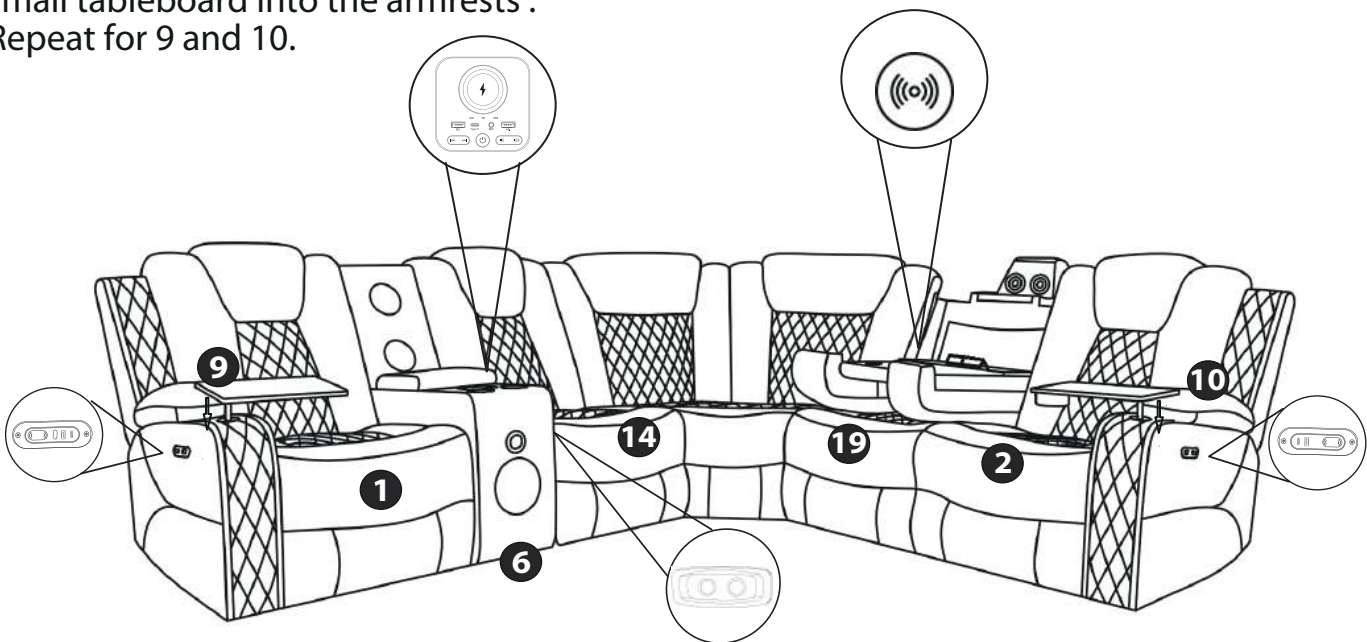


ASSEMBLY INSTRUCTIONS

    
 


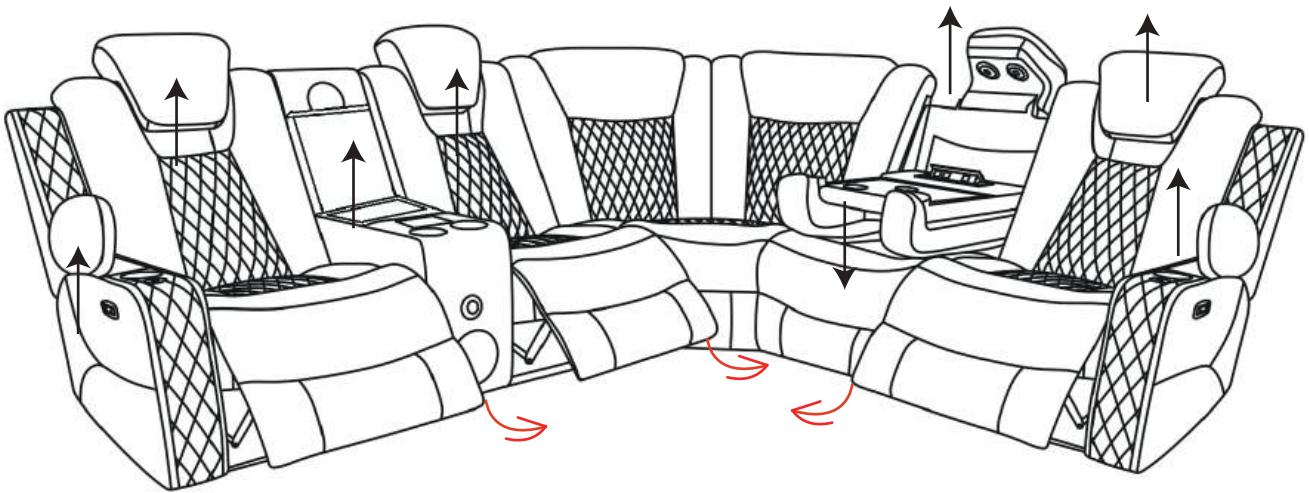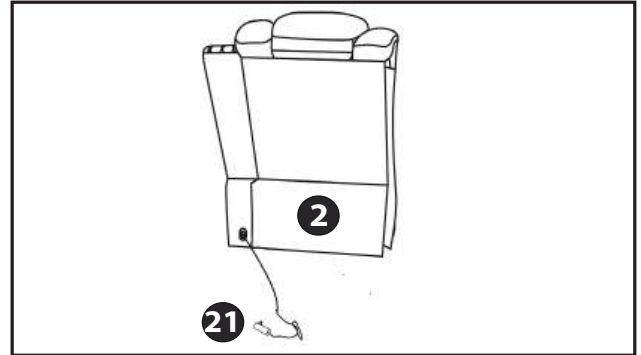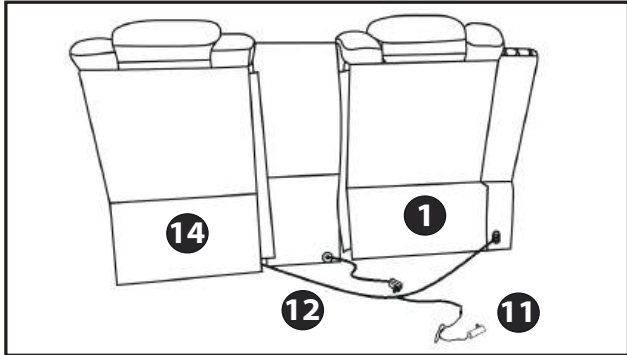

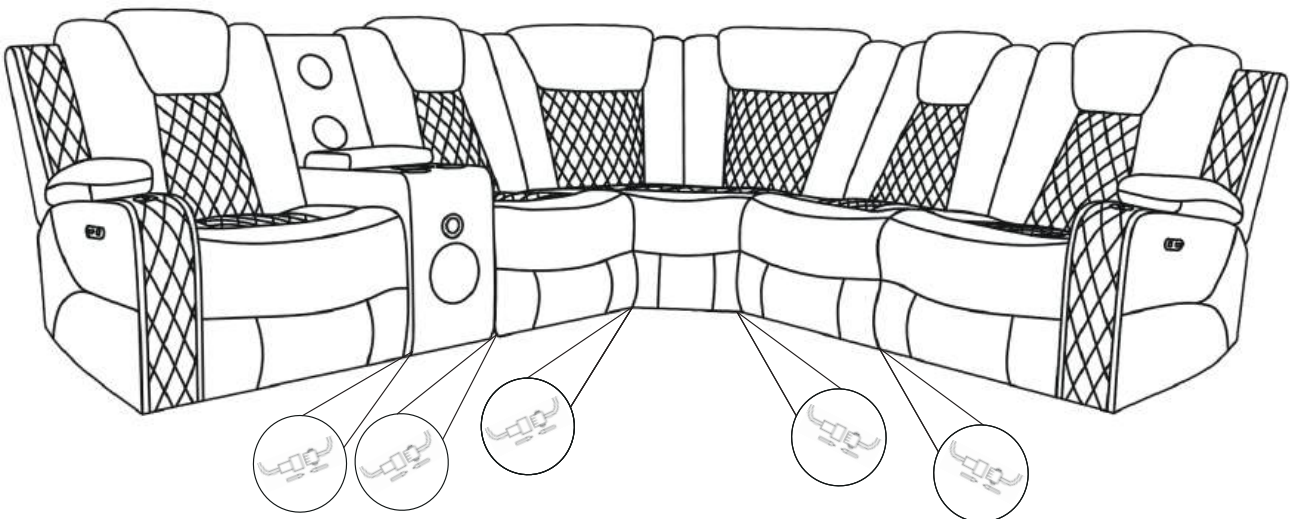

- 7** Y Cord 12 to control 1 and 14 then Plug 11 to control the Y Cord 12 . Plug 21 to control 2 .The lid of 6 and the arms of the Corner can be opened.The headrest of 3, 4 and 15 can adjust the lifting height. The headrest of 20 can be turned up then the backrest can be dropped down.

 






- 8** The bottom light belt connector needs to be connected.

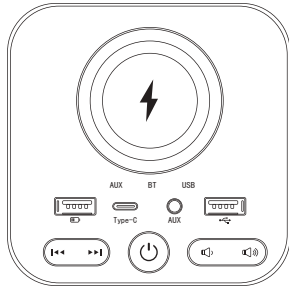


ASSEMBLY INSTRUCTIONS

- Wireless Charging 
- USB 
- Type-C 
- AUX 
- Previous 
- Next 
- Volume Control 
- On/Off 




 -  Type-C
-  USB
-  Light Switch
-  Corner Retractable Adjusting Control

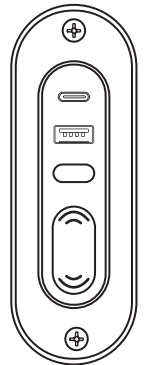





 
Operate the keys for the Corner to stretch and fold up

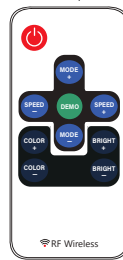Corner Control. It can control the music, adjust the sound size of the stereo, connect Bluetooth and switches.



Light strip use: before using the remote control, please press Light Switch, the light strip has multiple colors to choose (detailed operation, please refer to the remote control instruction manual)

   -   Corner Retractable Adjusting Control

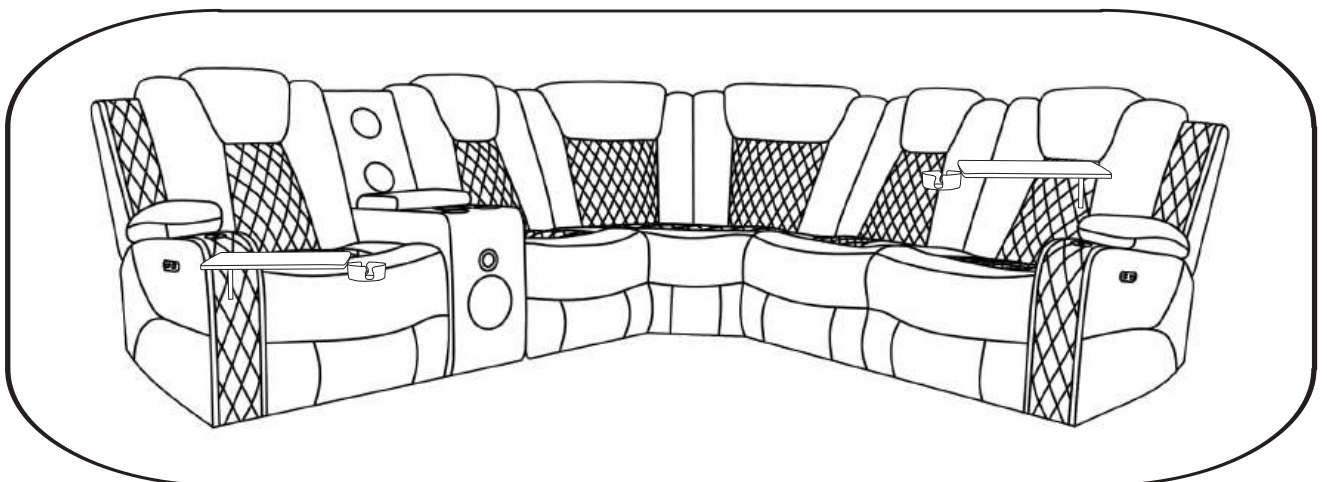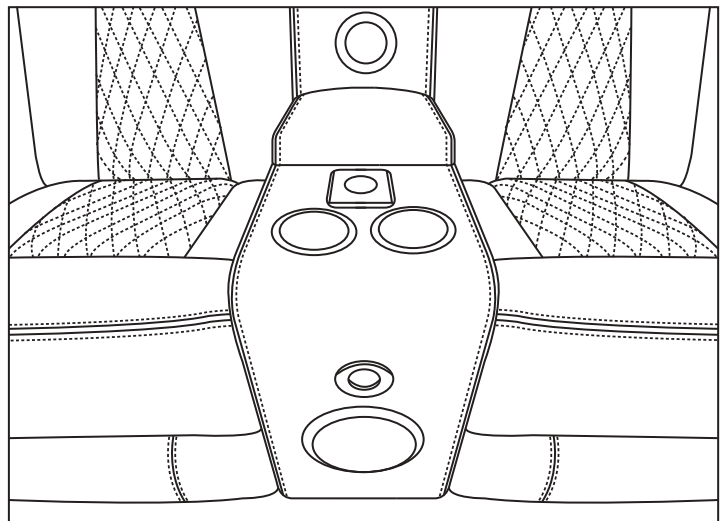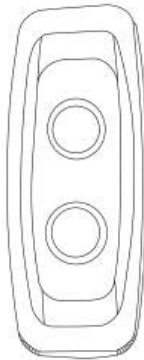

ASSEMBLY COMPLETE

