


Assembly Manual


Dining Chair

DC9022

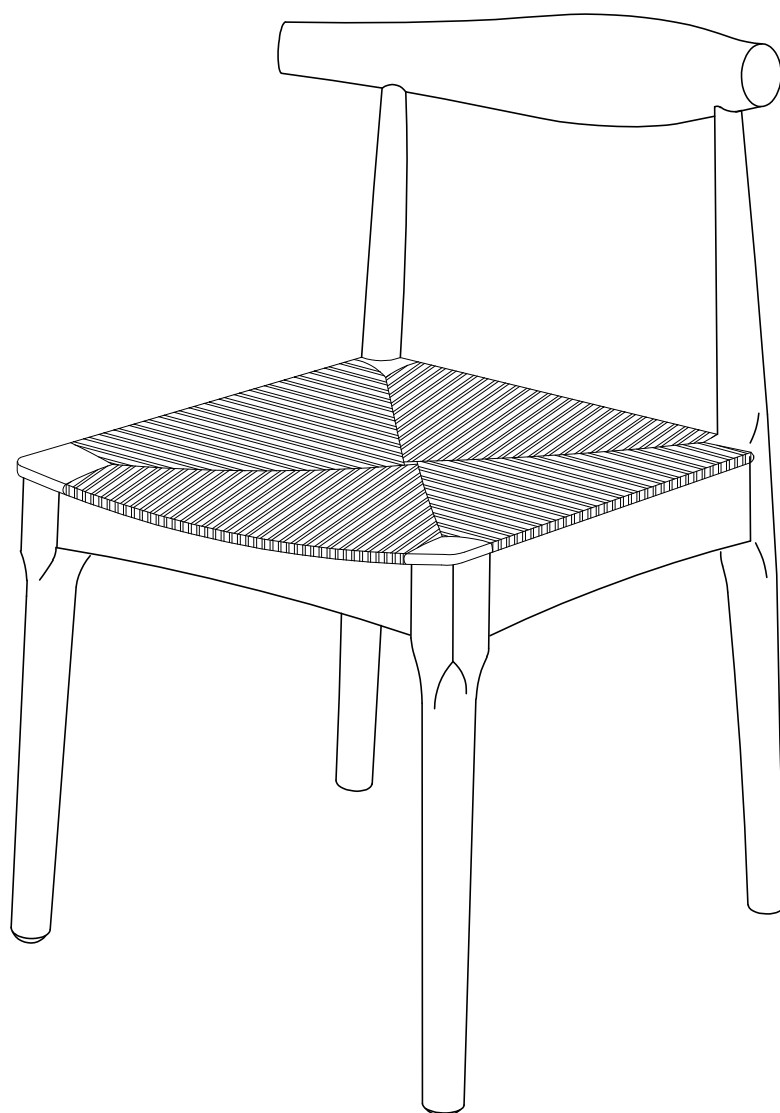


Please read this manual carefully before any operation and keep it properly for future use.


Assembly-note:

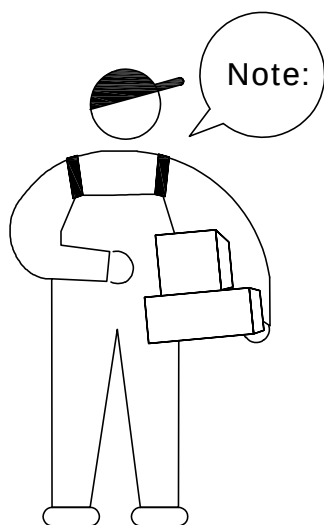


- ① Put a protective mat on the ground and handle the product with care.

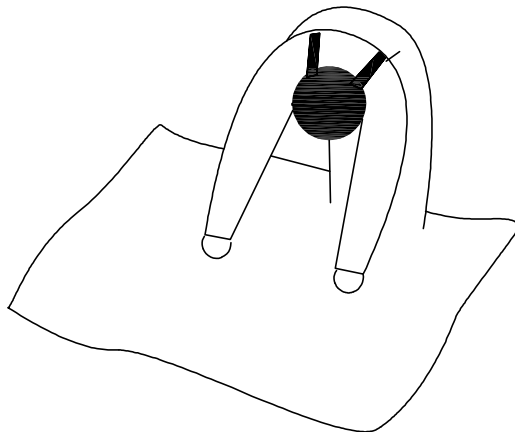


- ② Two people are preferred.

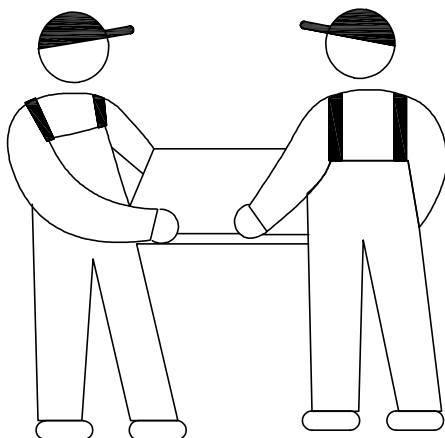

- ③ Contact us if you have any confusions


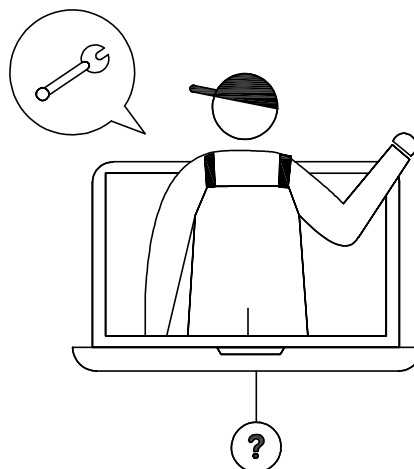


Exploded
diagram:

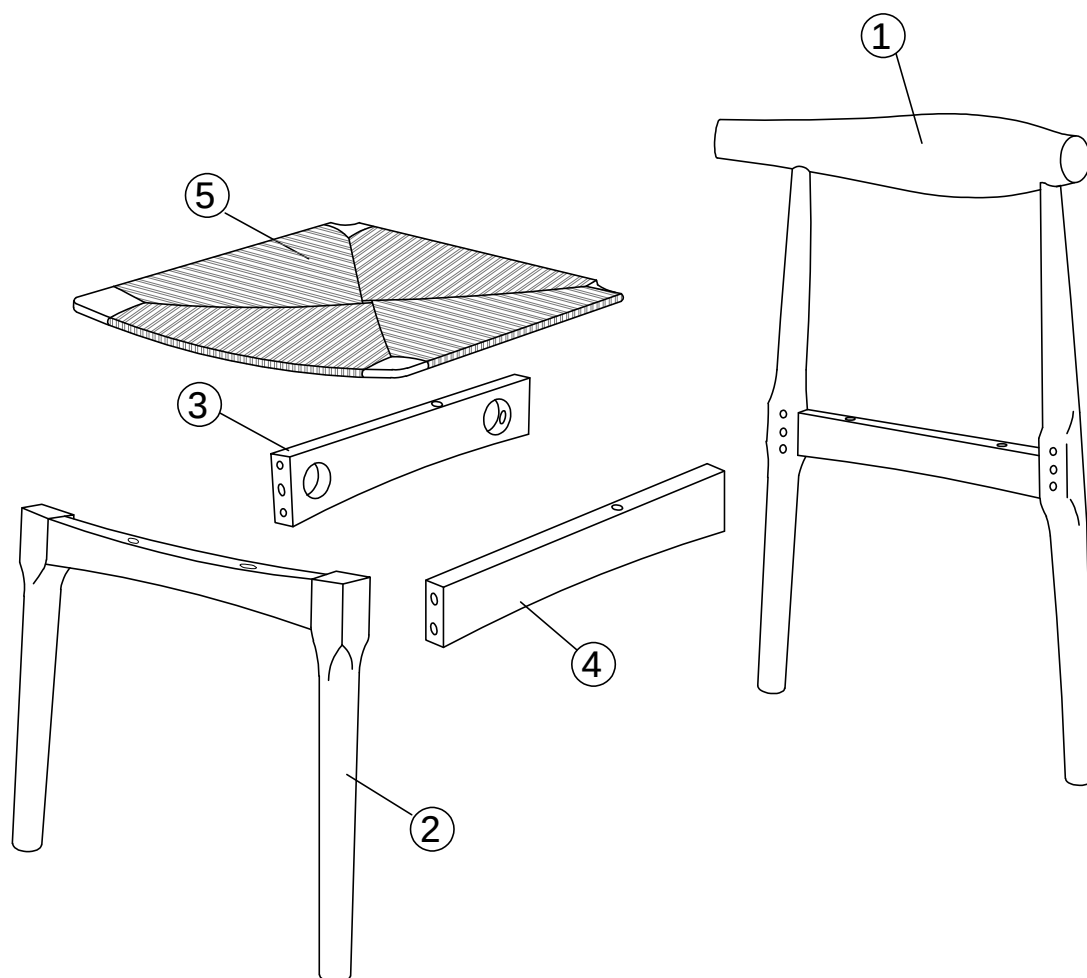

NO.	Name	PCS
1	Chair Back	1
2	Front Leg	1
3	Side Stretcher L	1
4	Side Stretcher R	1
5	Seat	1

  Accessory list:


A		B		C	
					
Bolt	8+1	Allen wrench	1	Screw	8+1

D		E		F	
					
Moon-shaped gasket	8+1	Gaske	8+1	Spring gasket	8+1




G		H		I	
					
Nut	8+1	Wood plug	16+2	Spanner	1

Insert the Screw(C) and into the Chair Back(1) and Front legs(2) as shown.
Insert the Wood plug(H) into the Left Stretcher(3) and Right Stretcher(4) as shown.
Please Fully tighten the Screw.

1

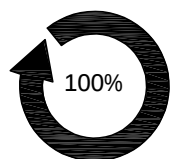

Tighten


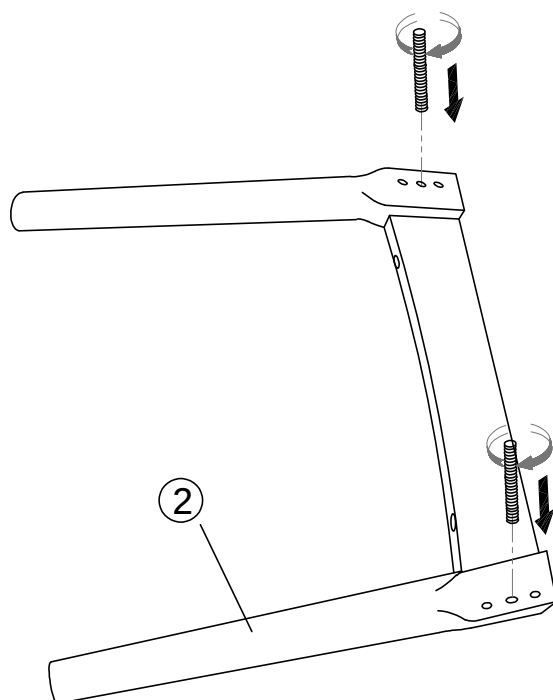
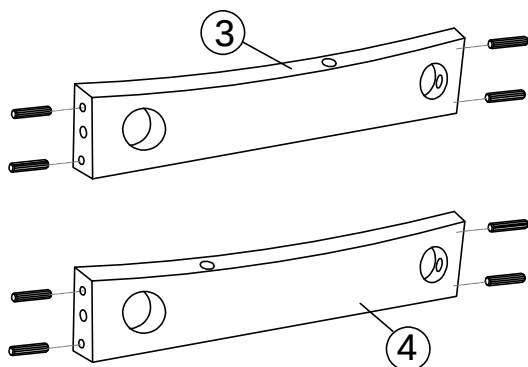
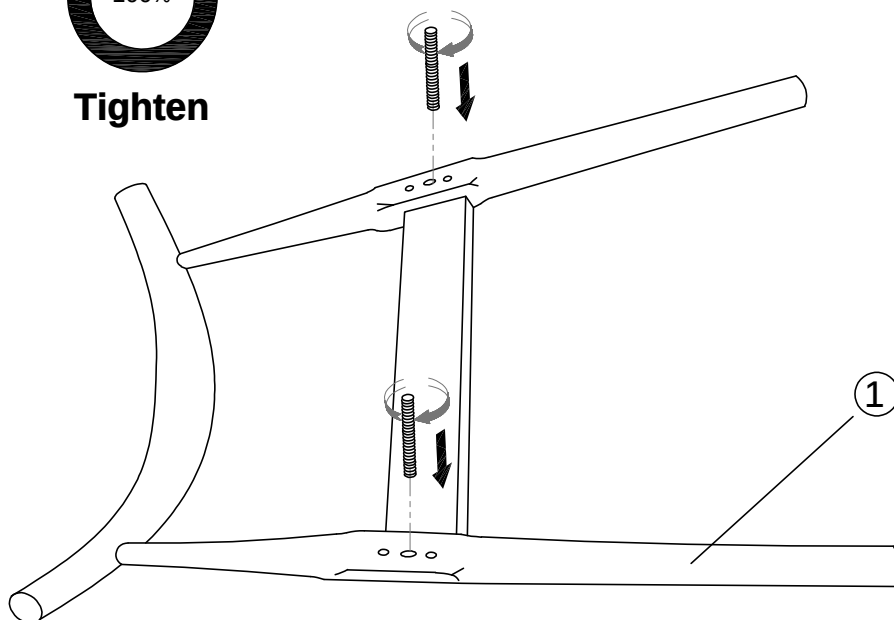


(C)
(x4)

(H)
(x8)





Insert the Left Stretcher(3) and Right Stretcher(4) into Chair Back(1).
Attach Left Stretcher(3) and Right Stretcher(4)to Chair Back(1) using Gasket(D,E ,
F,G) with Spanner(I).

2

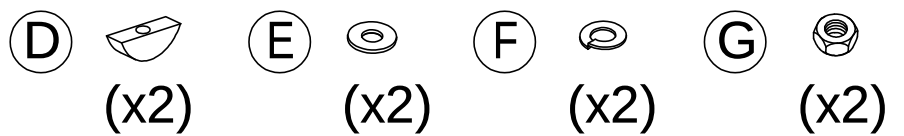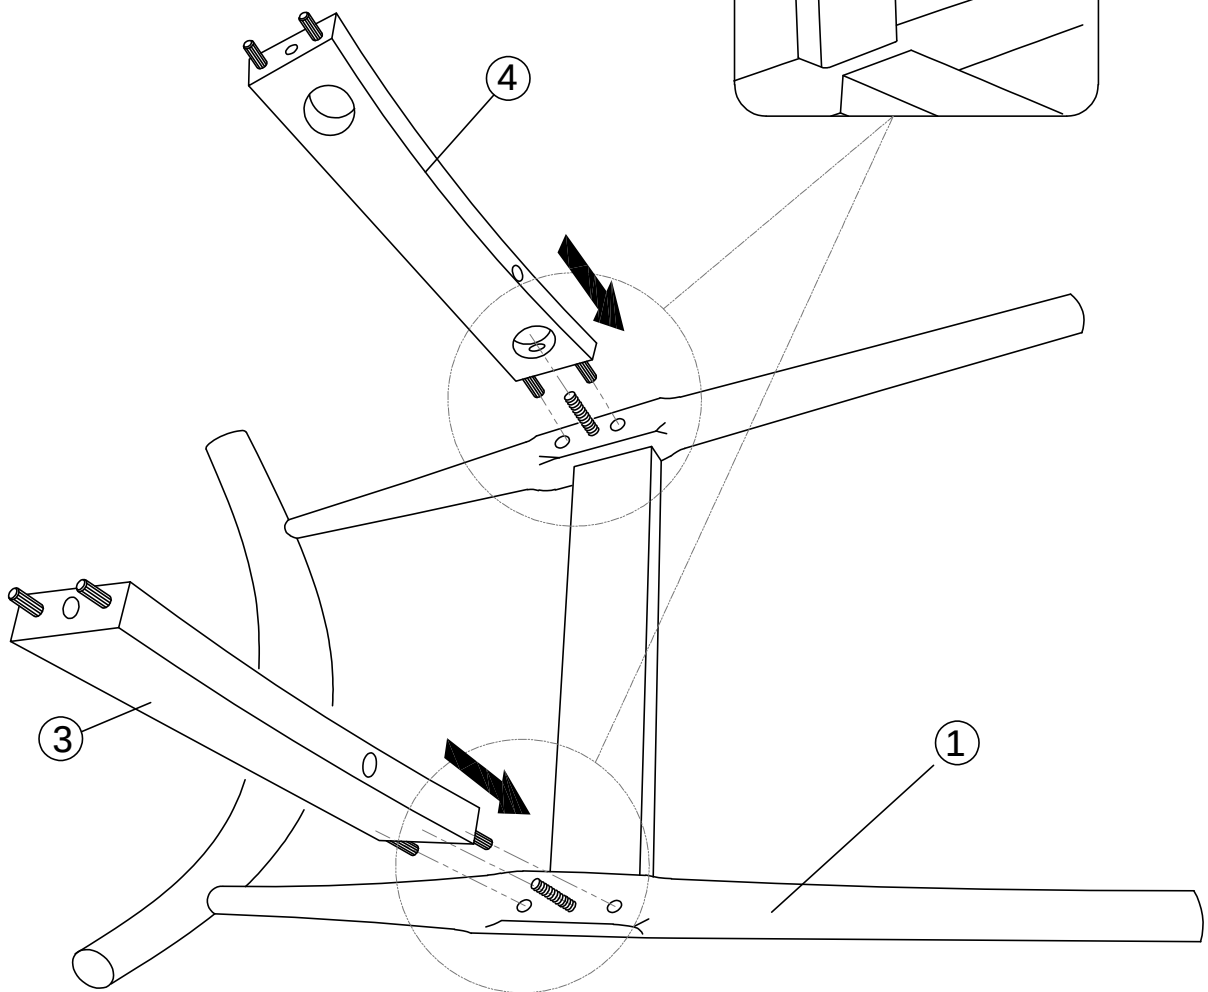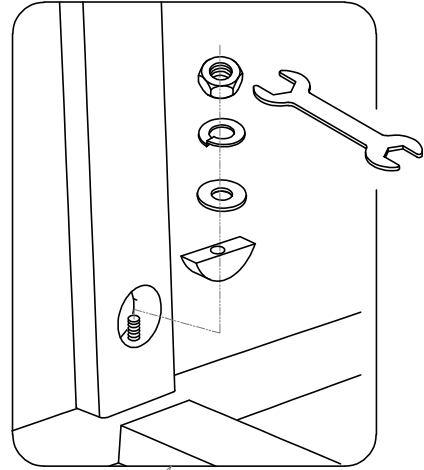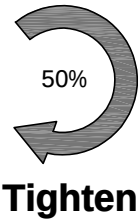



Insert Front Leg(2) onto the Left Stretchers and Side Right as shown.
Attach Front Legs(2) to Side Stretchers using Gasket(D,E,F,G) with Spanner(I).

3

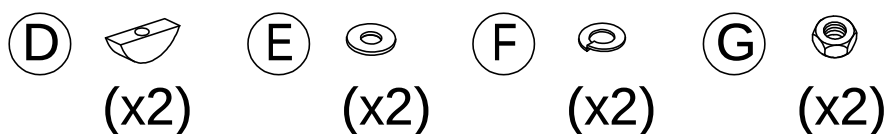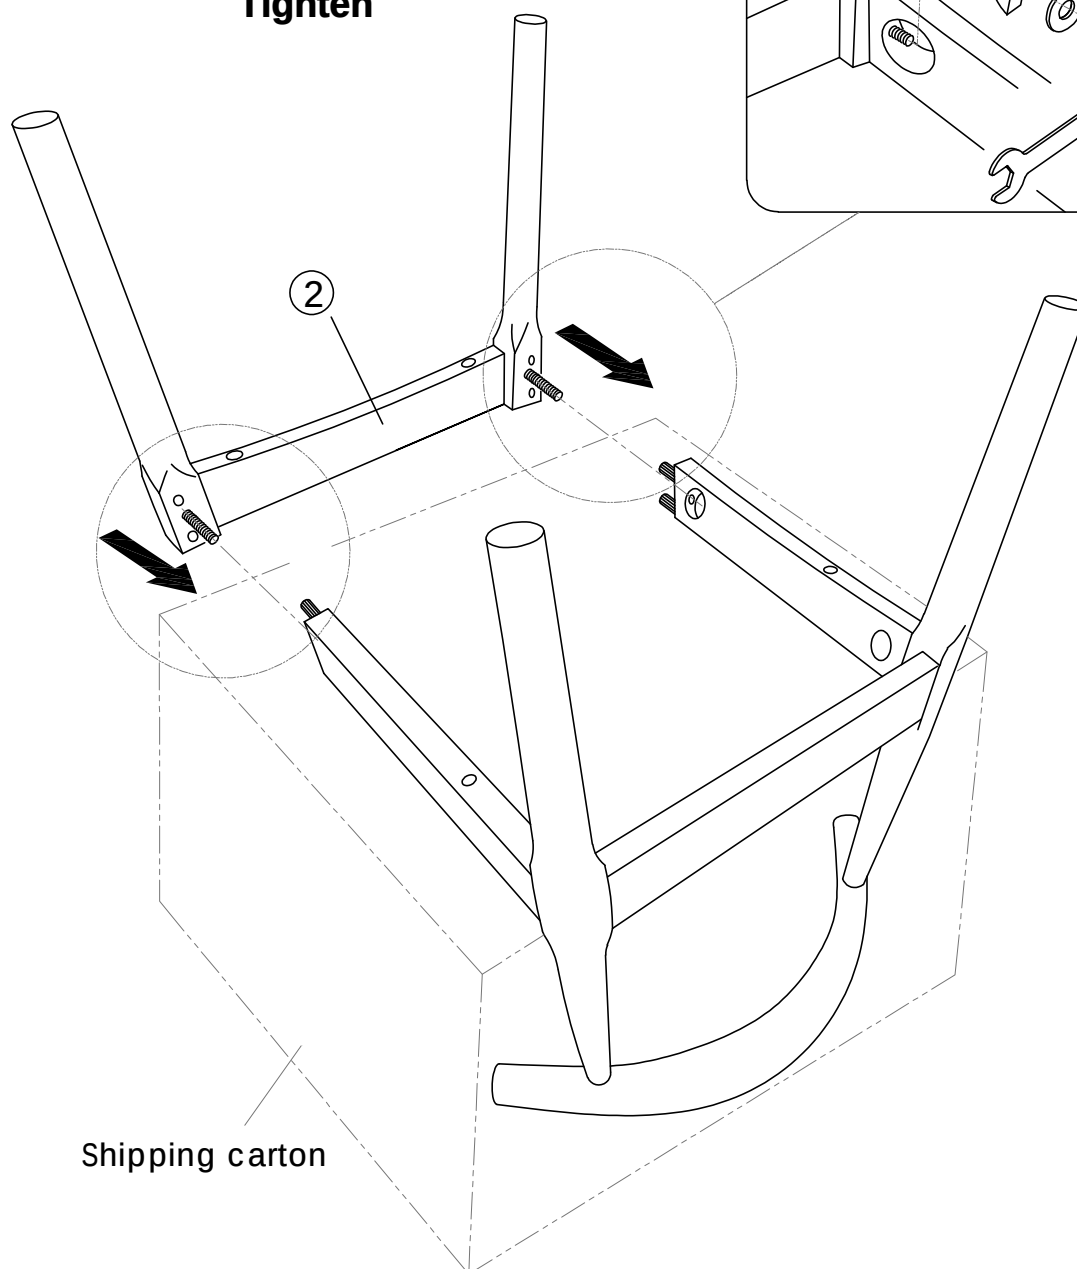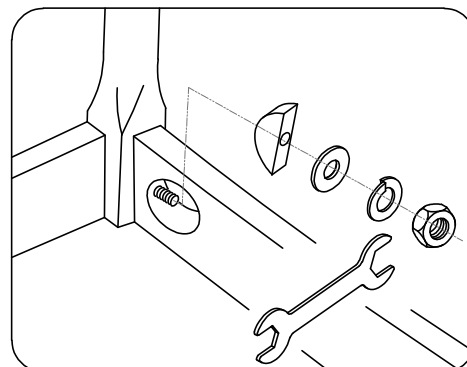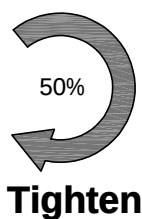

Attach Frame and Seat cushion using Bolts(A) with Allen Key(B).
And then Fully tighten all of the Screw.(Include step 2 and step 3)


4

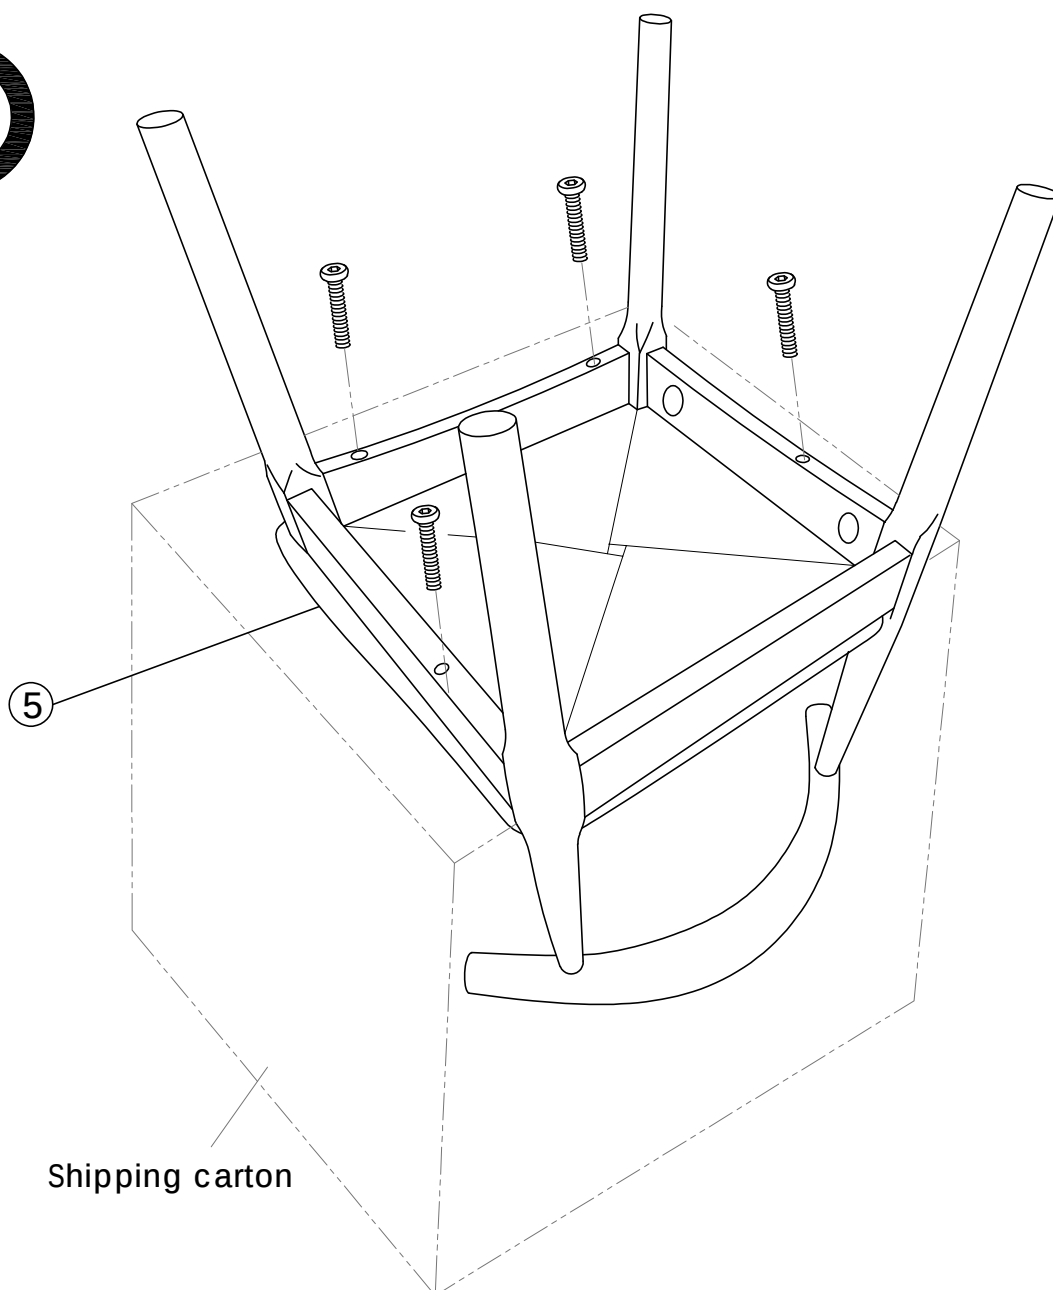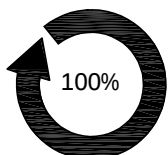


A 
(x4)

Place the Dining Chair on a Level Surface to check for wobbles.
If it wobbles, the adjustable foot pads at the bottom of the front legs can be adjusted.

5

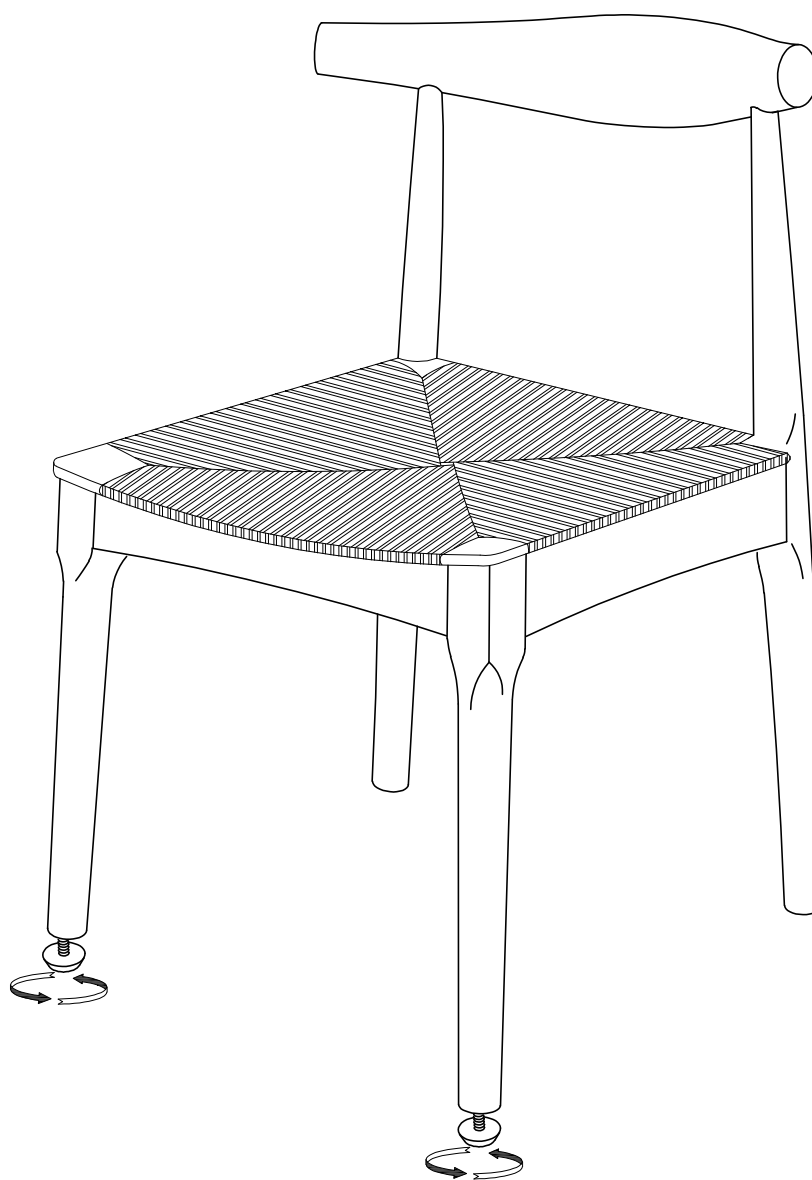

Done

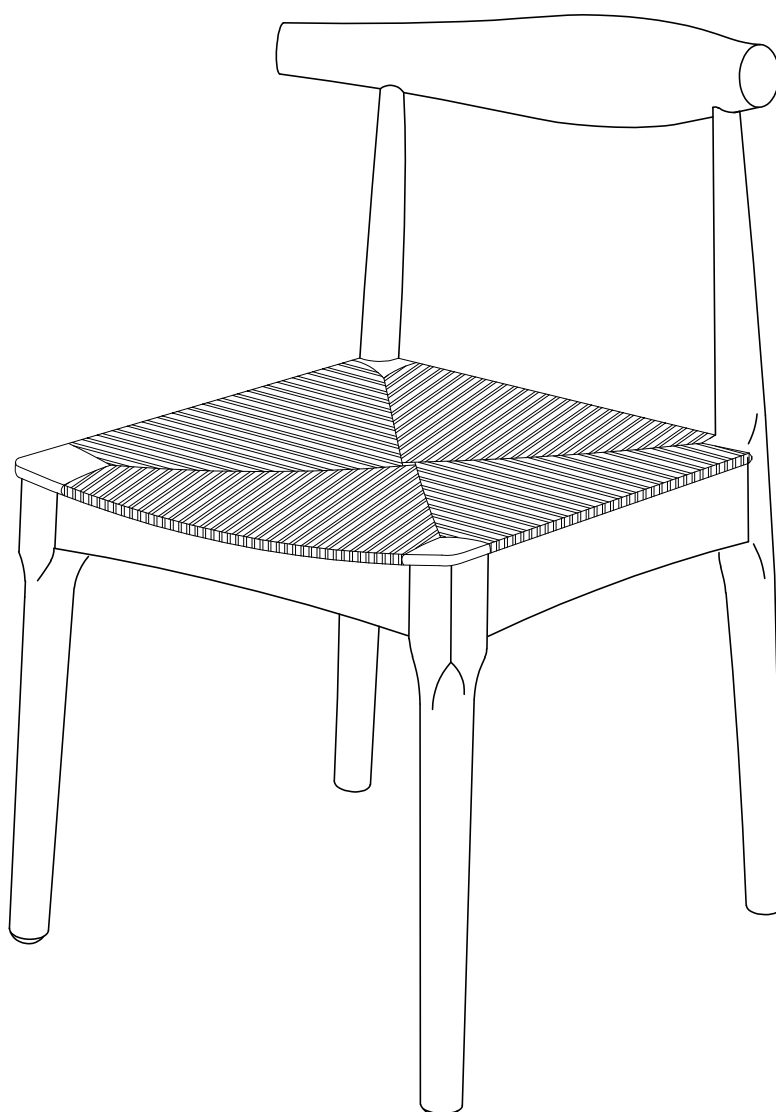

Warning

- Please keep the product away from children while assembling.
- Do not let children play or jump on the product.
- Do not stand on the item or use as a step ladder.
- Prior to use, please check to see if there's any loosening screw or part.
- Make sure that each screw and part is correctly installed and securely fastened.

Care and Maintenance

- Use a soft clean cloth that will not scratch the surface when dusting
- There's no need to use furniture polish.If you need, test it first in an inconspicuous area.
- Using solvents of any kind on your furniture may damage the finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Liquid spills should be removed immediately.
- Gently blot the spill with a soft clean cloth to avoid rubbing.

Further advice about the furniture care

- It is best to keep your furniture in a climate-controlled environment.
- Extreme temperatures and humidity changes can cause fading.warping, shrinking and spitting of wood.
- We recommend to keep furniture from sunlight exposure to avoid possible surface damage.
- Proper maintenance and cleaning at home will extend the life of your purchase.
- Following these important and helpful tips will help retain your furniture's performance even when it ages.
Periodically(every 90 days) make sure the screws are fully tightened.