 
 
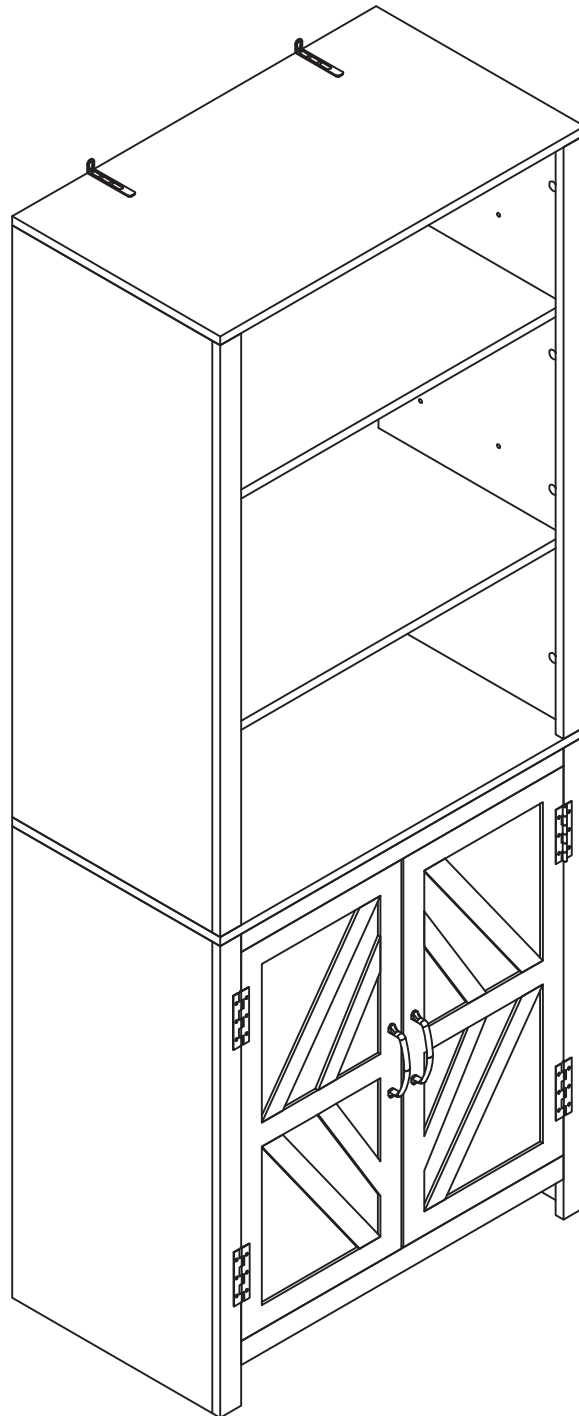 
 
 
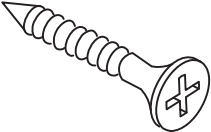 
 
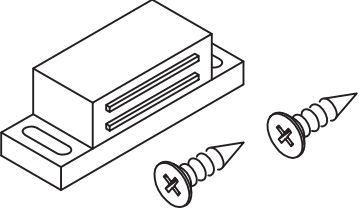 
 










READ AND SAVE THIS INSTRUCTIONS BEFORE USE

ASSEMBLY&INSTRUCTION MANUAL

①  Qyt:47+4	②  Qyt:36+3	③  M3.5X12 Qyt:24+2
④  M4x35 Qyt:7	⑤  Qyt:8+1	⑥  M4X18 Qyt:2
⑦  Qyt:20+2	⑧  Qyt:1	⑨  Qyt:2
⑩  Qyt:4	⑪  Qyt:2	⑫  Qyt:2
⑬  Qyt:12+1	⑭	⑮

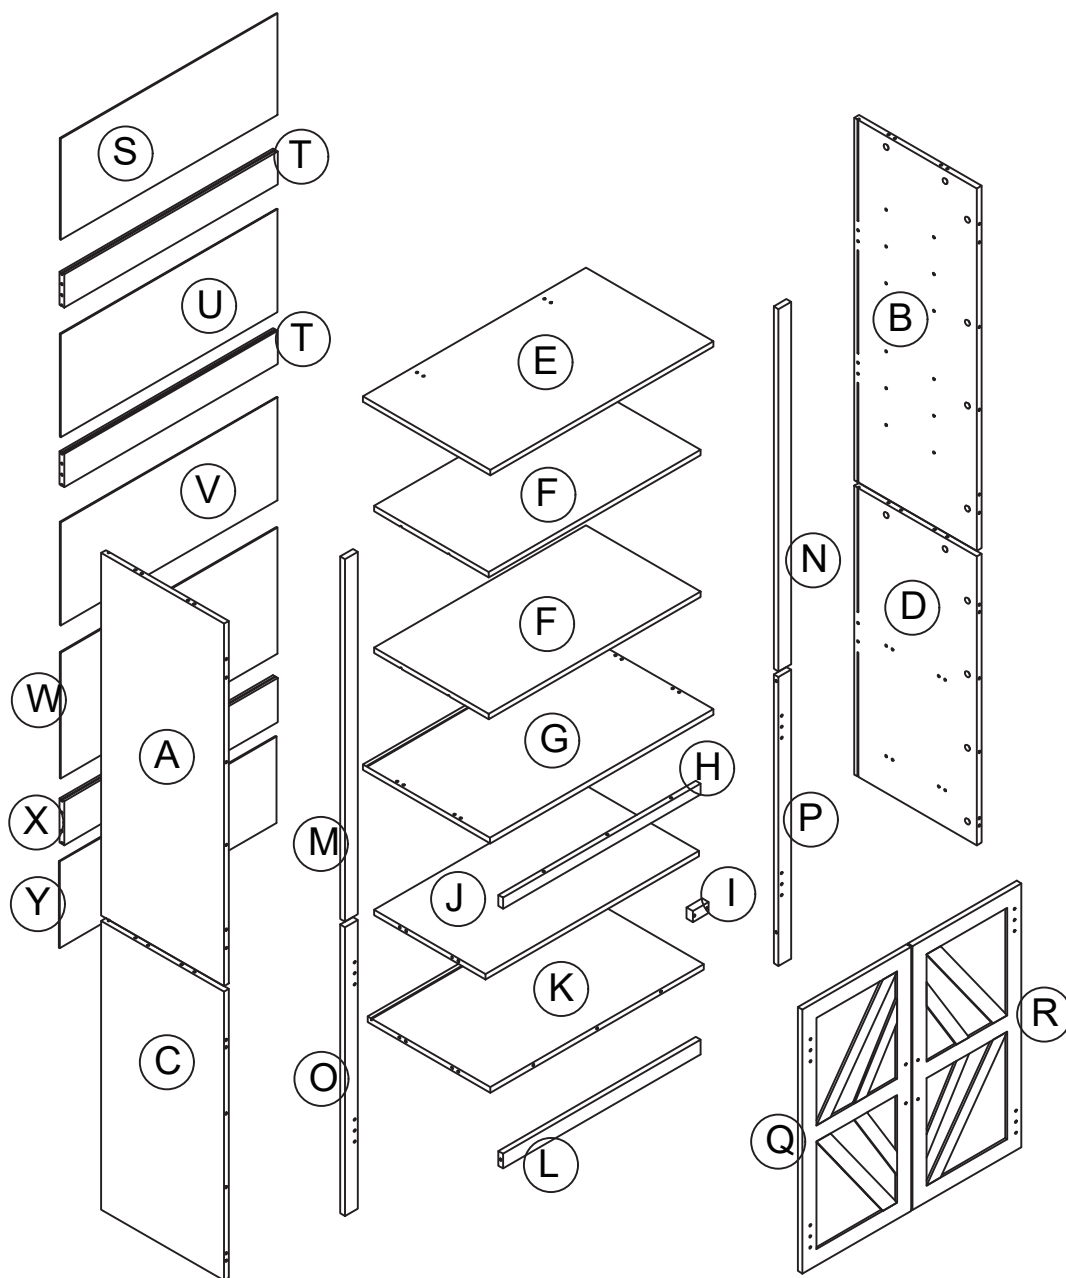


A x1	B x1	C x1
D x1	E x1	F x2
G x1	H x1	I x1
J x1	K x1	L x1

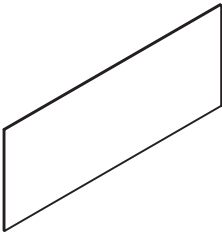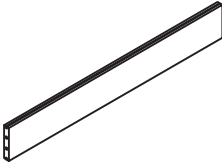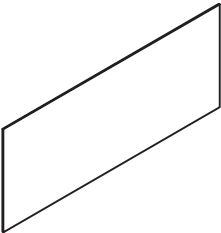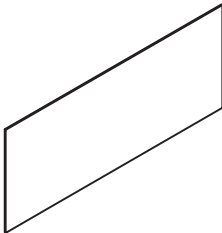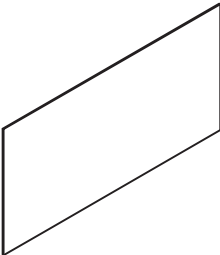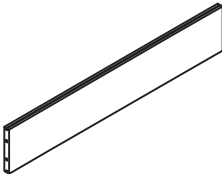      M  x1	N  x1	O  x1
P  x1	Q  x1	R  x1
S  x1	T  x2	U  x1
V  x1	W  x1	X  x1


Y

x1

 
Z

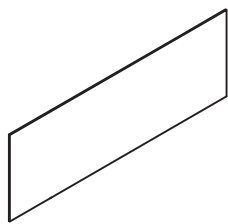


 
Make sure the pins are installed correctly as shown with the "check mark" below

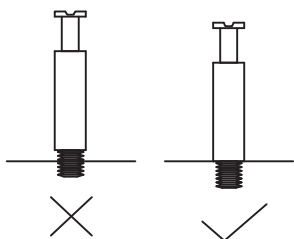

 Below shows how the pins are used to assemble the panels together.

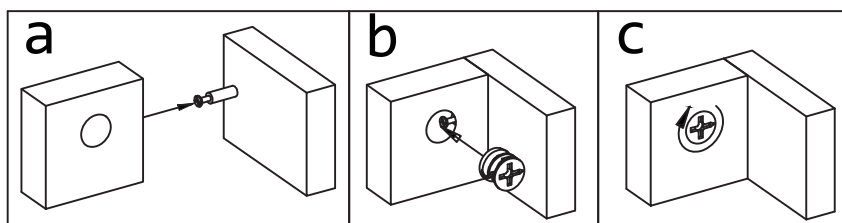

1

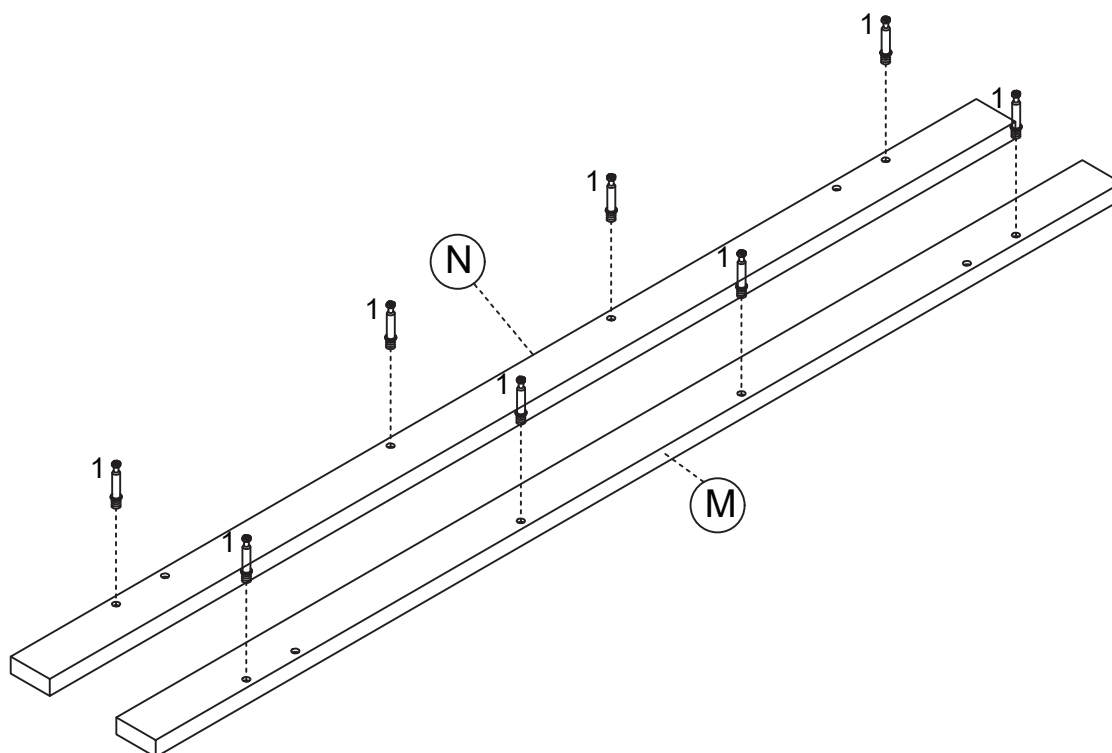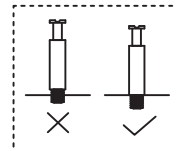  


1



X 8

 2


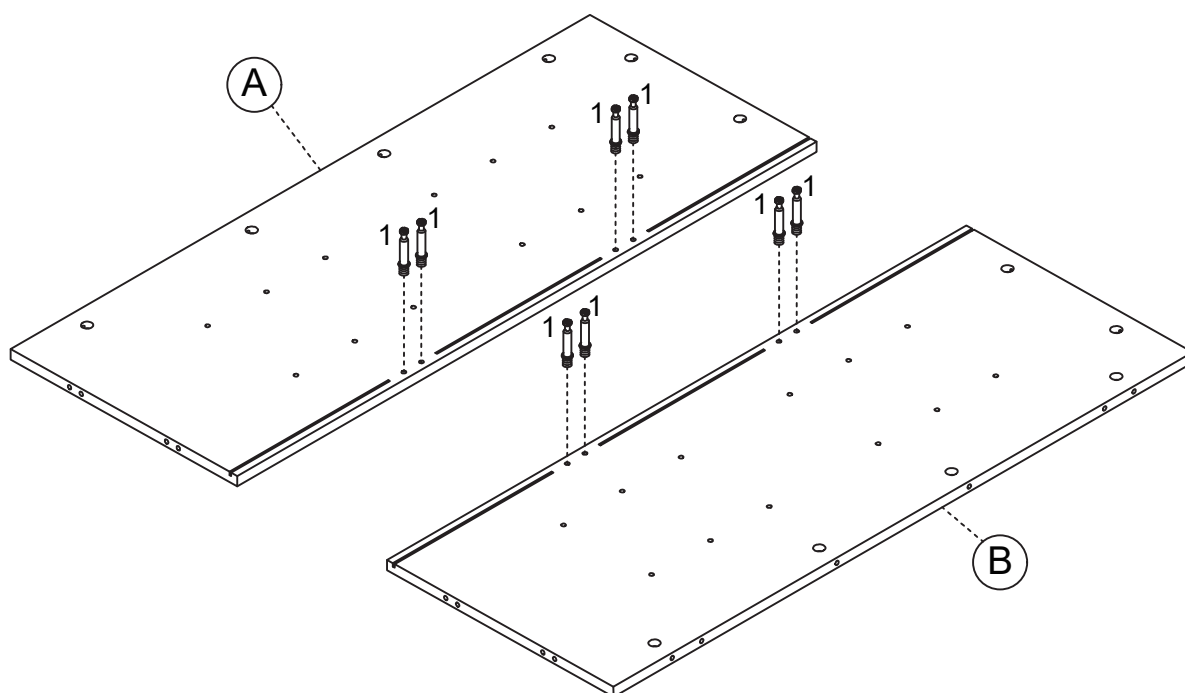


1




X 8

  3

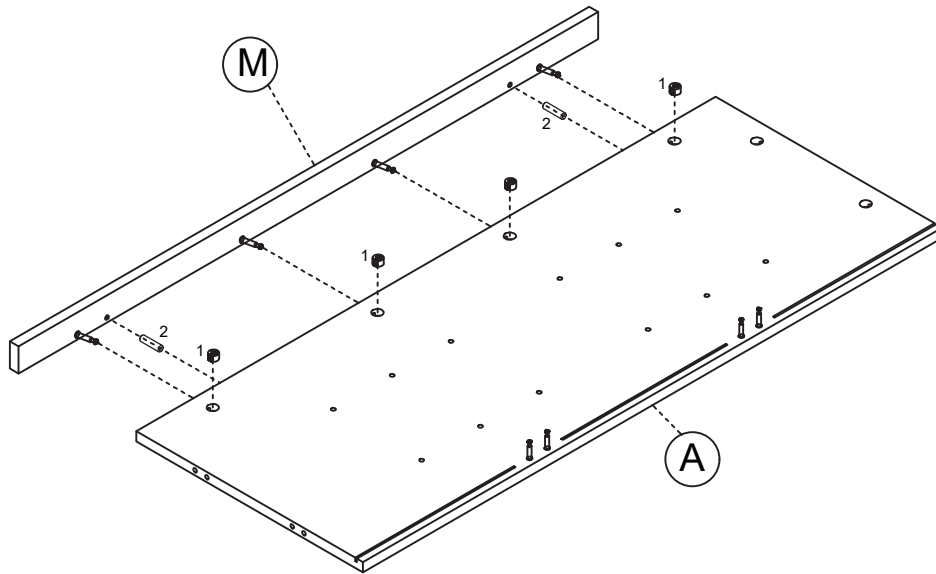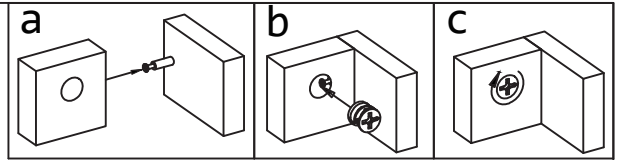


1		X 4
2		X 2

 4

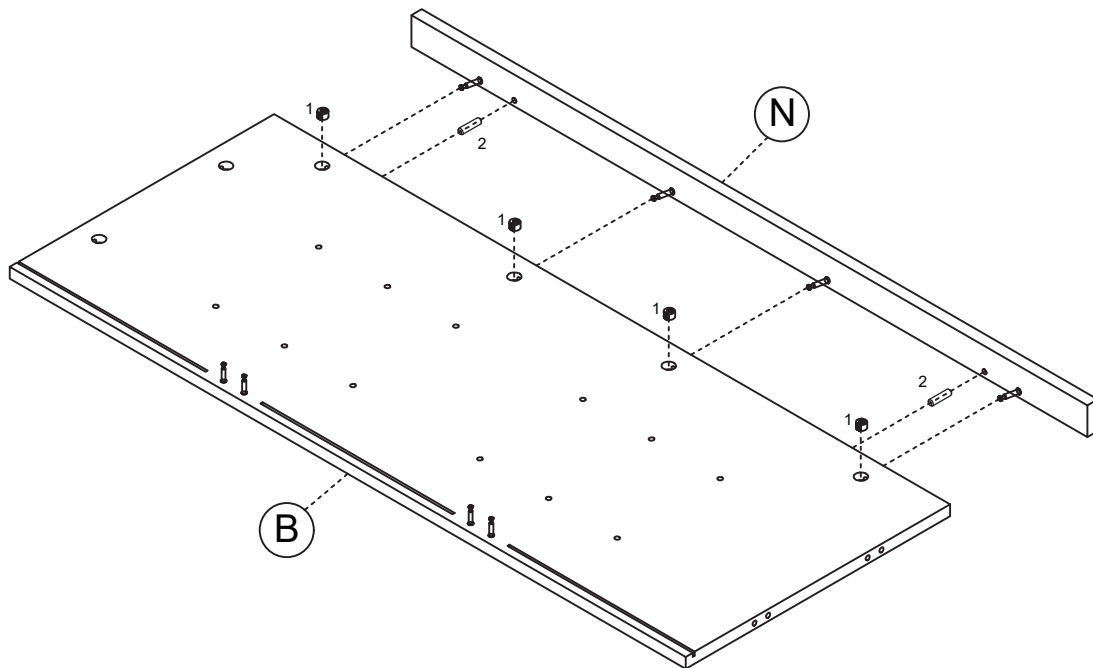

1		X 4
2		X 2

 5

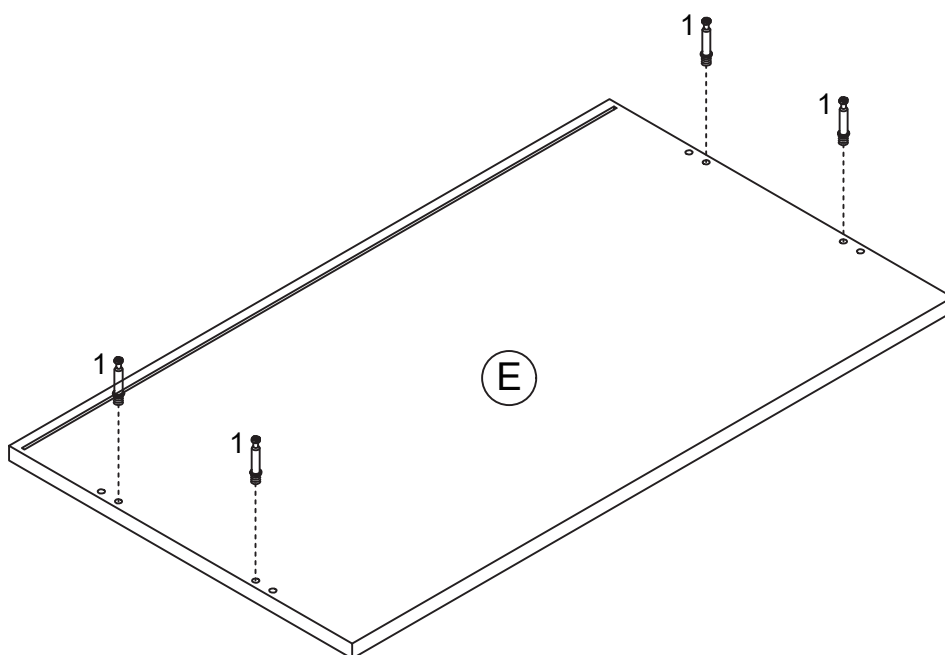


1



X 4

 6

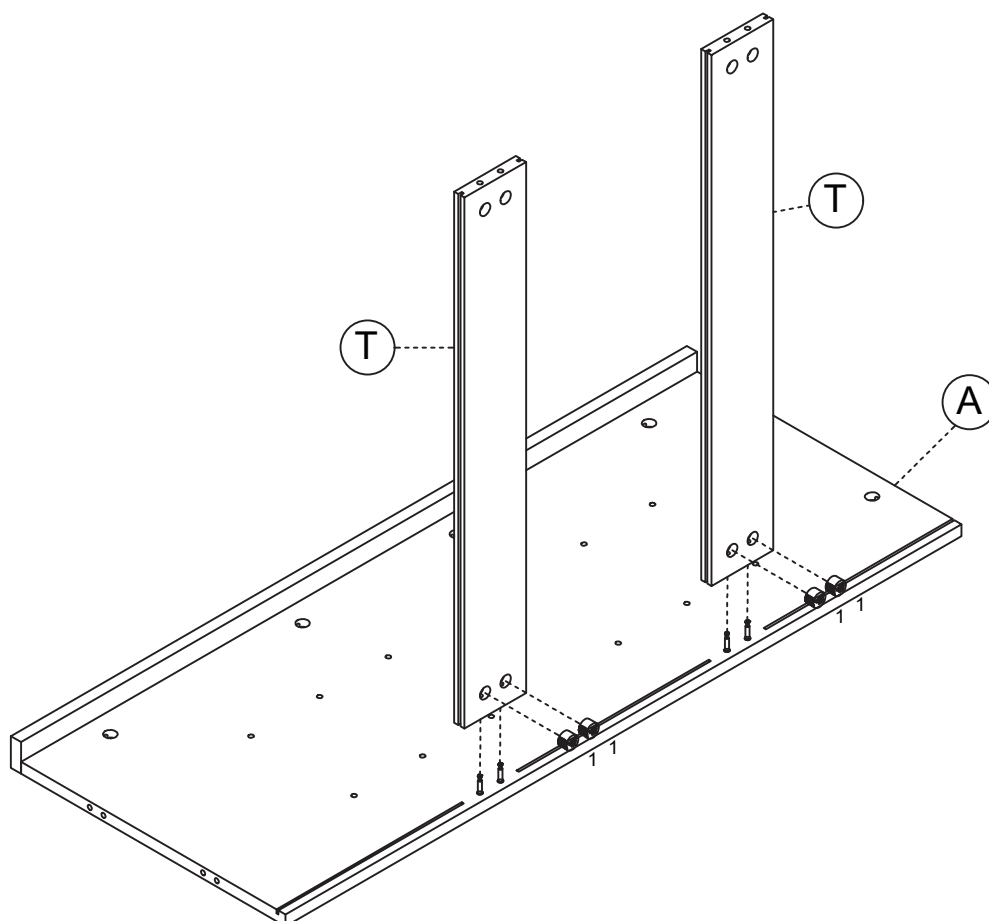


1




X 4

 7

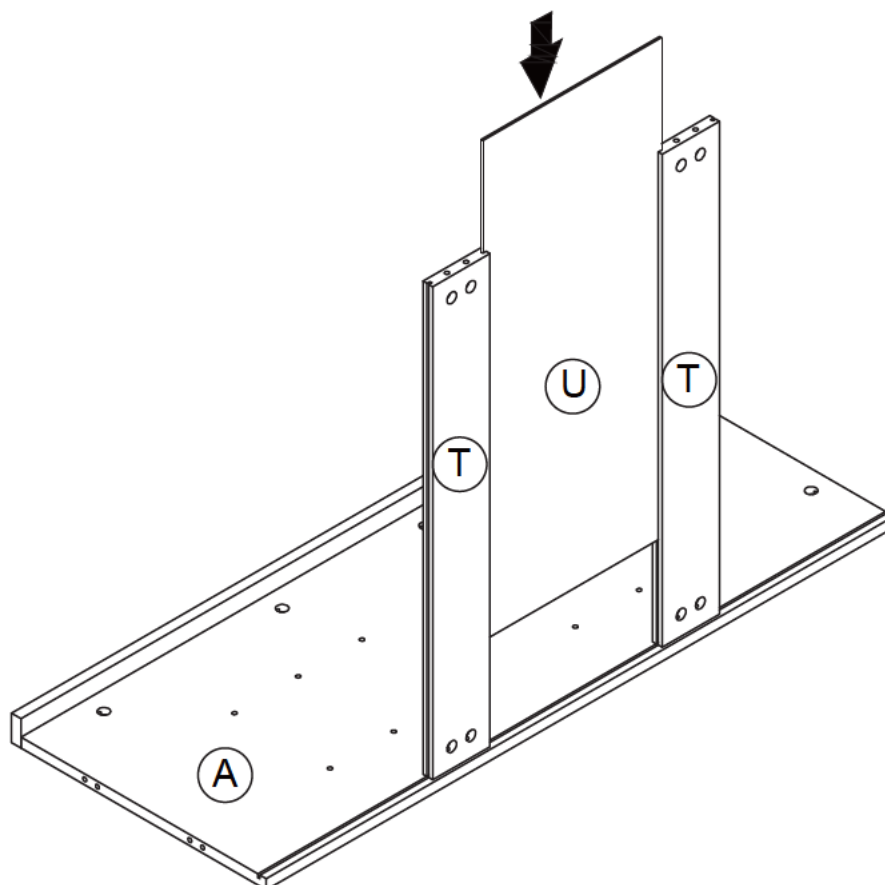

8

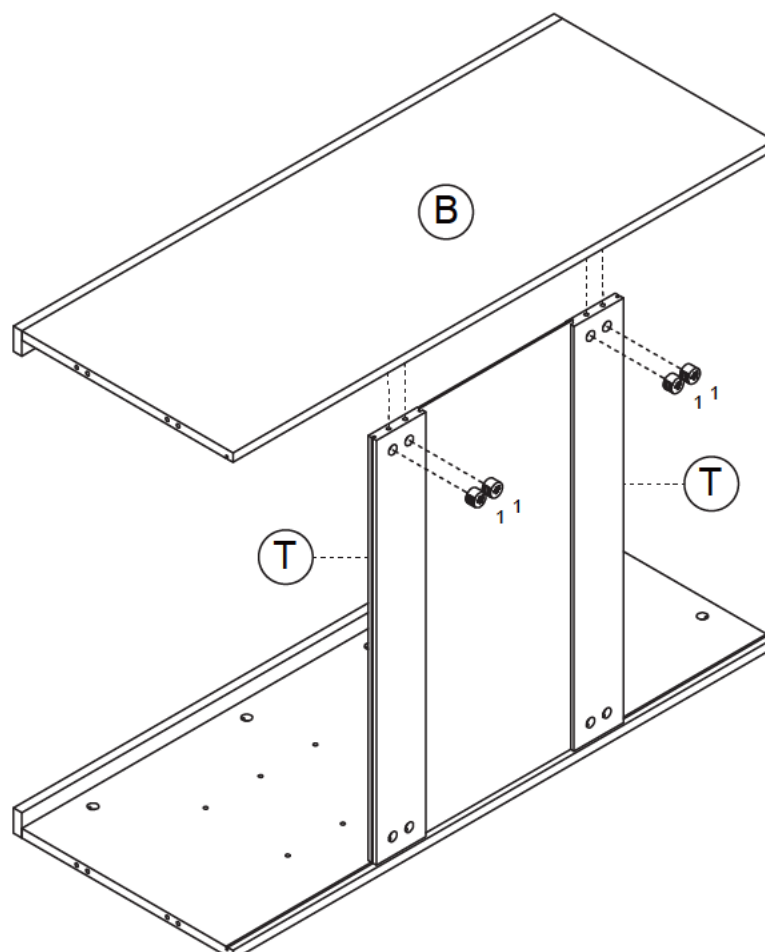 


1




X4

 9

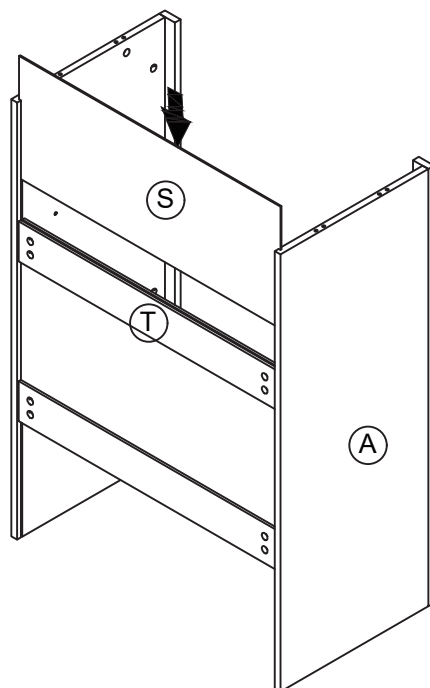


10

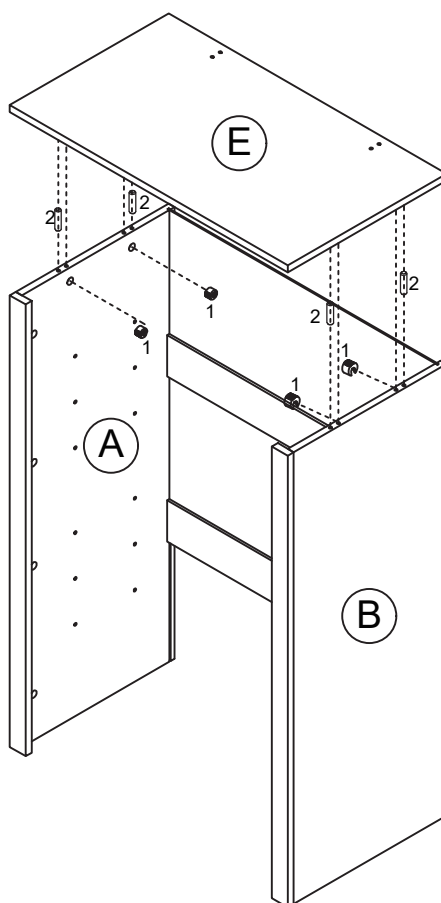 

1		X 4
2		X 4

 11

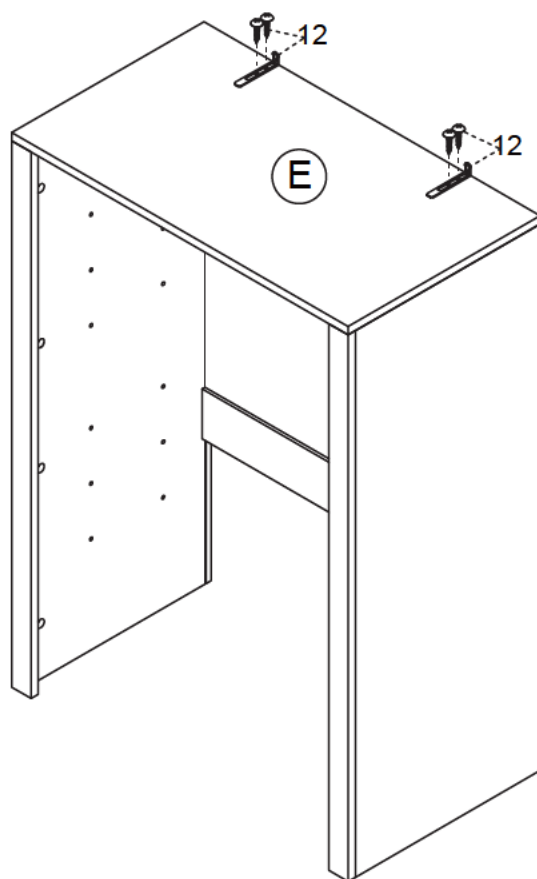


12




X 2

 12

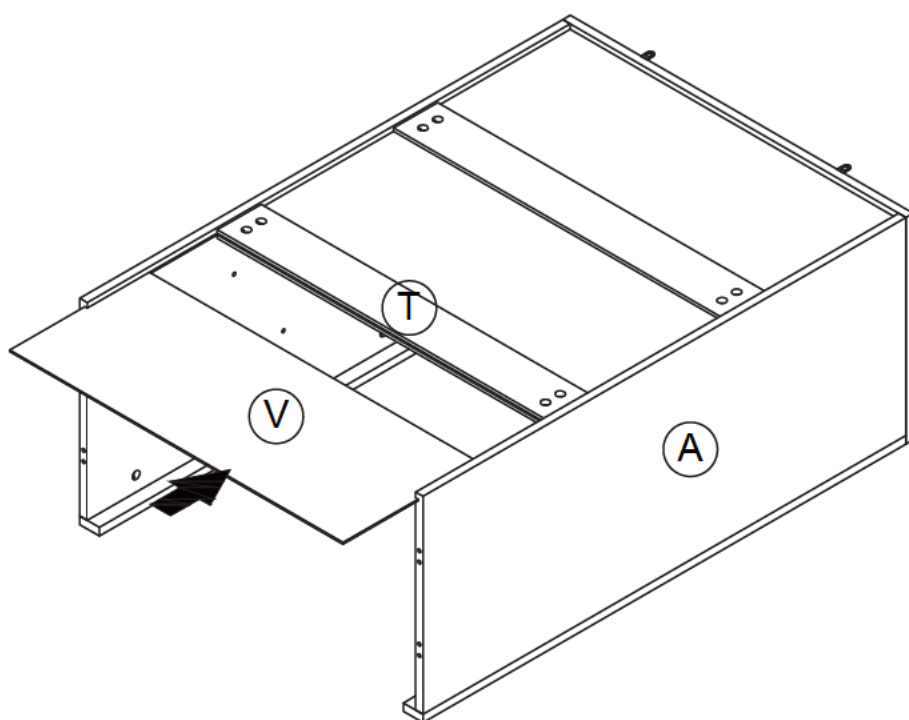


13

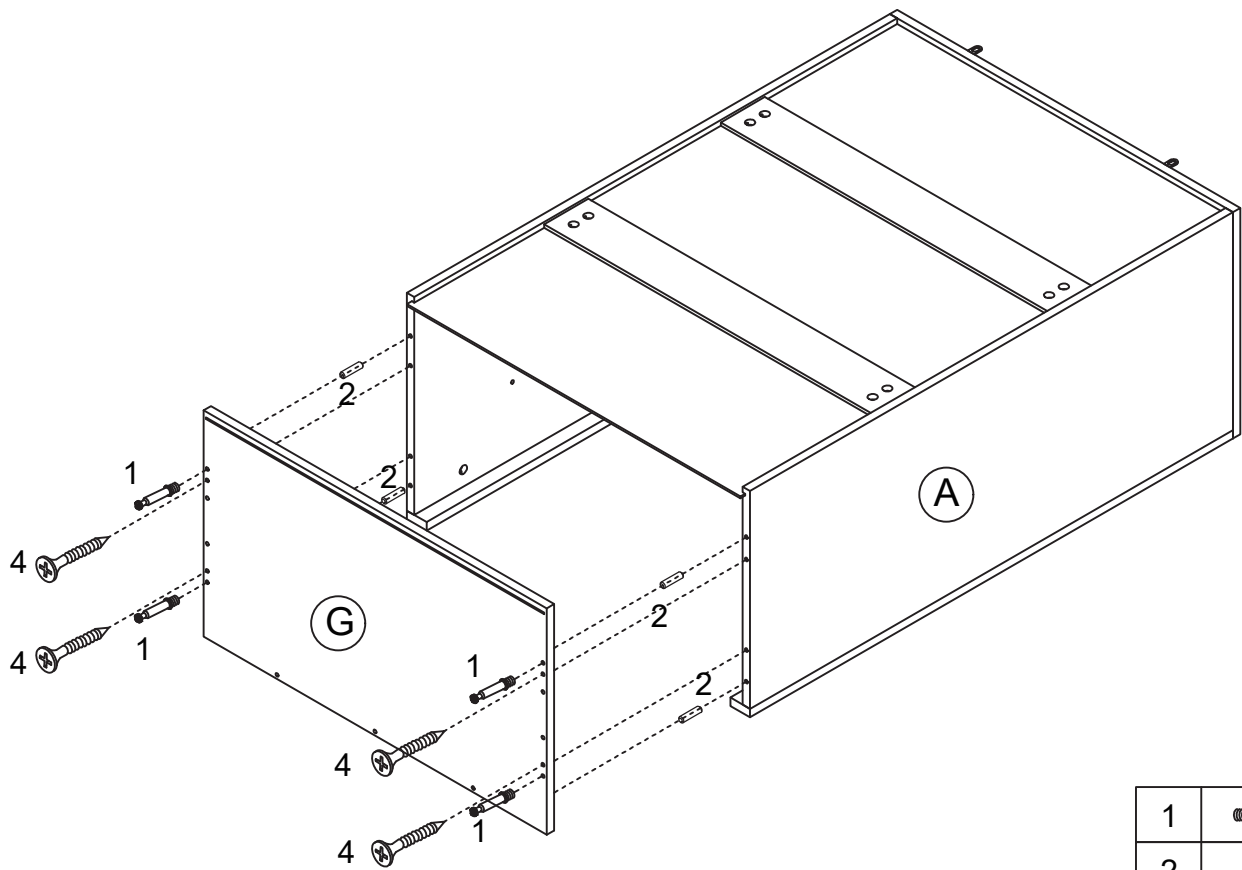 


1		X 4
2		X 4
4		X 4

 14

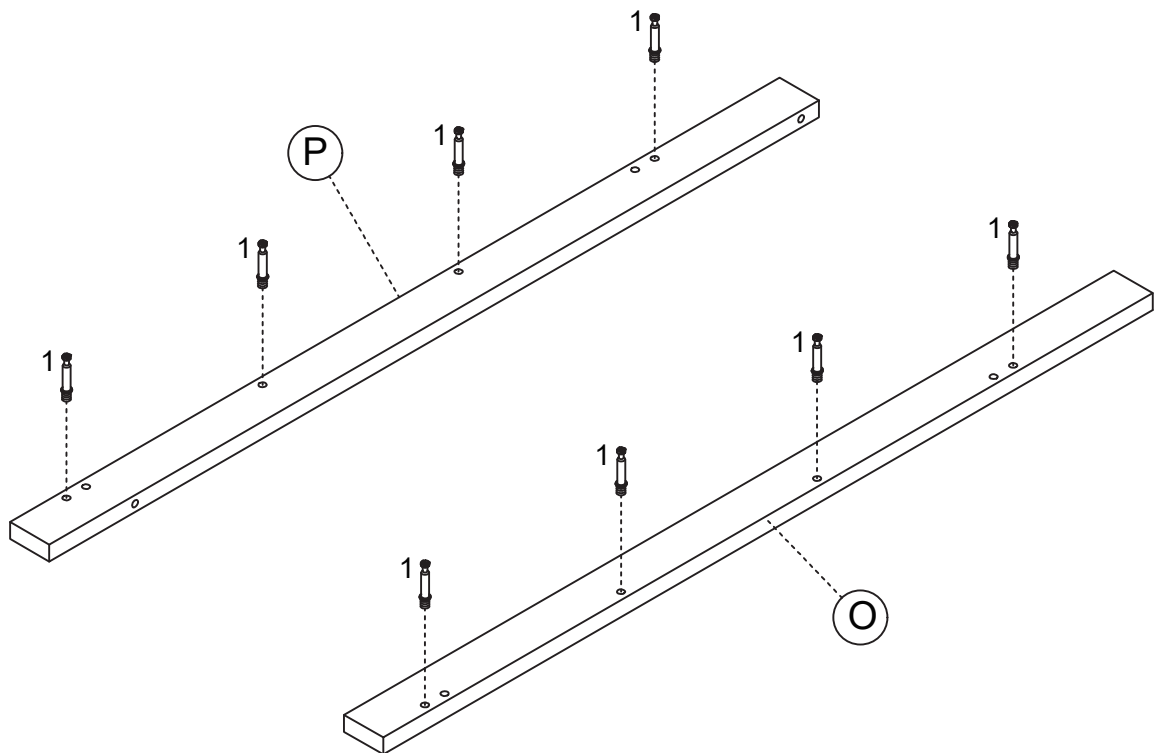

1		X 8
---	---	-----

 15

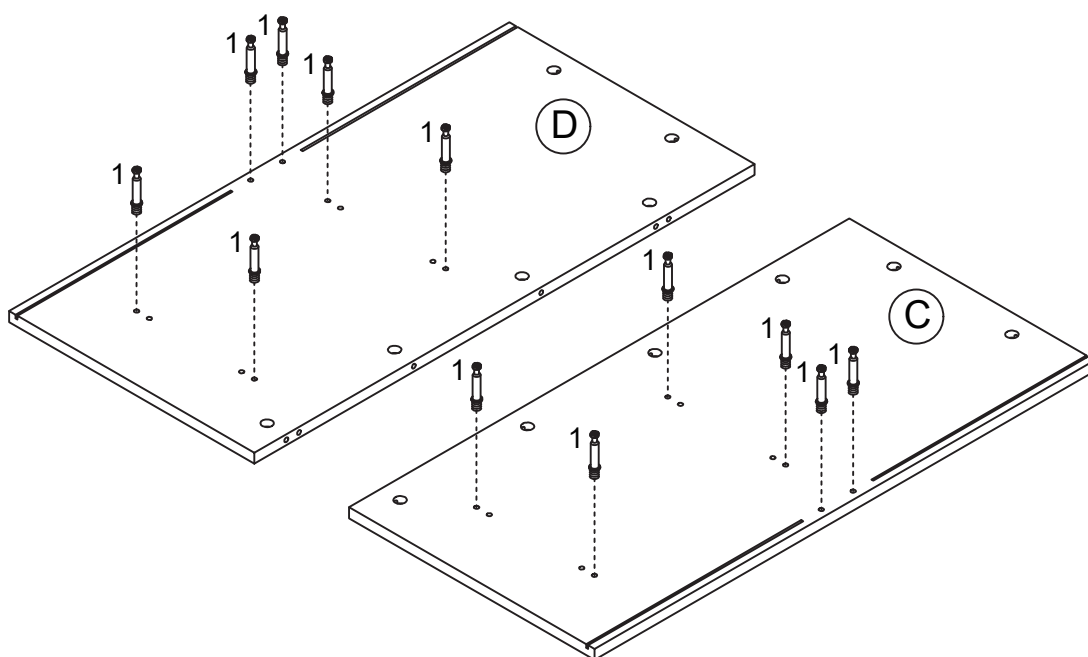


1



X 12

 16

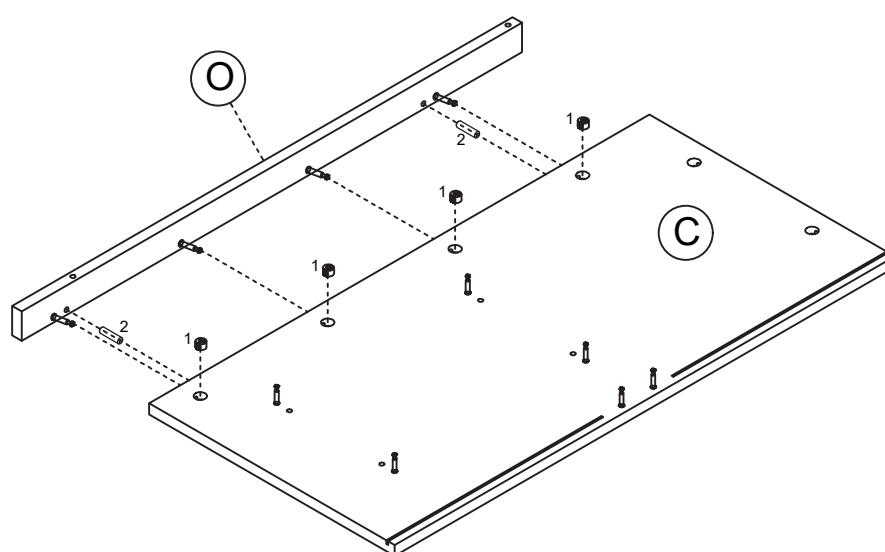

1



 
X 4

2




X 2

17

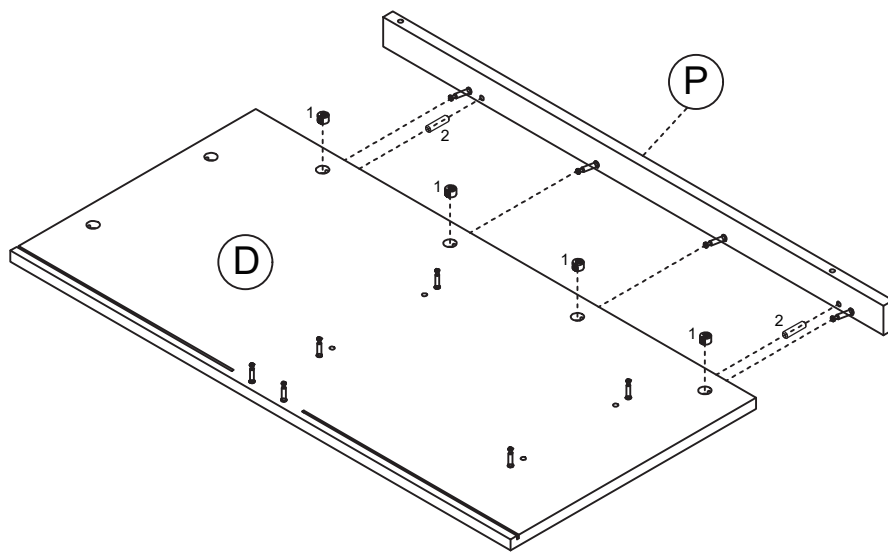



1		X 4
2		X 2

 18

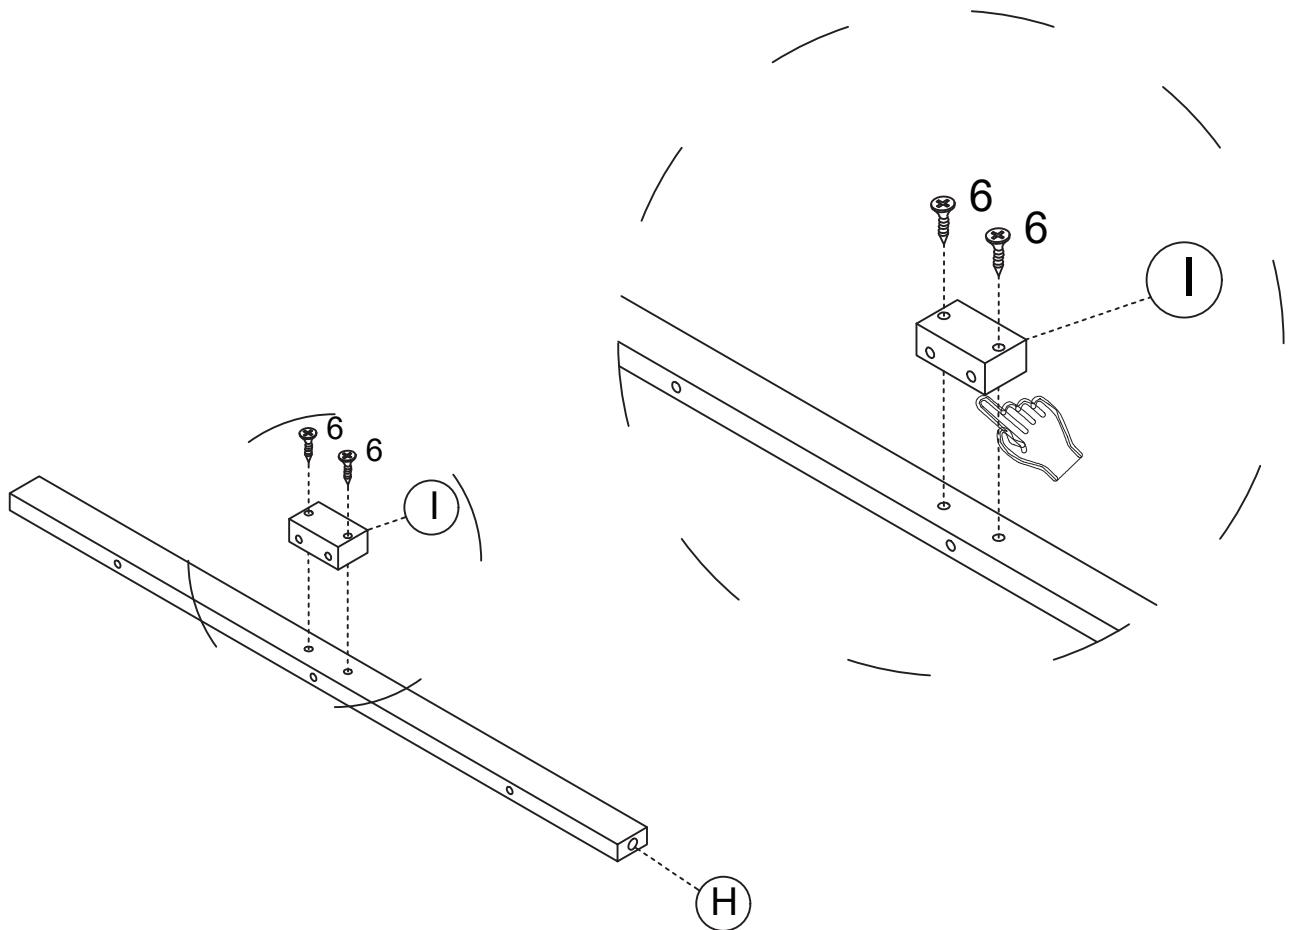

6		X 2
---	---	-----

  19

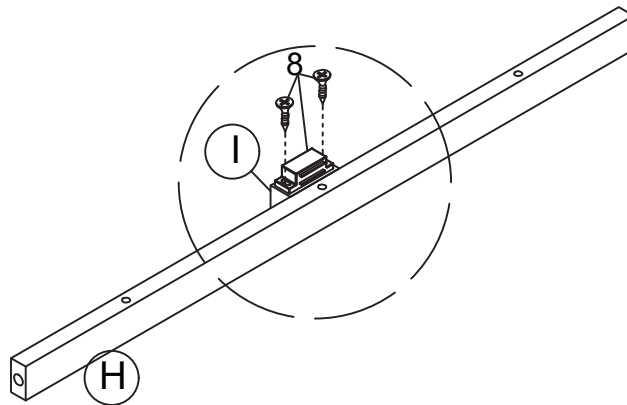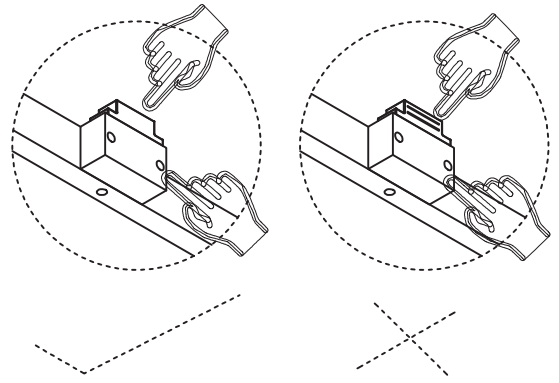


8



X 1

 20

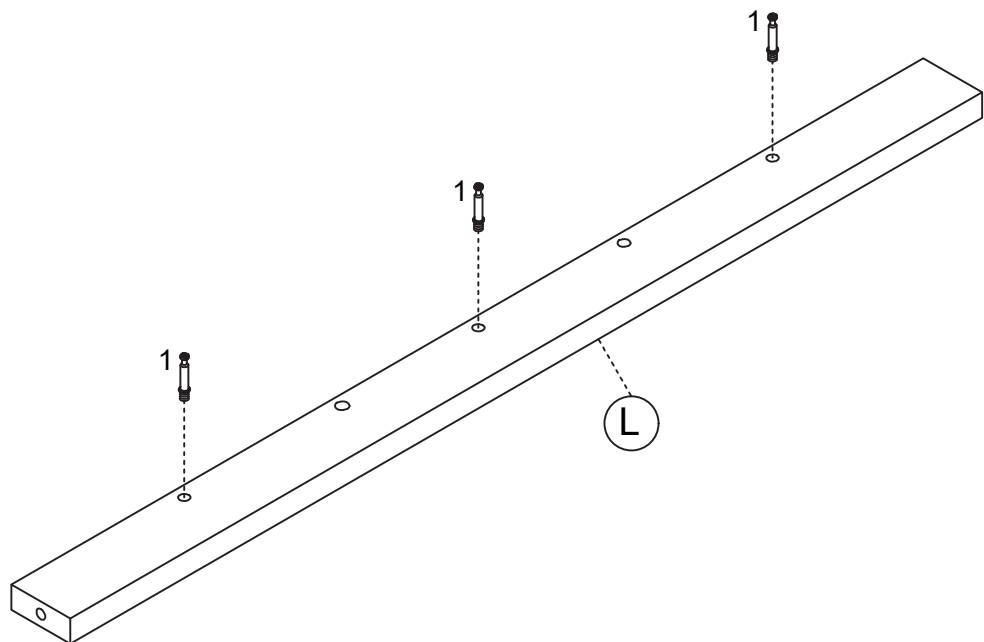


1




X 3

 21

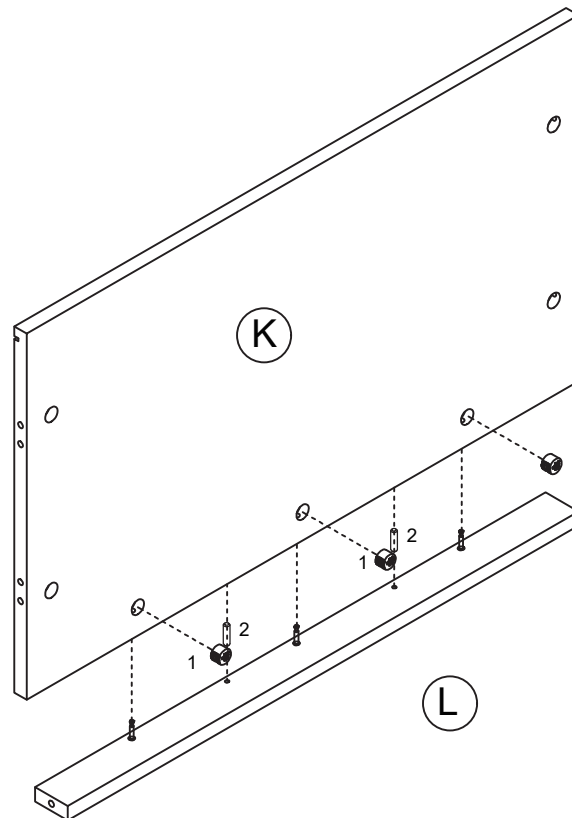


2		X 2
1		X 3

 22

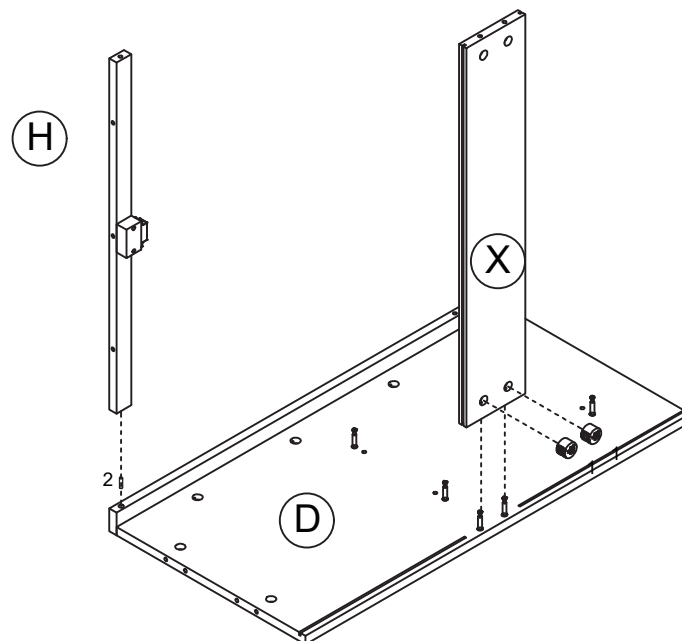


1		X 2
2		X 1

 23

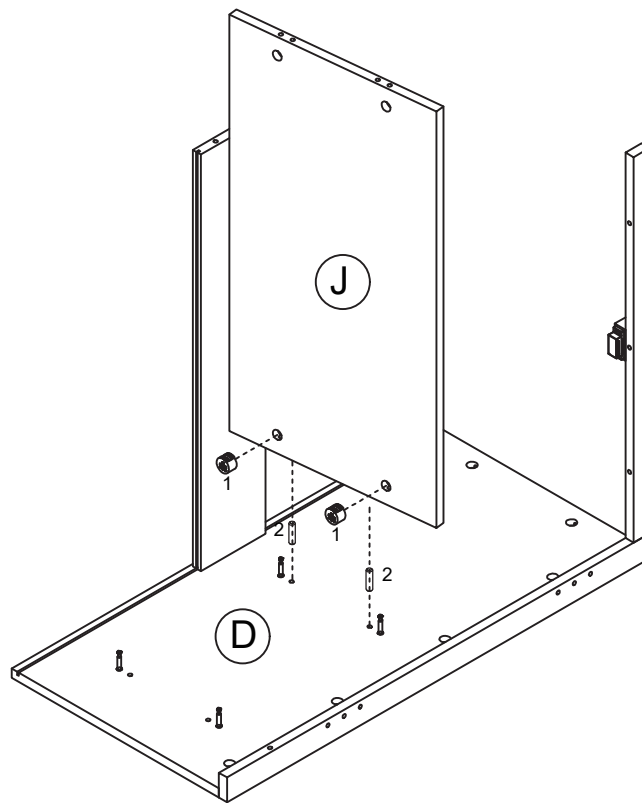


1		X 2
2		X 2

 24

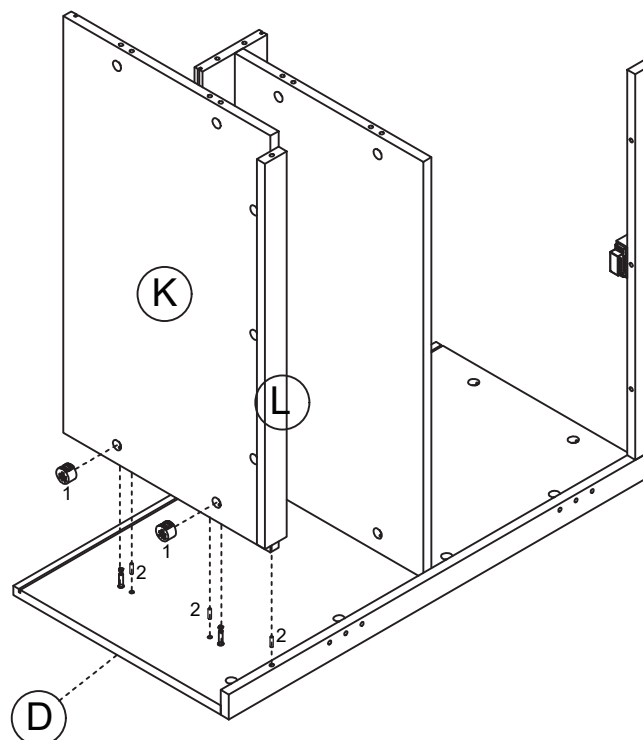


1		X 2
2		X 3

 
25

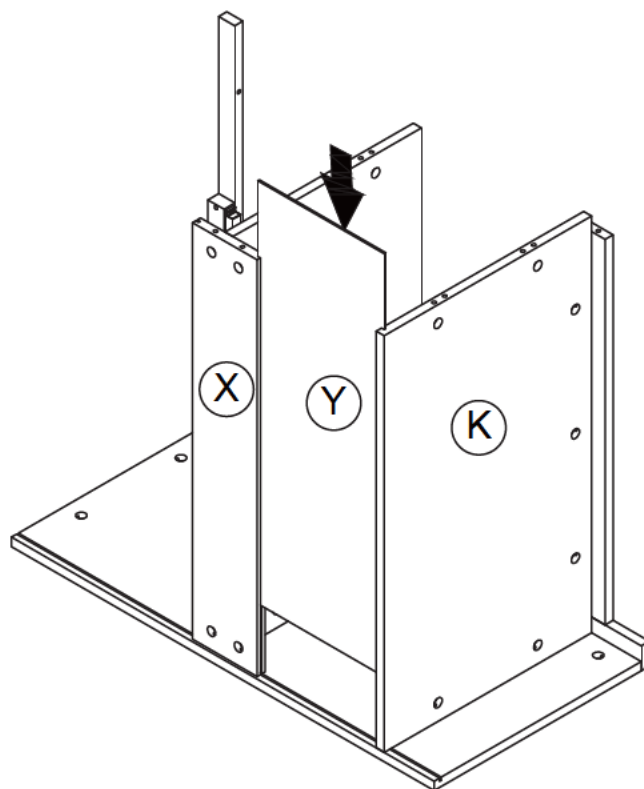


26

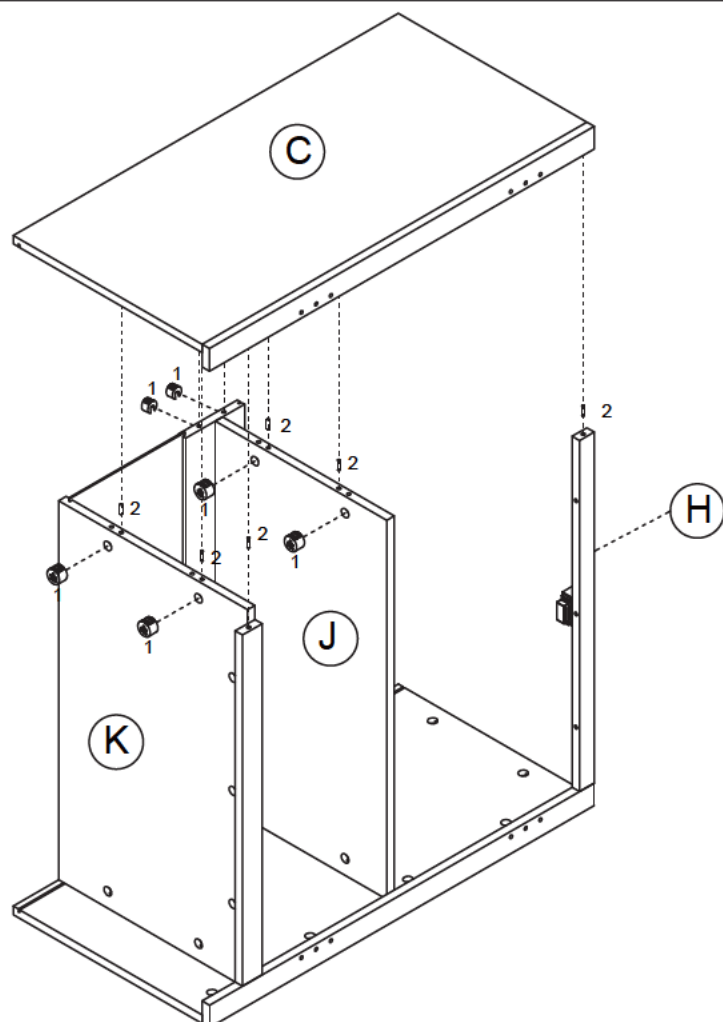 


1		X 6
2		X 6

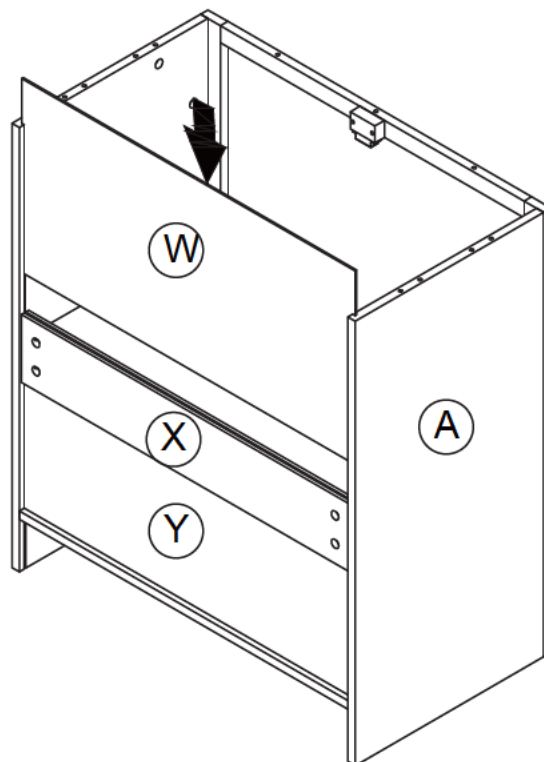 


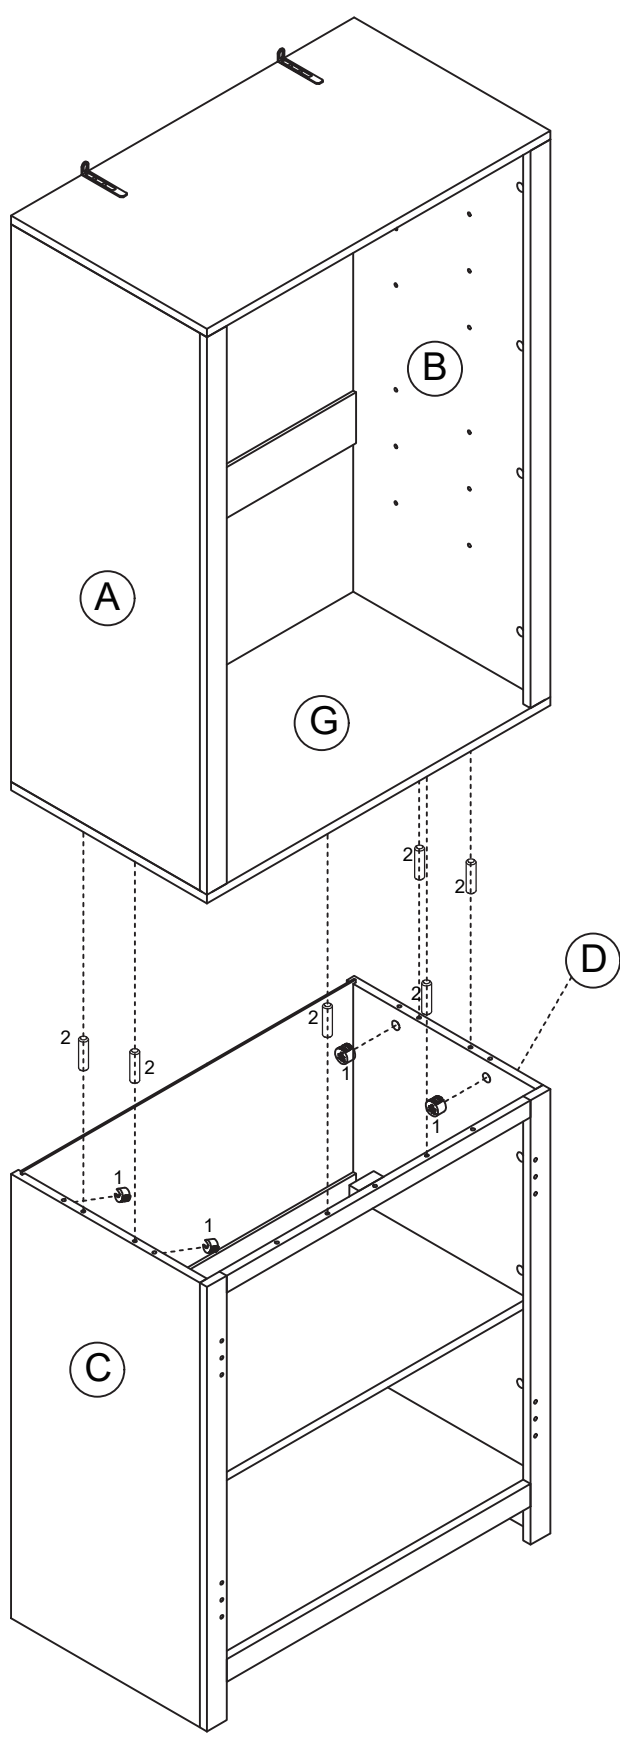 

1		X 4
2		X 6

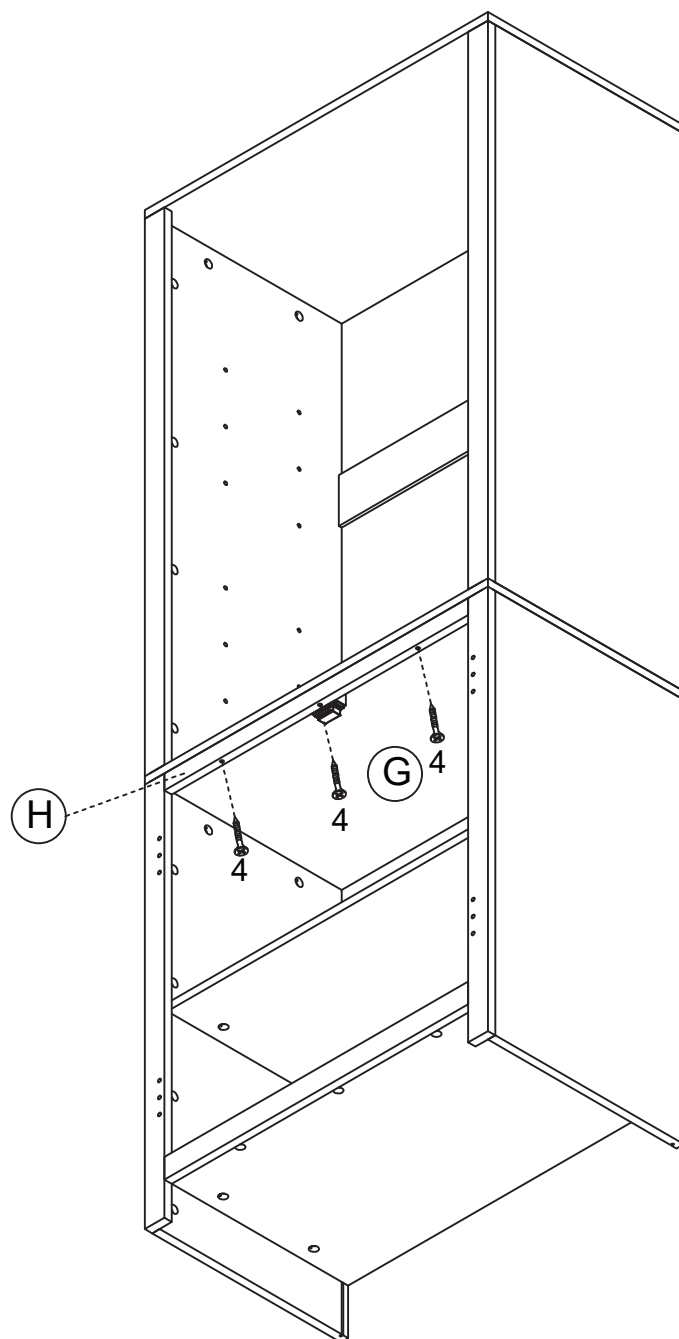 


30

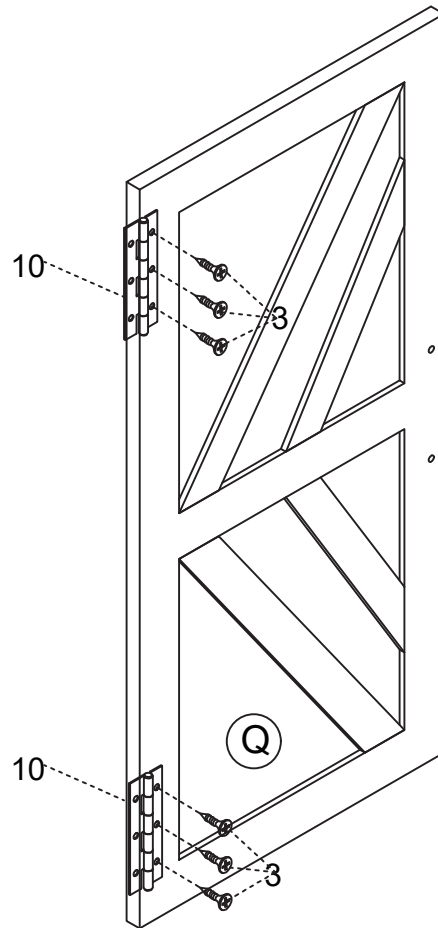 


10		X 2
3		X 6

 31

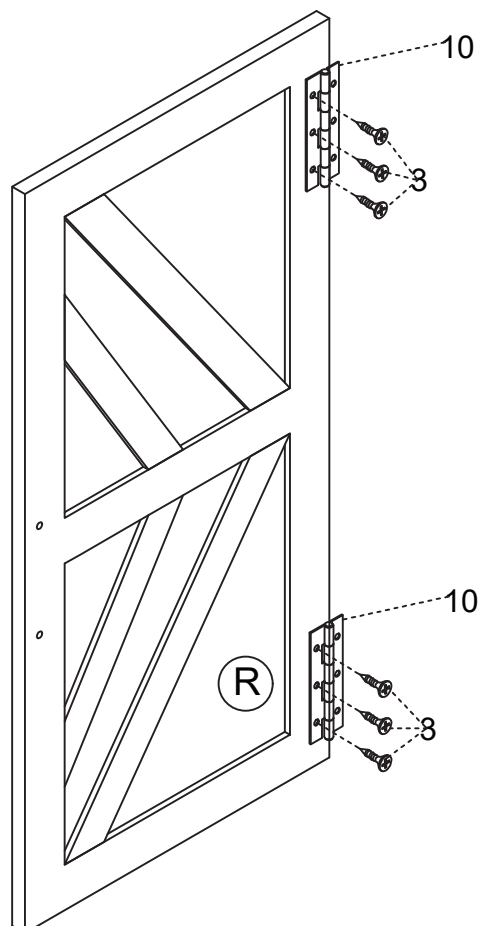


3		X 6
10		X 2

 32

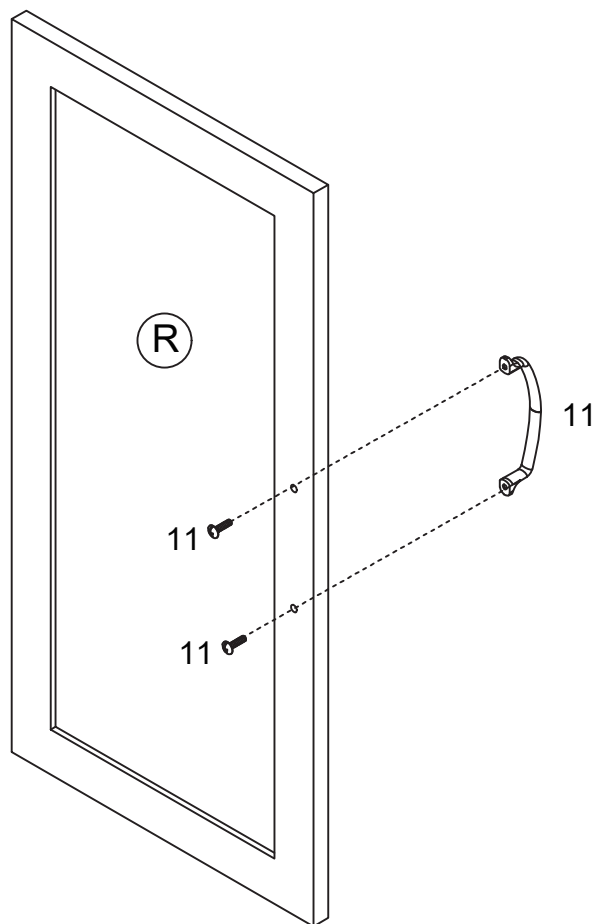


11  X 1

 33

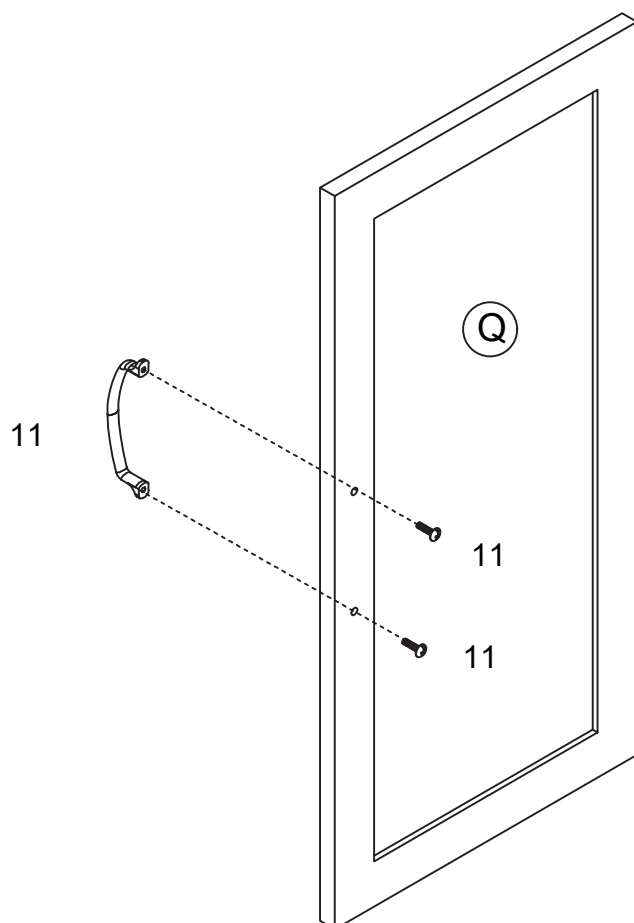


11  X 1

 34


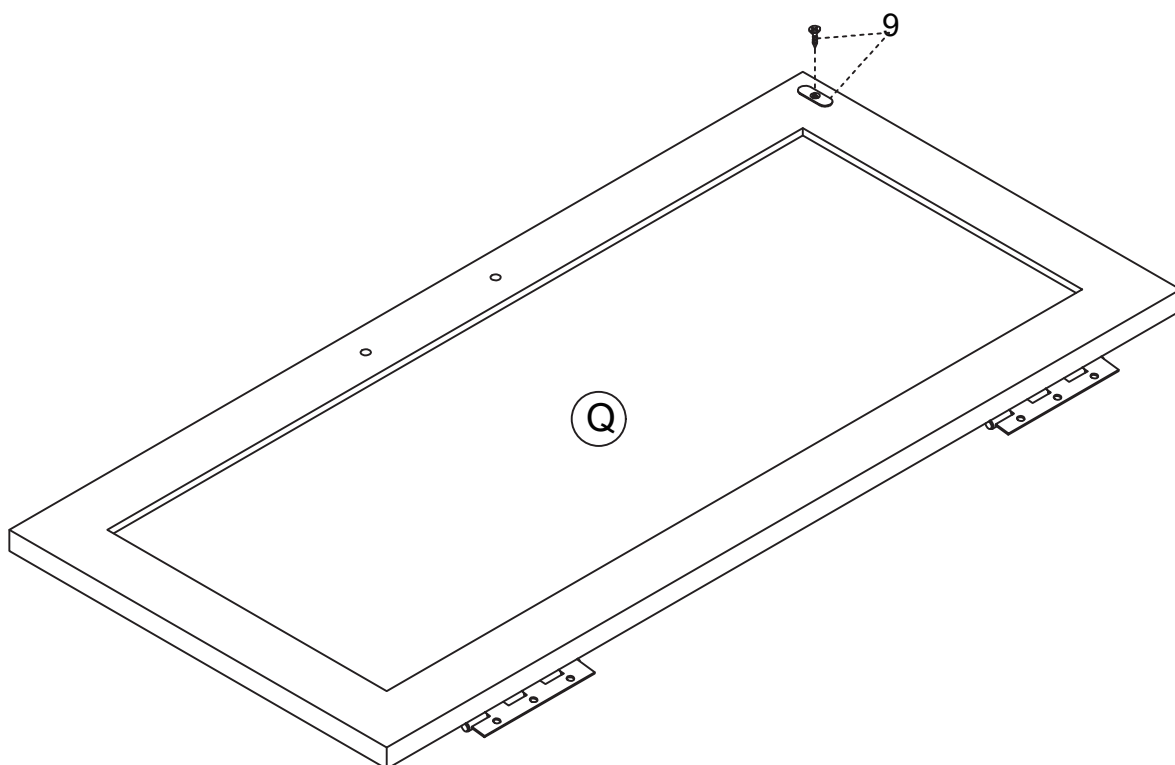


9	  X 1
---	---

 
35

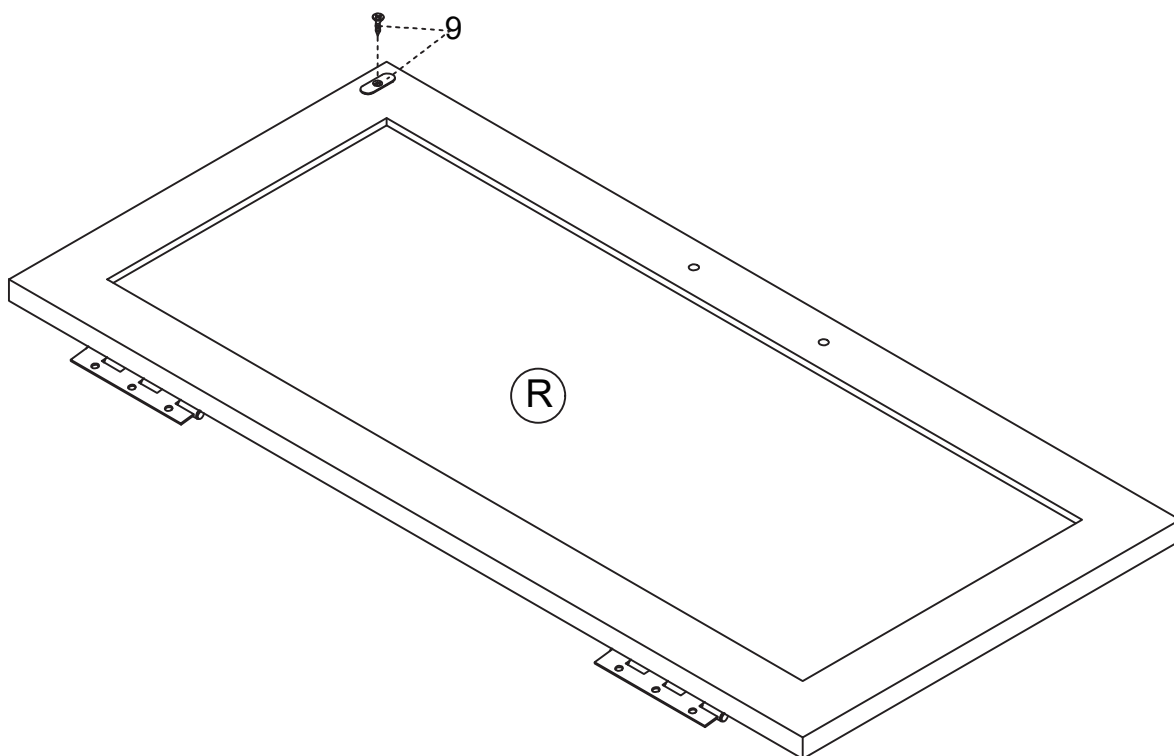


9	  X 1
---	---

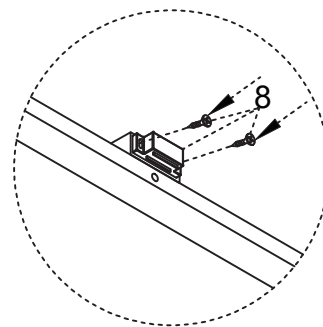 
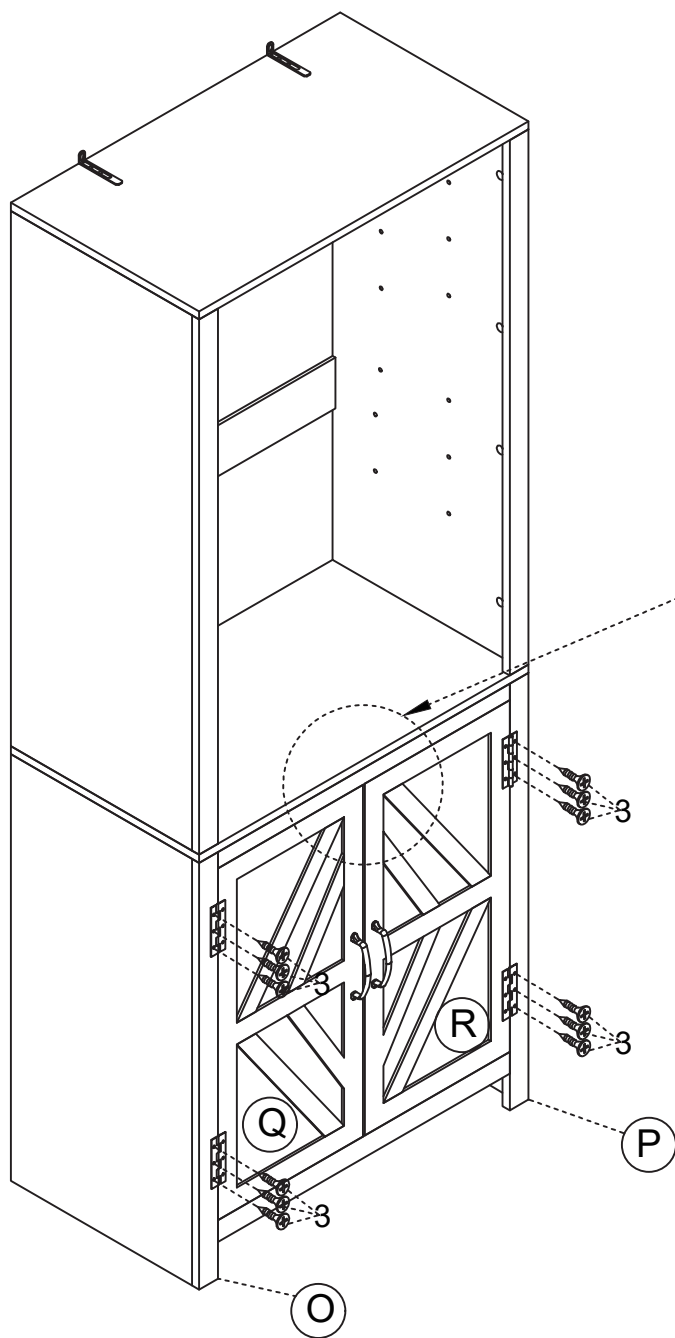 


 If it is found that the cabinet door is not flush with the edge of the upper board, you can fine-tune the No. 8 accessory screw"

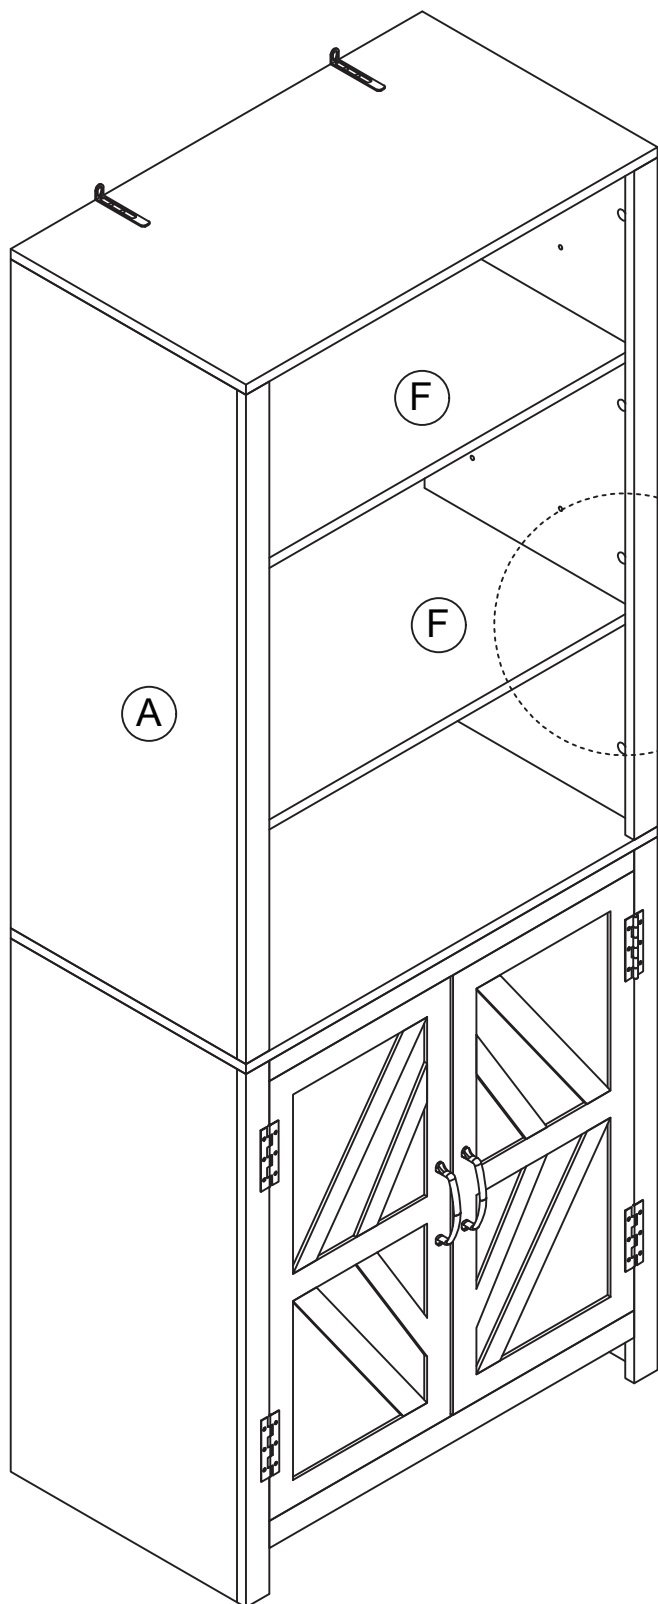


   "Pay attention to the difference between the front and rear placement directions of the laminates"

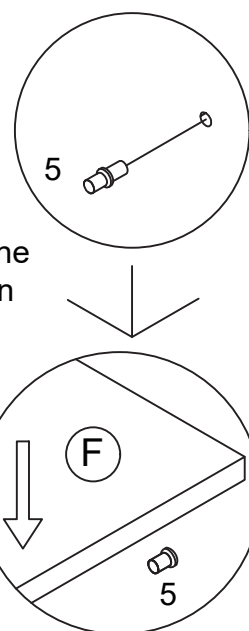


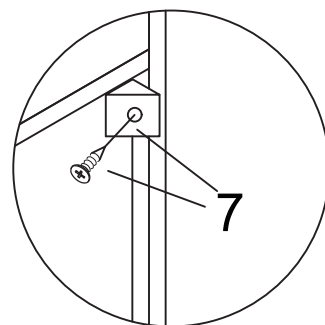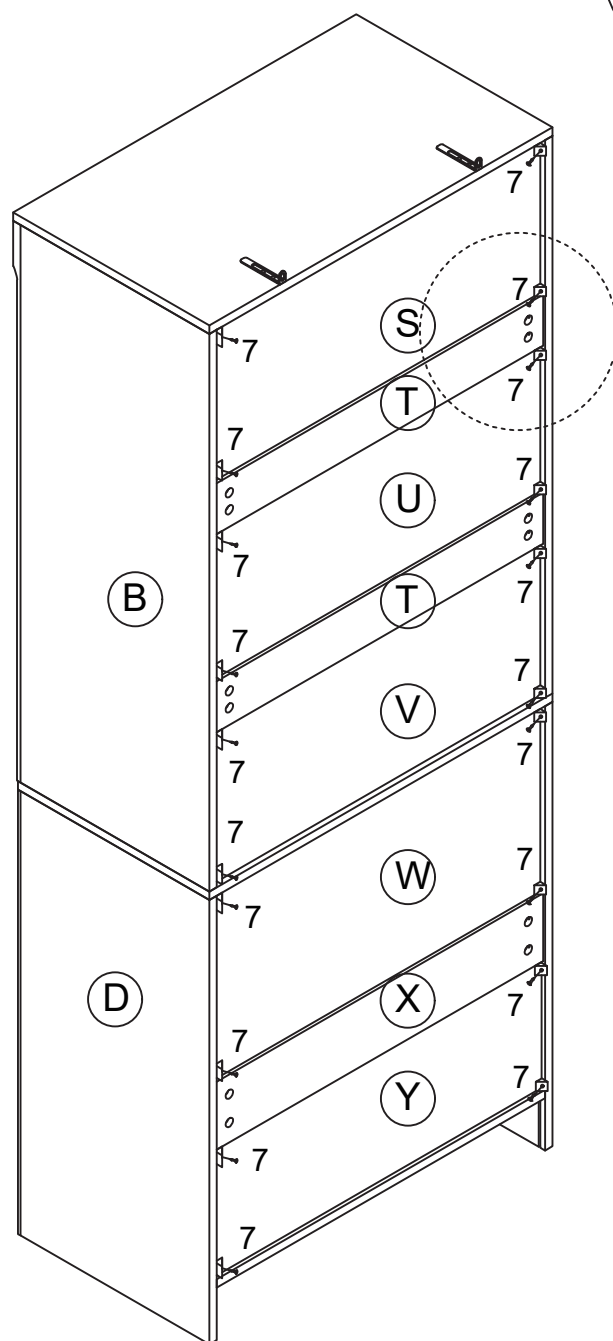

39

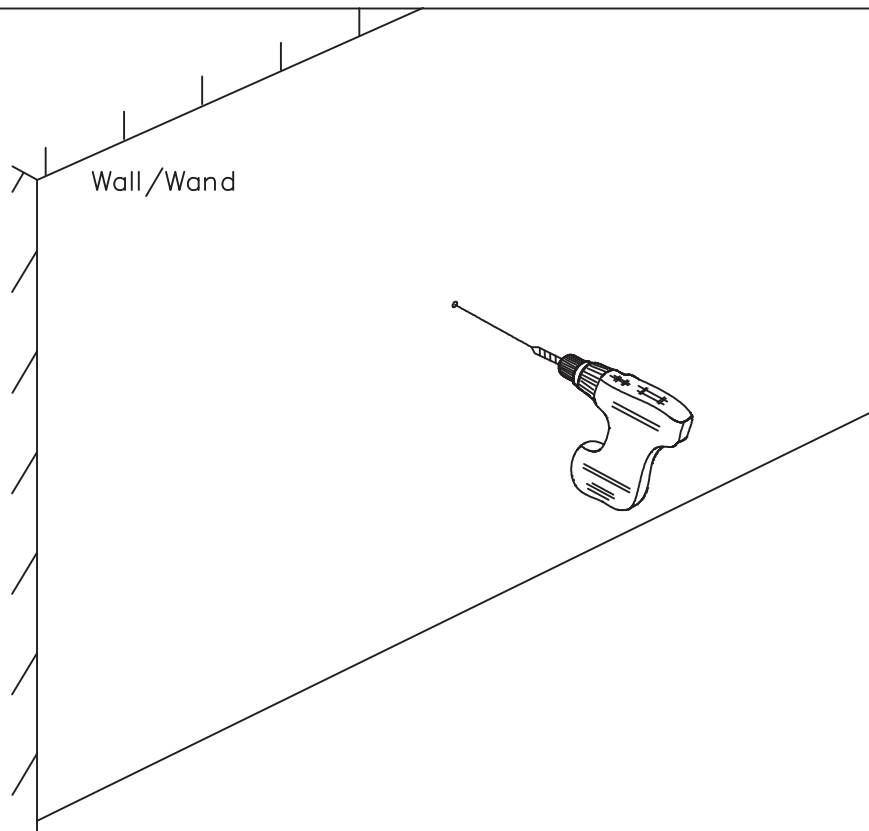 

40



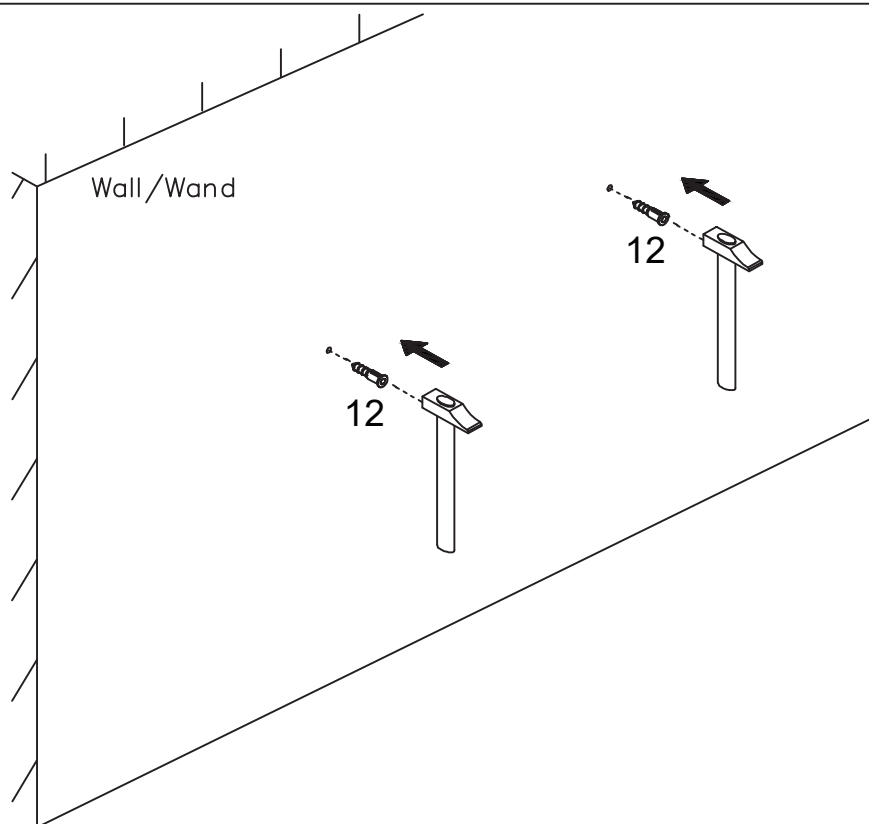 


12



X 2

   41

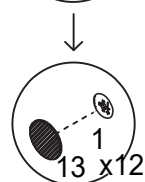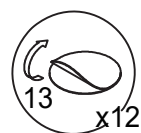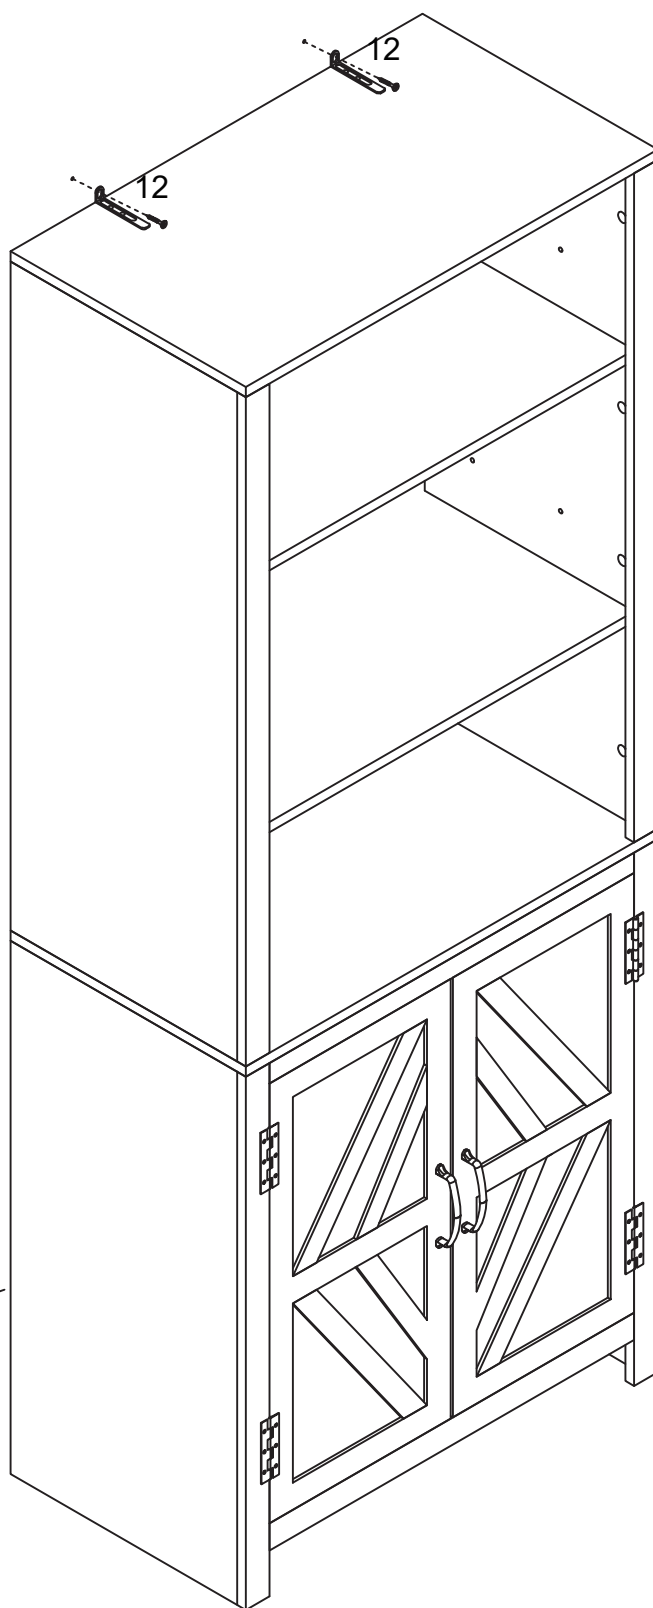

13		X 12
12		X 2