 


INSTALLATION

 
 
Product Manual

Version: 740003US-01-26A-AA

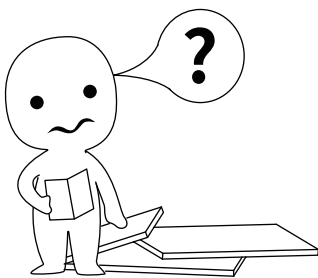



IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

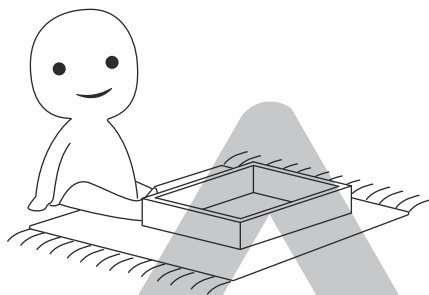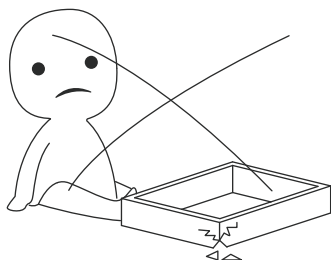





AVOID SCRATCHES!

  In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.

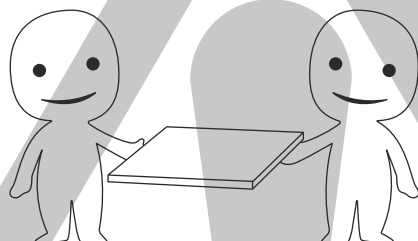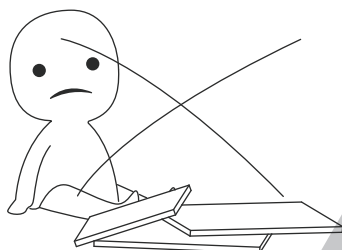

IMPROVE EFFICIENCY !

    Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

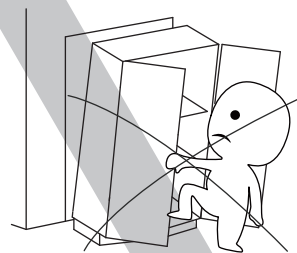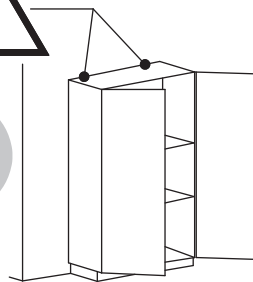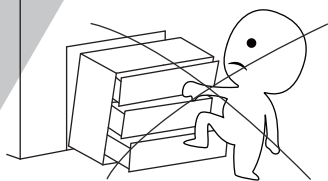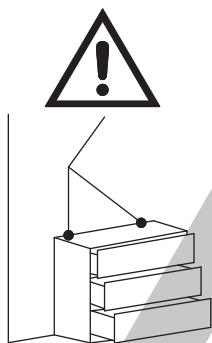

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

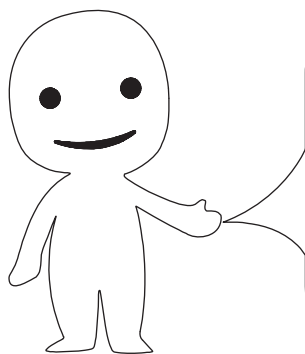

Please prepare the following tools

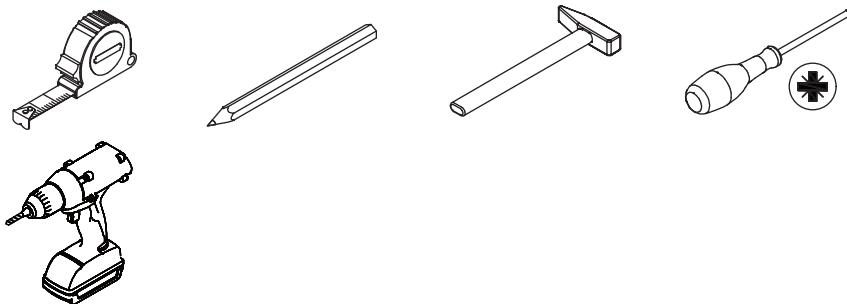 


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 116




CRB1595A

 B x 116




C x 116

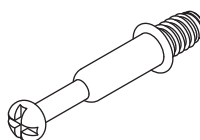 

CRA0635B

 D x 4

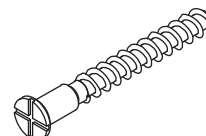


CRC0540A

E x 60




CRF0630A

 F x 16



DGA861C

 G x 98




CRD3514A


H x 5



 J x 4

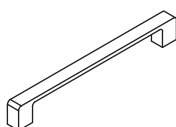


K x 13

 


CRE0418A

 
L x 2

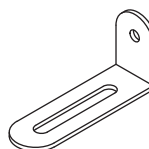

M x 2

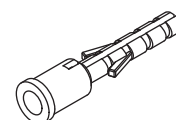 


N x 2

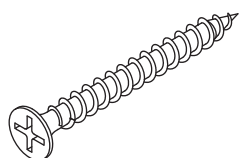 


CRD3535A


 
P x 57



Q x 57

 

CRD0314A






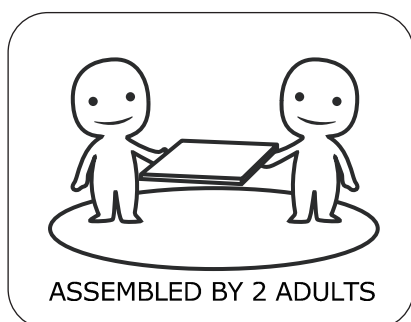 
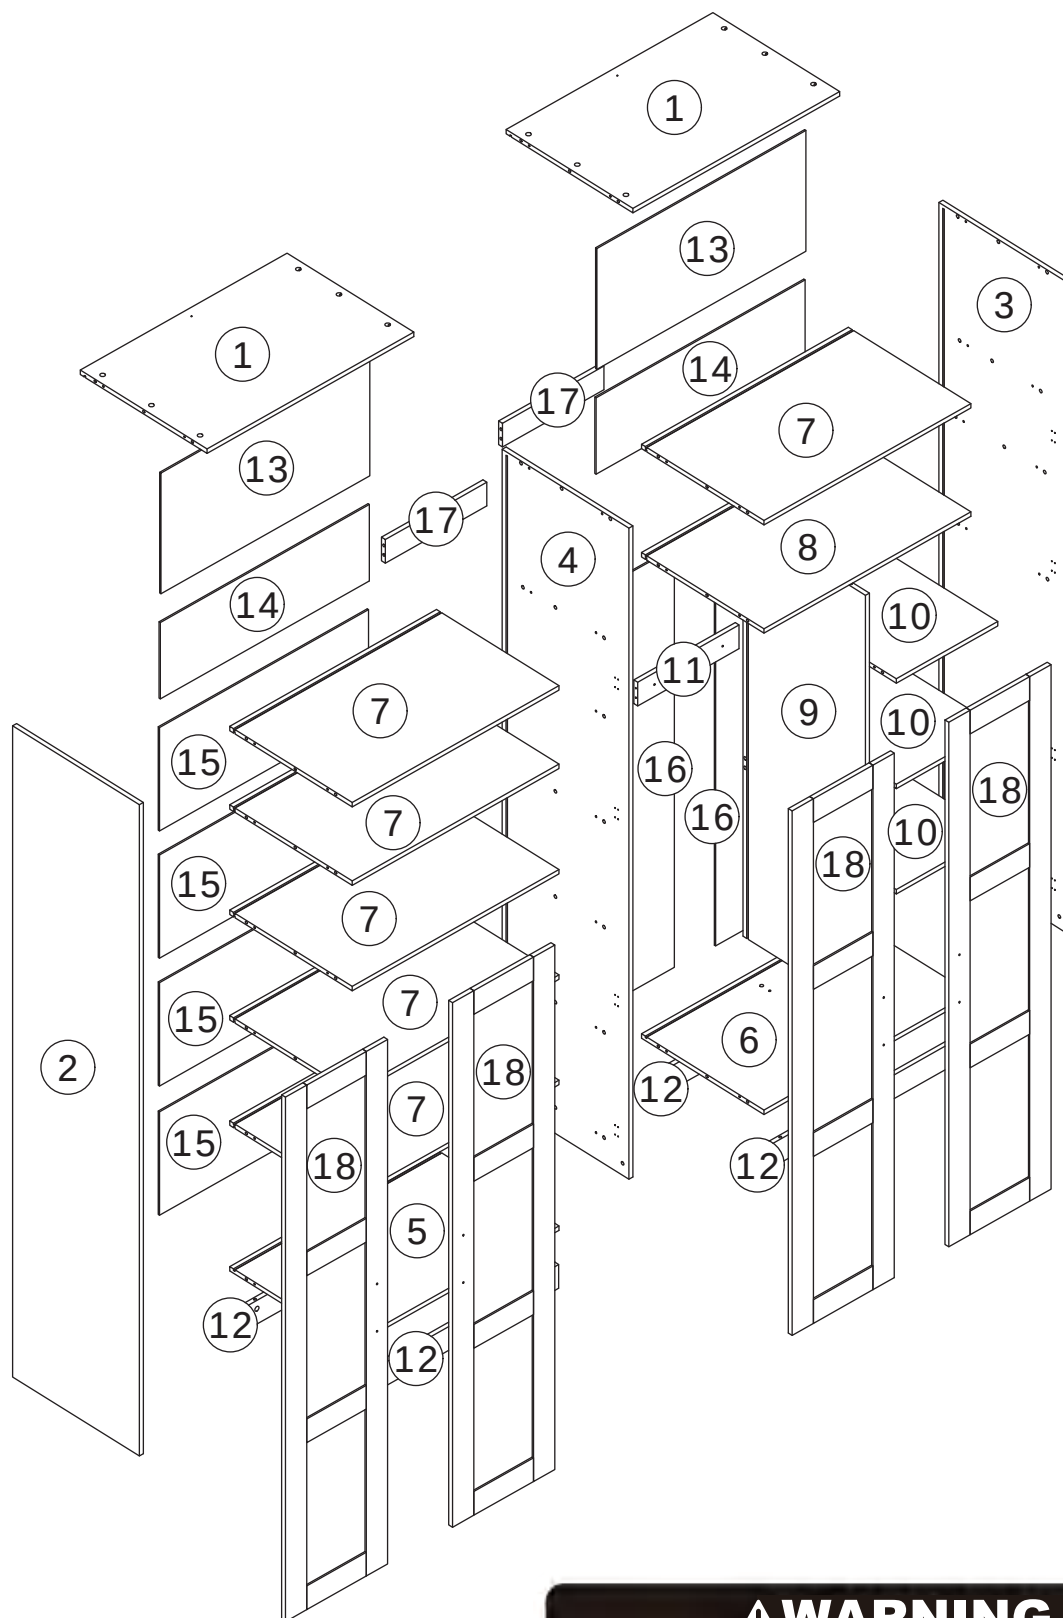 


⚠ WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

       *This is a permanent label.
Do not remove!*

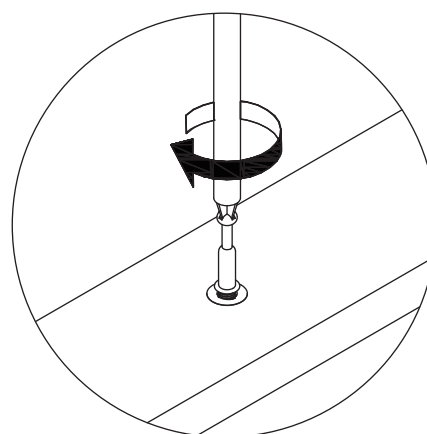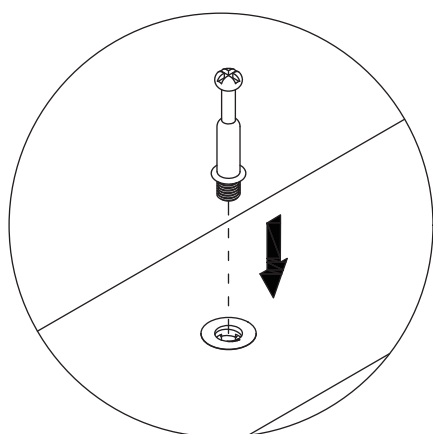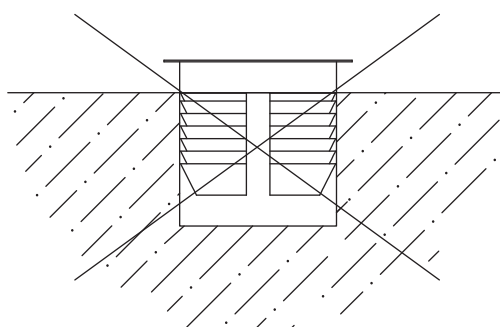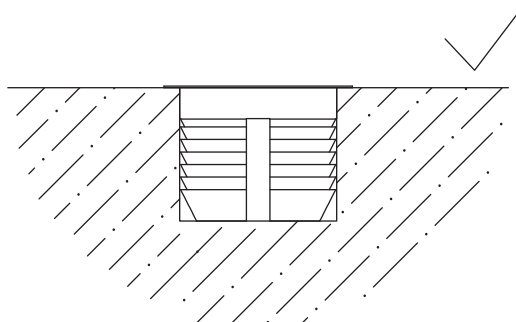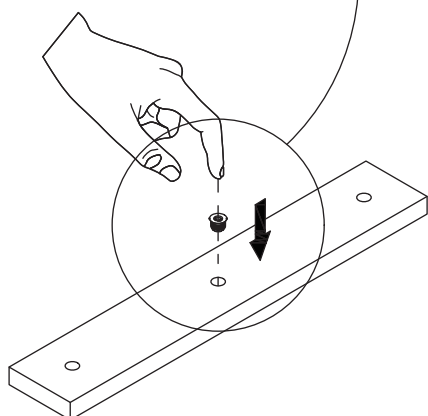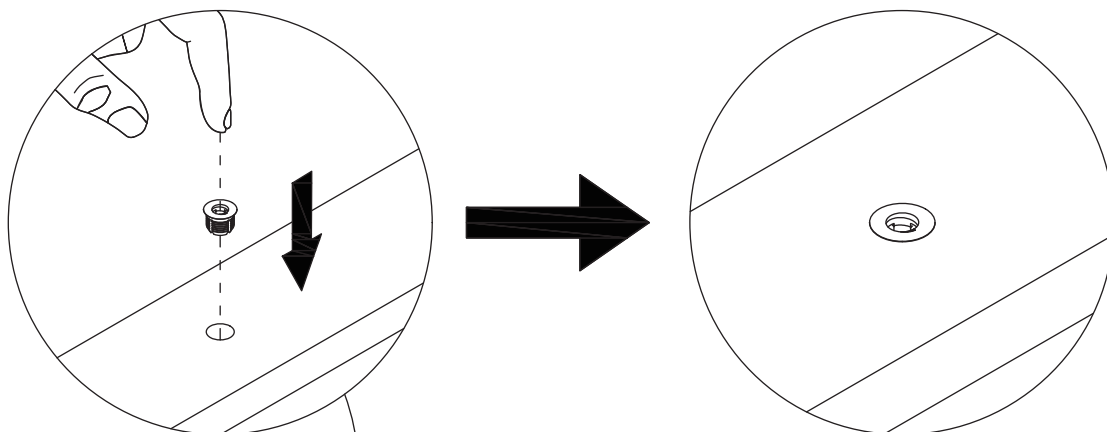


1


B x 10



 
C x 8






CRA0635B

 

 First, install plug (B) onto **both sides of** panel 9, then screw self-tapping rod (C) into panel 9.

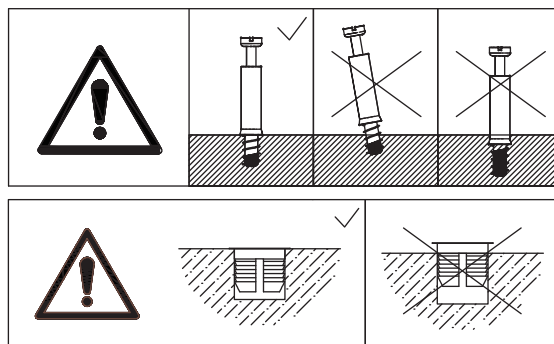

Flip to the other side

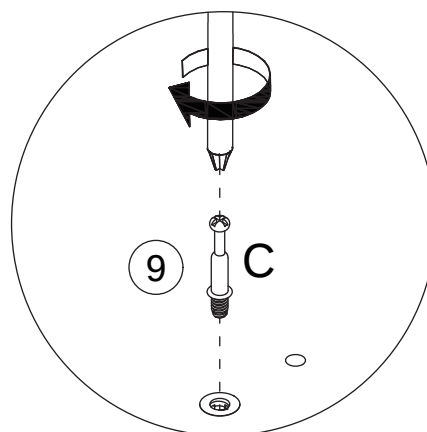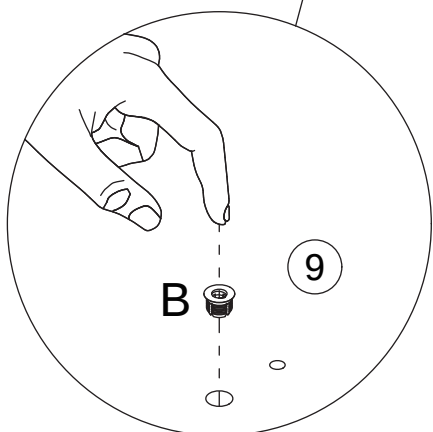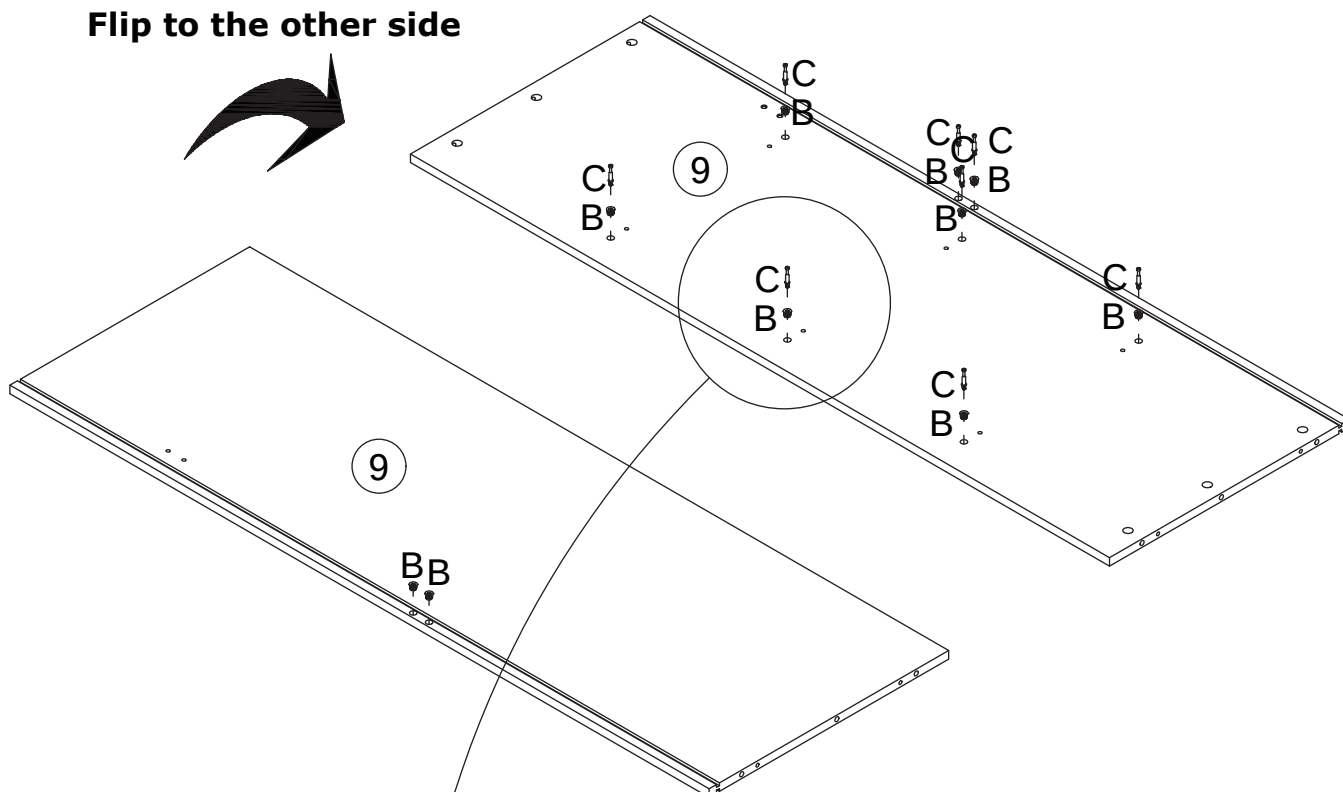   


2

A x 6




CRB1595A


 
E x 6



CRF0630A

 

  Connect panel 10 to panel 9 using wooden dowel (E), then tighten by turning cam lock (A) clockwise.

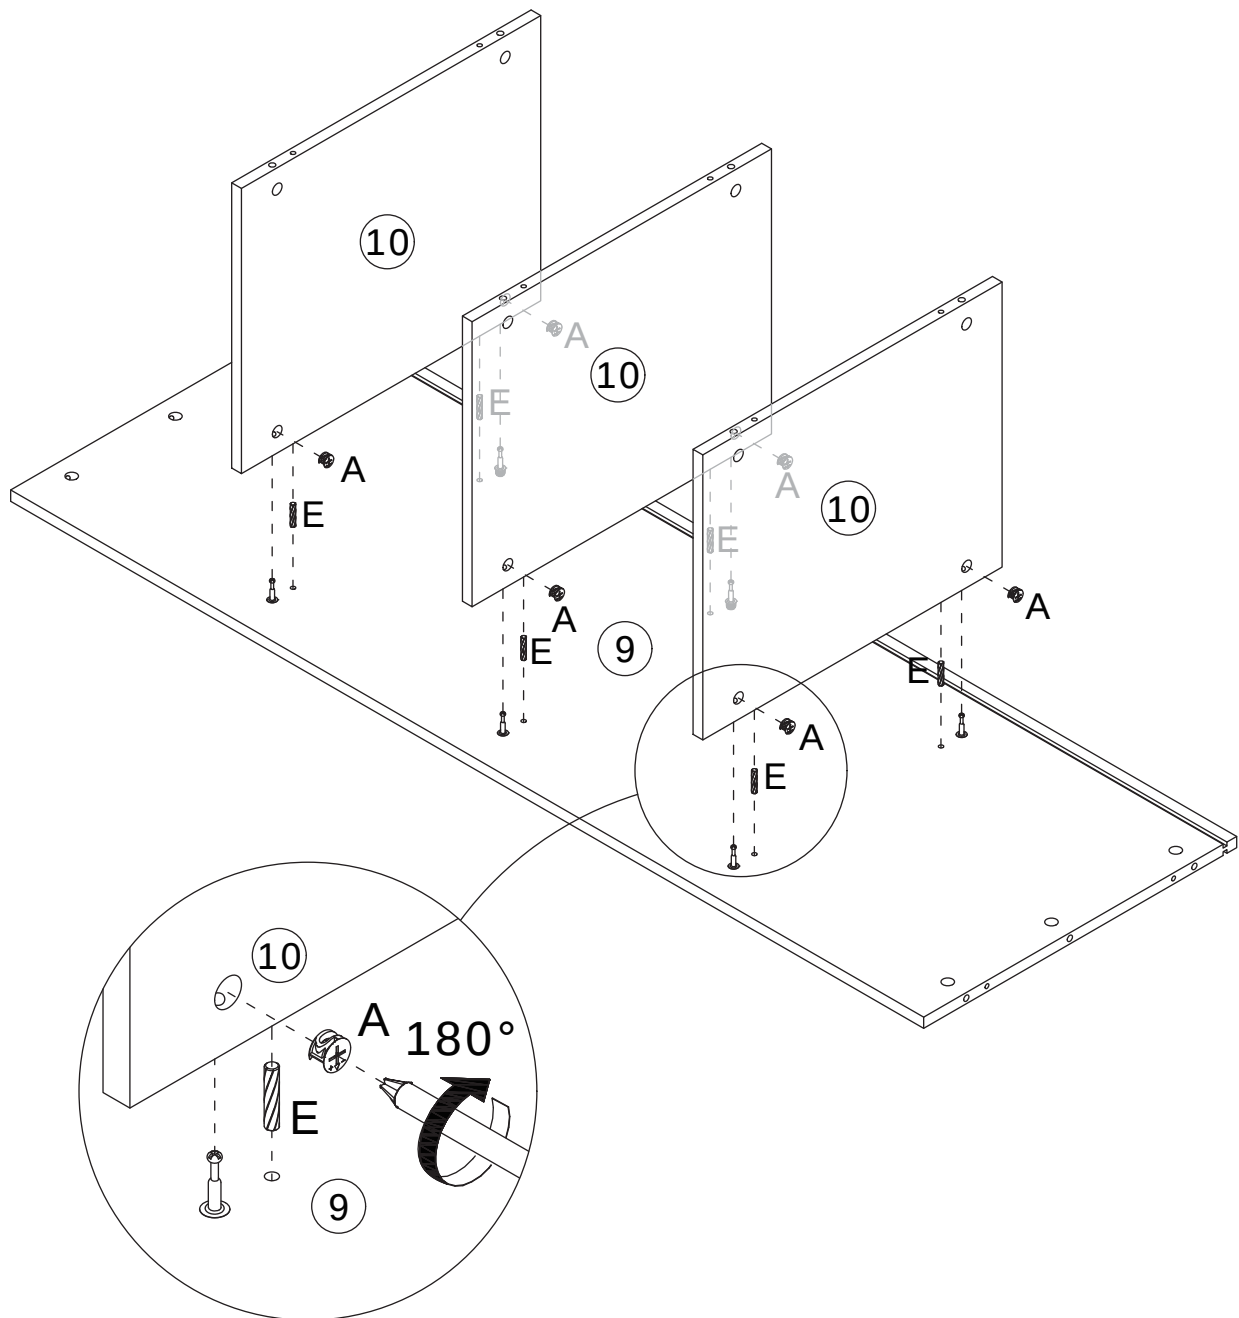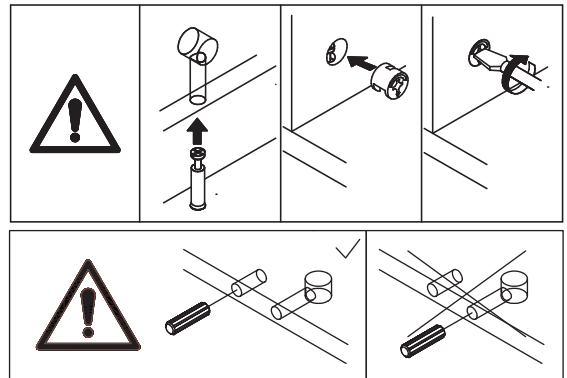


3


B x 3






 
C x 3



CRA0635B

 

    First, install plug (B) onto panel 8, then screw self-tapping rod (C) into panel 8.

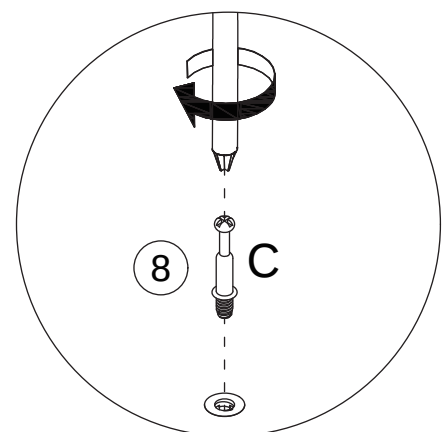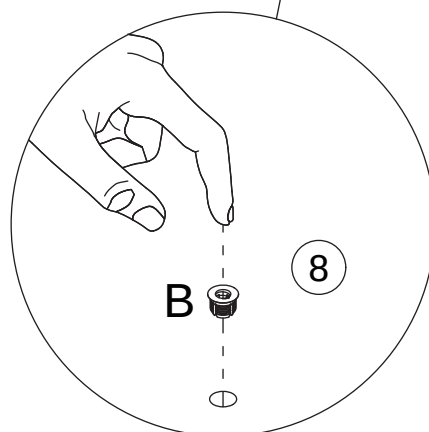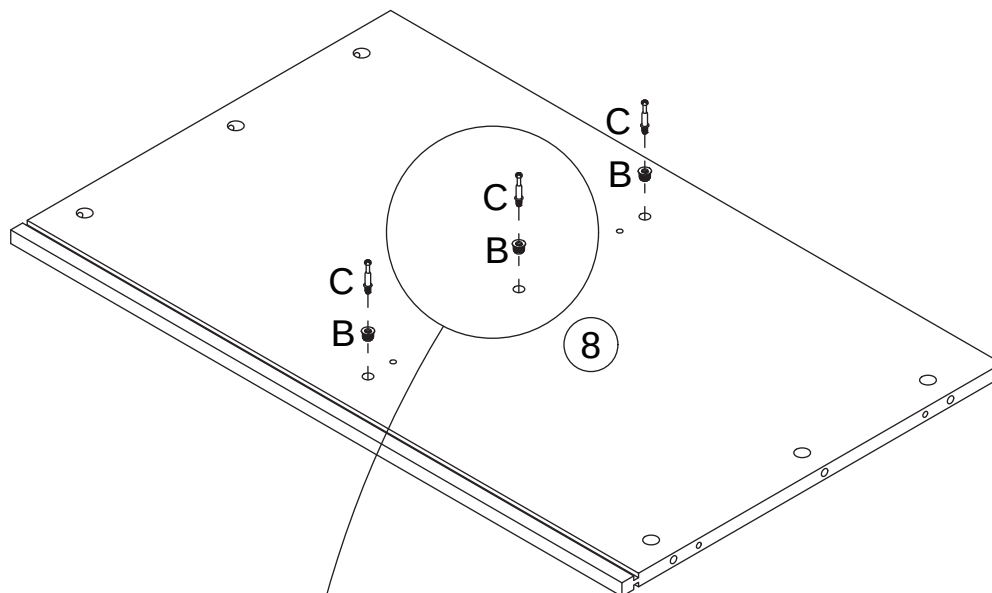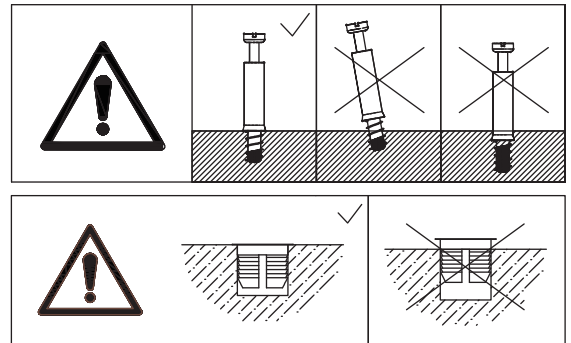

4

A x 3




CRB1595A



E x 2



 CRF0630A



  Connect panel 8 to panel 9 using wooden dowel (E), then tighten by turning cam lock (A) clockwise.

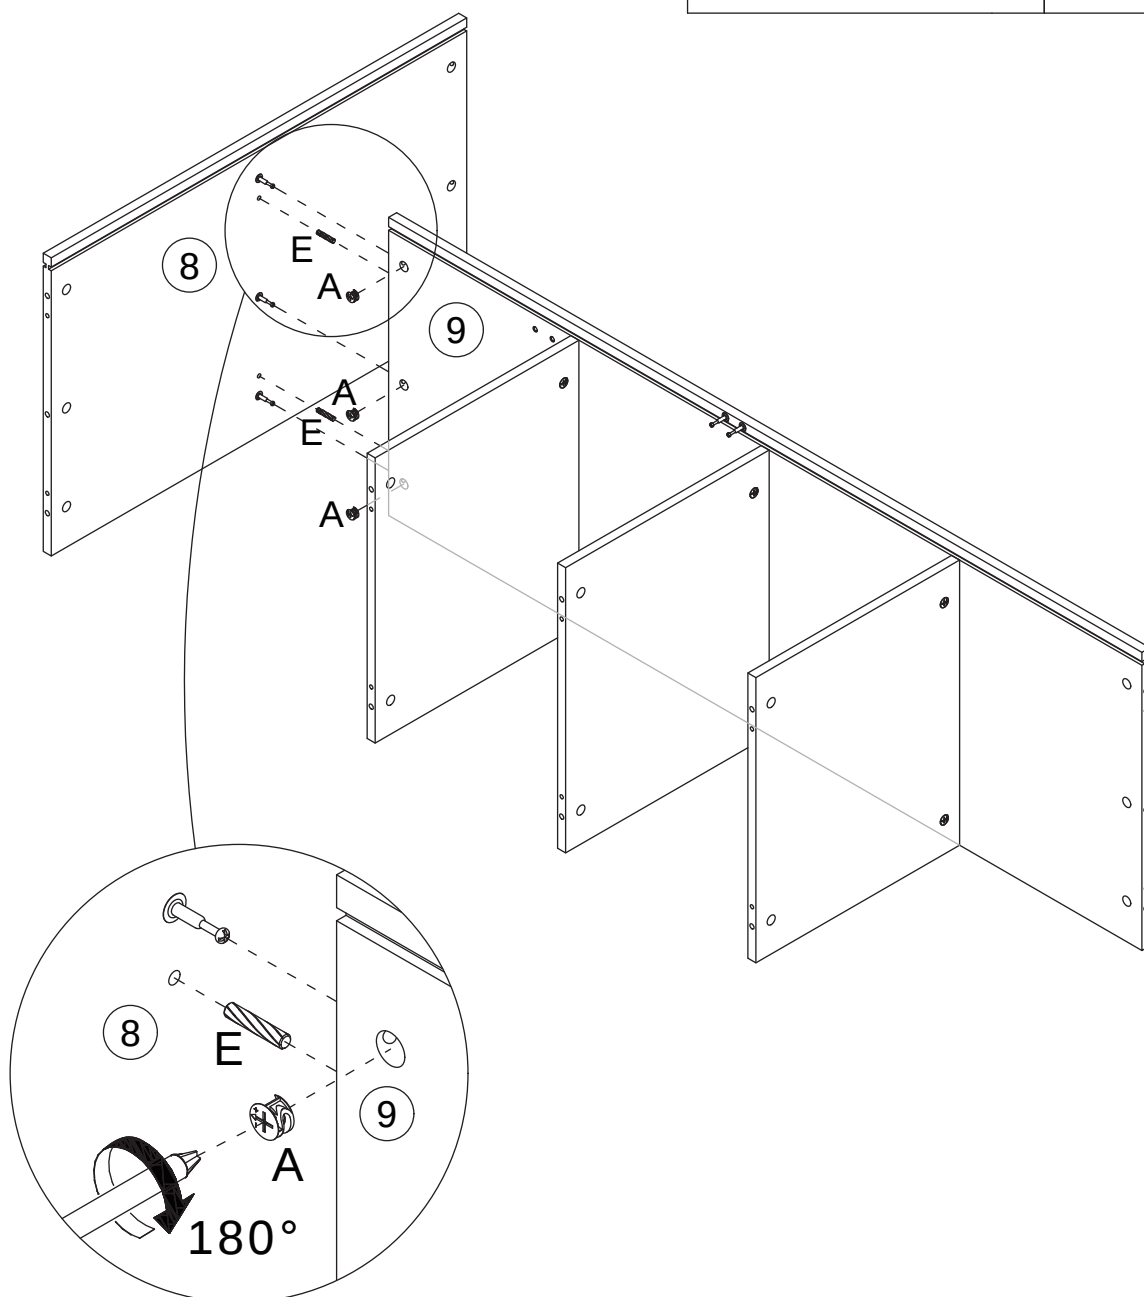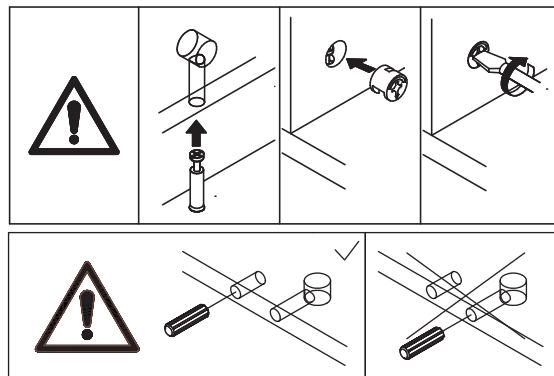


5


B x 9



 
C x 6






CRA0635B

 

 First, install plug (B) onto **both sides of** panel 6, then screw self-tapping rod (C) into panel 6.

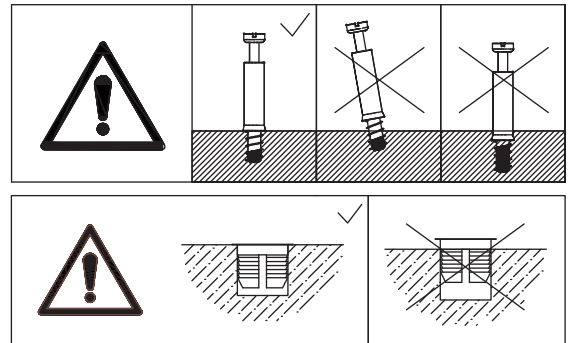

Flip to the other side

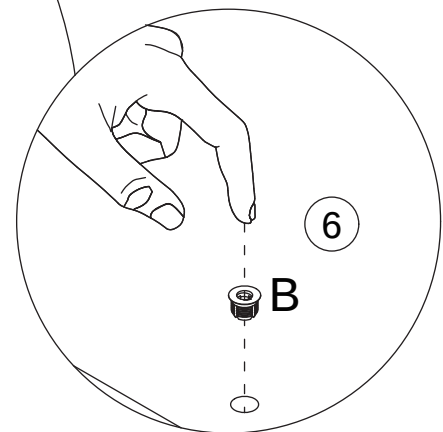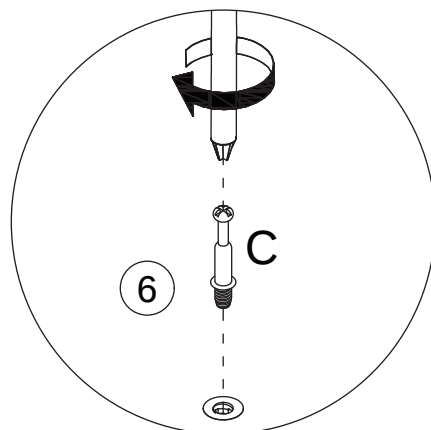  
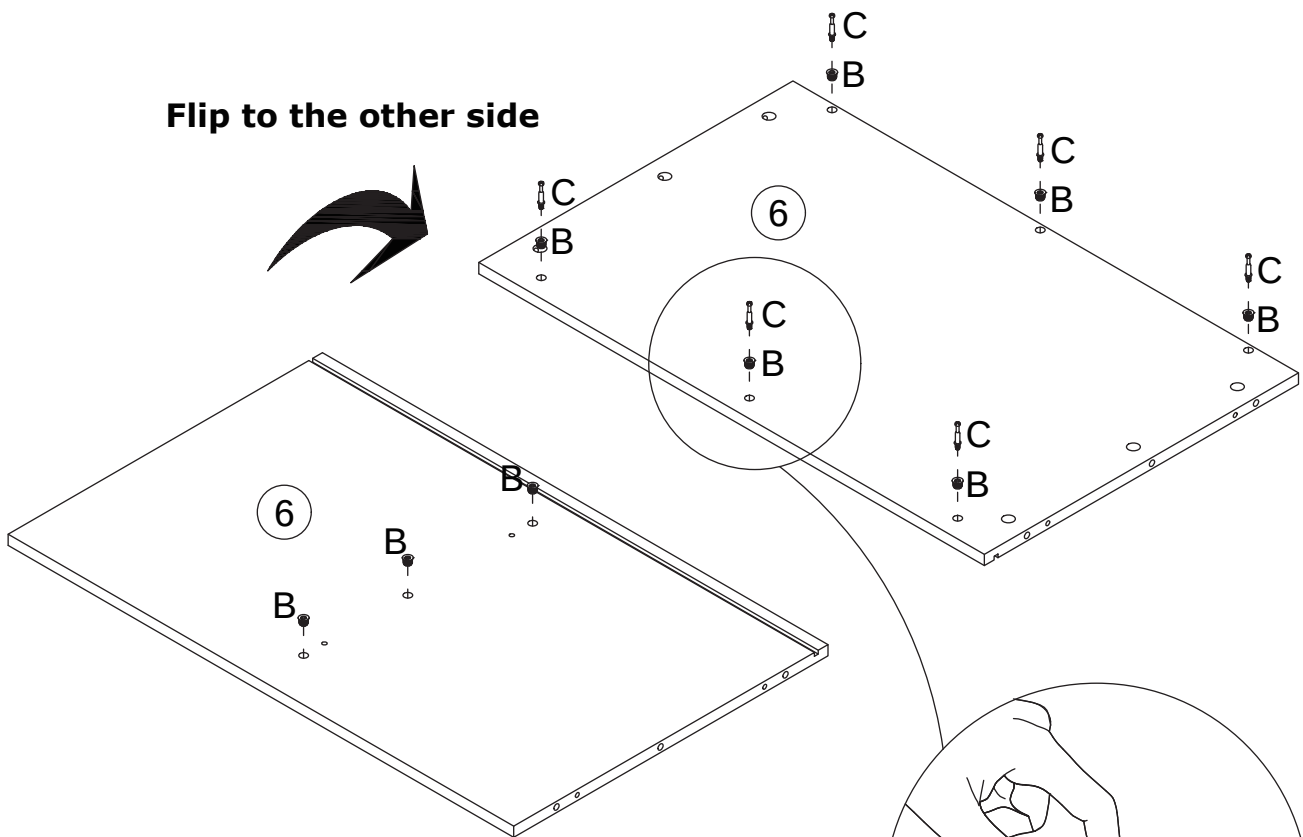 


6


A x 6




 
 
CRB1595A

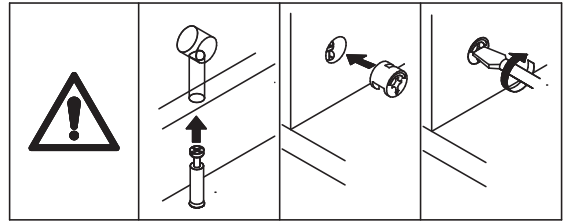

 
Connect panel 12 to panel 6, then tighten by turning cam lock (A) clockwise.

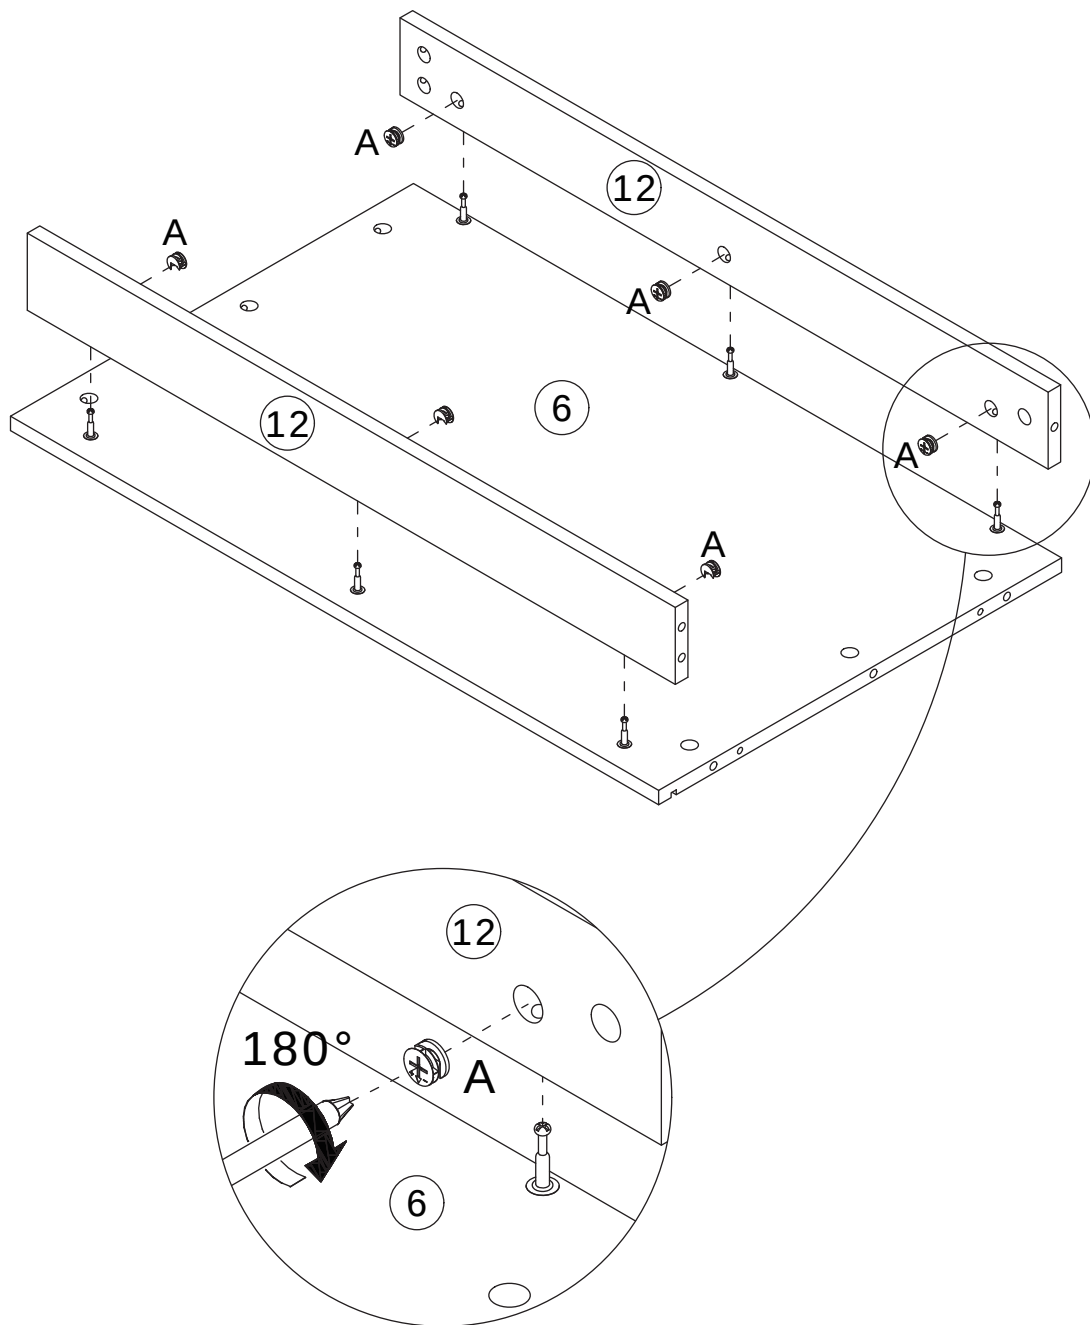

7

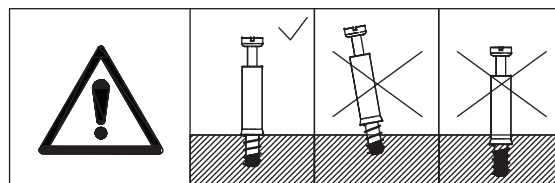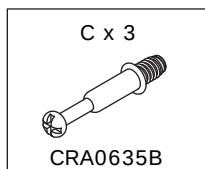   

 Screw self-tapping rod (C) into panel 6.

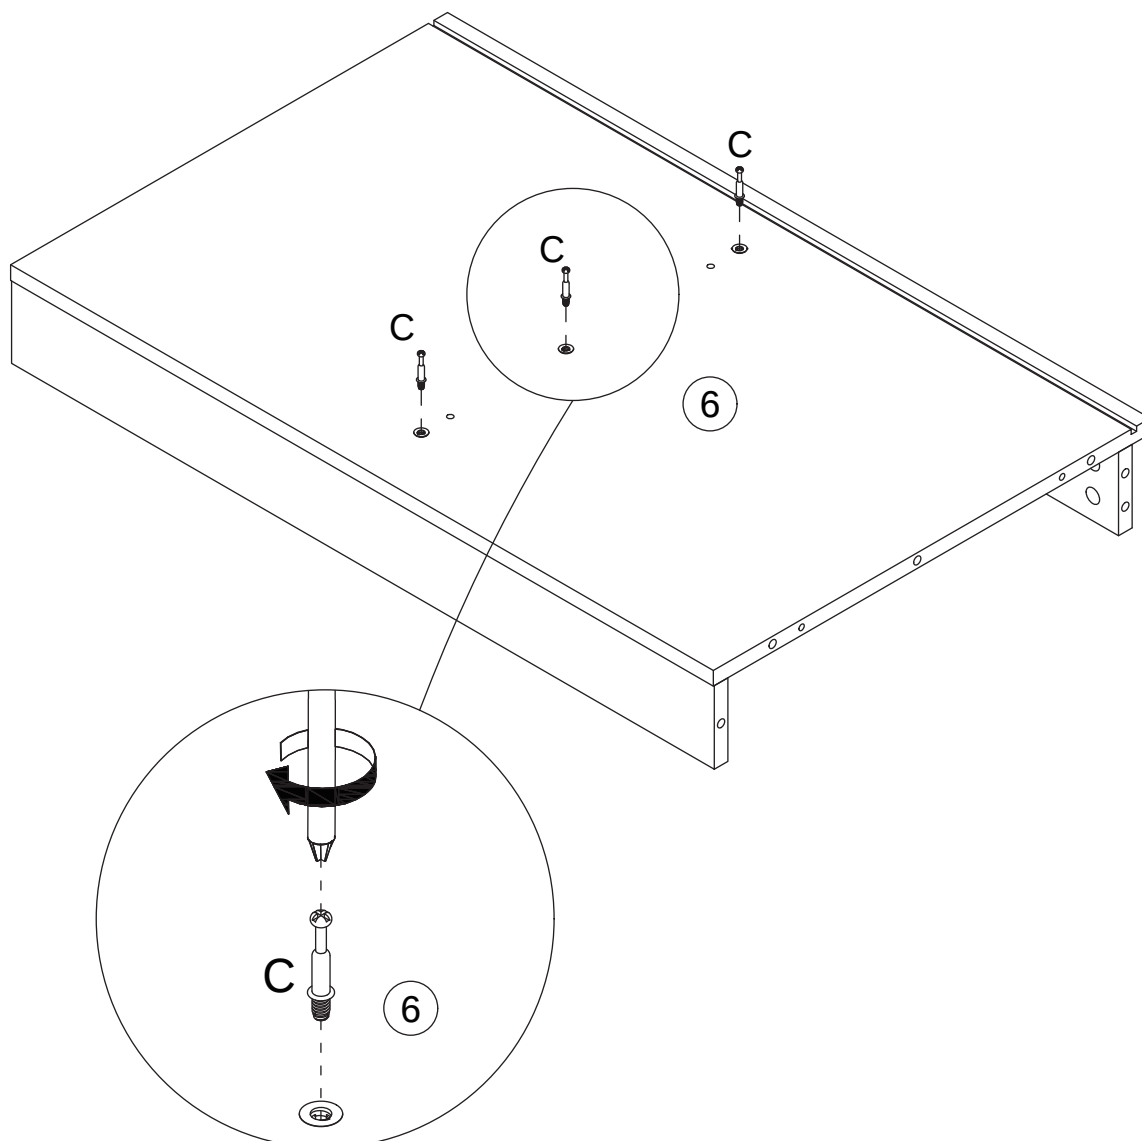


8

A x 3




CRB1595A


 
E x 2






CRF0630A

 

  
Connect panel 6 to panel 9 using wooden dowel (E), then tighten by turning cam lock (A) clockwise.

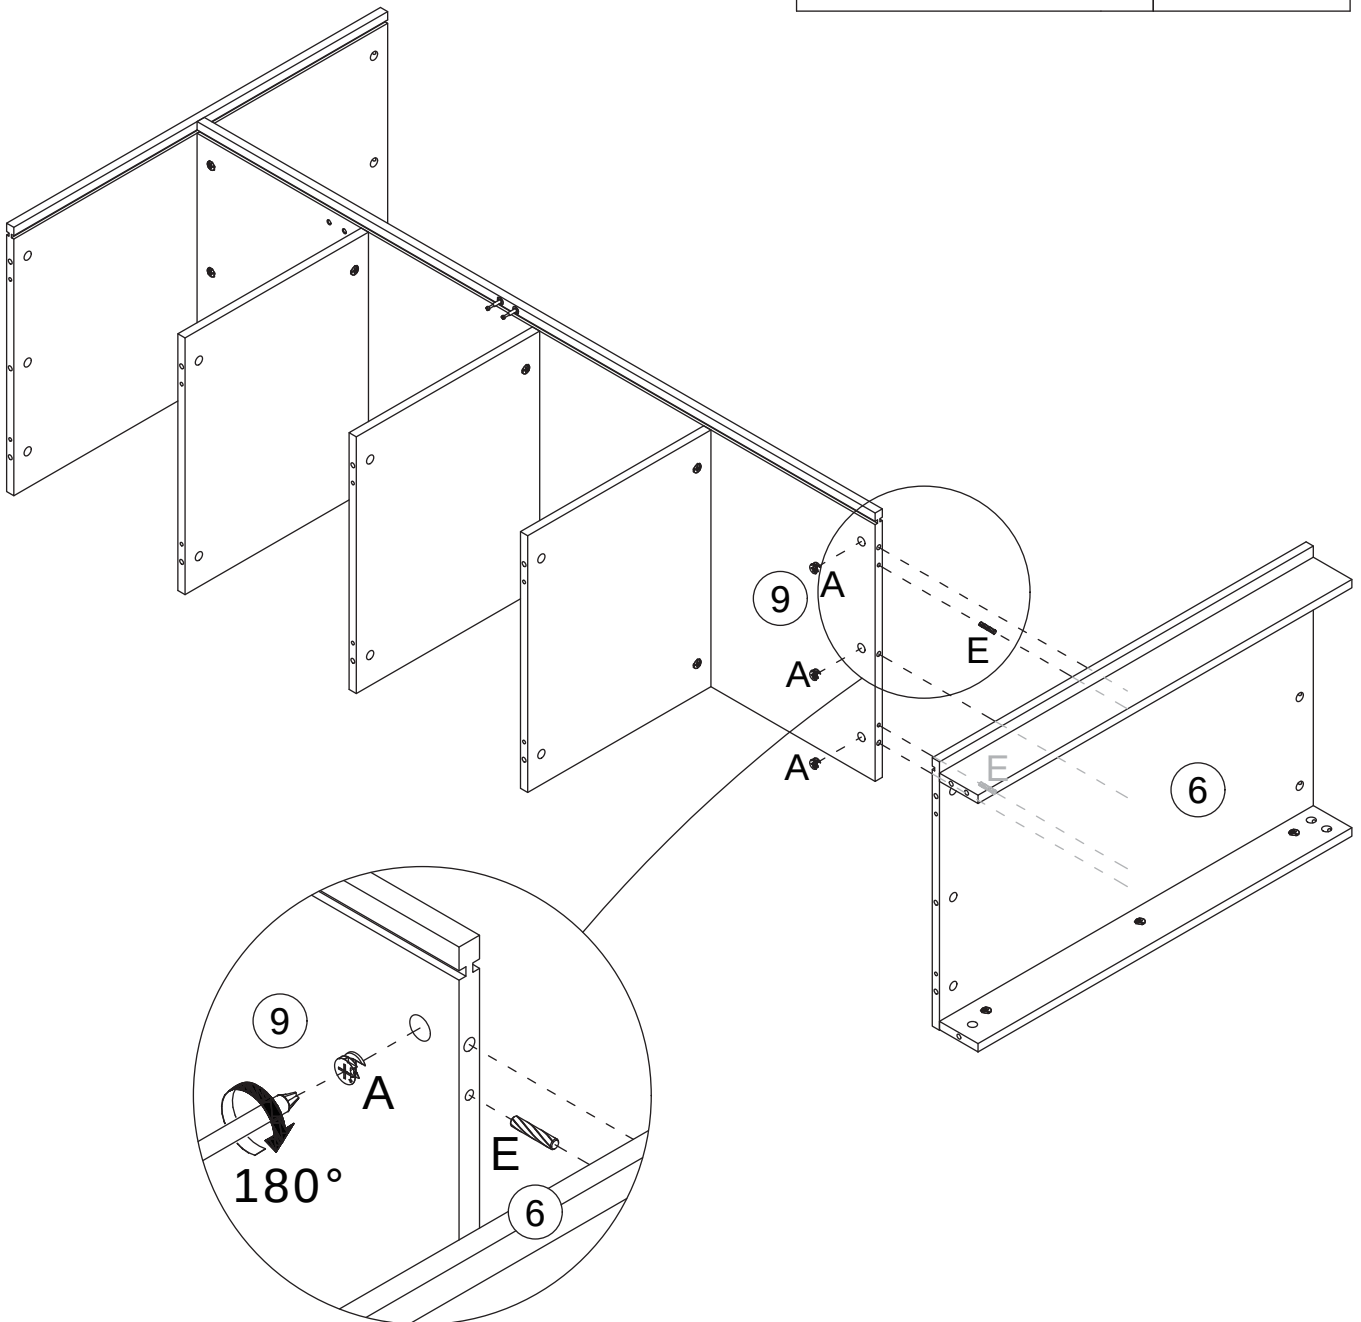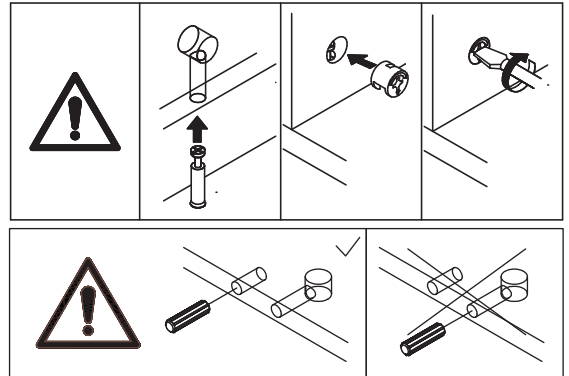

9

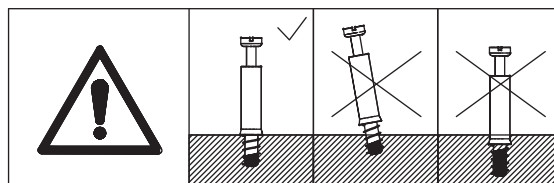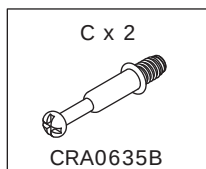   


 Turn the cabinet upside down and screw self-tapping rod (C) into panel 9.

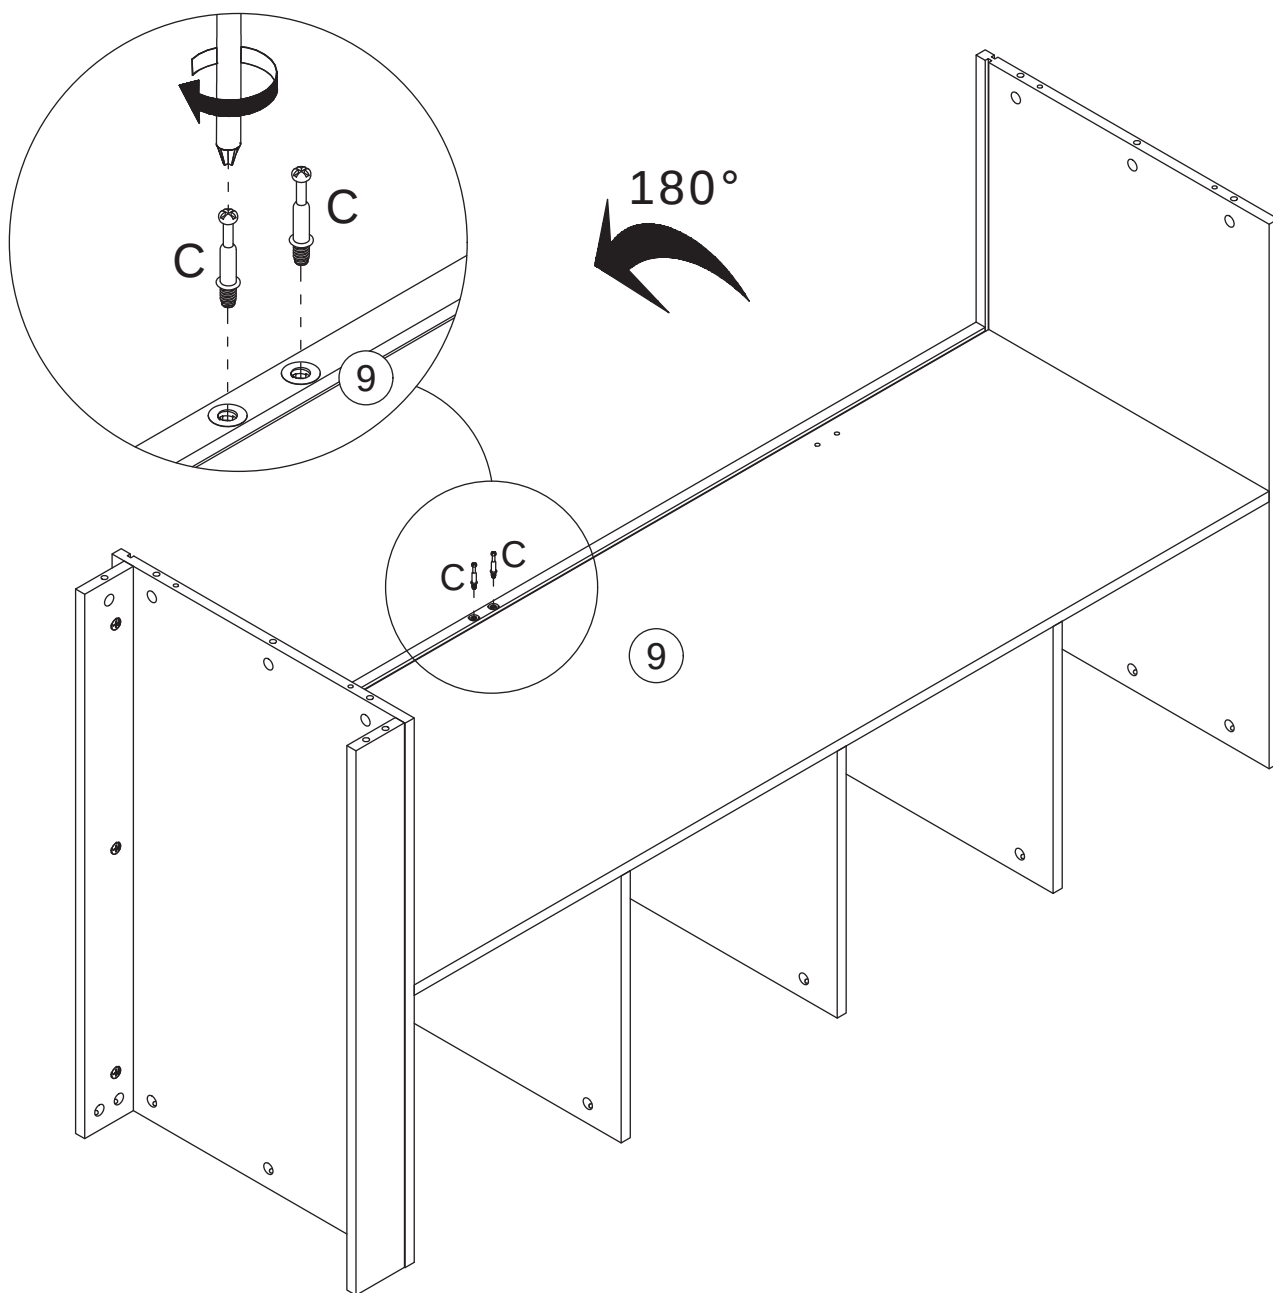



10

 Insert panel 16 into the available slots.

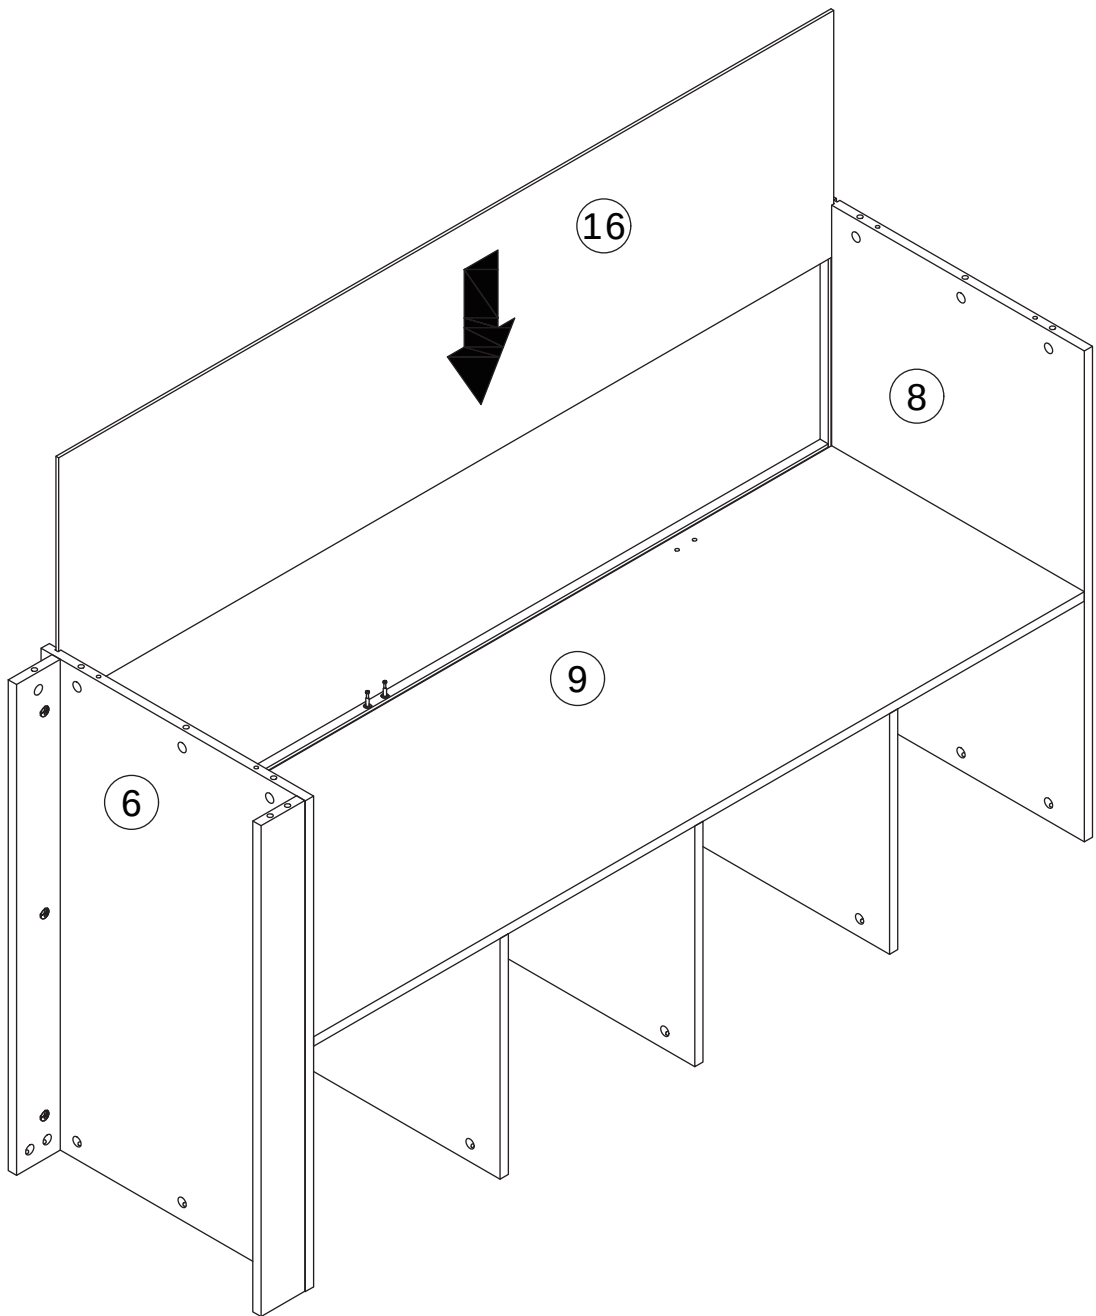


11

  A x 2
CRB1595A

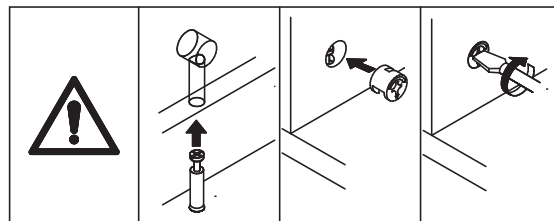

 Connect panel 17 to panel 9, then tighten by turning cam lock (A) clockwise.

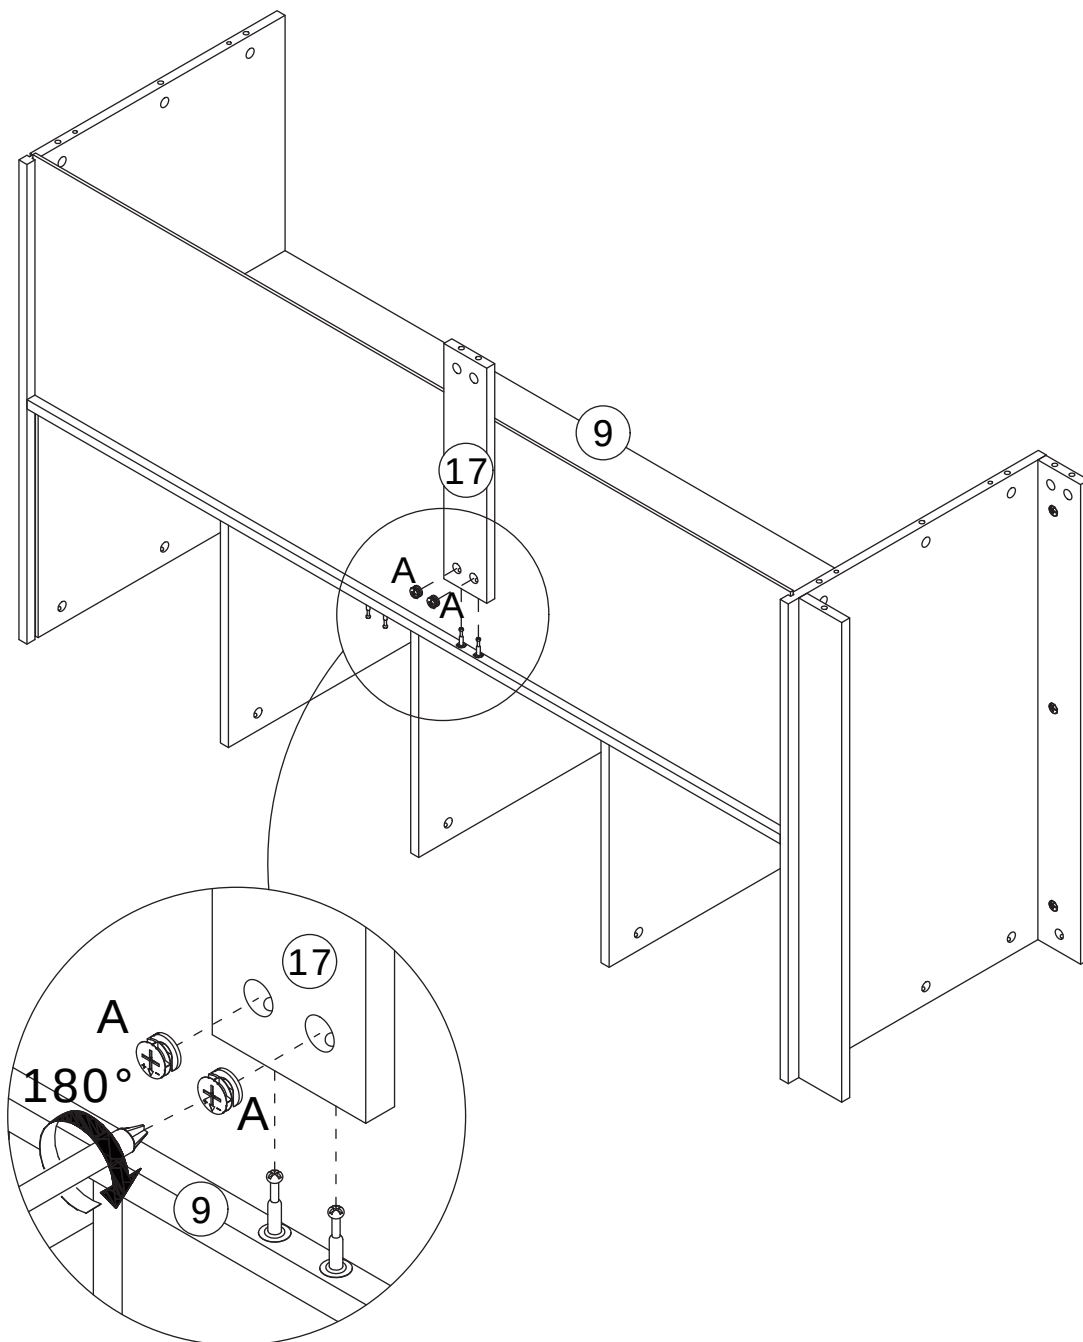


12


B x 41



 
C x 17






CRA0635B

 

 First, install plug (B) onto **both sides of panel 4**, then screw self-tapping rod (C) into panel 4.

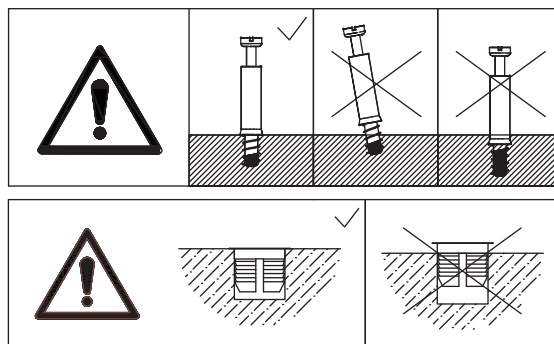


Flip to the other side

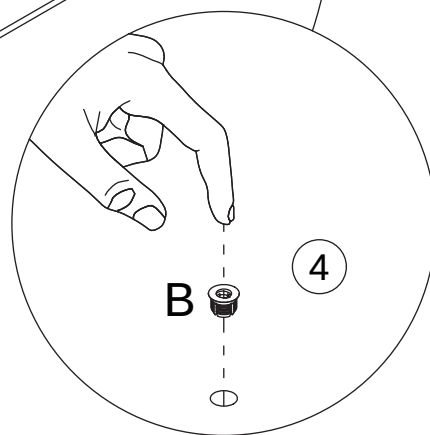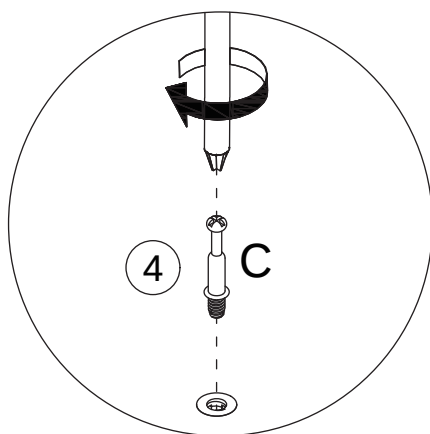  
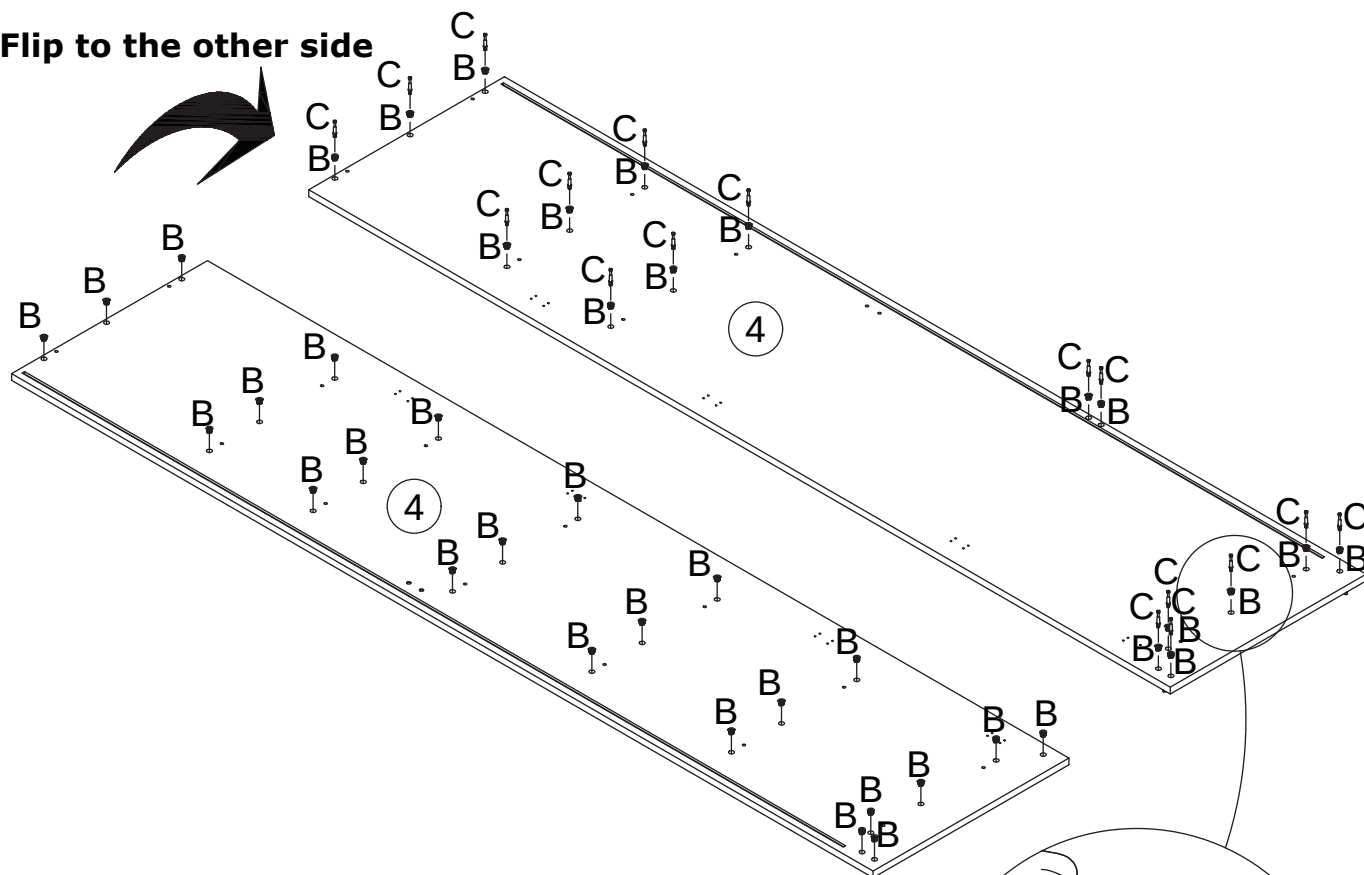 


13

 
E x 4



CRF0630A

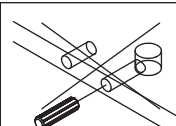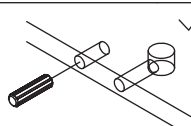  

 Insert wooden dowel (E) into panel 6 and 8.

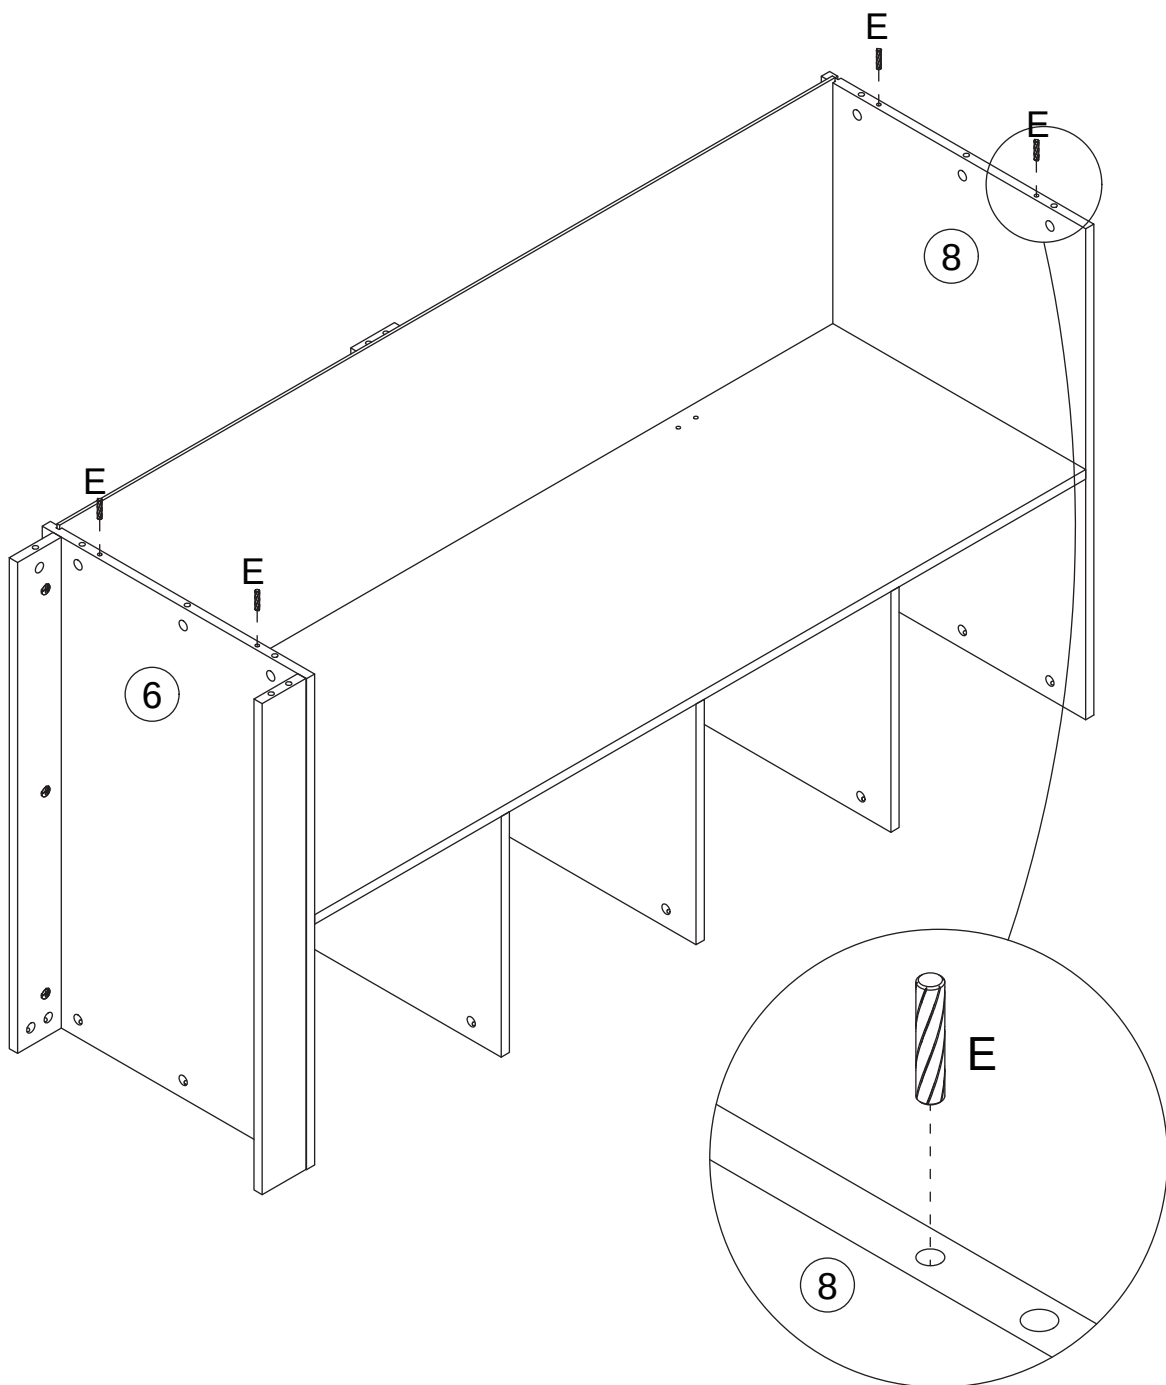


14




A x 11




 
CRB1595A



  
 
Connect panel 4 to panel 6, 8, 12, and 17, then tighten by turning cam lock (A) clockwise.

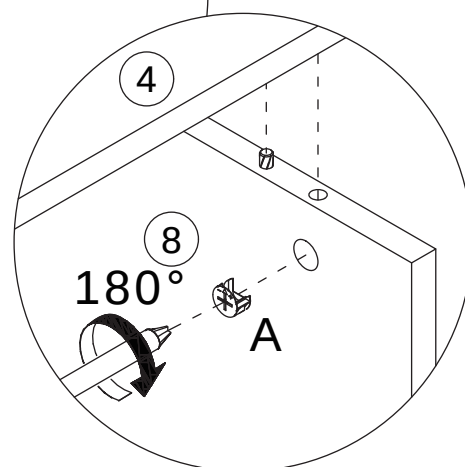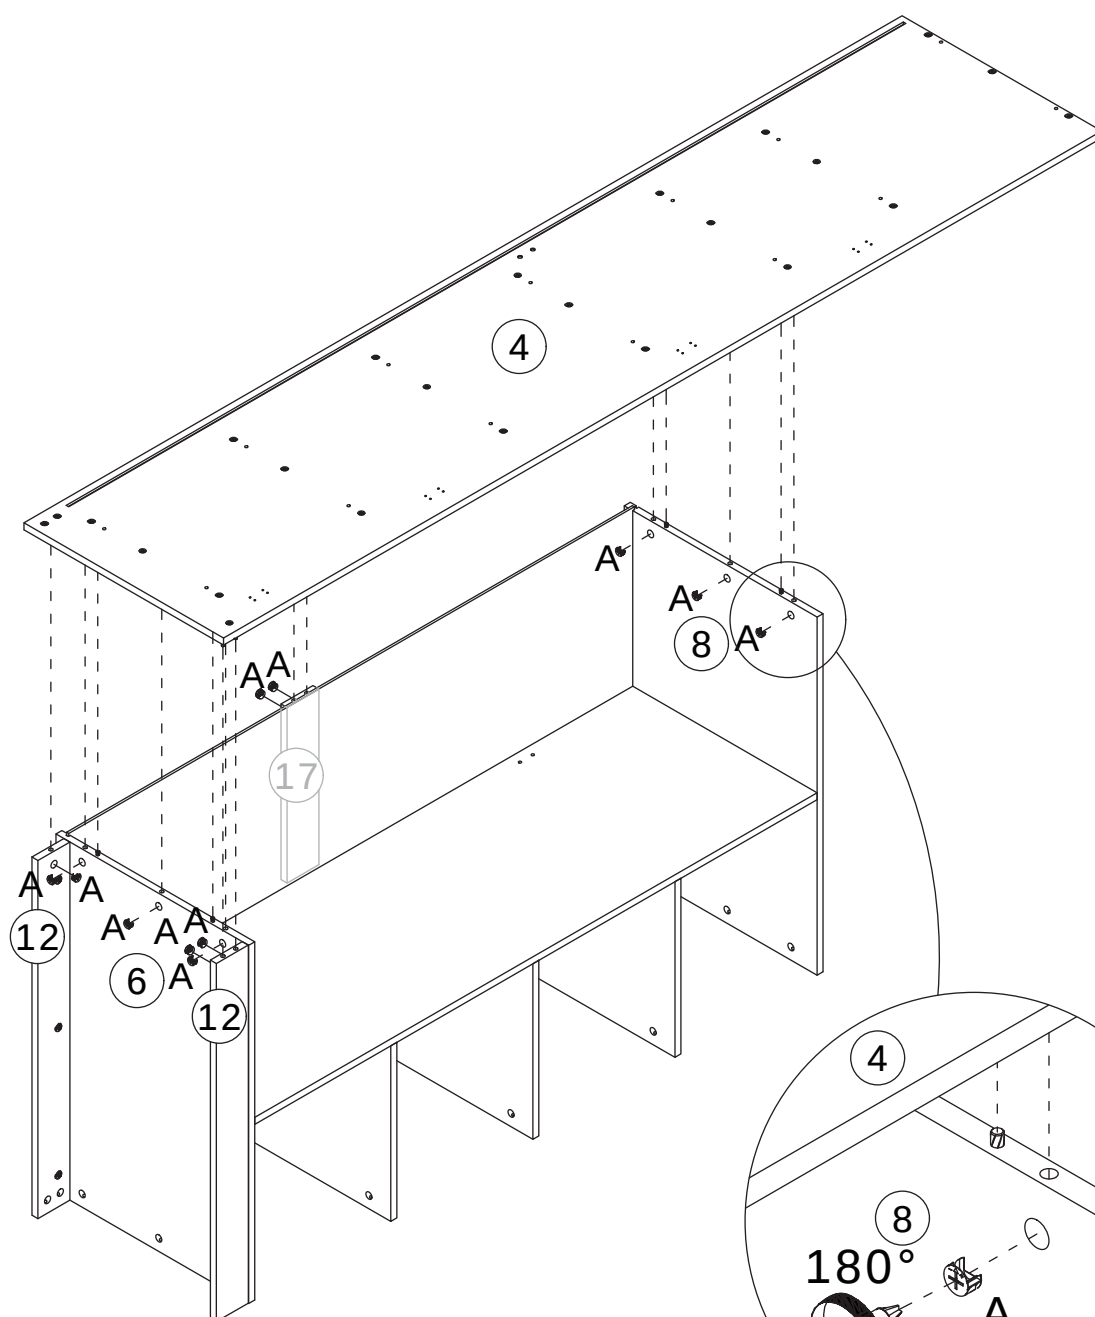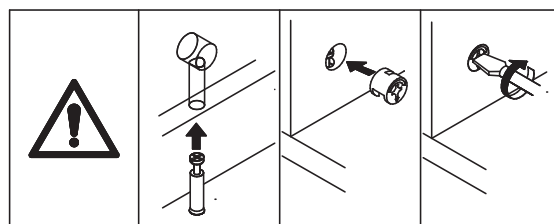

15

  
A x 6  CRB1595A	E x 4  CRF0630A	
--	--	---

  Turn the cabinet upside down, connect panel 1 and 7 to panel 4 using wooden dowel (E), then tighten by turning cam lock (A) clockwise.

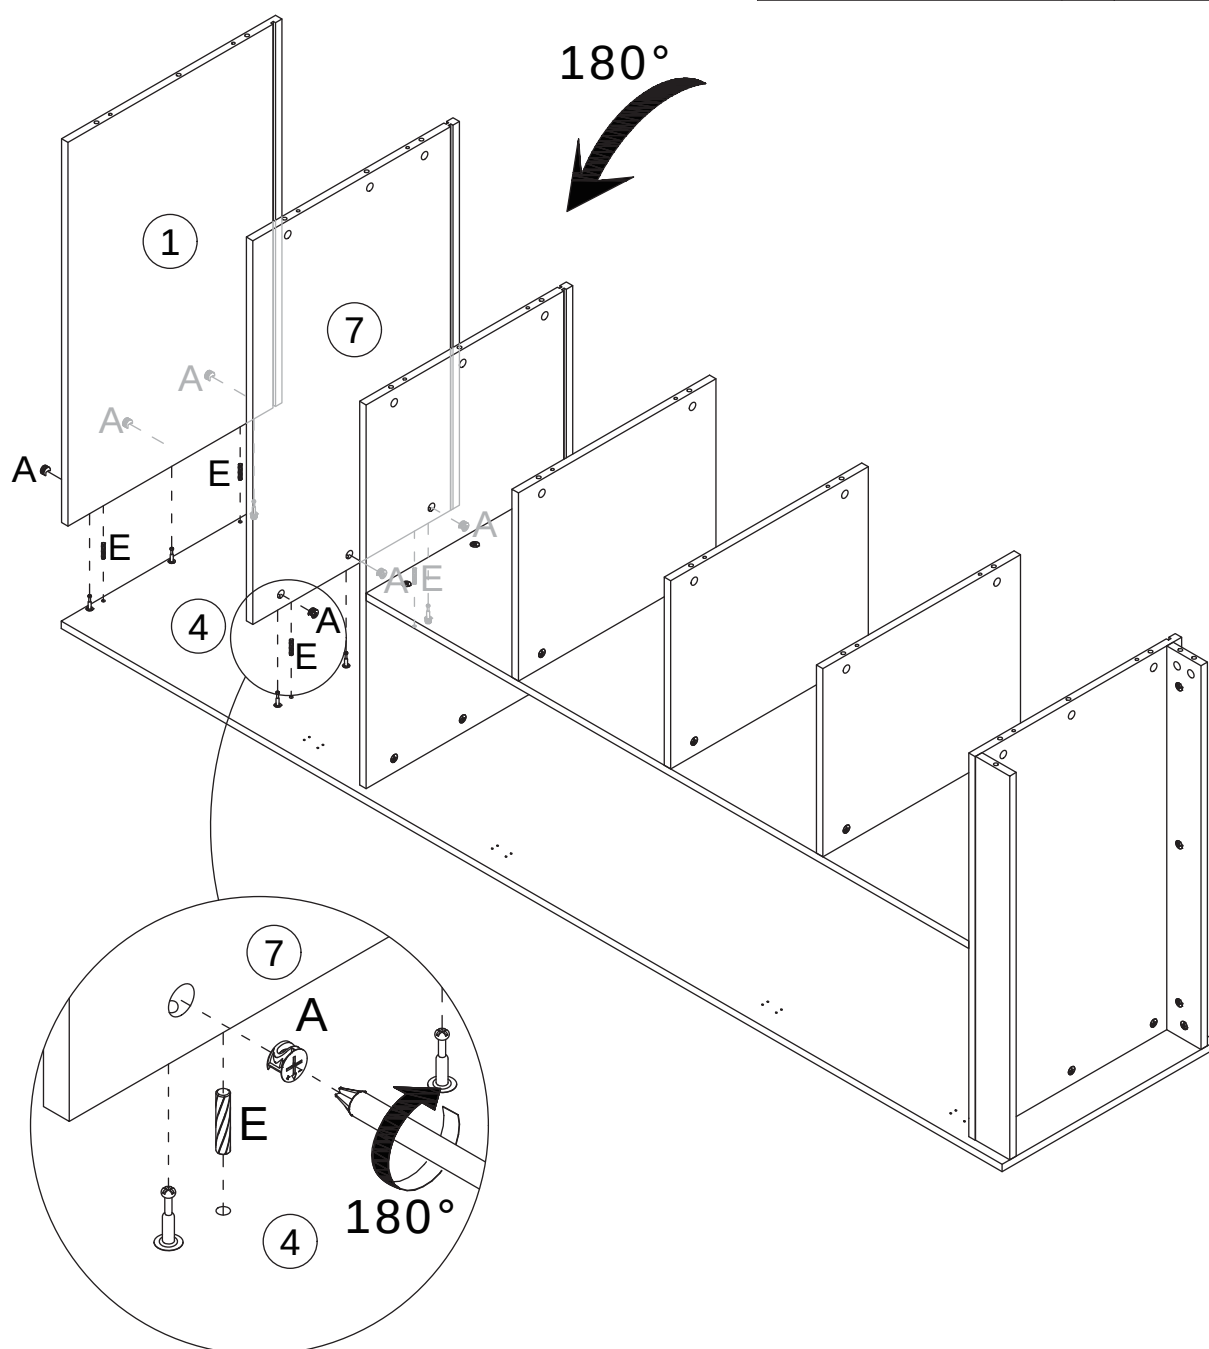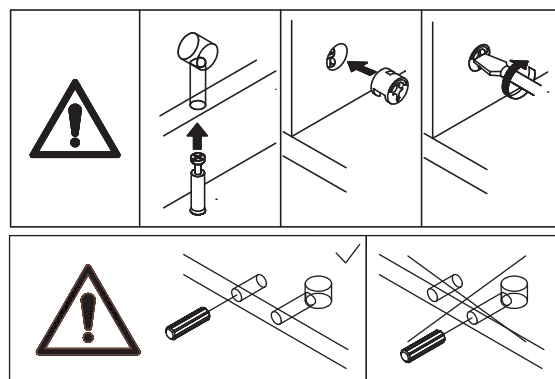


16

 Insert panel 13 and 14 into the available slots.

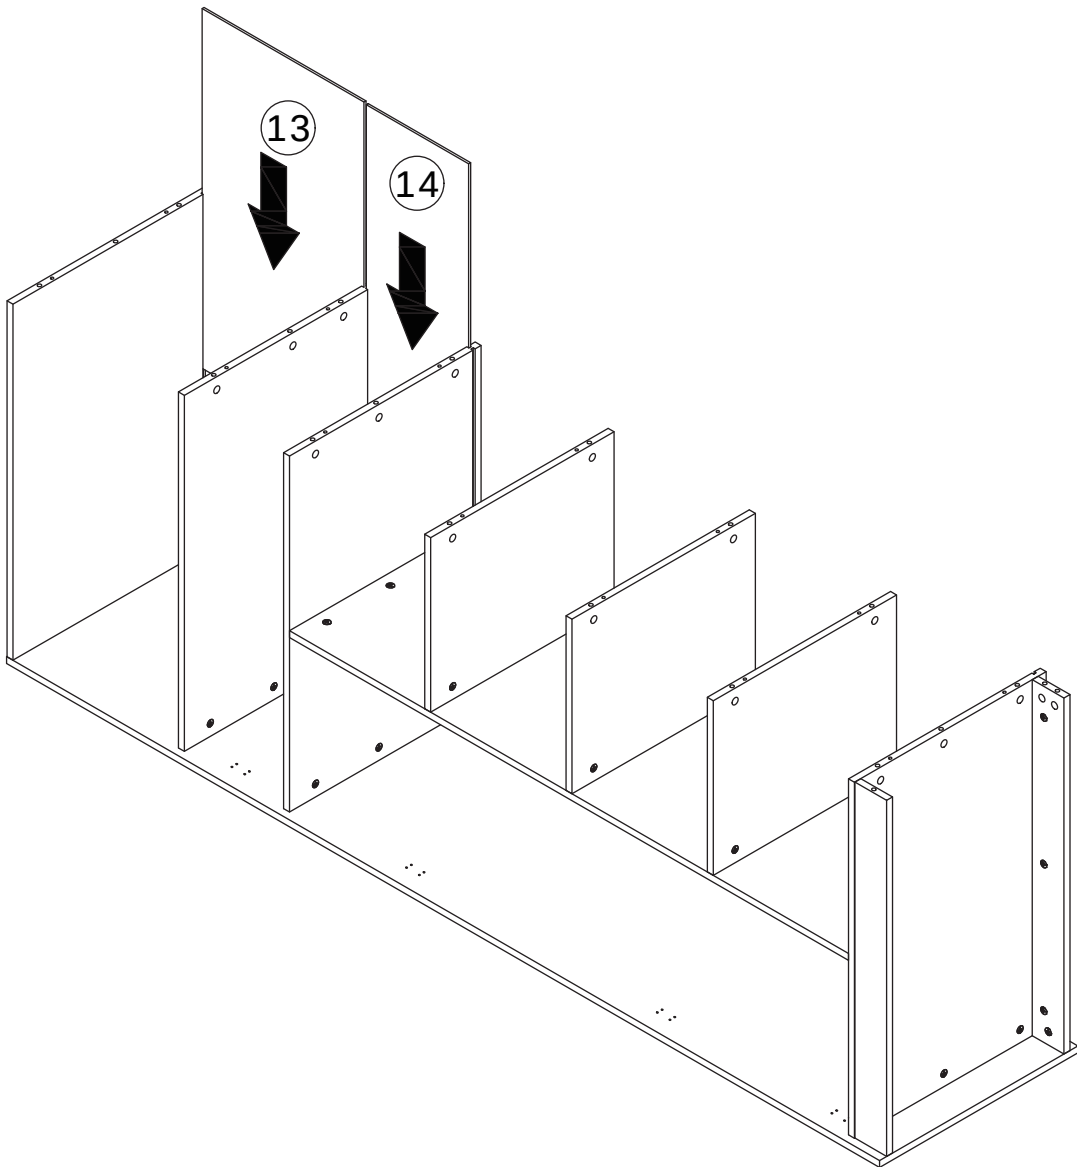

17

 Insert panel 16 into the available slots.


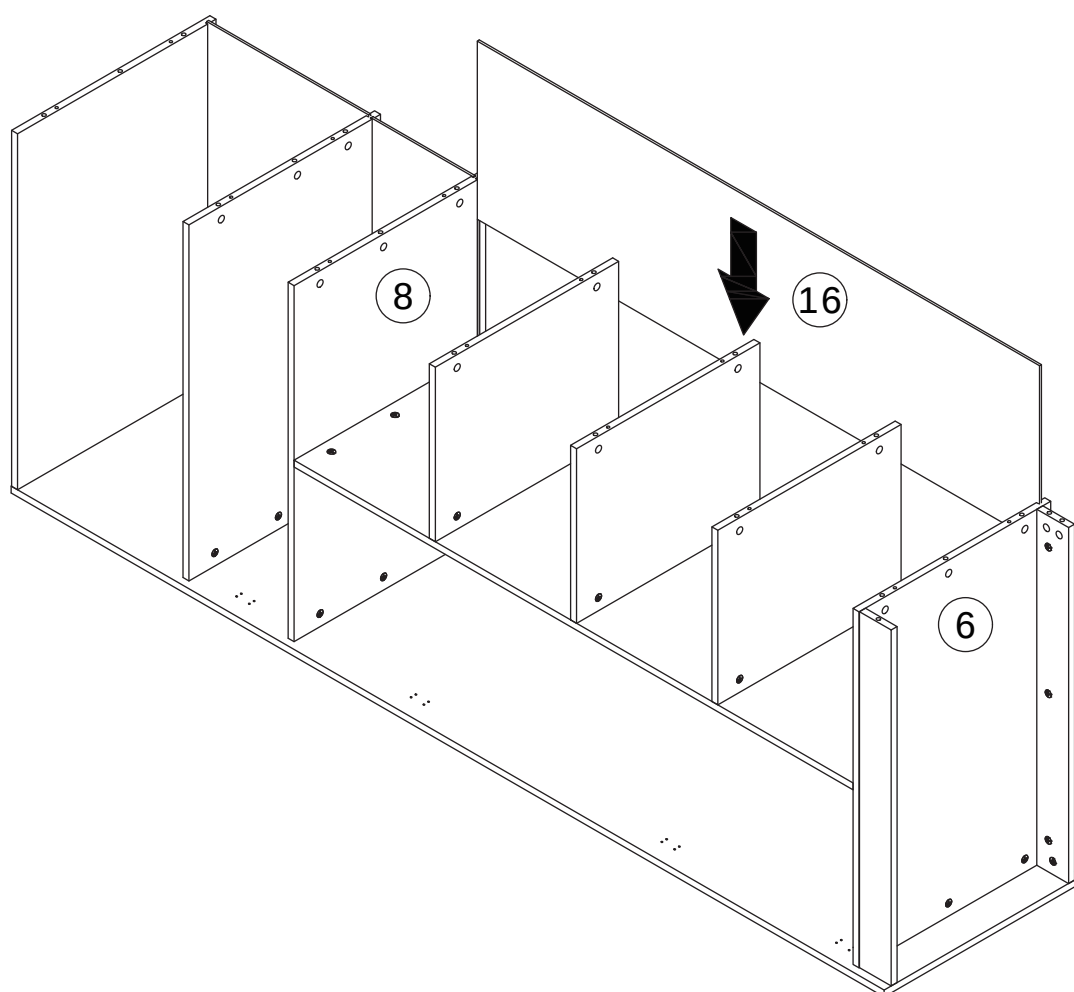


18


A x 2



  CRB1595A

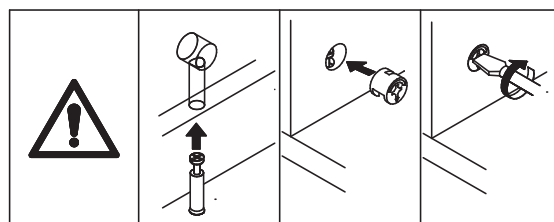

 Connect panel 17 to panel 9, then tighten by turning cam lock (A) clockwise.

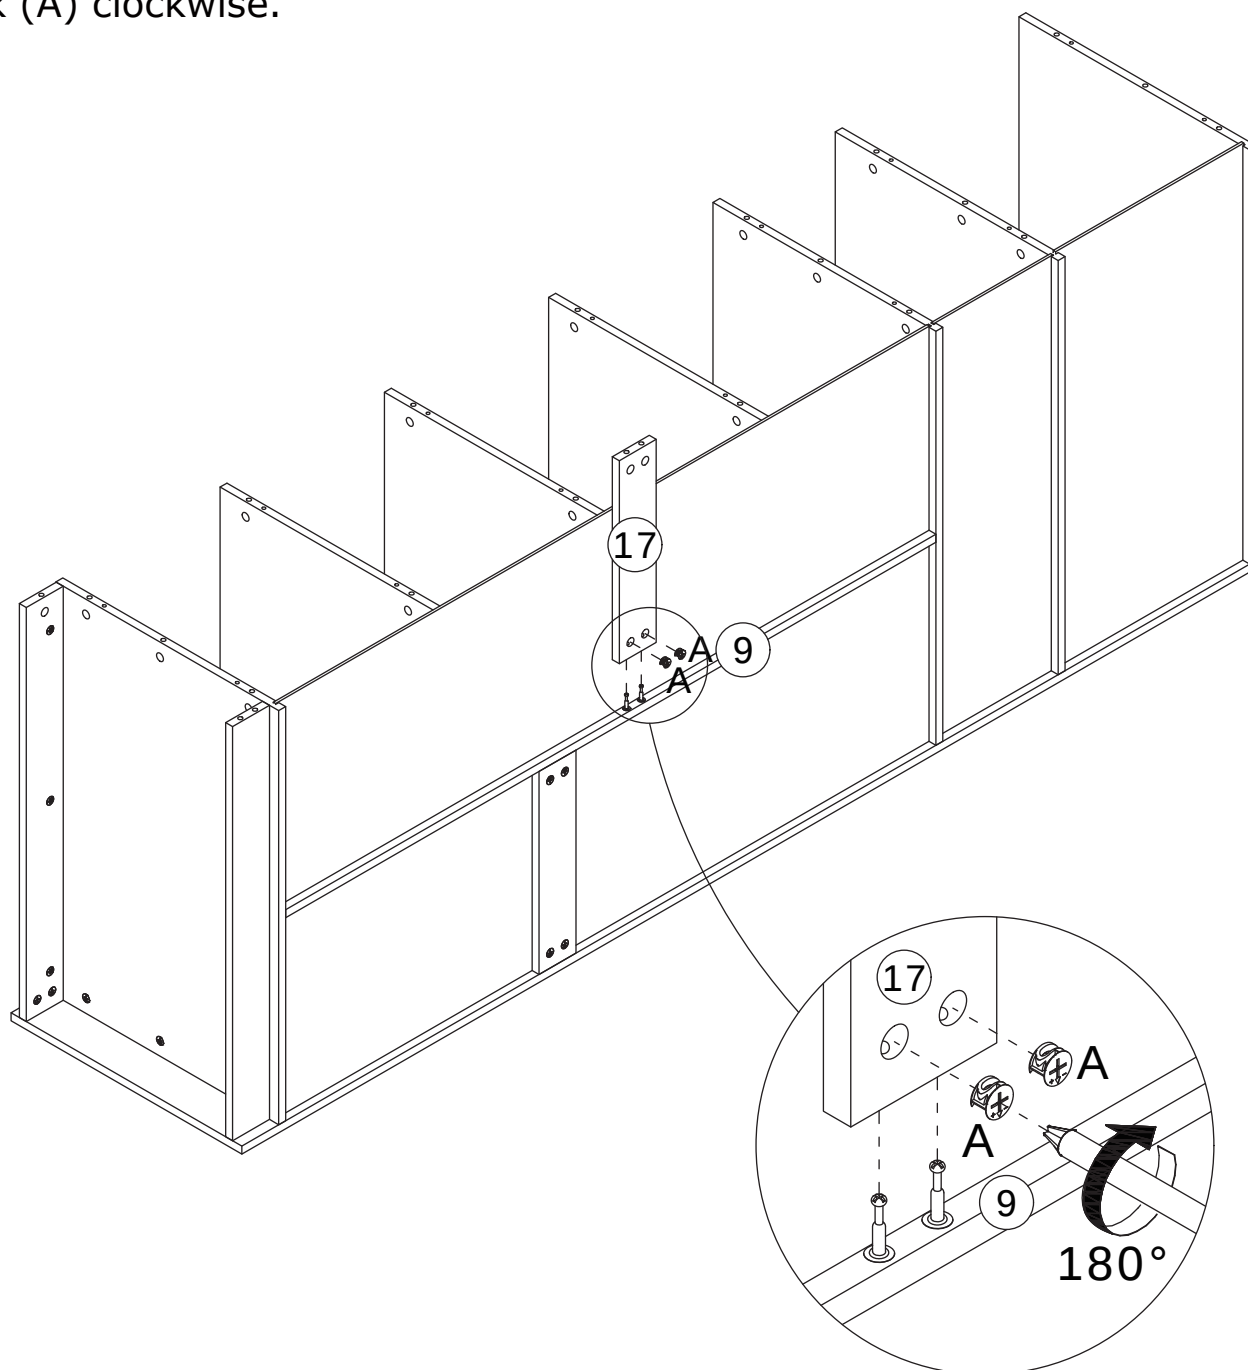


19


B x 23




 
C x 23



CRA0635B

 


  First, install plug (B) onto panel 3, then screw self-tapping rod (C) into panel 3.

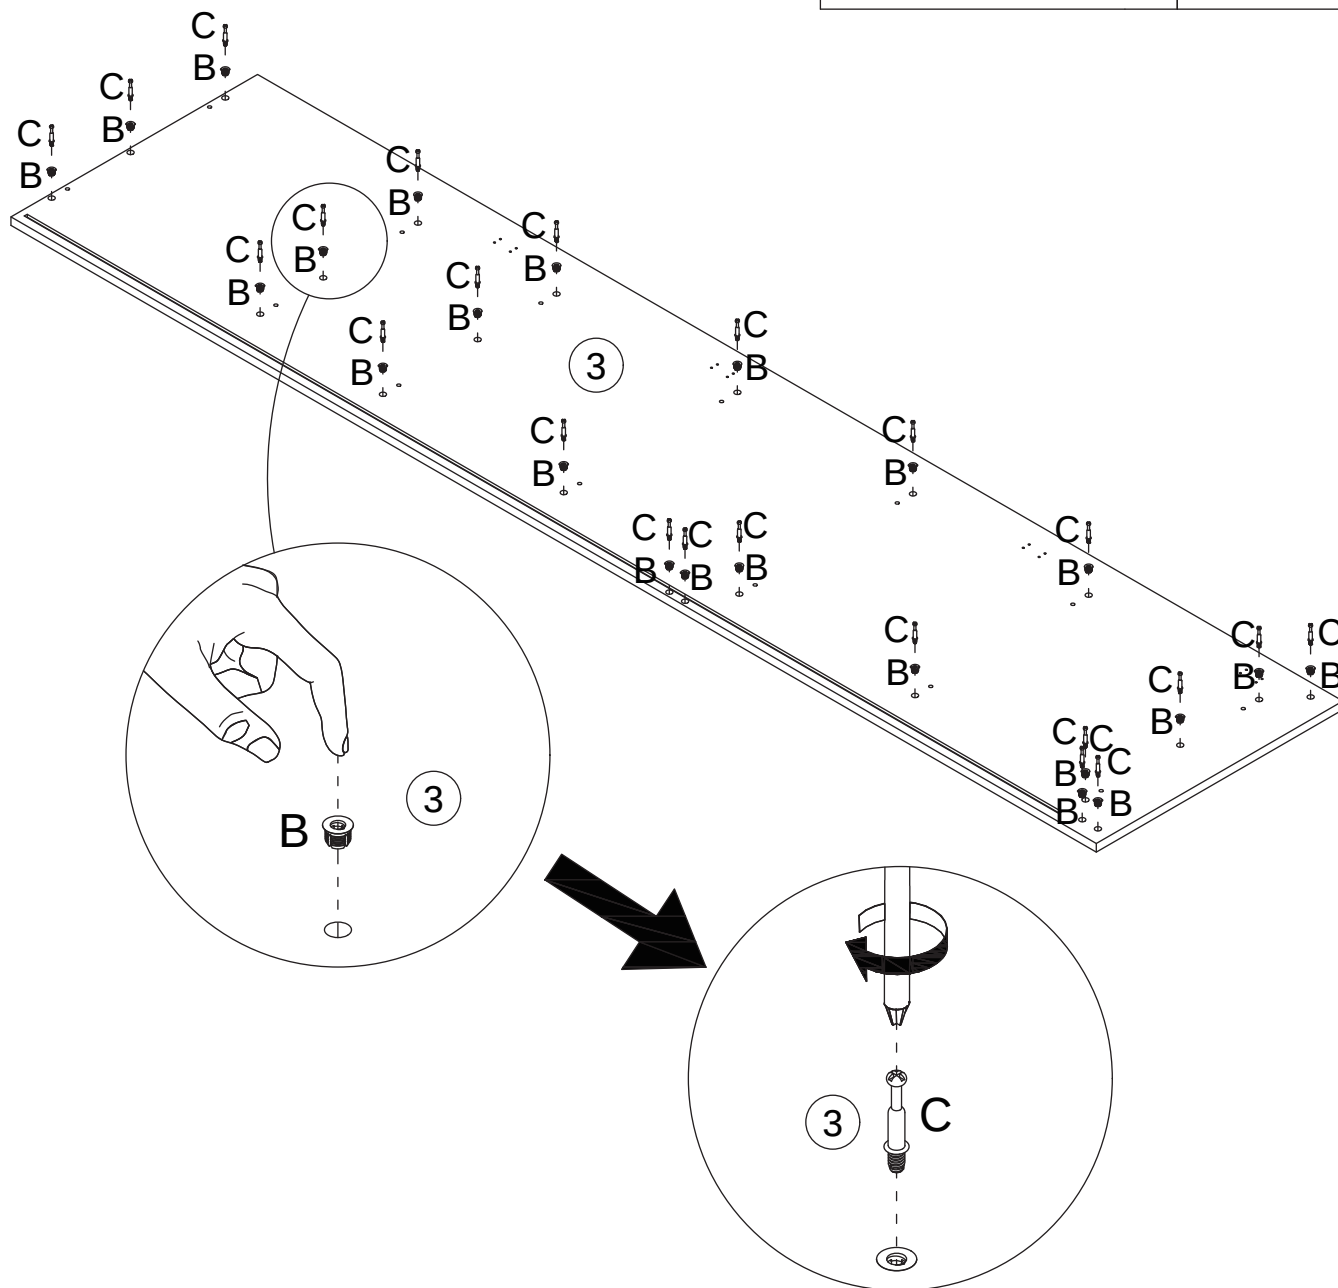
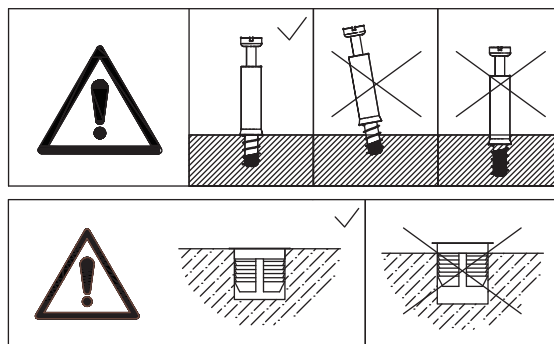


20

 
E x 14



CRF0630A

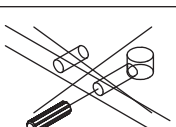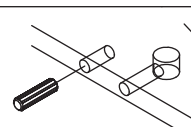  

 Insert wooden dowel (E) into the mounting unit.


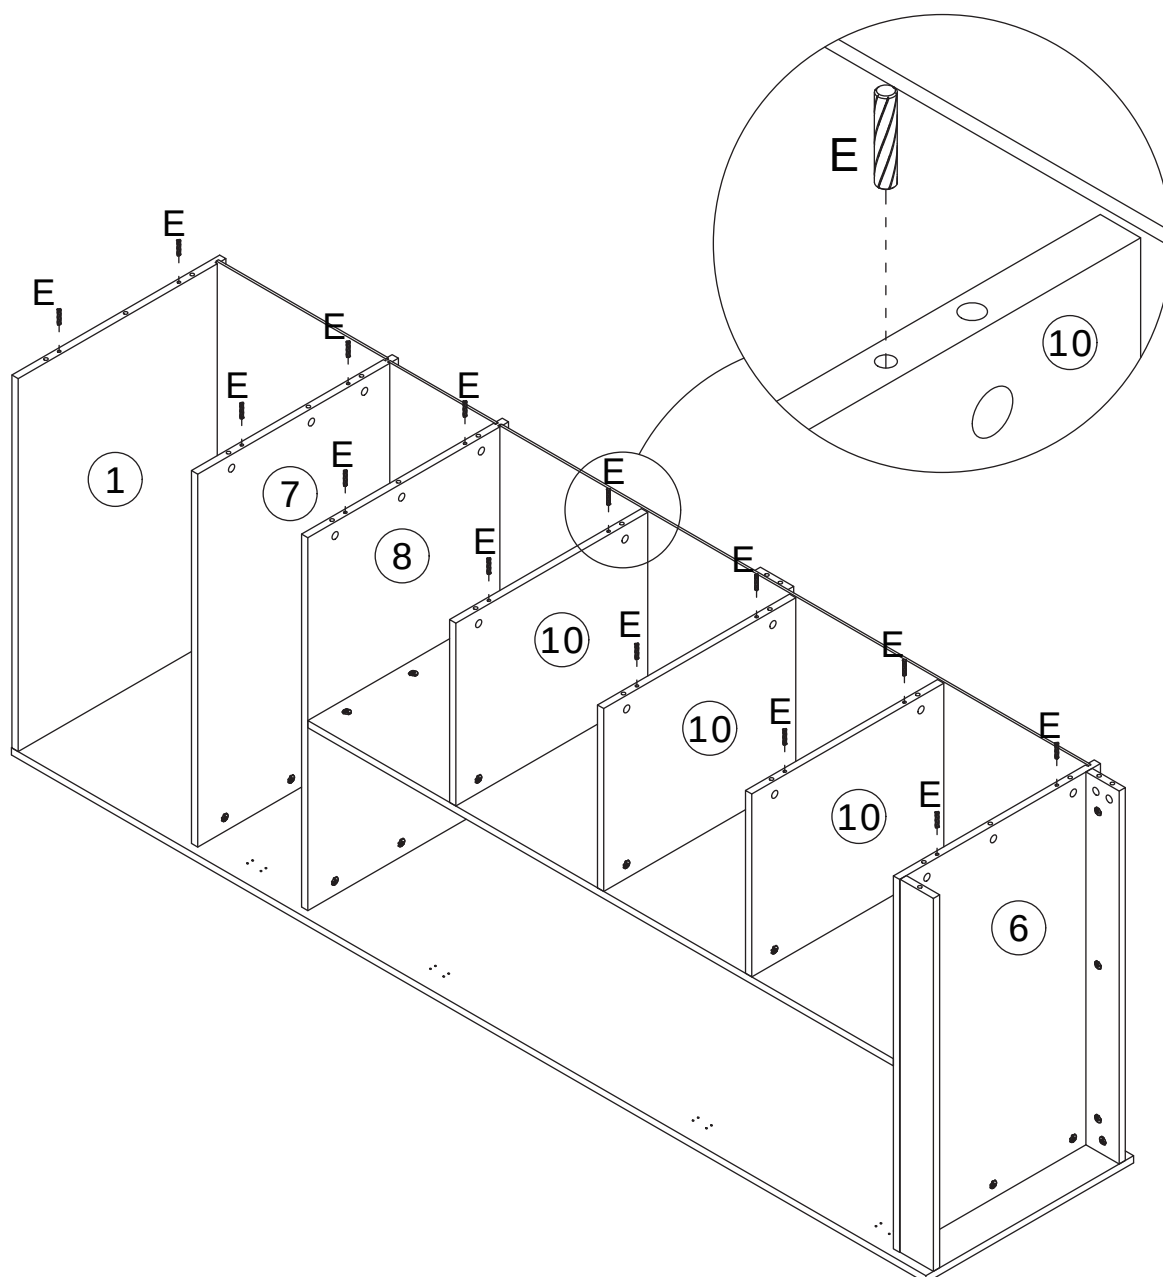


21


A x 23



  CRB1595A

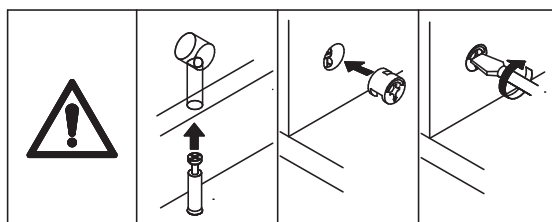


 Connect panel 3 to the mounting unit, then tighten by turning cam lock (A) clockwise.


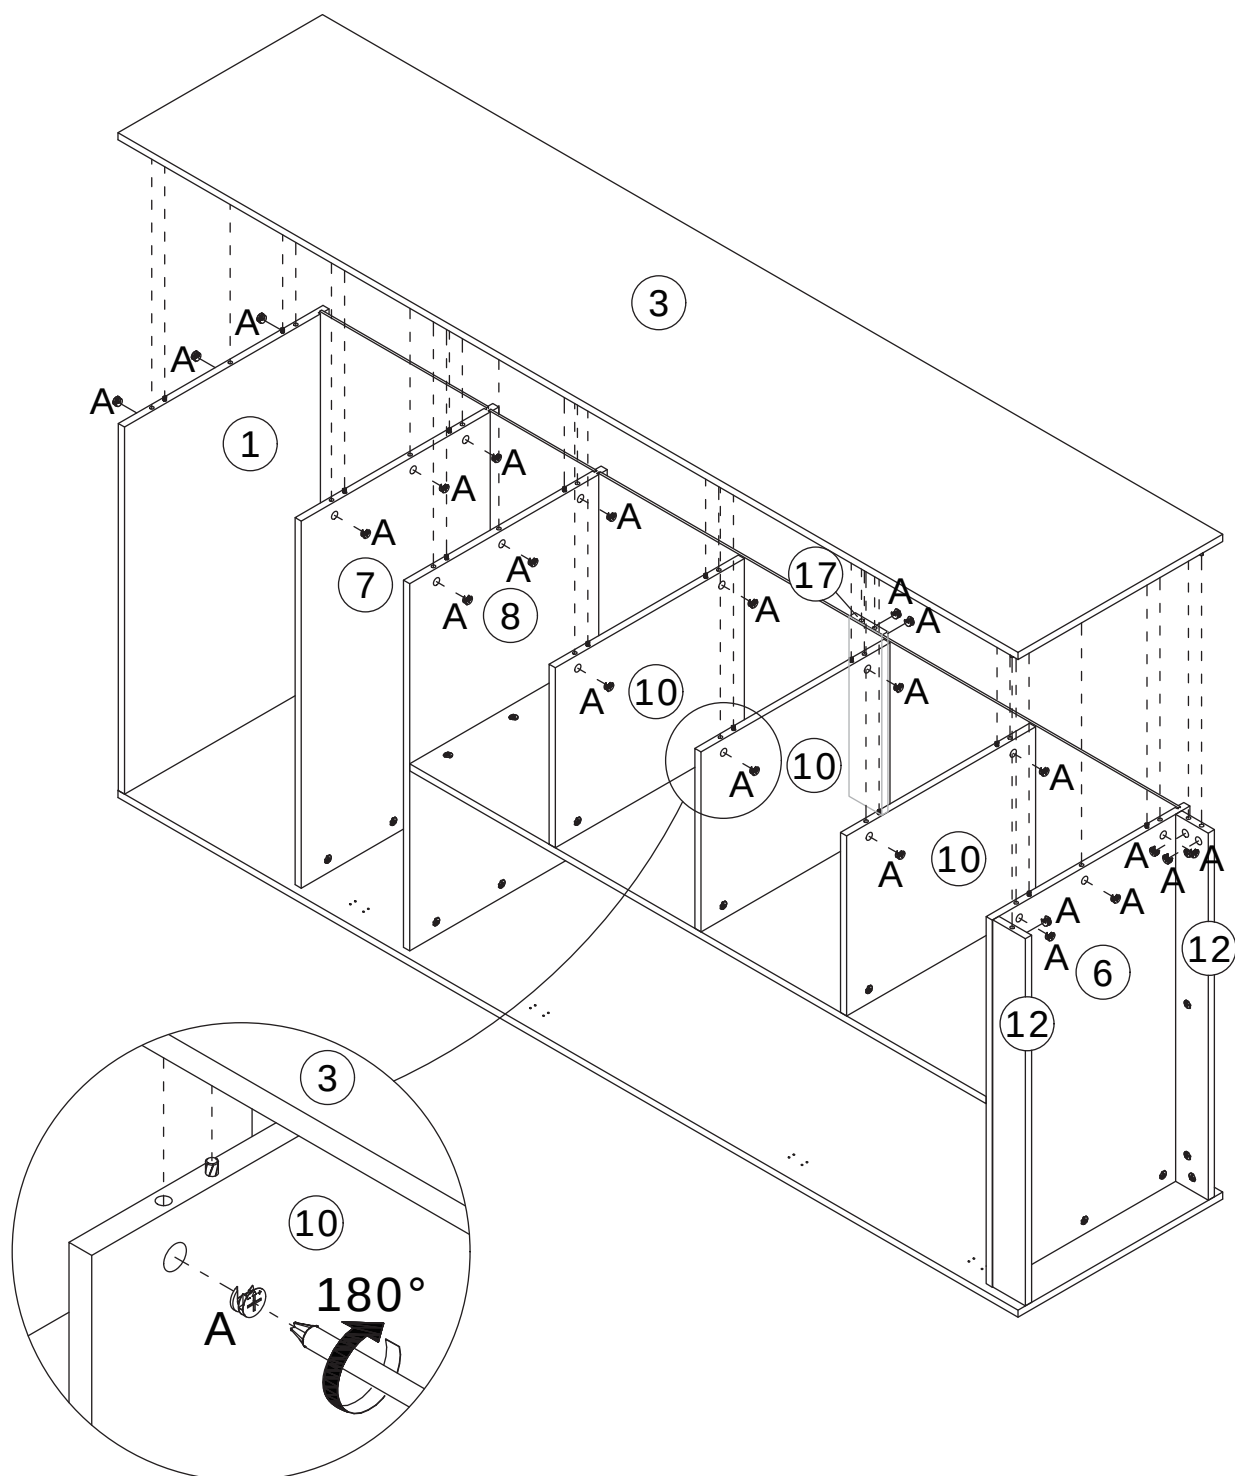


22

 
C x 24



CRA0635B

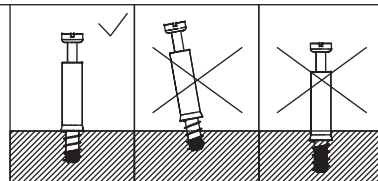  

 Turn the cabinet upside down and screw self-tapping rod (C) into panel 4.

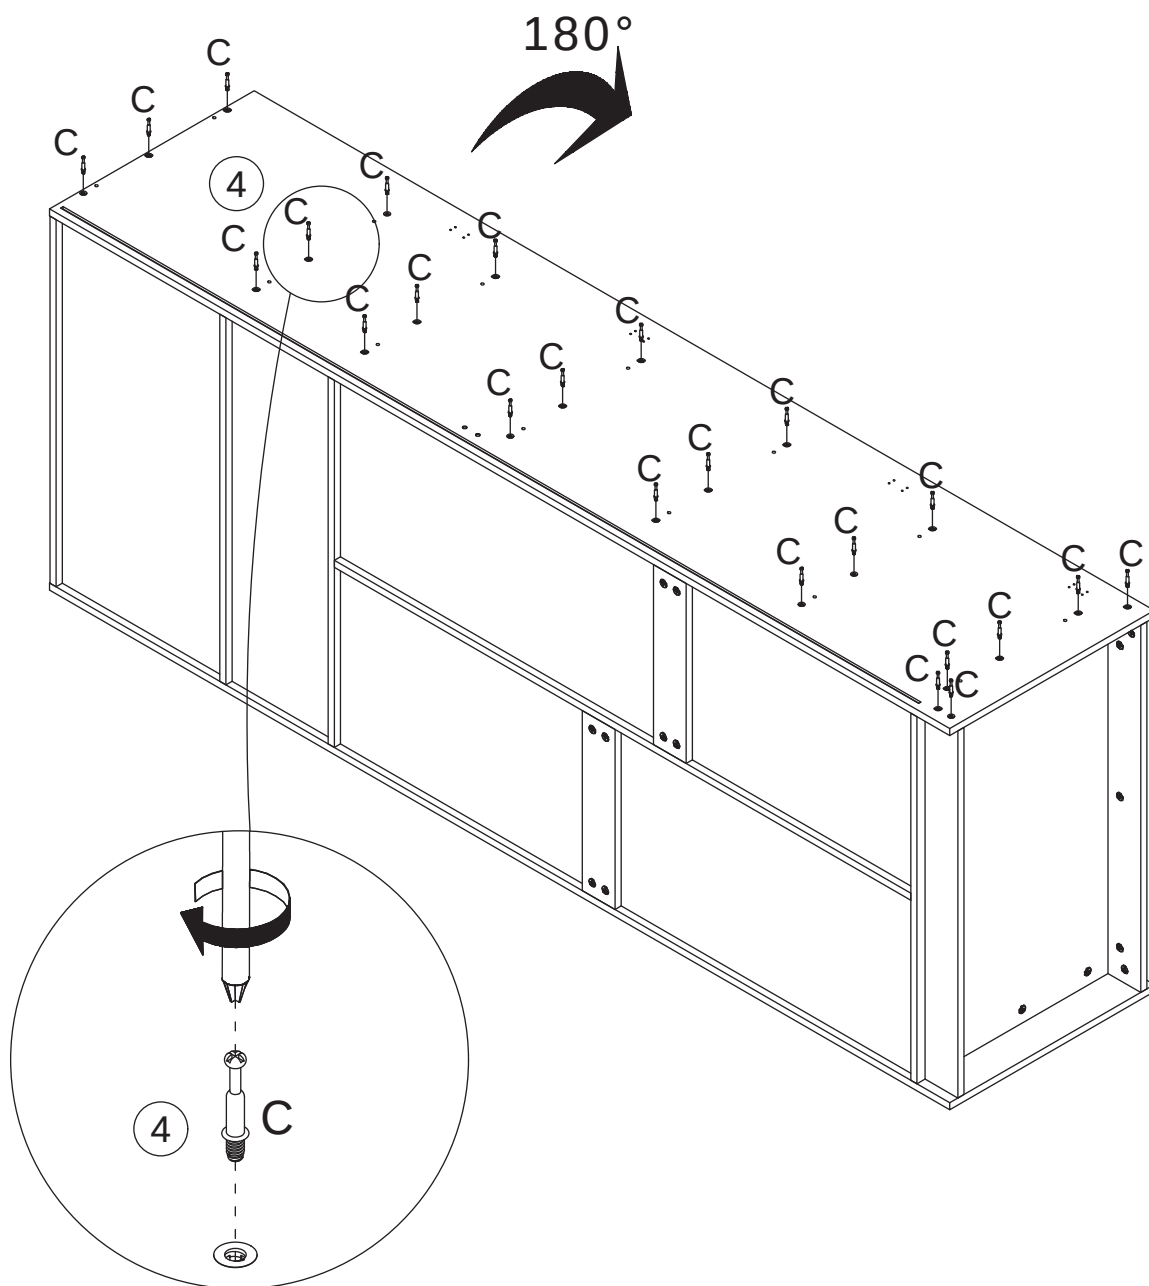


23




B x 24





 
C x 24



CRA0635B

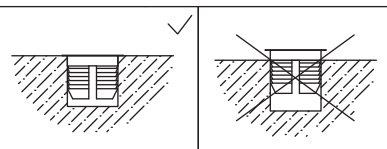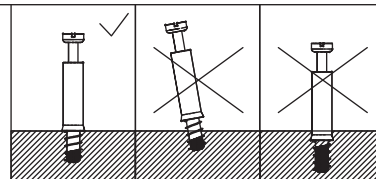   

   First, install plug (B) onto panel 2, then screw self-tapping rod (C) into panel 2.

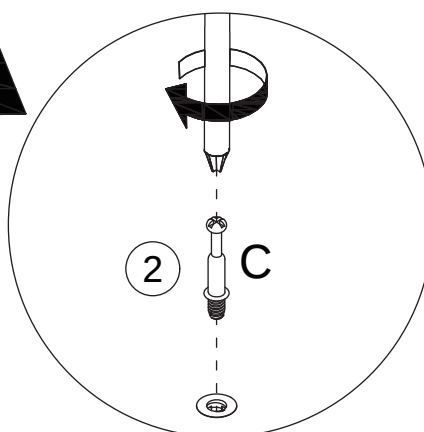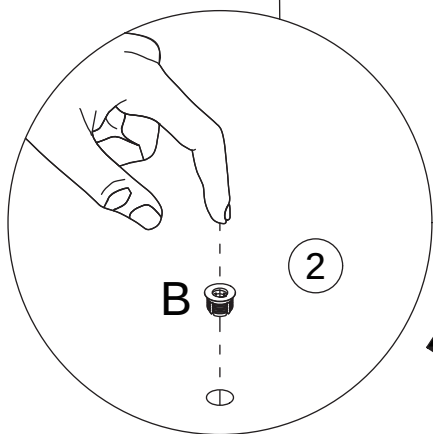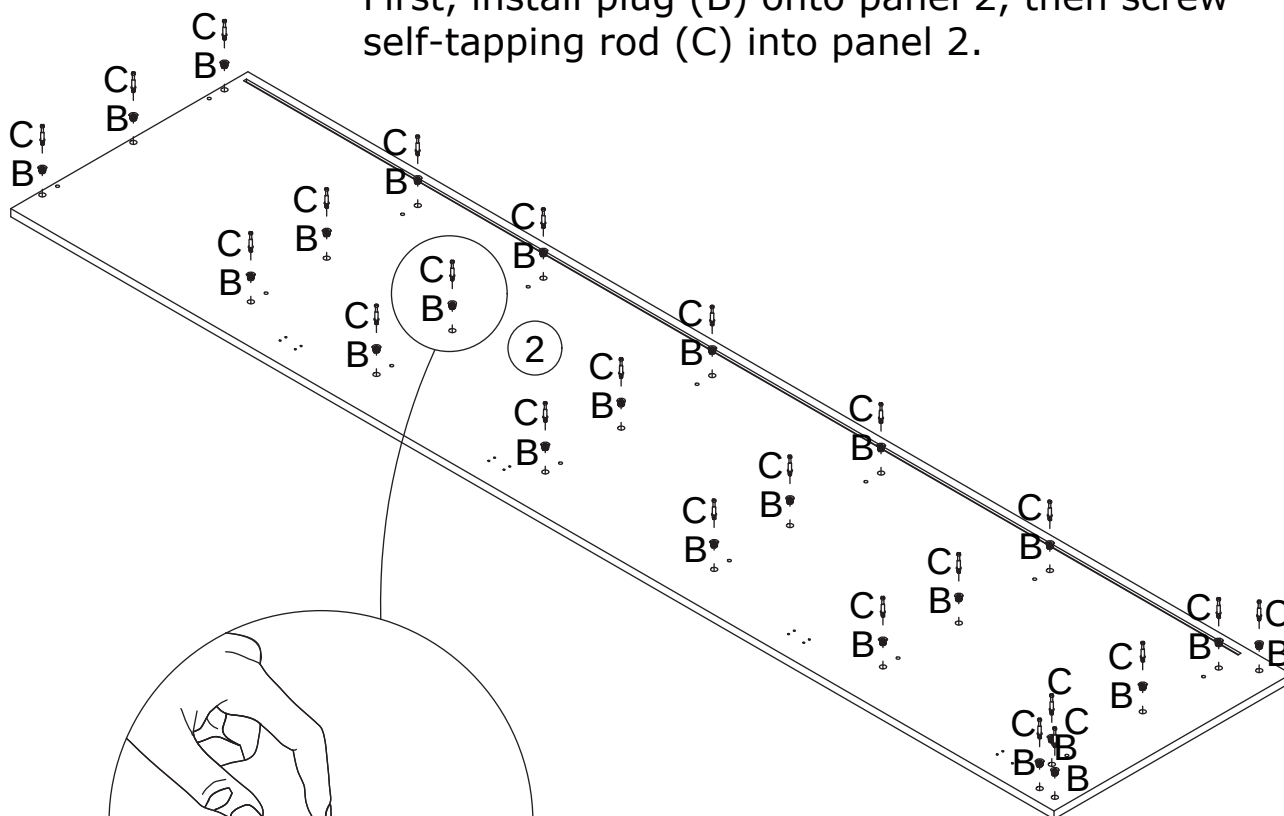


24


B x 6




 
C x 6



CRA0635B

 

  First, install plug (B) onto panel 5,
then screw self-tapping rod (C) into
panel 5.

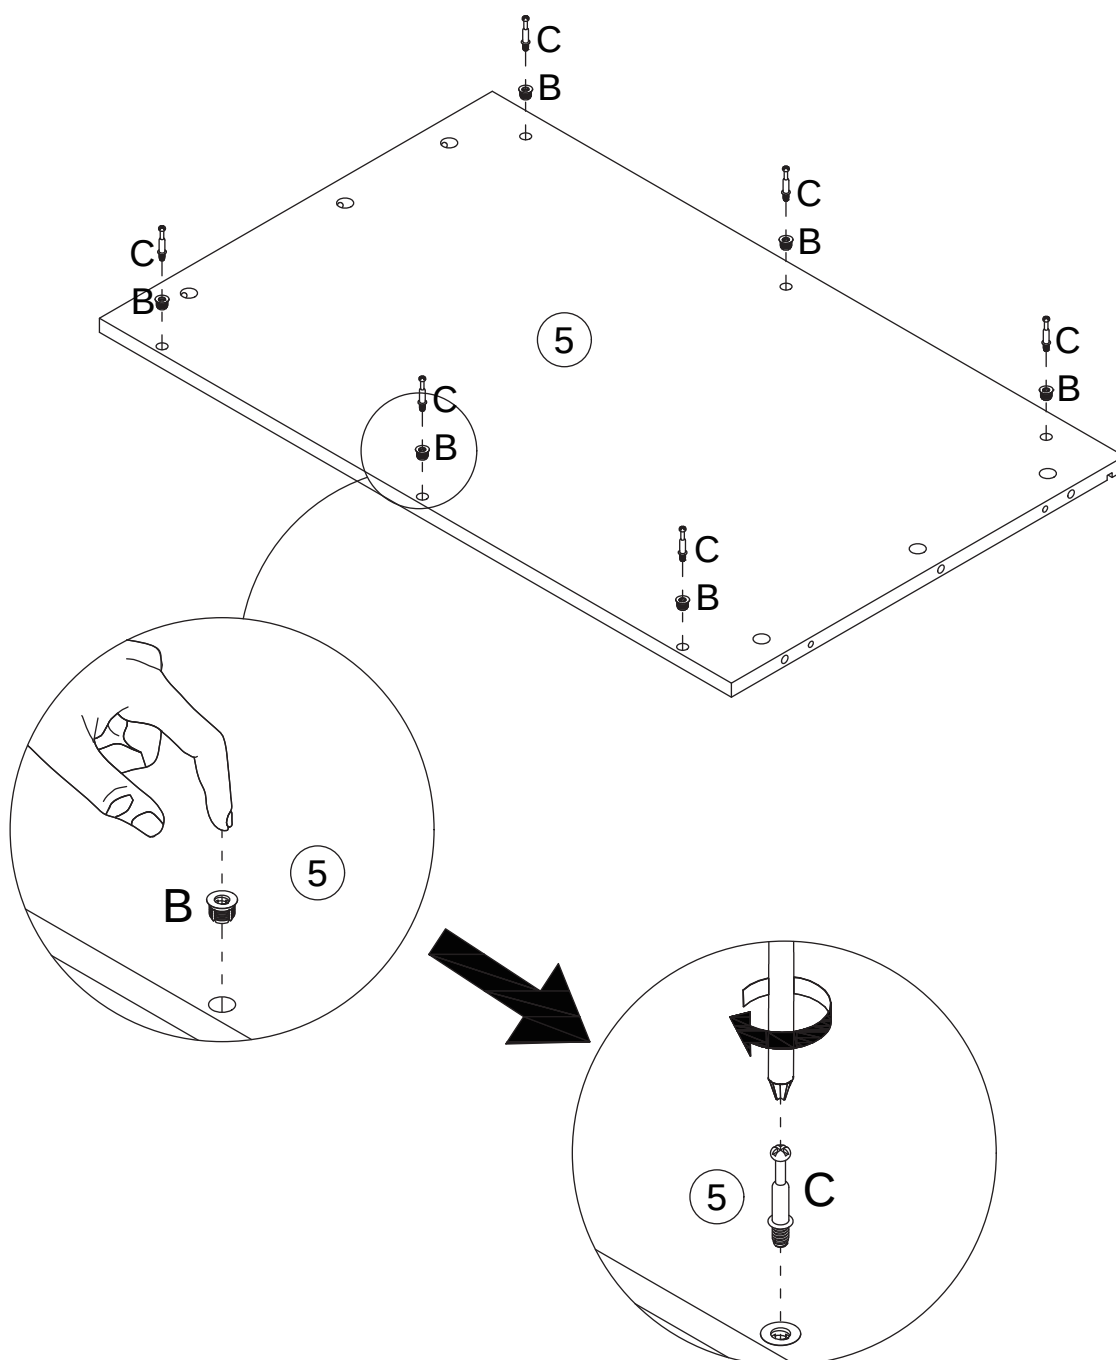
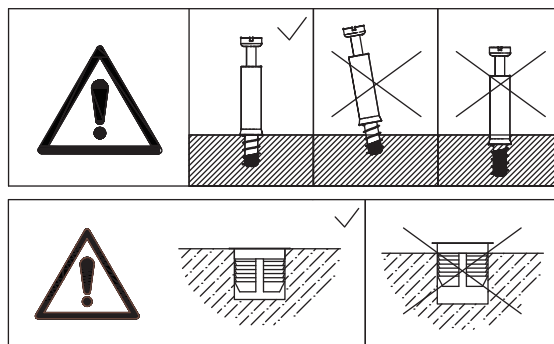


25


A x 6



  CRB1595A

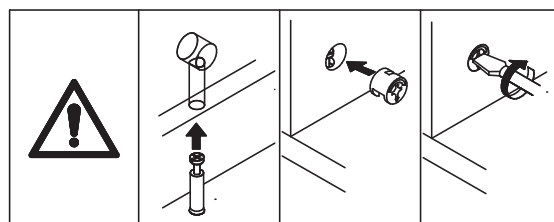

 Connect panel 12 to panel 5, then tighten by turning cam lock (A) clockwise.

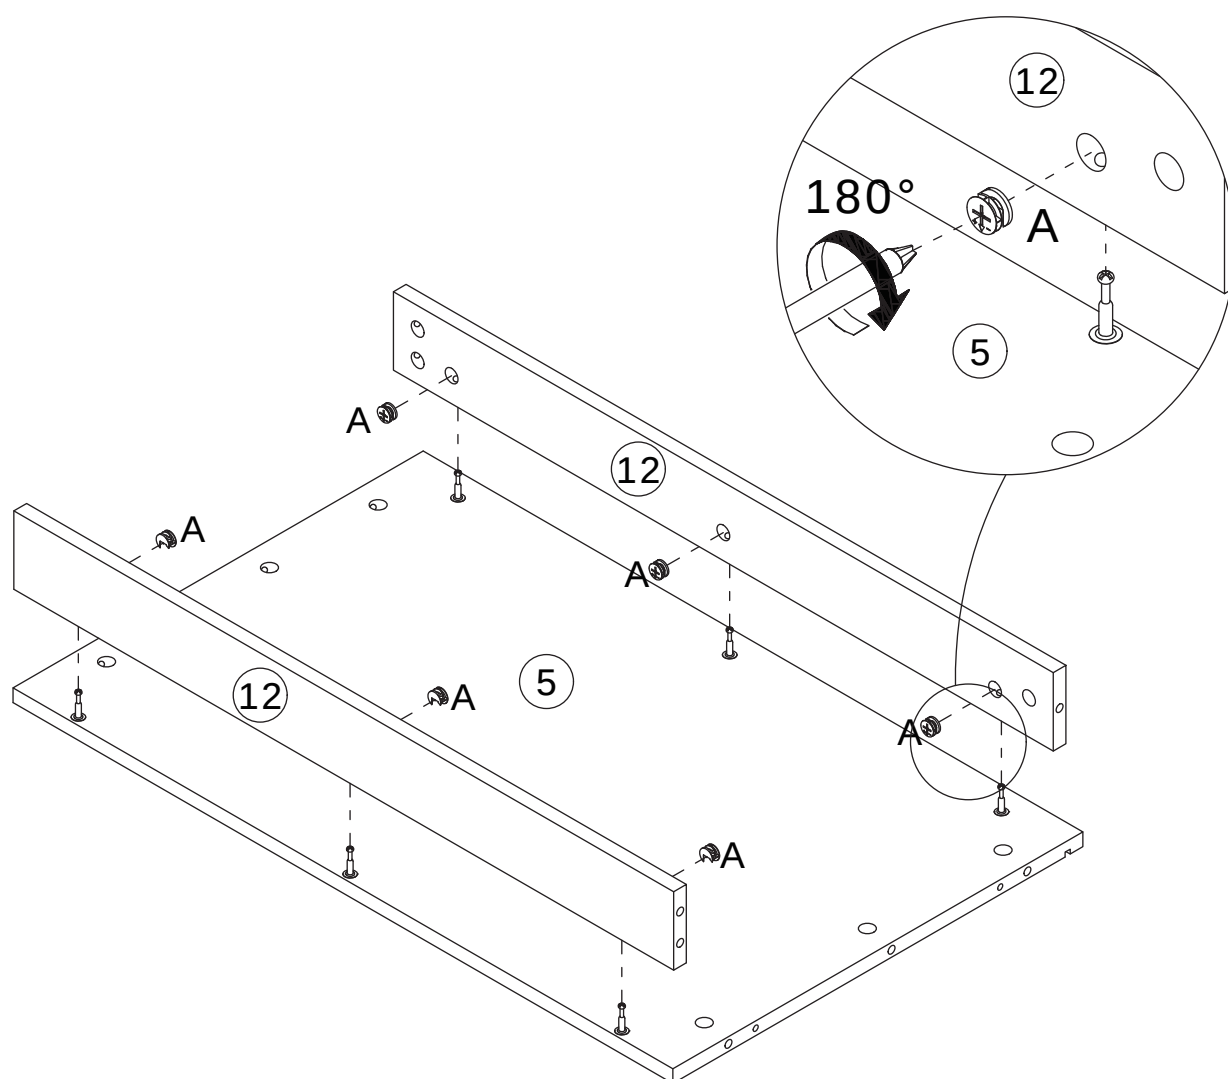


26

A x 24




CRB1595A


 
E x 14




CRF0630A

 

  Connect panel 1, 5, 7, and 12 to panel 2 using wooden dowel (E), then tighten by turning cam lock (A) clockwise.

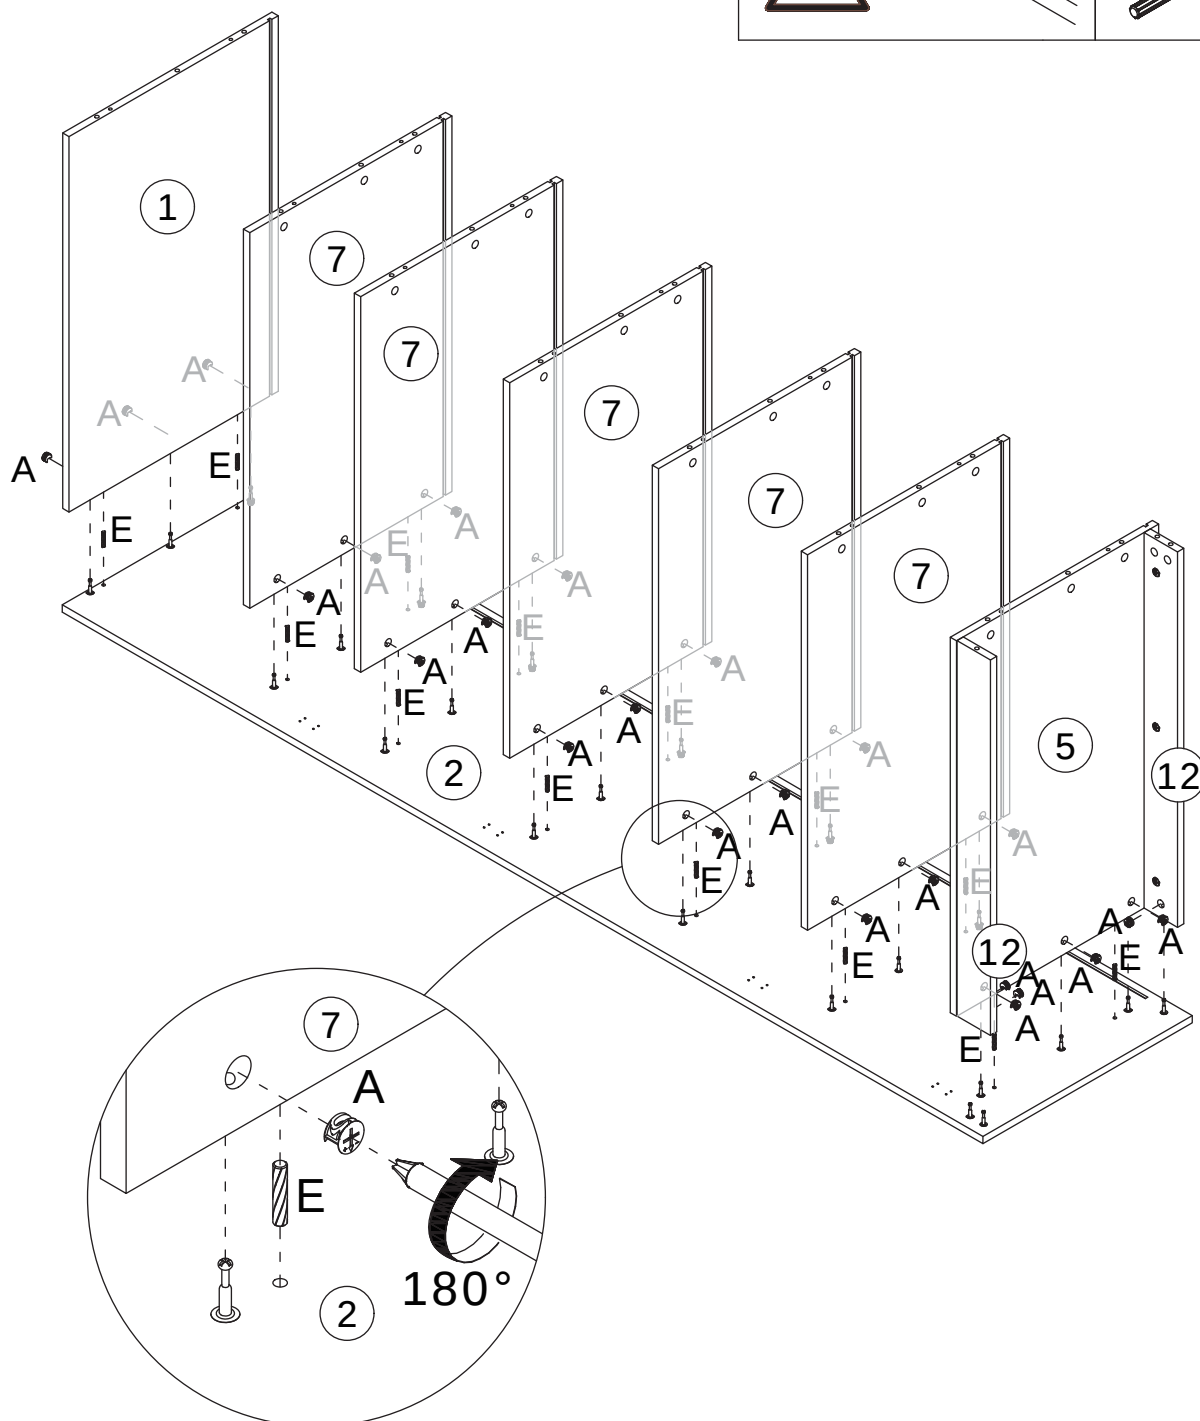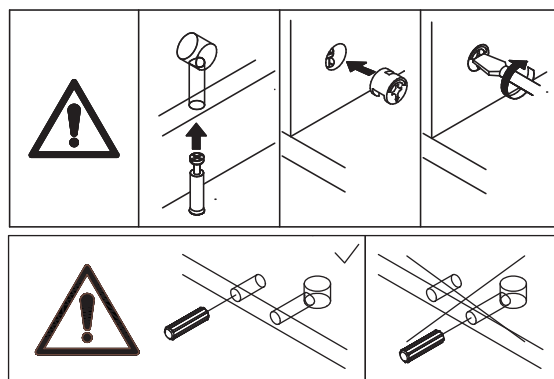


 Insert panel 13, 14, and 15 into the available slots.


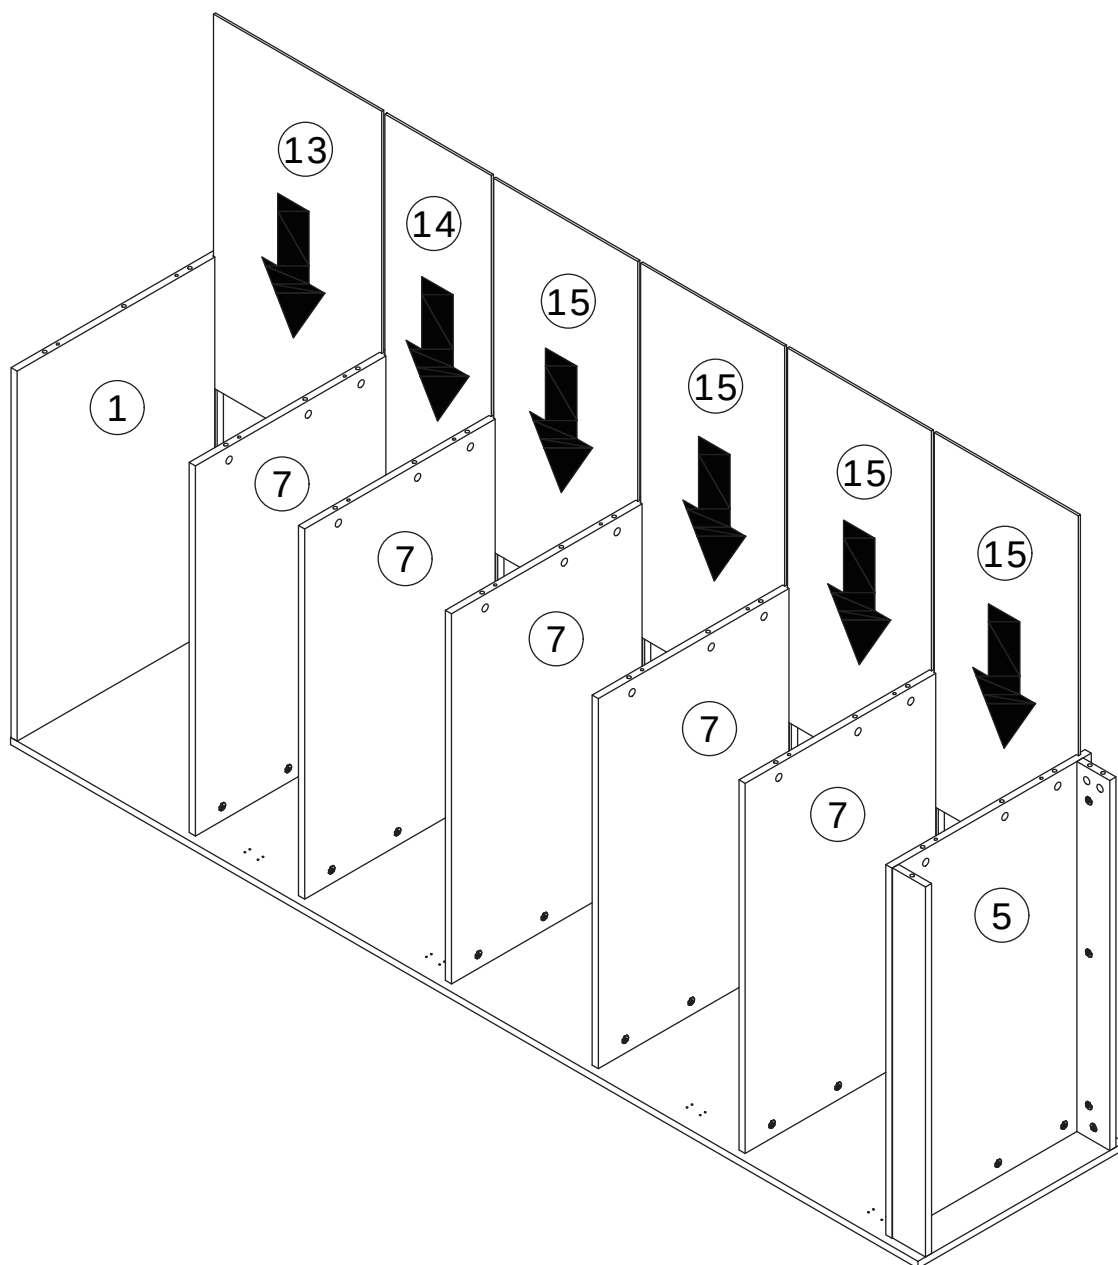


28

 
E x 14



CRF0630A

  

 Insert wooden dowel (E) into panel 1, 5, and 7.


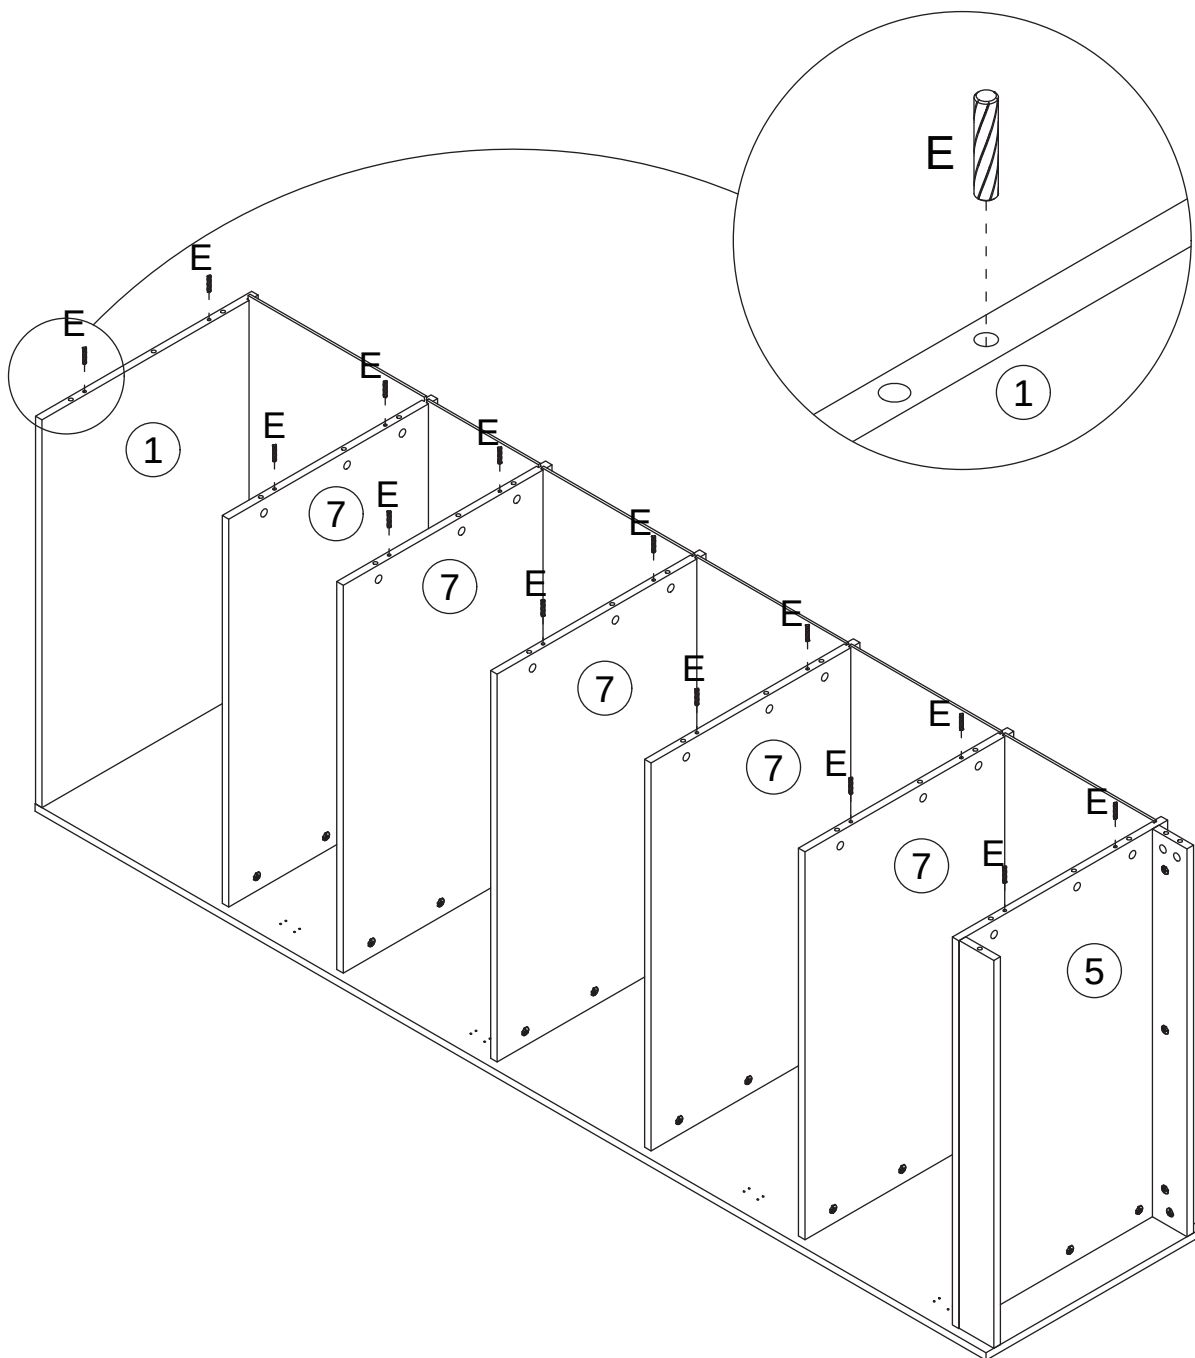


29

A x 24




  CRB1595A

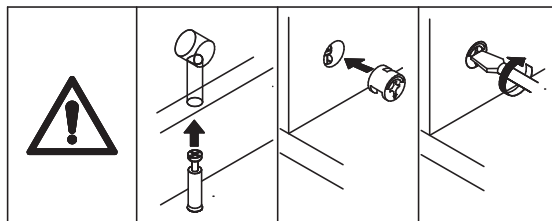

Connect the two mounting units, then tighten by turning cam lock (A) clockwise.

 Be careful not to pinch your fingers on the cabinet.

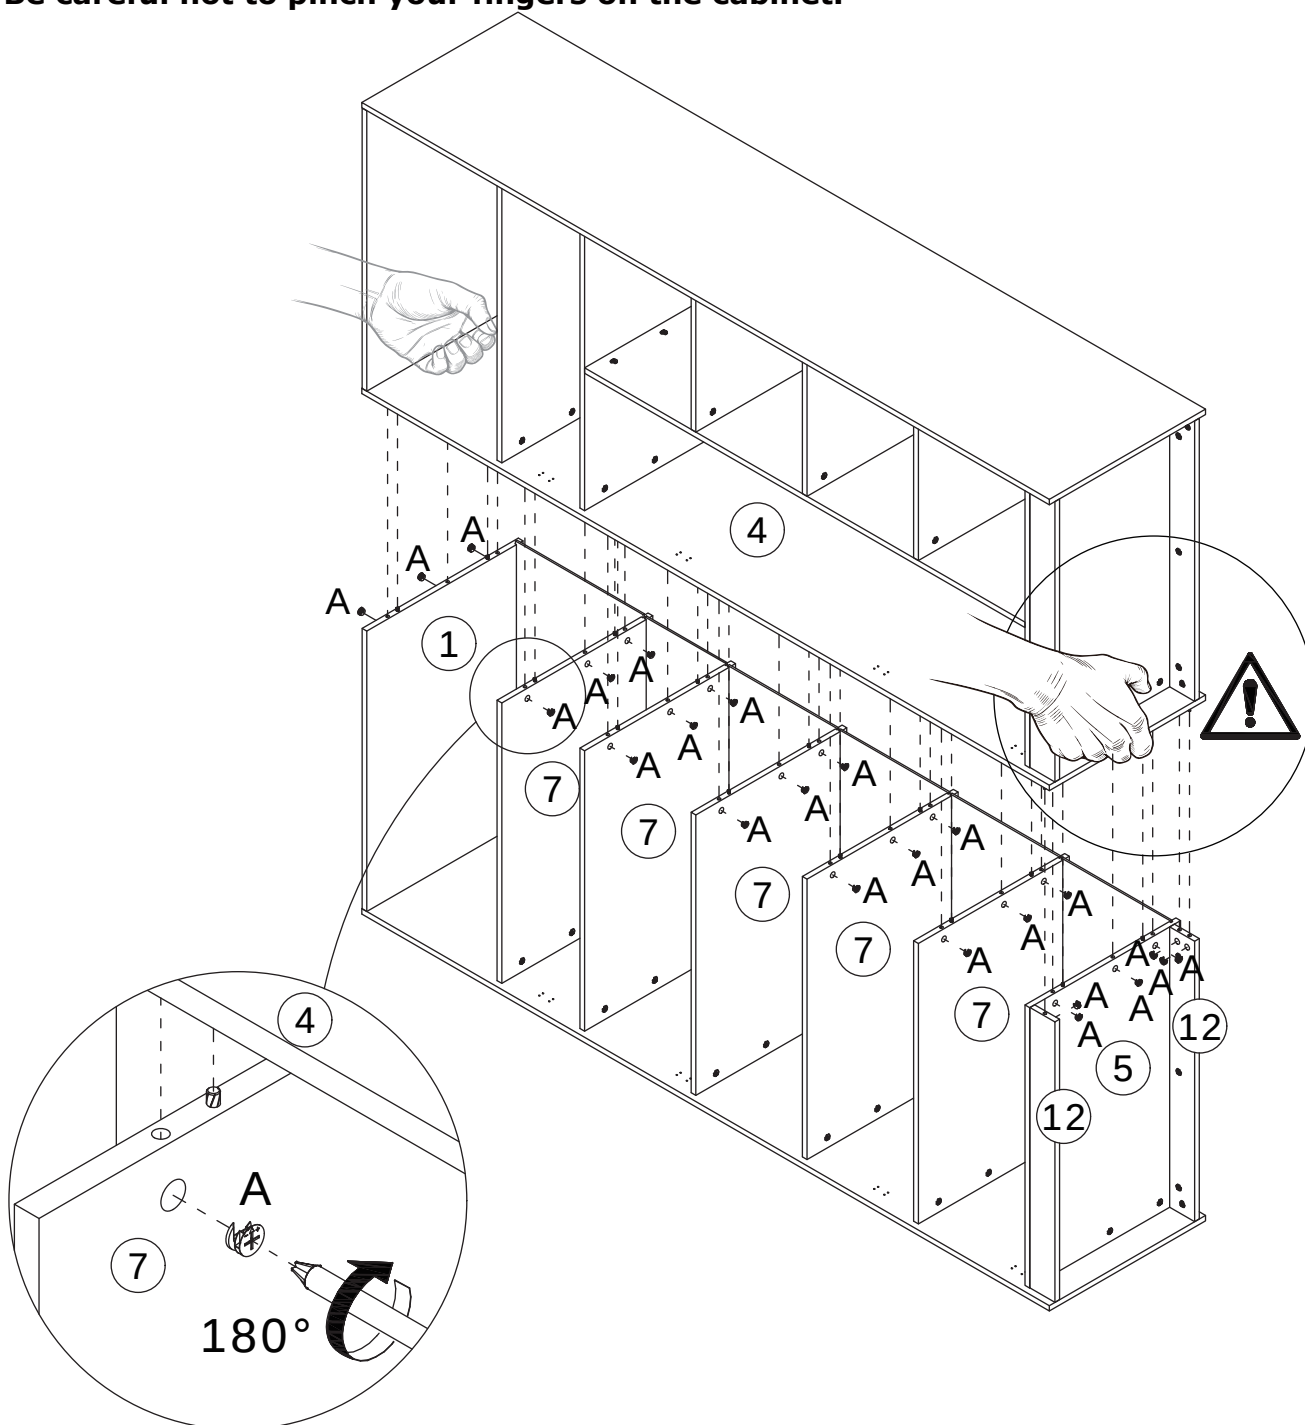

30


H x 5




K x 5




 
CRE0418A



 
Secure knob (H) to panel 11 using screw (K).

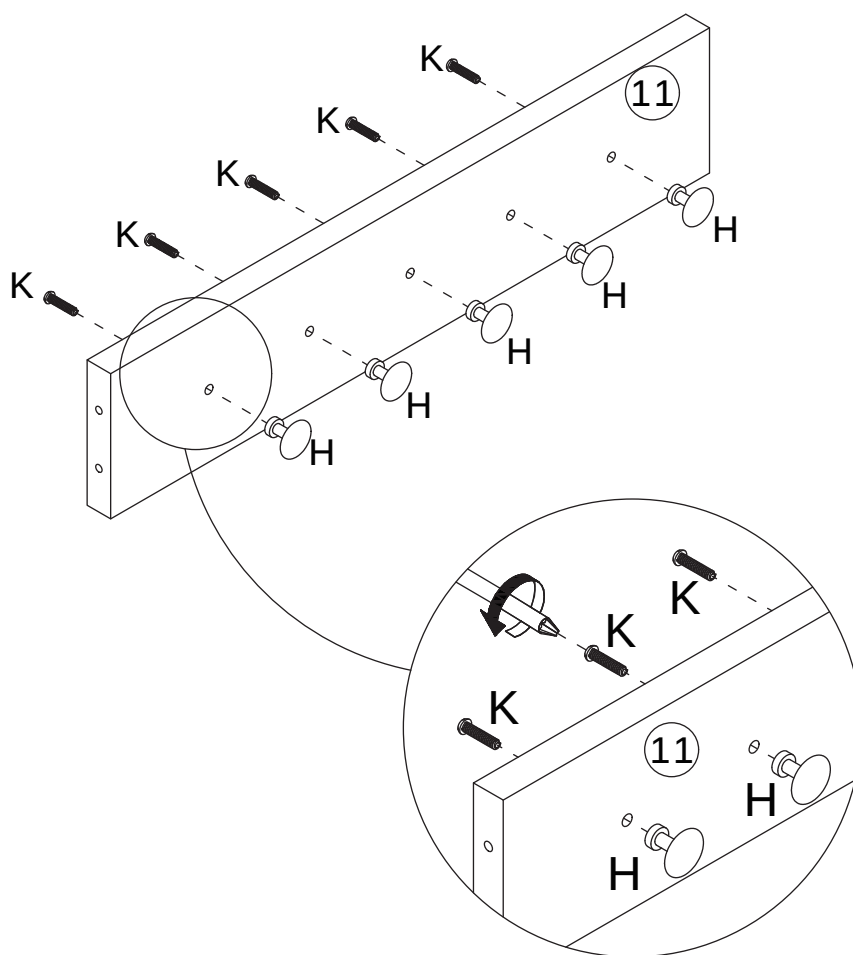


31

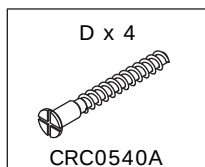  

 Turn the cabinet upside down and secure panel 11 to panel 4 and 9 using screw (D).

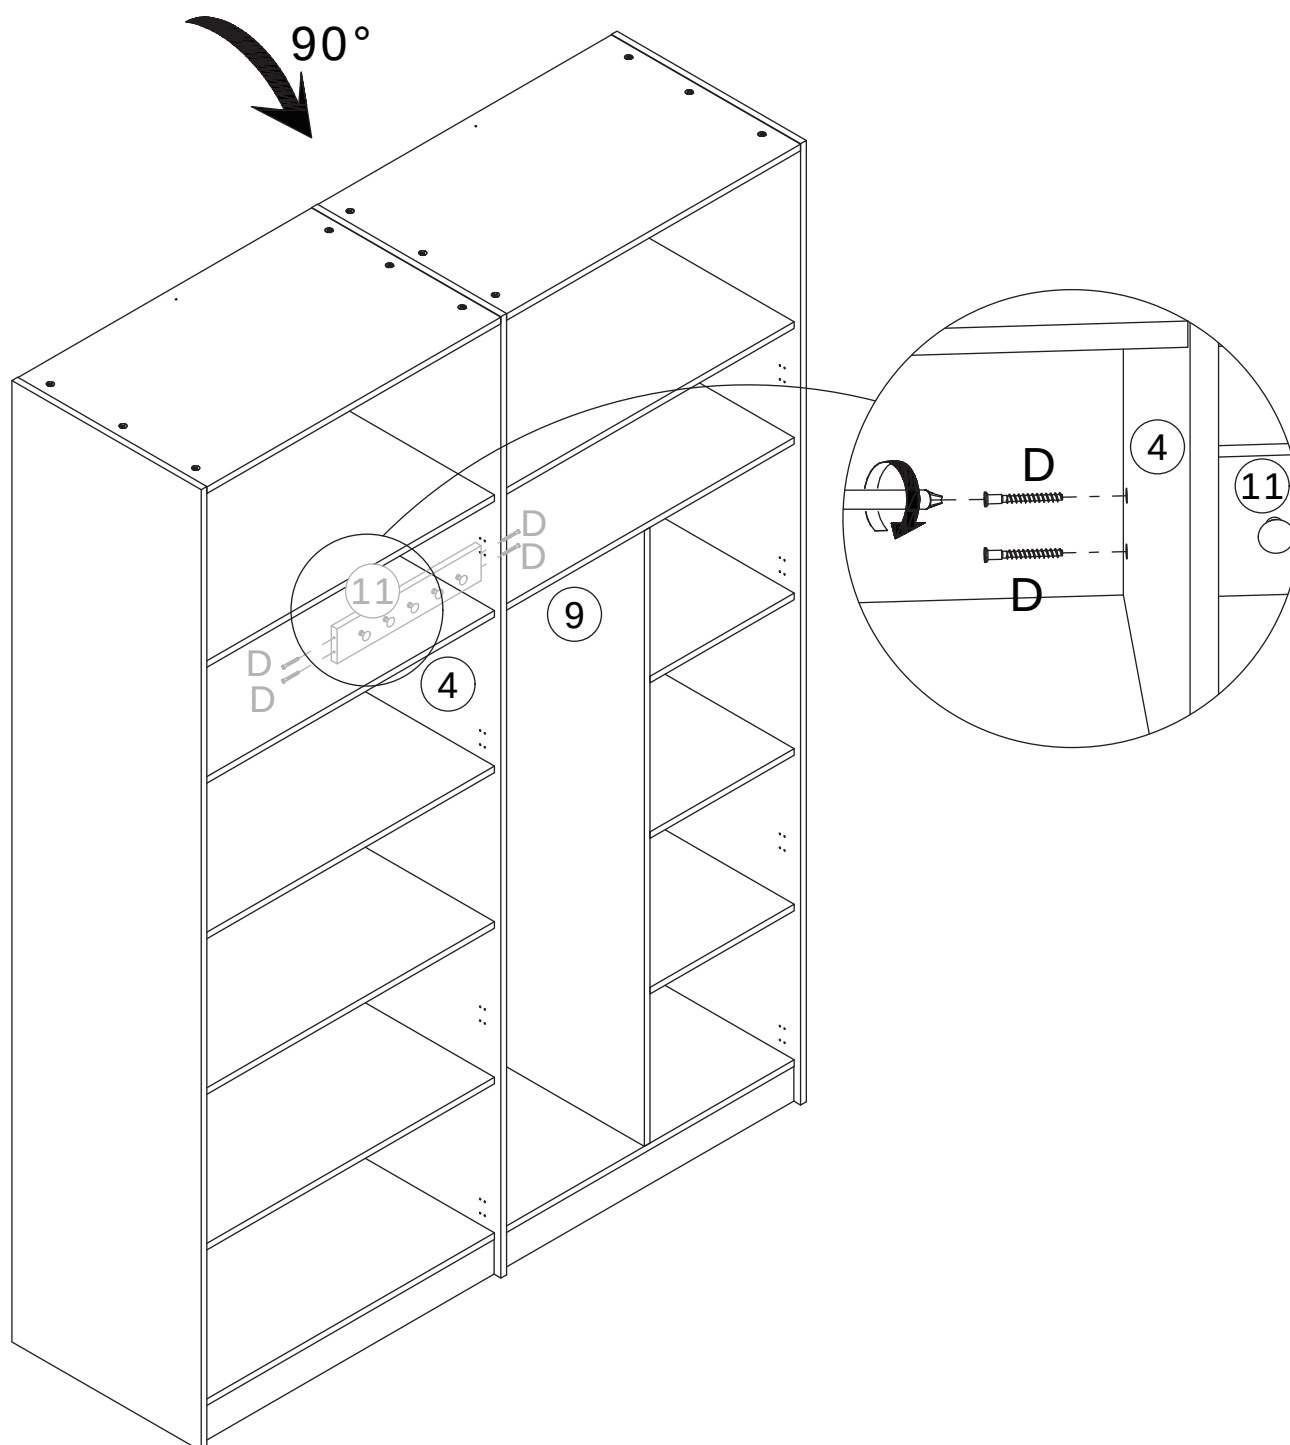


32

 F x 16  DGA861C	G x 32  CRD3514A	
--	---	---

	G  CRD3514A	Q  CRD0314A
--	--	--

 Secure hinge (F) to panel 18 using screw (G).

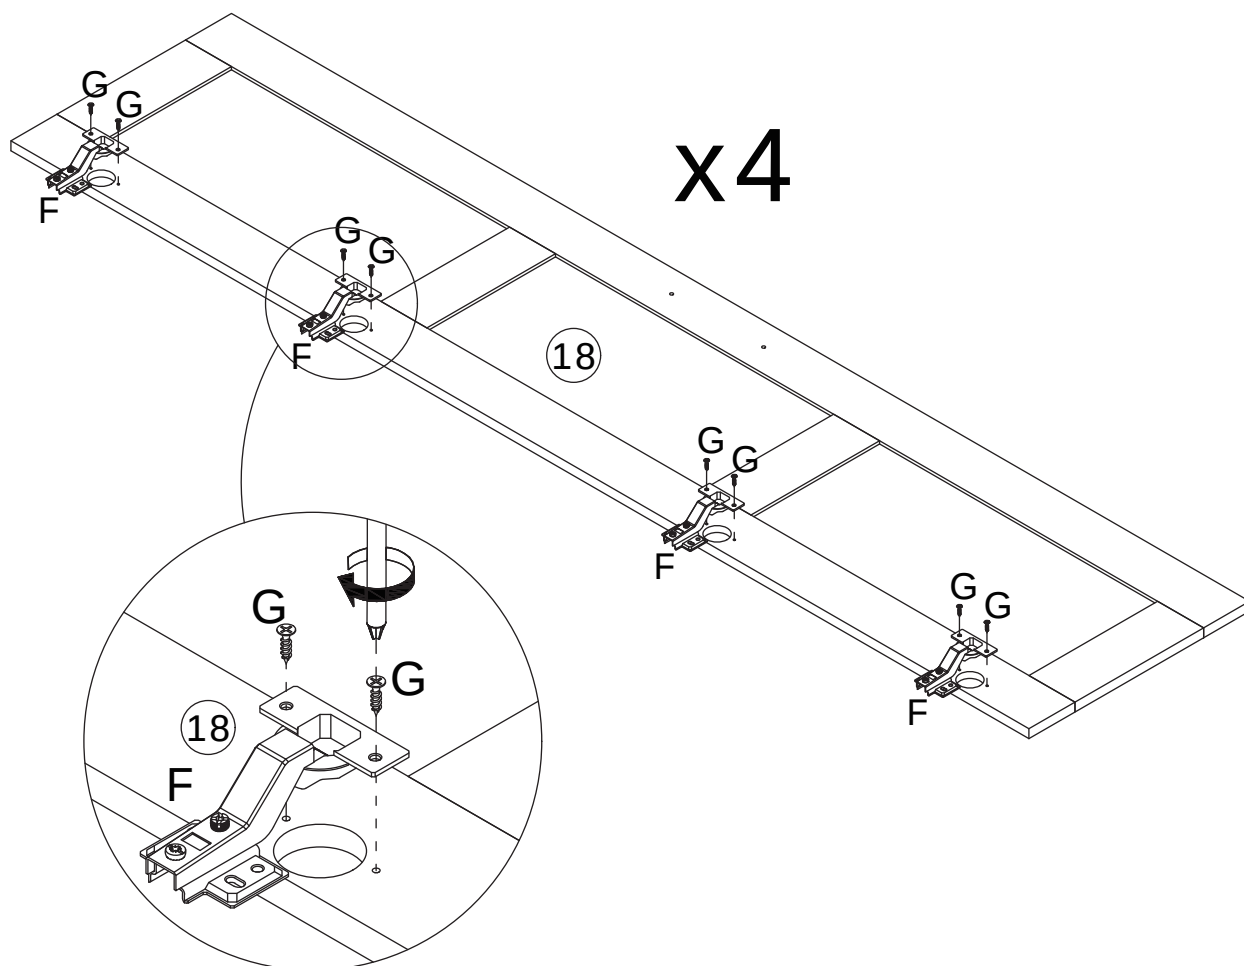


33

G x 32



 CRD3514A



Attach panel 18 to panel 2 and 3 via hinges using screw (G).



G





CRD3514A

Q




  CRD0314A

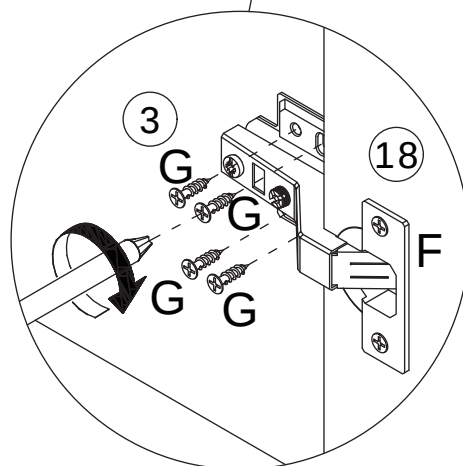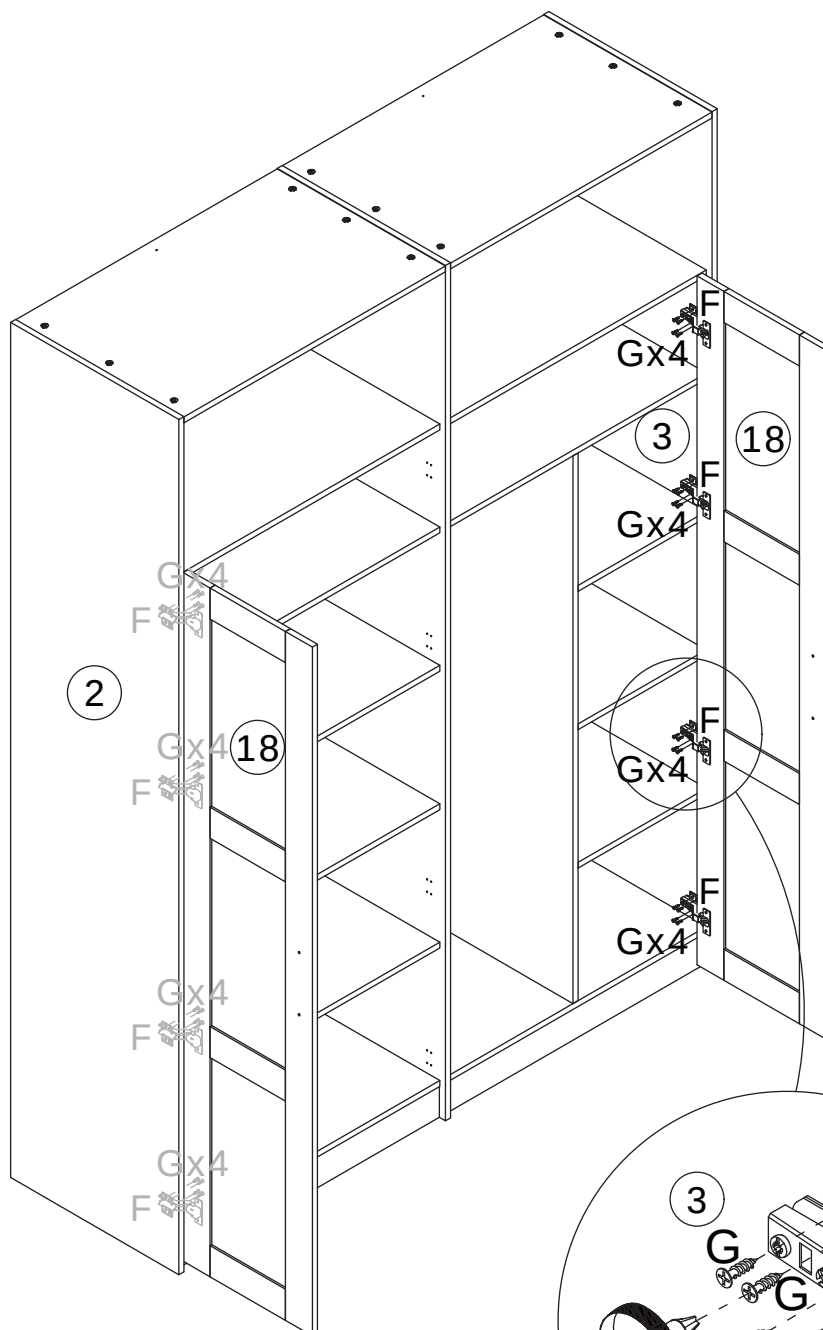

34

 
J x 2




K x 4



 CRE0418A



 Secure handle (J) to panel 18 using screw (K).

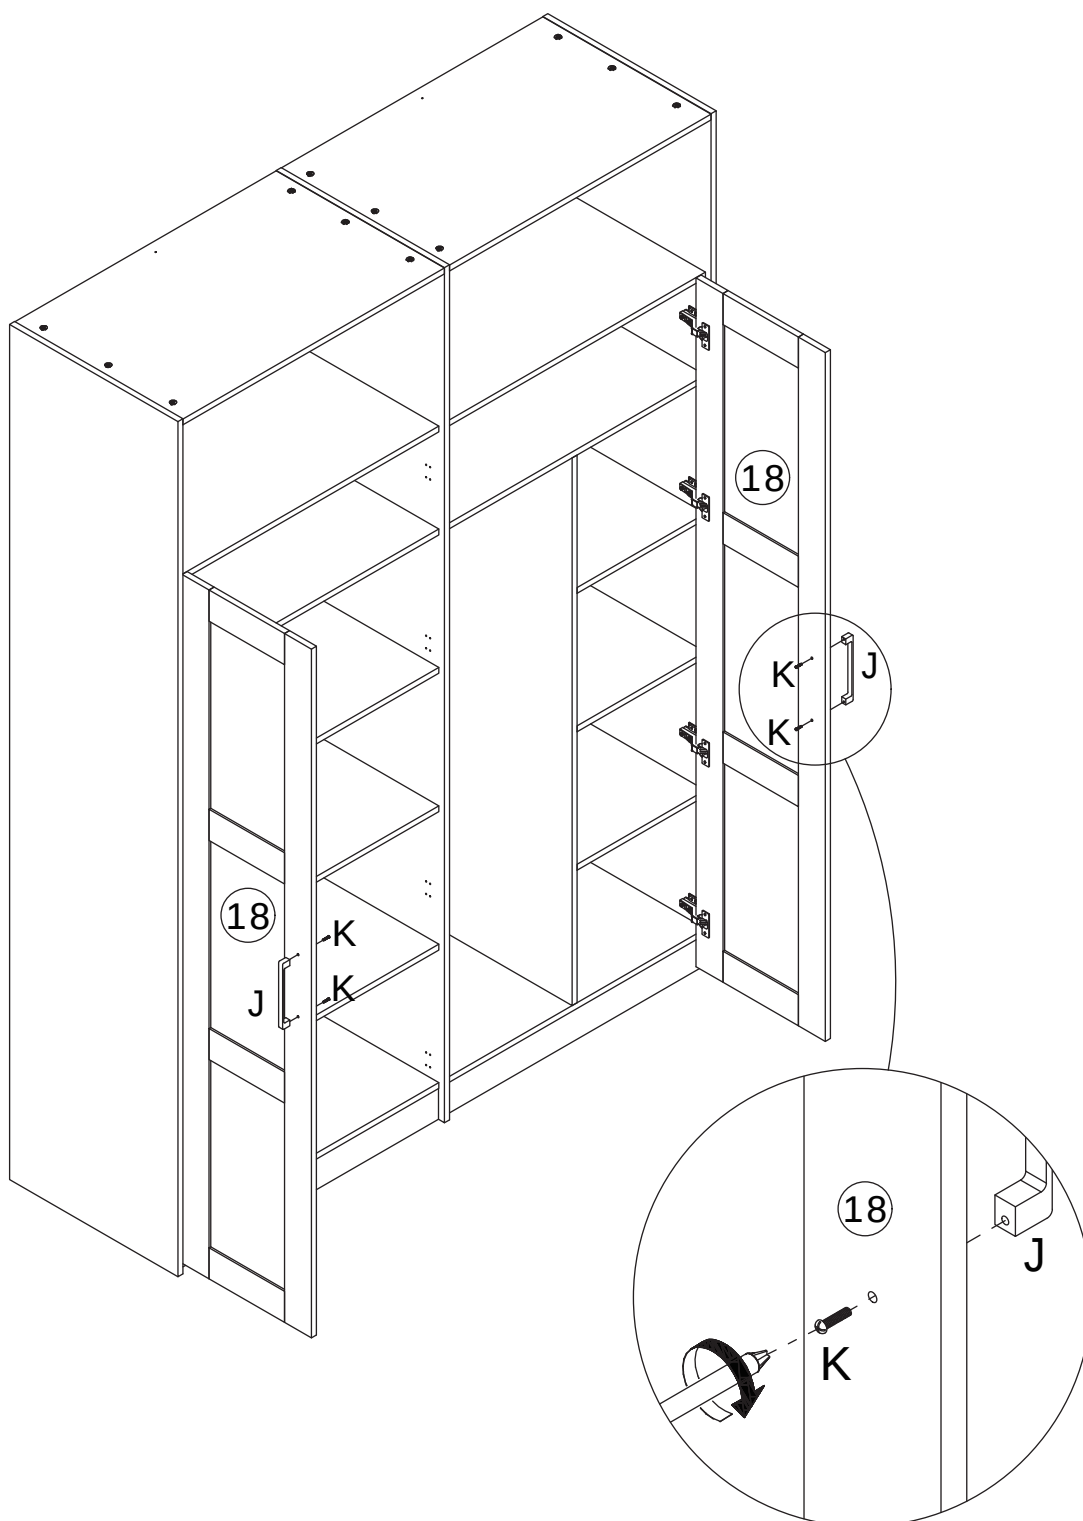


35

G x 16



 CRD3514A



Attach panel 18 to panel 4 via hinges using screw (G).



G





CRD3514A

Q




  CRD0314A

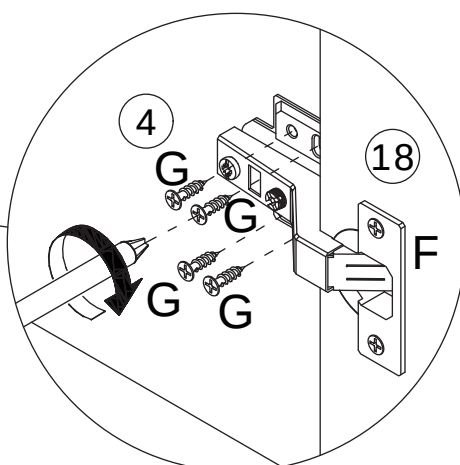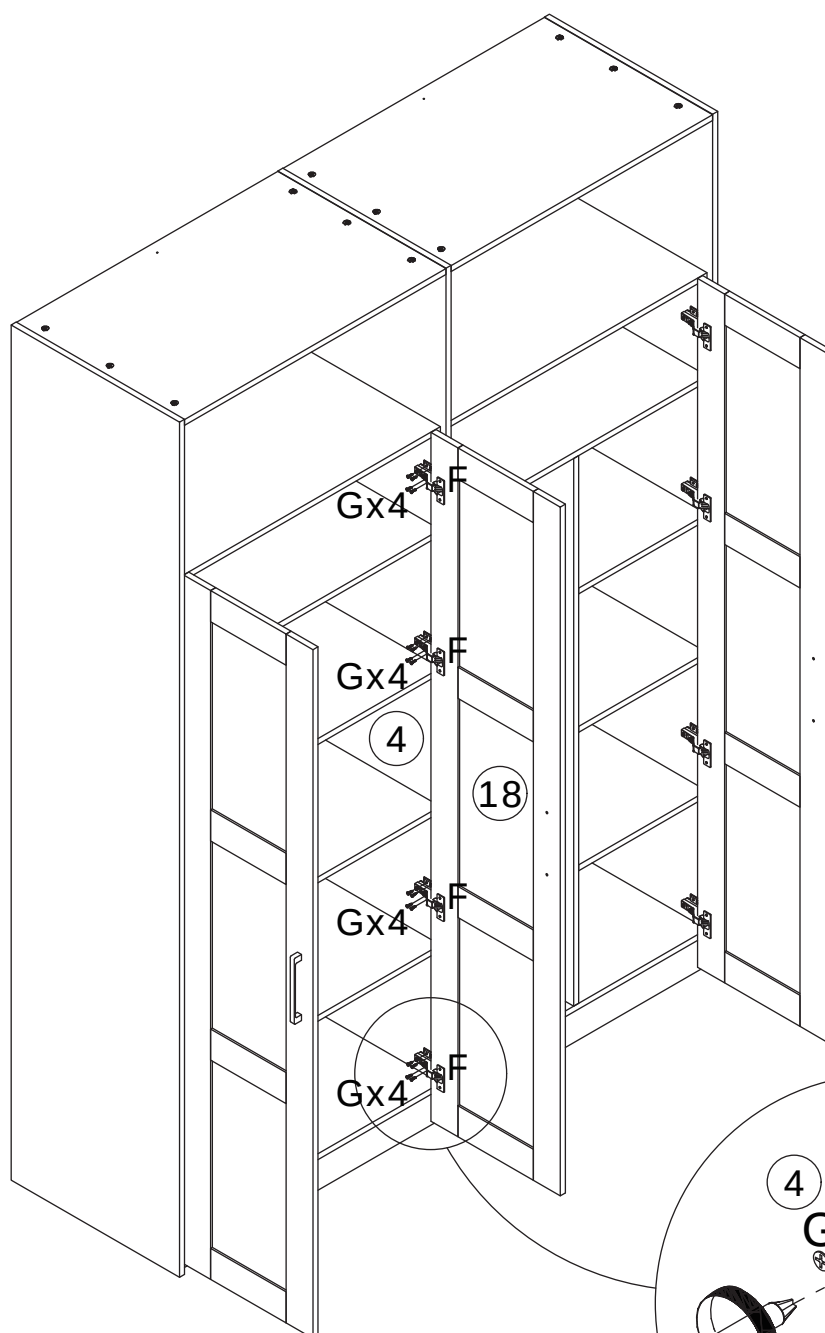

36

 
J x 1





K x 2



 CRE0418A



  Secure handle (J) to panel 18 using screw (K).

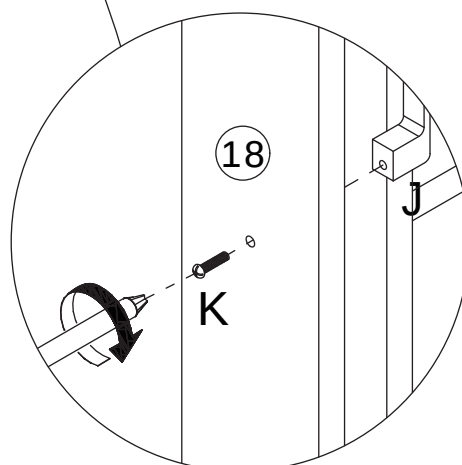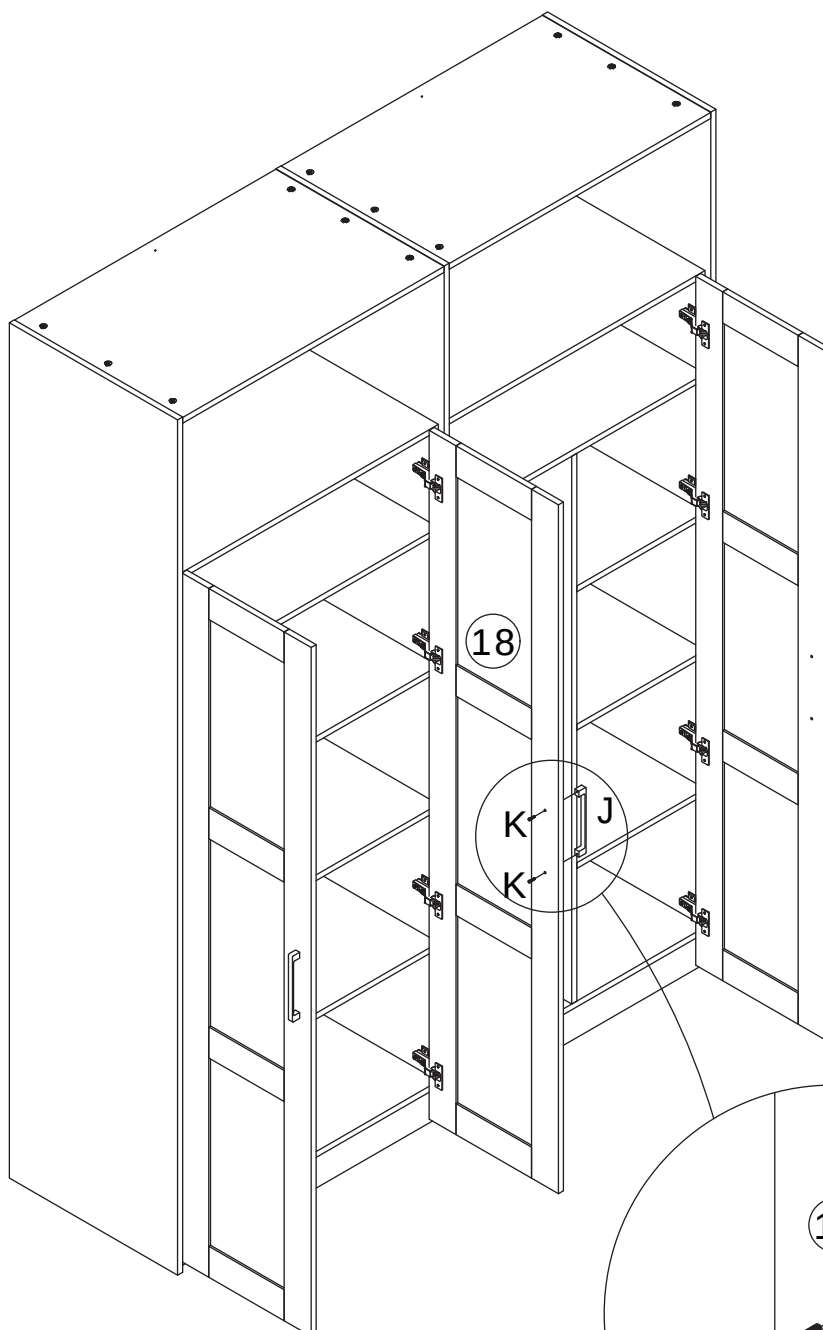


37

G x 16



 CRD3514A



G





CRD3514A

Q




CRD0314A

  Attach panel 18 to panel 4 via hinges using screw (G).

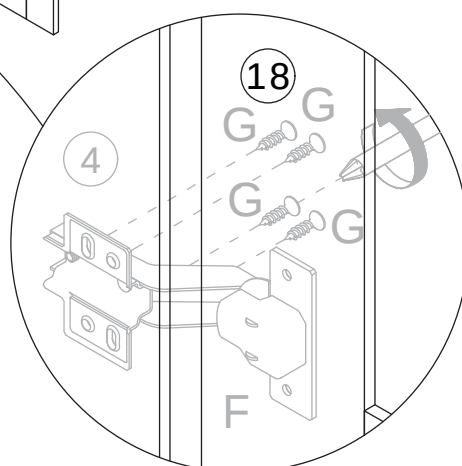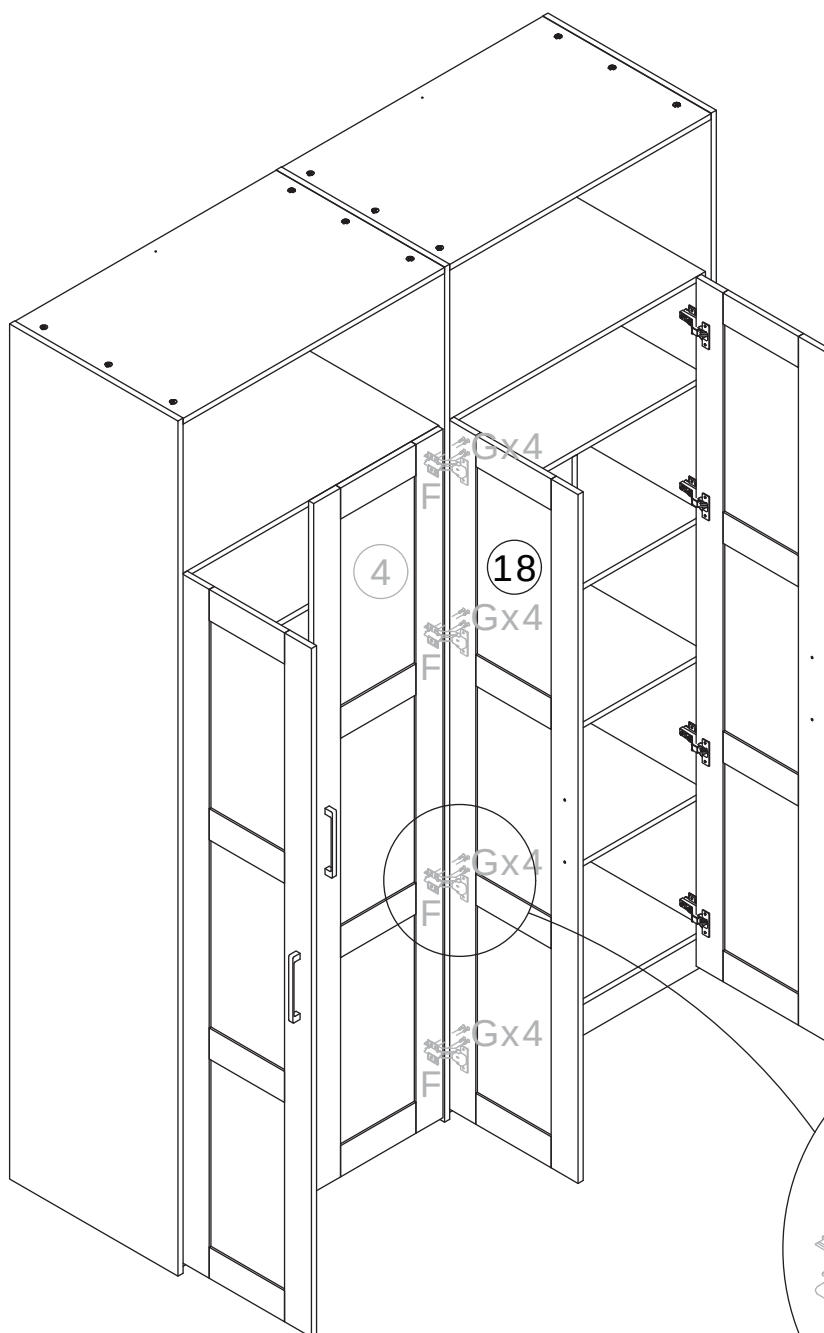

38

 
J x 1





K x 2



 CRE0418A




  Secure handle (J) to panel 18 using screw (K).

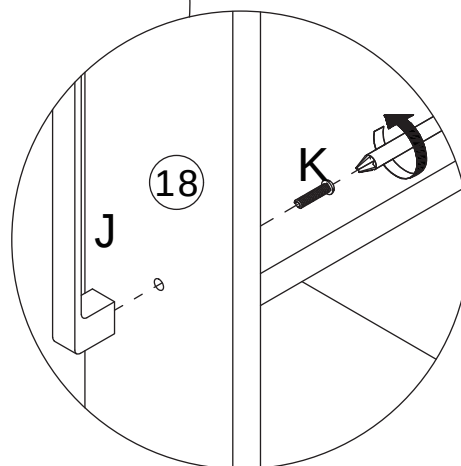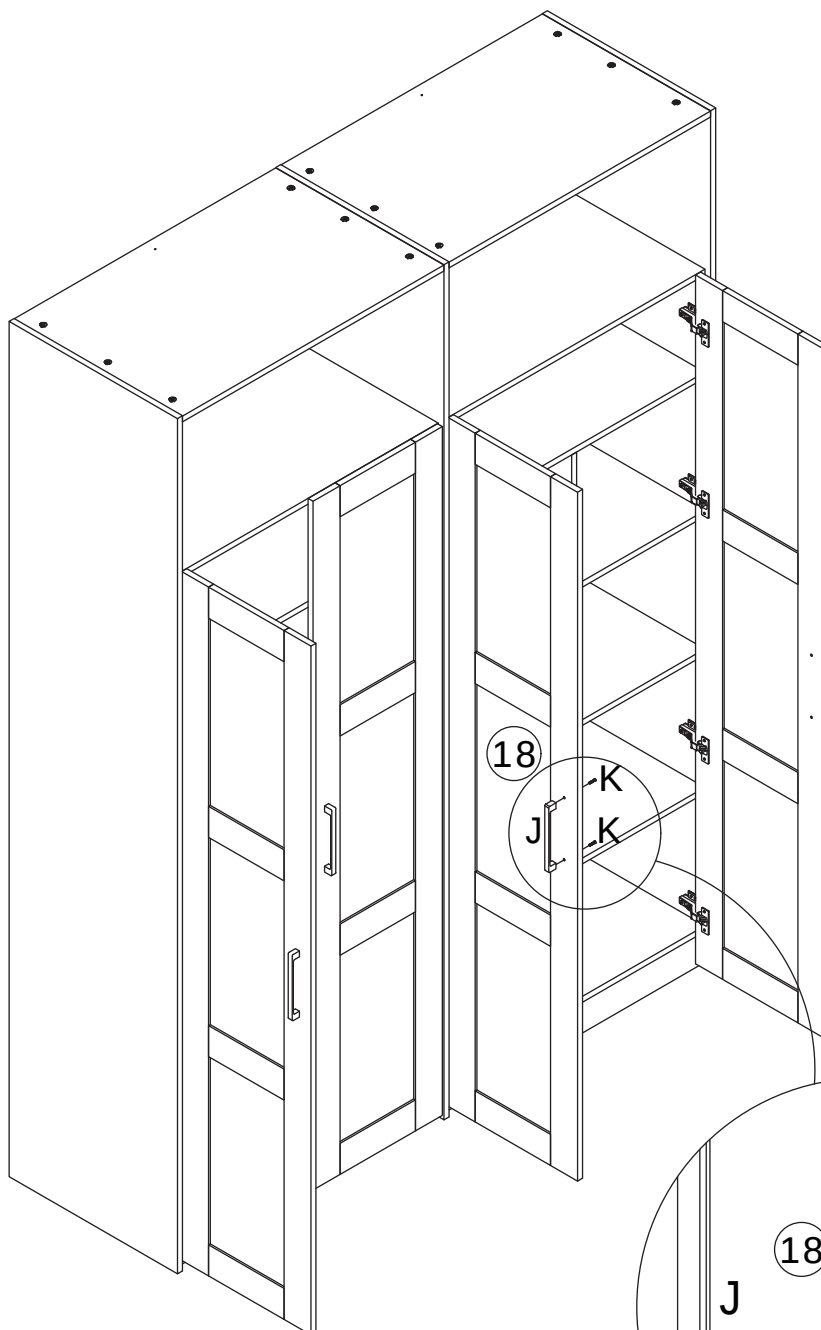

39

 
P x 57



Q x 57



 CRD0314A



G






CRD3514A

Q



CRD0314A

   First, insert clip (P) into the available slots, then secure them with screw (Q).

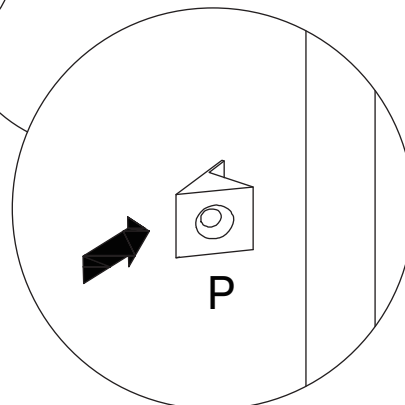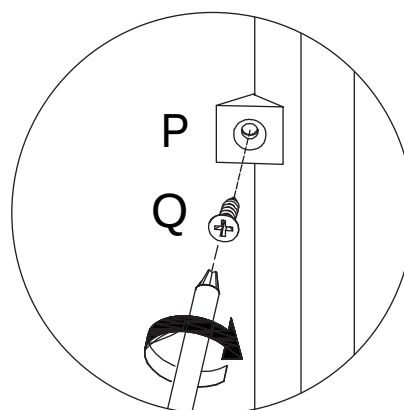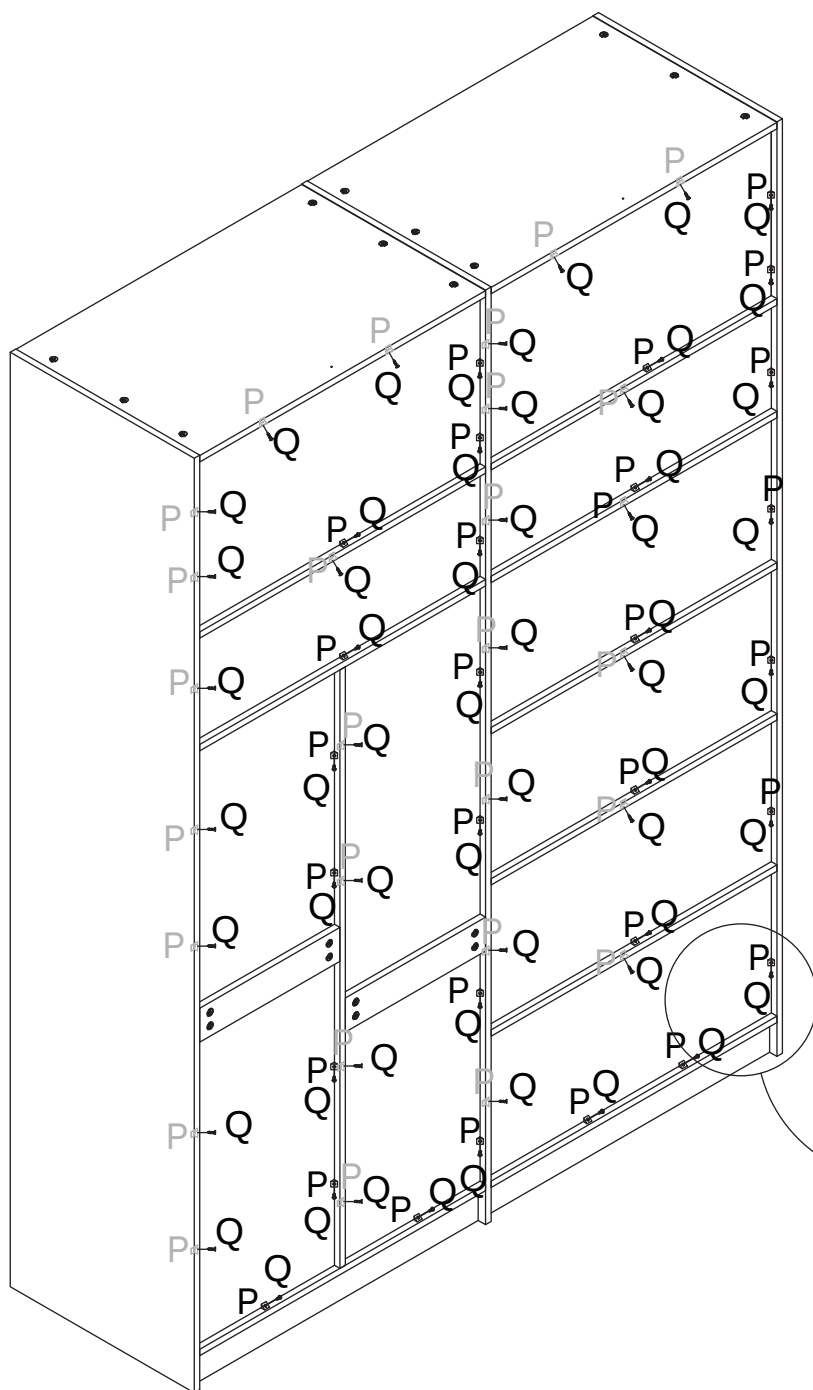



40

G x 2



CRD3514A

  L x 2



G





CRD3514A

Q




CRD0314A

  Secure bracket (L) to panel 1 using screw (G).

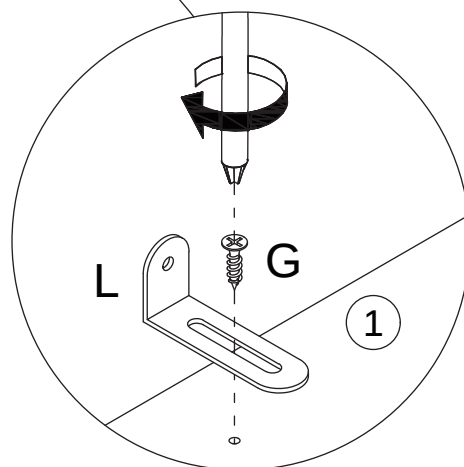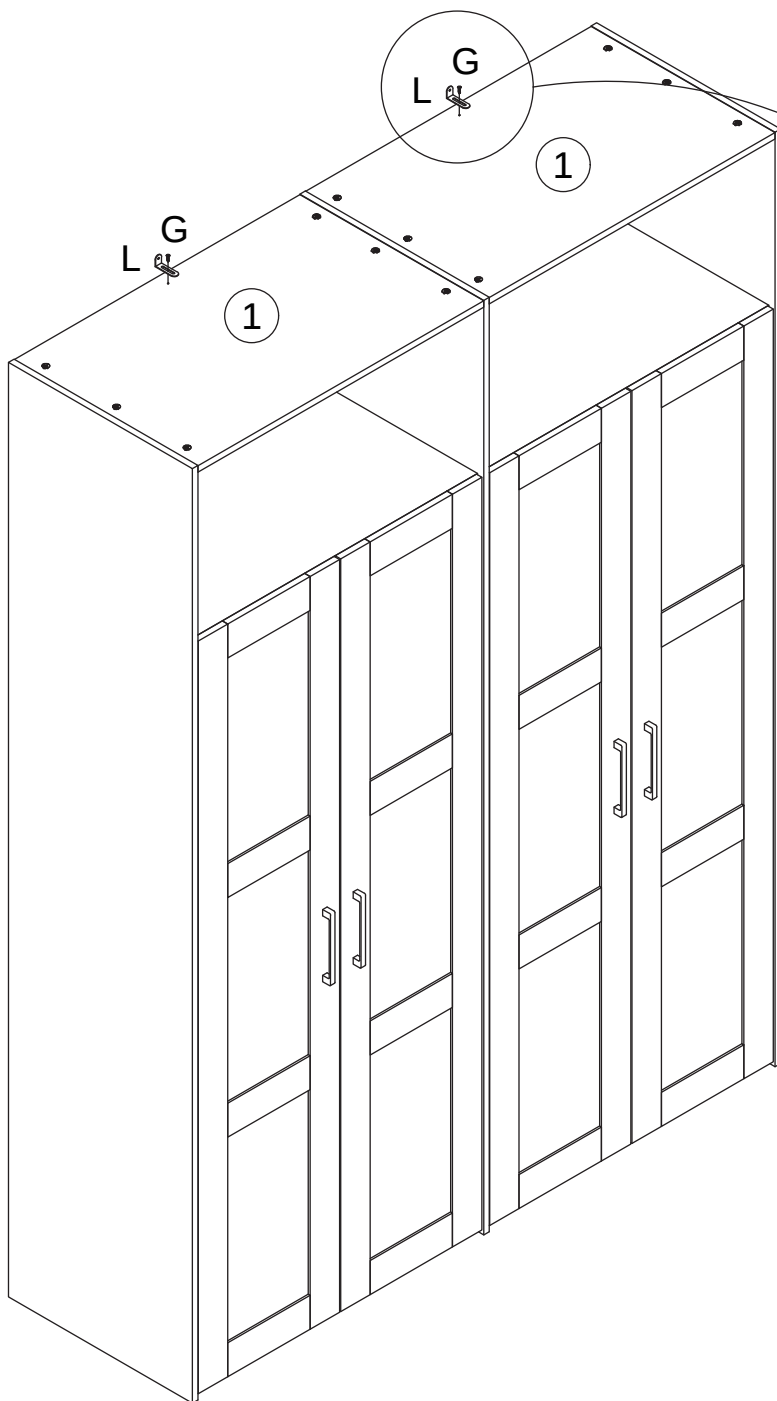

41



 
M x 2



N x 2



   CRD3535A

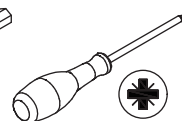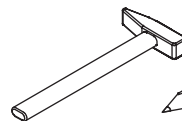


Install an anti-tip device.

WALL


M L N

M L N

 
1




 
2.

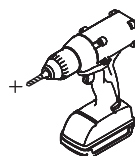


 3.

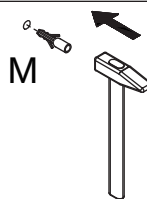

   4.

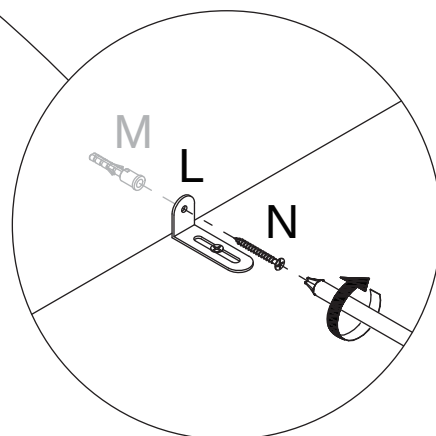
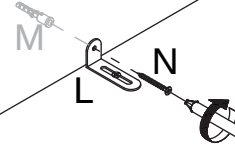





If the door panels are not aligned, please adjust the screws on the hinges according to the illustration.

Or you can search this link to view the teaching video.

  
<https://youtu.be/n0Lb36SoODM>

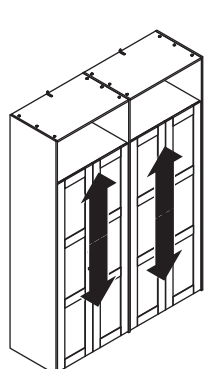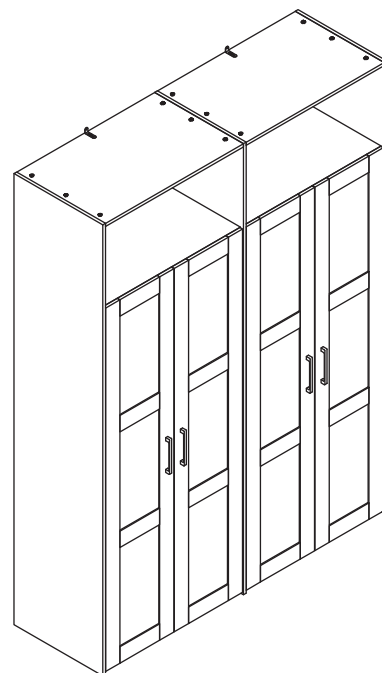



I

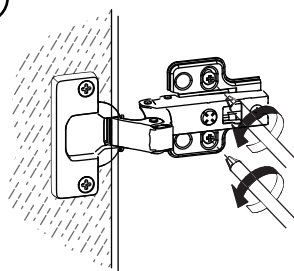 


II

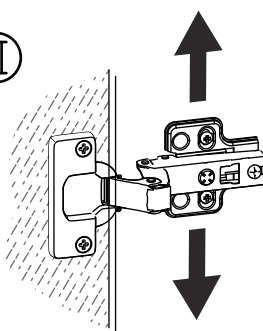 


III

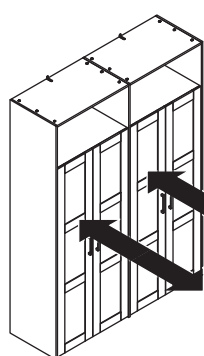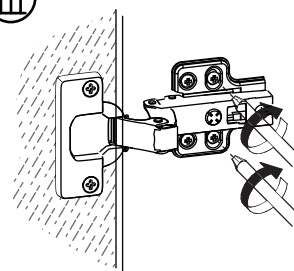  



I

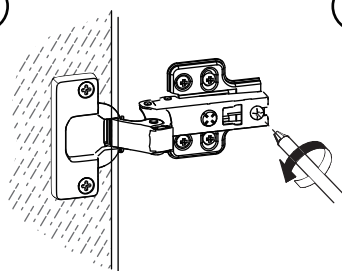 


II

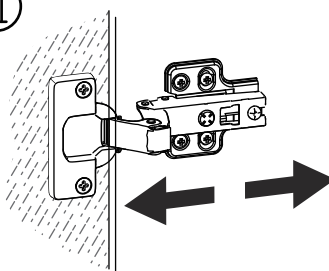 


III

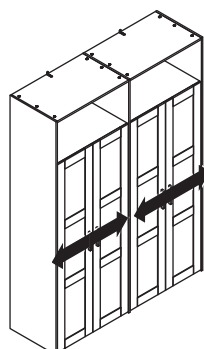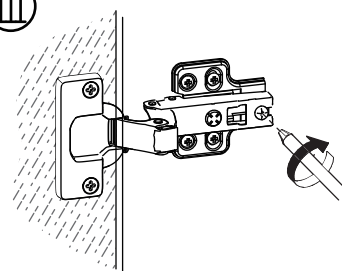  

I

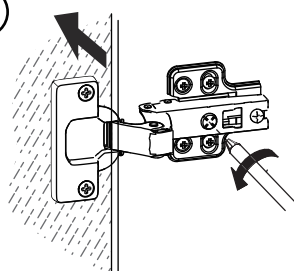 

II

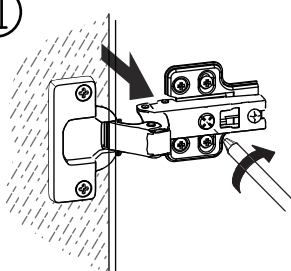 

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068