

## Operation Guide

GPCT1210



1. The included decoration pastry bag fits all tips and couplers and features a durable seam to prevent bursting when working with heavy, textured fillings.

2. Put the bag together with the tips and couplers. Unscrew the plastic cover around the assembled coupler and insert the uncovered coupler into the pastry bag, cut off the excess tip of the bag to expose the thread of the coupler before re-inserting, then put in a tip and re-assemble the coupler by screwing the cover back on.

## Operation Guide

GPCT1210



1. The included decoration pastry bag fits all tips and couplers and features a durable seam to prevent bursting when working with heavy, textured fillings.

2. Put the bag together with the tips and couplers. Unscrew the plastic cover around the assembled coupler and insert the uncovered coupler into the pastry bag, cut off the excess tip of the bag to expose the thread of the coupler before re-inserting, then put in a tip and re-assemble the coupler by screwing the cover back on.

## Operation Guide

GPCT1210



1. The included decoration pastry bag fits all tips and couplers and features a durable seam to prevent bursting when working with heavy, textured fillings.

2. Put the bag together with the tips and couplers. Unscrew the plastic cover around the assembled coupler and insert the uncovered coupler into the pastry bag, cut off the excess tip of the bag to expose the thread of the coupler before re-inserting, then put in a tip and re-assemble the coupler by screwing the cover back on.

## Operation Guide

GPCT1210



1. The included decoration pastry bag fits all tips and couplers and features a durable seam to prevent bursting when working with heavy, textured fillings.

2. Put the bag together with the tips and couplers. Unscrew the plastic cover around the assembled coupler and insert the uncovered coupler into the pastry bag, cut off the excess tip of the bag to expose the thread of the coupler before re-inserting, then put in a tip and re-assemble the coupler by screwing the cover back on.



3. To clean the pastry bag, rinse the bag out then soak it in a soapy sink of warm water. After that, hang it to dry with its convenient loop.

Note: Replace the stainless steel tips and couplers in the included carrying case for secure storage when not in use. Always keep this product out of the reach of children.



3. To clean the pastry bag, rinse the bag out then soak it in a soapy sink of warm water. After that, hang it to dry with its convenient loop.

Note: Replace the stainless steel tips and couplers in the included carrying case for secure storage when not in use. Always keep this product out of the reach of children.



3. To clean the pastry bag, rinse the bag out then soak it in a soapy sink of warm water. After that, hang it to dry with its convenient loop.

Note: Replace the stainless steel tips and couplers in the included carrying case for secure storage when not in use. Always keep this product out of the reach of children.



3. To clean the pastry bag, rinse the bag out then soak it in a soapy sink of warm water. After that, hang it to dry with its convenient loop.

Note: Replace the stainless steel tips and couplers in the included carrying case for secure storage when not in use. Always keep this product out of the reach of children.