
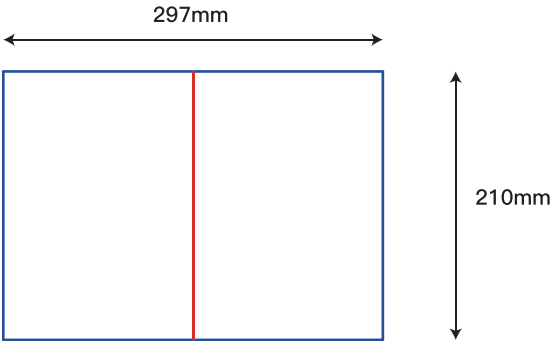
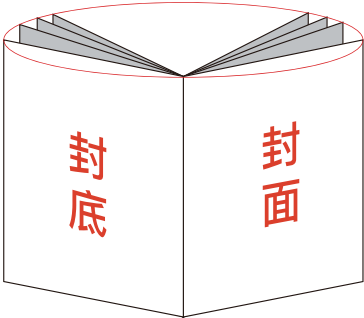
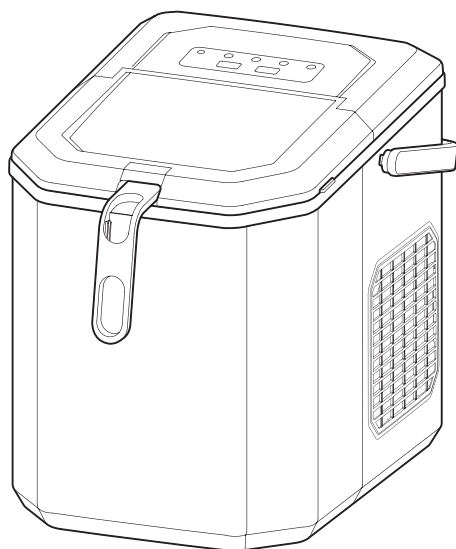


	1	2	3	4					
	注：此页为技术说明，非印刷内容								
A	刀模线：  内折线： 								
B	展开尺寸图： 								
C	装订效果图： 								
D	技术要求： 1、材质：80g 双胶纸 2、展开尺寸：A4，如图所示装订成型为 A5，16P 3、颜色：单色 4、印刷：印刷图档见后续页，双面印刷 5、装订方式：骑马钉								
E									
符号标识 版本变更  关键尺寸  编号  参考尺寸 (.XXX)					名 称 SLIM21-US-Manual I-HK	PLM 号 860-03609-00 投影法 第一角投影法 			
	除 非 另 有 说 明	标记	处数	ECO#	发行时间	图 号	版 本 V0	重 量G	比 例
	0-30 ±1	设 计			P M	材 料			
	30-150 ±2	绘 图	Sinn	日期	2025/03/05		共 1 页	第 1 页	
	150-300 ±3	审 批	Bella	日期		规 格	倍思奇创新科技（深圳）股份有限公司		
	300-450 ±4	除去所有利边，尖点，毛刺							
	>450 ±5								
	1	2	3	4					

INSTRUCTION MANUAL VO

SLIM21

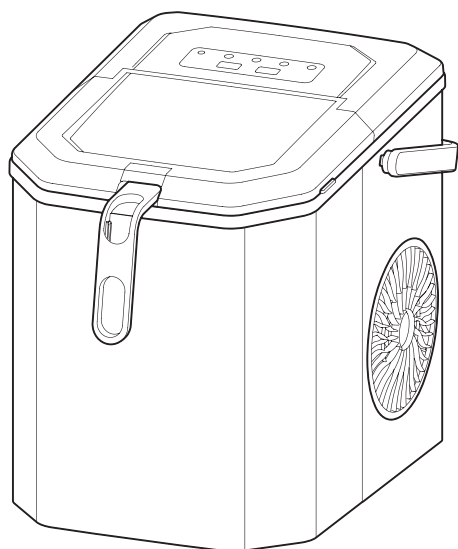

Ice Maker

PAGE CONTENT

IMPORTANT SAFETY INFORMATION	01
PRODUCT INTRODUCTION	03
CONTROL PANEL INTRODUCTION	04
USING YOUR ICE MAKER	05
CLEANING AND MAINTENANCE	09
PRODUCT SPECIFICATIONS	11
TROUBLESHOOTING	12
WARRANTY INFORMATION	14

IMPORTANT SAFETY INFORMATION

To reduce the risk of injury or property damage, please follow these safety precautions.

WARNING



- Voltage power from outlet must match specifications on appliance nameplate.



- This appliance **must be** grounded.



- Using an extension cord may cause overheating and increase the risk of fire.

If an extension cord **MUST** be used:

- 1) **Only use an** extension cord with grounding plug.
 - 2) The marked rating of an extension cord **must be** equal to or greater than the rating of this appliance.
- **Do not** operate if any component, including the cord or plug, is damaged.
 - Unplug the unit before cleaning by hand.



- Only responsible and capable adults should operate the ice maker.
- **Do not** place the power cord where it could be pulled by children or pose a tripping hazard.
- Children should not be left unattended near the ice maker during operation.



- **Do not** use water that is micro-biologically unsafe or of unknown quality.



- **Do not** remove any safety, warning, or product information labels from the unit.



- **Do not** touch the evaporator with your hands while the ice maker is operating.
- **Do not** plug in or unplug the unit with wet hands.



- The unit **must be** placed and set up according to installation instructions before use. The unit is for indoor household use only.



- **Do not** store or use flammable vapors or liquids near the unit.
- **Do not** immerse any part of the unit in water.



- **Do not** attempt to disassemble, repair, modify or replace any part of the ice maker unless permitted by the manufacturer.

WARNING



FIRE OR EXPLOSION HAZARD Flammable Refrigerant

This unit contains an isobutane refrigerant, also known as R600a, a natural gas with high environmental compatibility. However, it is also combustible. Adhere to the warnings below to reduce the risk of injury or property damage.



1. When handling, installing, and operating the unit, care should be taken to avoid damage to the refrigerant tubing.



2. Only dispose of the unit according to Federal and Local Regulations. Contact your local authorities for the environmentally-safe disposal of the unit.



3. Keep ventilation openings around the unit's enclosure clear of obstruction.



4. **Do not** place the unit near heat sources such as an oven.




5. Ensure a minimum of six inches of clearance around the side and back walls of the unit for proper air circulation.



6. **Do not** place the unit in direct sunlight.

PRODUCT INTRODUCTION

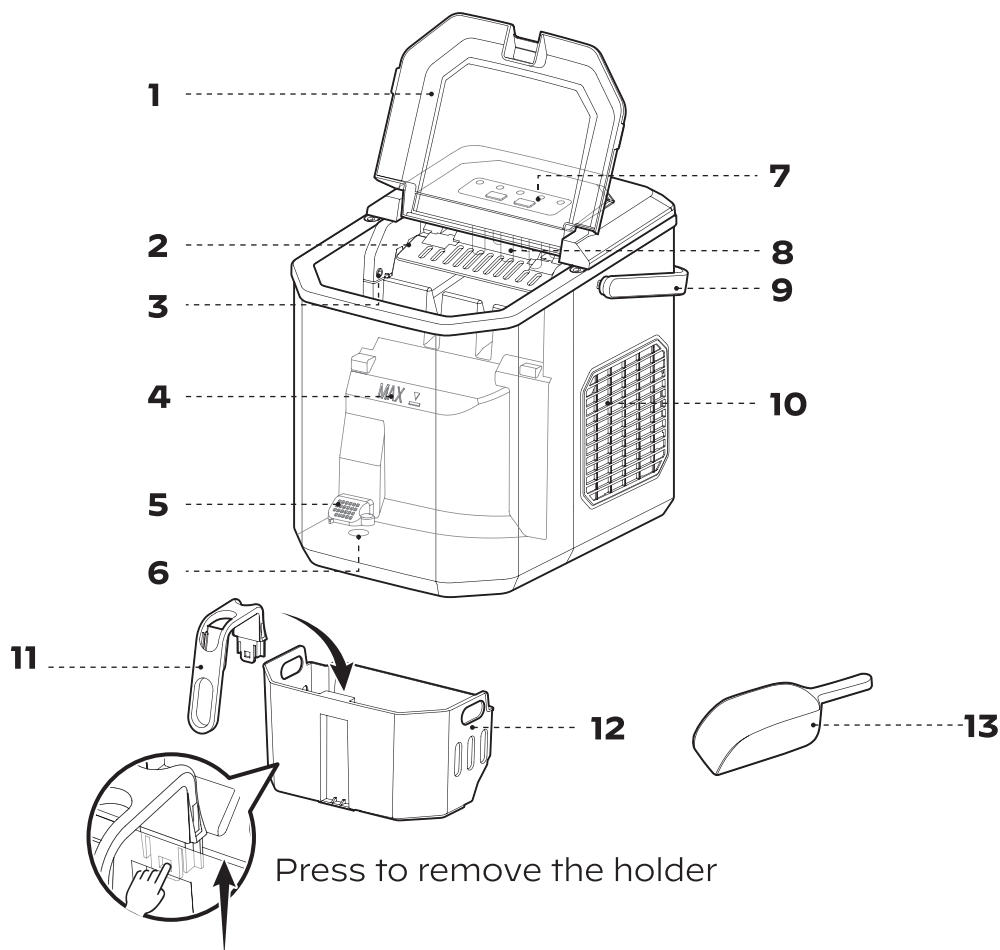


- 1.** Large Viewing Window
- 2.** Ice Shovel
- 3.** Ice Full Sensor
- 4.** Maximum Water Fill Line
- 5.** Water Filter
- 6.** Drain Plug

- 7.** Control Panel
- 8.** Evaporator
- 9.** Handle
- 10.** Air Exhaust Fan
- 11.** Ice Scoop Holder
- 12.** Ice Basket
- 13.** Ice Scoop

* Appearance may vary for different models.

CONTROL PANEL INTRODUCTION

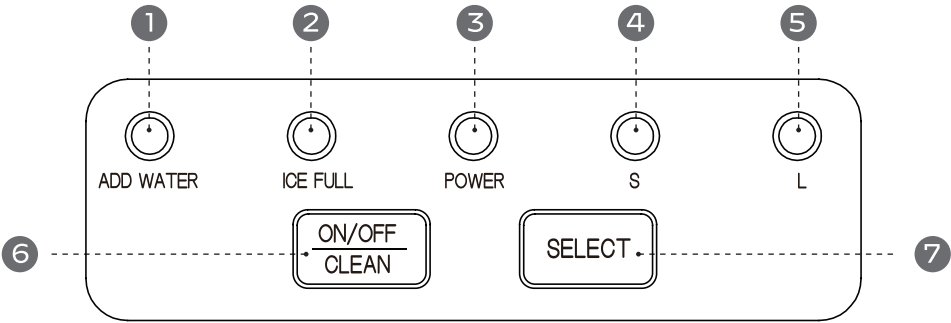

	Key (with indicator)	Function
1	ADD WATER	The indicator light turns red when the water reservoir is low.
2	ICE FULL	The indicator light turns red when the ice basket is full.
3	POWER	The indicator light turns green when on and flashes when powering up or down.
4	S	The indicator light turns green when small ice mode is selected.
5	L	The indicator light turns green when large ice mode is selected.
6	ON/OFF CLEAN	Press the ON/OFF button to turn the ice maker on. Press the ON/OFF button to turn the ice maker off. In standby mode, press and hold the ON/OFF/CLEAN button for 5 seconds to enter self-cleaning mode. The indicator lights of "S" and "L" will flash in green consecutively.
7	SELECT	Confirms large ice mode or small ice mode.

USING YOUR ICE MAKER


BEFORE FIRST USE

1.

Verify all parts and ice maker accessories were received.
Missing parts? Contact Customer Service.



Stand upright for 24hrs.

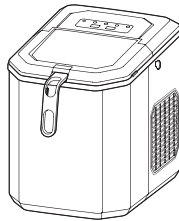


Use in locations
50°F ~ 90°F
(10°C ~ 32°C).



2.

Carefully **remove the protective film** and clean the ice maker thoroughly before first use.


Note: Make sure the drain plug is installed in place.

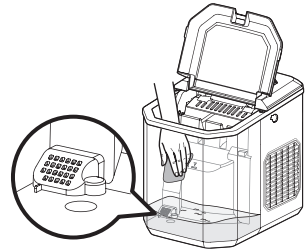

The evaporator drops 9 pcs of ice in each set. When using for the first time, or if the machine has not been used in a long time, please discard the first 4 sets of ice.




Due to temperature variations and other factors, ice quality should become stable after the first 1–3 cycles.

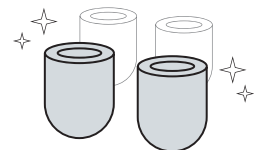

More Cycles = Perfect Shape

3. Installing The Handle

Position the handle over the insert hole. Fit the handle into the insert hole.

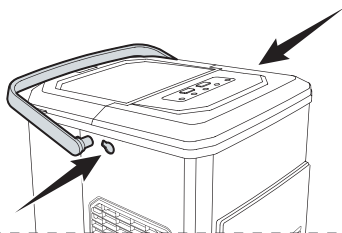


Lift back to lock the handle into place.




4. What Not To Do!


Unstable base.

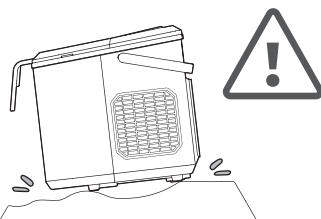

No other liquids
(Drinking water only).

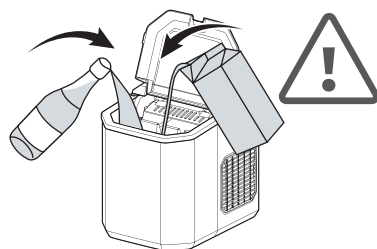


Do not use in high or low temps,
especially **lower than 41°F/5°C.**

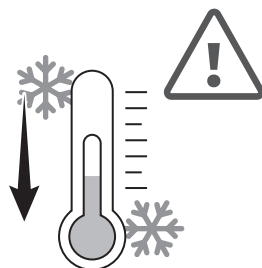

HOW TO USE YOUR ICE MAKER


1.

Open the top cover and remove the basket.

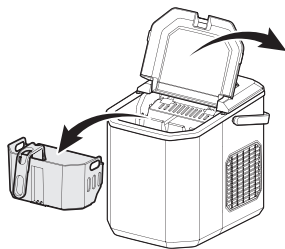


2.

Add water. Do not exceed the "MAX" water line. Then put the ice basket back into the machine.

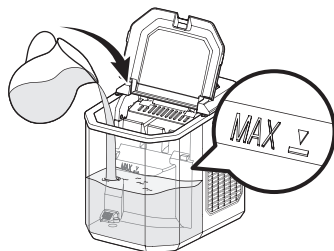

3.


Press the **ON/OFF** button.

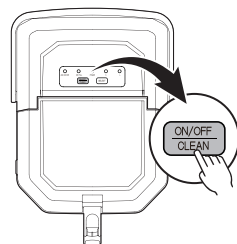

4.


Press the **SELECT** button to choose ice cube size.

Tip: It is recommended to choose small ice mode when in low temperature.

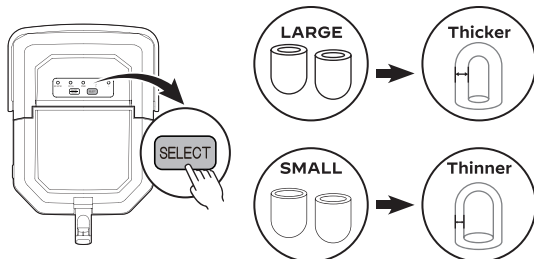


5.

Wait **6 min - 8 min**. The ice-making time depends on room temp and water temp.

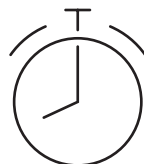


DONE:

Ice full and ready when the “ICE FULL” indicator is on.

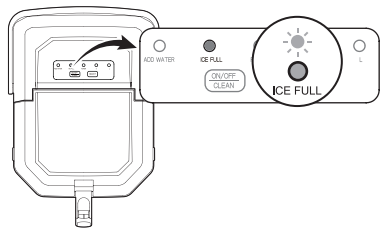


REFILL:


When the “ADD WATER” indicator turns red, add water and press the **ON/OFF** button.

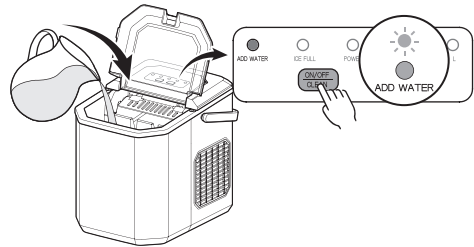

Remove ice cubes before they start to melt.

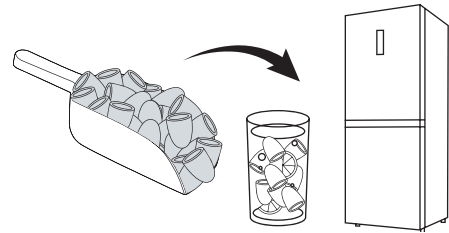

Some water may drip out when removing the ice basket. Use a dry towel to keep water from dripping on surfaces.

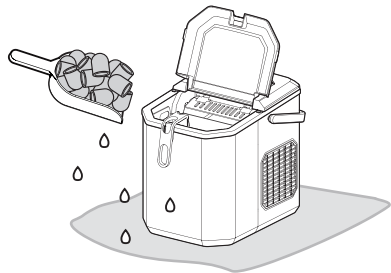

Note: After accidental power-off, it takes a little more time to restart the ice maker.

CLEANING AND MAINTENANCE


To keep your ice tasting fresh and the unit looking great, we recommend cleaning the unit once per week.

SELF-CLEANING (30-MIN PROCESS)

1.

Remove the basket and add water to the "MAX" water line.


Note: In areas with hard water, professional ice maker detergent can be used to clean the ice maker. Leave the detergent in the machine for 12 hours.

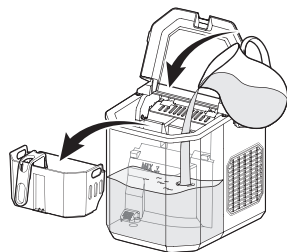

2.


IN STANDBY MODE:

Press and hold the **ON/OFF/CLEAN** button for 5 sec to start self-cleaning.

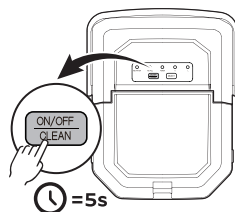

3.

Drain excess water over sink.

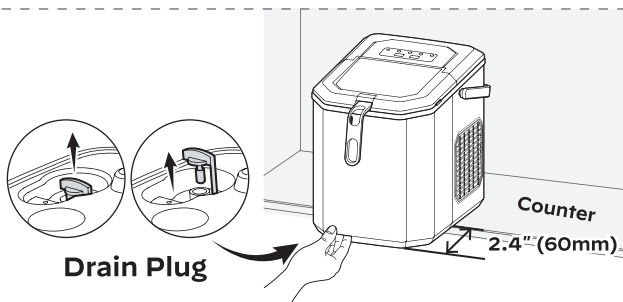

4.

Clean the ice basket with warm water, then put it back into the machine.

Wipe the exterior with a cloth using mild dishwashing soap.




MANUAL CLEANING

Turn off the unit and disconnect from power before cleaning.


1.

Clean using a soft cloth with water-vinegar mixture or citric acid water mixture. Perform regular cleaning of the filter, the ice shovel, the evaporator, and other small corners to prevent residue build-up.

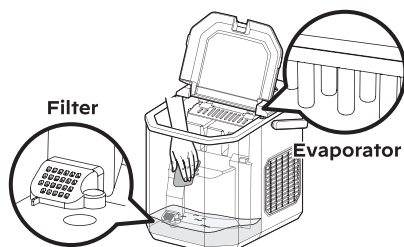

3.

Drain excess water over sink.

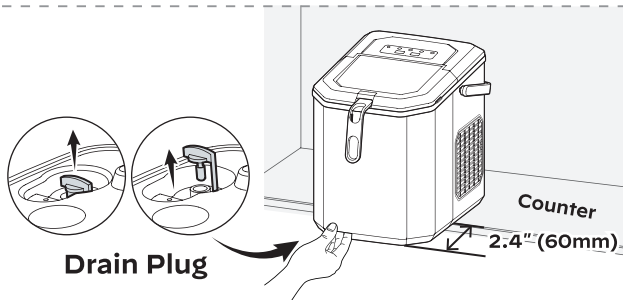

4.

Clean the ice basket with warm water, then put it back into the machine.

Wipe the exterior with a cloth using mild dishwashing soap.



⚠ DO's & DON'Ts while cleaning and maintaining

- **Do not** use organic solvent, boiled water, strong acid and strong alkali etc. for cleaning. This will cause corrosion of the evaporation column.
- When cleaning the evaporator, be careful to keep the vertical prongs level. If the prongs are not level, the ice cubes may stick together during use.
- Considering the wide range of water quality across different regions, it is recommended to perform regular manual cleaning.
- Limescale can easily form if the ice basket is submerged in water for a long period of time. Drain water if the machine is not in use.

- It is recommended to **drain the water tank** at least once every three days.
- When the unit is not to be used for a long duration, **drain** the water completely & dry the interior.
- **Store** in a well-ventilated area.

PRODUCT SPECIFICATIONS	
Voltage/Frequency	120V/60Hz
Ice-Making Current	1.5A
Ice-Harvesting Current	1.8A
Working Power	≤ 160W
Water Reservoir	0.32 gal (1.2L)
Ice Basket Capacity	1.32 lbs (0.6kg)
Ice-Making Rate	26 lbs (11.8kg) per day
Ice Shape	Bullet
Ice Size	Small or Large
Material	ABS, PP, Stainless Steel
Product Size	8.7 x 11.4 x 11.6 inch (222 x 290 x 294mm)

TROUBLESHOOTING

Problem	Possible Causes	Solution
Poor ice shape or quality.	Poor heat dissipation.	Leave a 6-inch clearance on all sides of the ice maker for ventilation.
	The water temperature is too high.	Fill with water temperatures between 46°F and 77°F.
	The ambient temperature is too high.	Use the ice maker in room temperatures between 50°F and 90°F.
	Evaporator deformation.	Please contact customer service.
Ice maker creating loud noise.	If the ice maker has not been cleaned for a long time, a residue may form around the inlet of the water pump.	Run the self-cleaning program using professional ice maker detergent and leave the detergent in the machine for 12 hours to remove scale.
		Clean every 1 weeks using mild cleaning agents.
	Lack of water to pump will create noise when pumping water.	Add more water.
	Machine overload.	The water temperature should be between 45°F - 90°F.
		Maintain 6 inches (15cm) distance between the hot air outlet and the wall.
	Fan or ice maker is damaged.	Please contact customer service.
	Water pump is damaged.	

Problem	Possible Causes	Solution
“ICE FULL” indicator light is on.	Ice is blocking the infrared sensor.	Empty the ice basket.
	Infrared sensors do not work.	Wipe clean the infrared sensors, or long press the SELECT button for 5 seconds to force the ice maker to cycle around 10 times. Contact customer service if the infrared sensors still don’t work.
Ice sticks together.	Making ice takes too long.	Stop making ice. After the ice melts, restart and try again.
	The water temperature is too low.	Fill with water temperatures between 46°F and 77°F.
	Evaporator deformation.	Please contact customer service.
Not making ice.	If the ice maker has not been cleaned for a long time, a residue may form around the inlet of the water pump.	Run the self-cleaning cycle using professional ice maker detergent and leave the detergent in the machine for 12 hours to remove scale.
	Ambient or water temperature is too high.	Keep ambient temperature less than 90°F and fill with cold water.
	Water pump is damaged.	Please contact customer service.
	Refrigerating system leaking.	
	Refrigerating system blocked.	
	The fan stopped working.	
	The wires are loose.	
	The gears in the motor are broken.	

Problem	Possible Causes	Solution
“ADD WATER” indicator light is on	Low water level or need of water.	Stop making ice, refill water, press the ON/OFF button, then restart and try again.
	Water screen blocked at the bottom of the water reservoir.	Run the self-cleaning cycle.
	Pump malfunction.	Please contact customer service.
	Water detector malfunction.	

WARRANTY INFORMATION

30-DAY LIMITED WARRANTY

To provide customers with a quality shopping and user experience, the unit can be replaced or returned for a full refund within the 30-day period from the date of purchase.

30-DAY TO 1-YEAR LIMITED WARRANTY

After the 30-day warranty has expired, a 1-year warranty from the date of purchase that covers product replacement is automatically activated. Please note that proof of purchase is required for all warranty claims.

30-DAY TO 1-YEAR WARRANTY LIMITATIONS

- This warranty does not cover:
- Any condition resulting from incorrect or inadequate maintenance or care.
 - Damage resulting from misuse, abuse, negligence, accidents, or shipping damage.
 - Dissatisfaction due to buyer’s remorse.
 - Normal wear and tear.
 - Damages incurred after initial transportation.