



## ATTENTION

our product comes with TWO PACKAGES with TWO TRACKINGS may NOT be delivered at the same time.



### WARNING

Some steps are more easily handled with two adults.



## CAUTION

Before assembly and/or installation, carefully unwrap all parts. Locate and set aside the hardware kit before discarding packaging. Use care when assembling your new product. Take your time and follow assembly instructions closely.



If you have any questions below, please feel free to contact us. We will respond within 24 hours.






### READ INSTRUCTIONS CAREFULLY




MISS SOME PARTS



# **OTHER QUESTIONS**

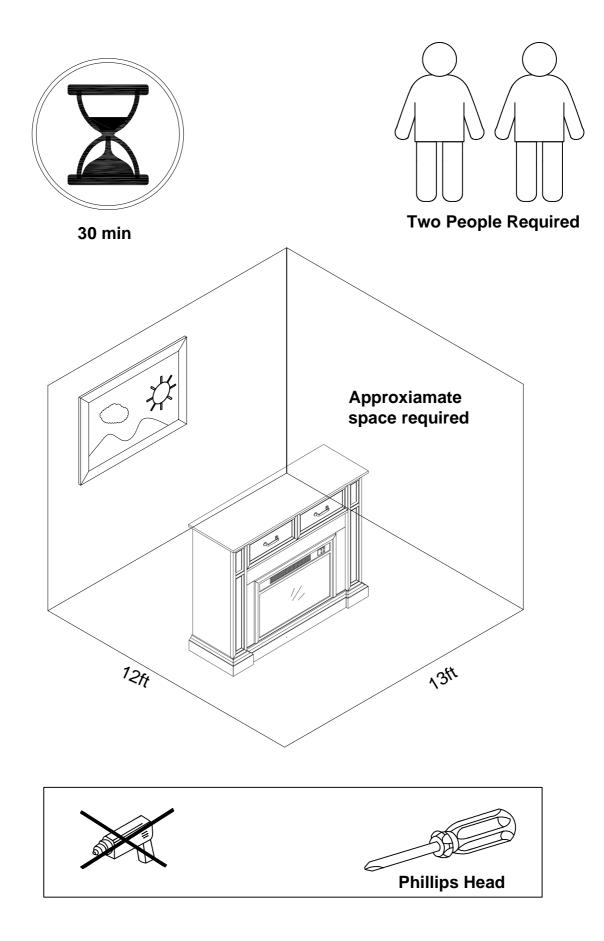


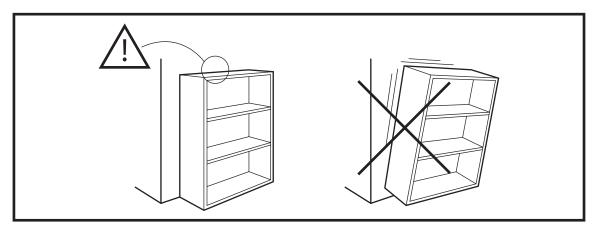


## Warning

Serious or fatel crushing injuries may occur if the furniture tip-over. Furniture must permanently fixed to the wall with included anti-tipping device to prevent the furniture from tipping over.

Different wall materials requires different types of fixing device, Use suitable fixing device to secure the stability and load bearing capacity of the furniture. If you are uncertain about which type of fixing device to use, please contact your local hardware store.

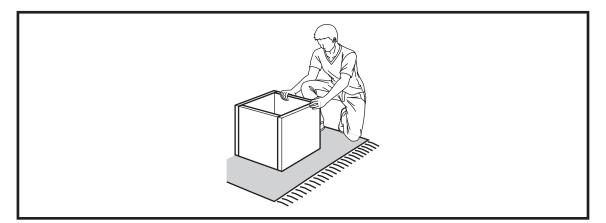


Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

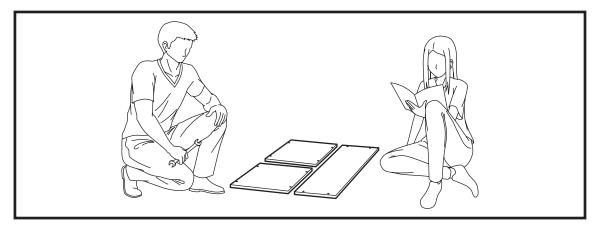


This furniture requires 2 people to assembly. Make sure no parts are missing or damaged before assembly.

#### **GENERAL INFORMATION, TIPS AND TRICKS**

- 1.Please read the Assembly instnuctilons pdor to assembling this peduct.
- 2. Remove all hardware from the box and sort by size.
- 3. Check to see that all hardware and pans are pesent BEFORE assembling
- 4.Ask a fnend to assist you wth the assembty of this fumiure.
- 5. To avoid damage, assemble the producton a sturdy, level and protective surface.
- 6. Please wait unil all steps are completed before fully tghtening bats.
- 7. Make sure all screws and bots are tighty fastened before the unit is used.

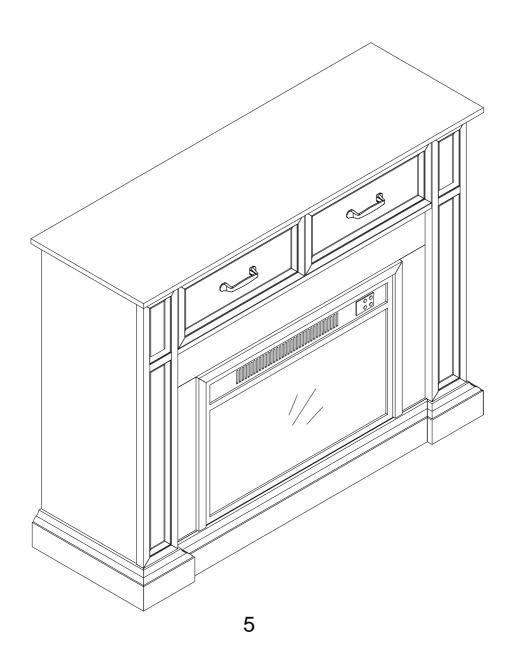


## How the Assembly System Works

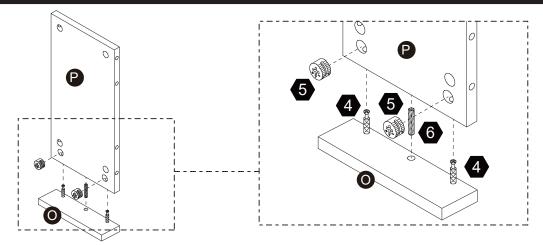

## How to Install Wood Dowel

Insert the wood dowel [6] at least half-way. IF NECESSARY, lightly tap the wood dowel with a self-supplied rubber mallet.

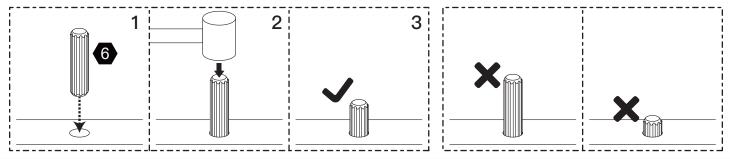


## Cam Lock System Operation

1. Screw the cam bolt [4] into the threaded insert on the panel.


2. Connect both panels together making sure cam bolt [4] goes into the pre-drilled large hole on the end of panel for cam lock [5].


3. Insert the cam lock [5] into the pre-drilled large hole on the panel. Make sure the cross slot of cam lock [5] faces out.


3. Rotate the cam lock [5] clockwise to lock the cam bolt [4] in place.

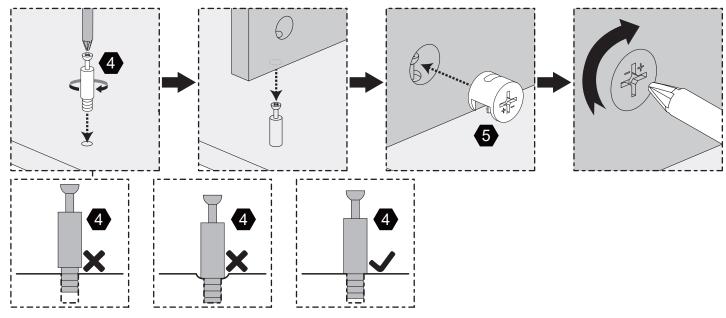


You are now ready to assemble the Fireplace TV Stand.

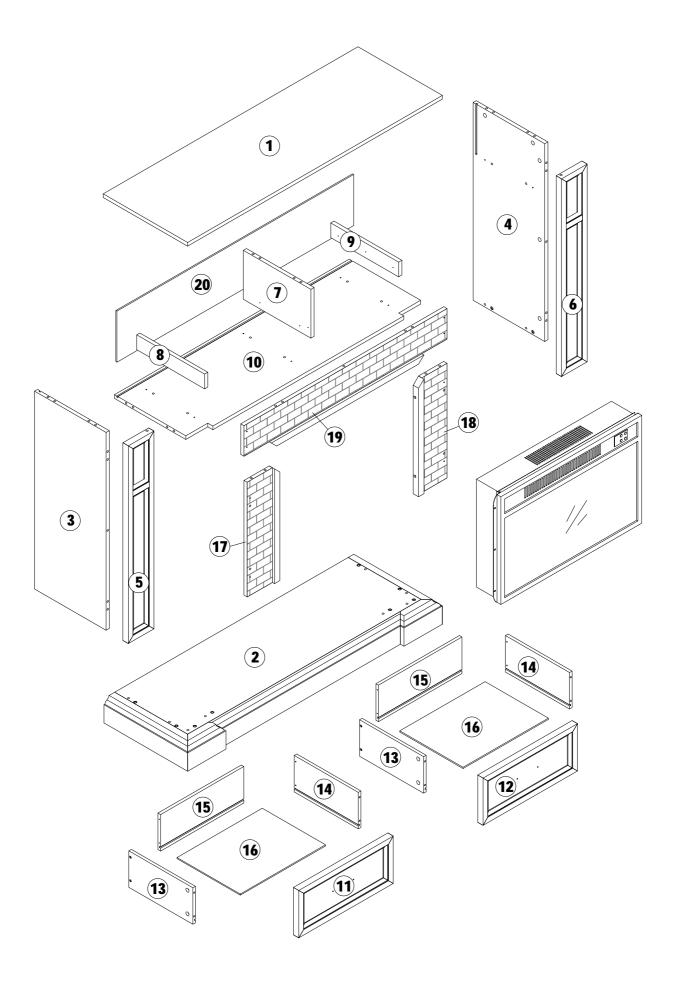


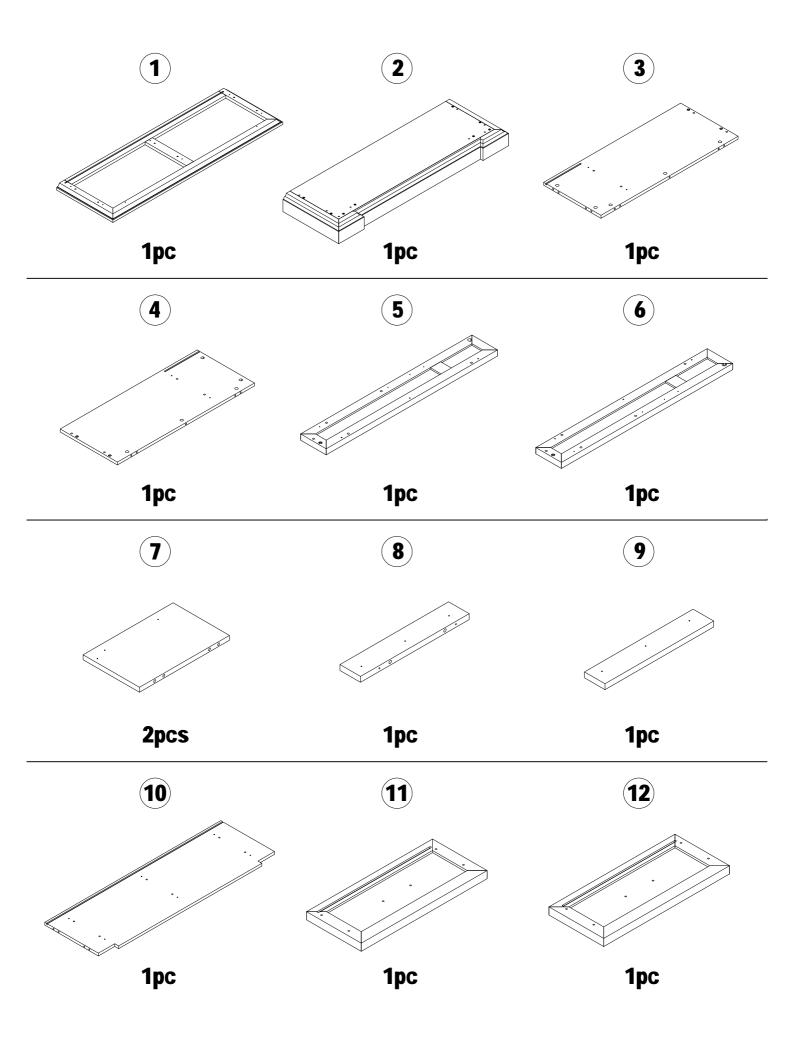

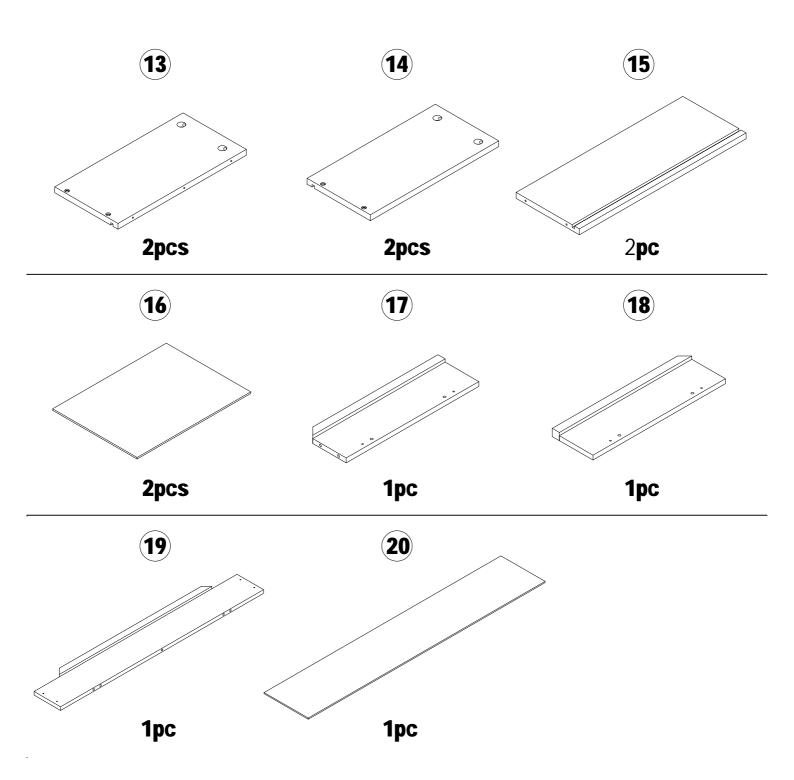


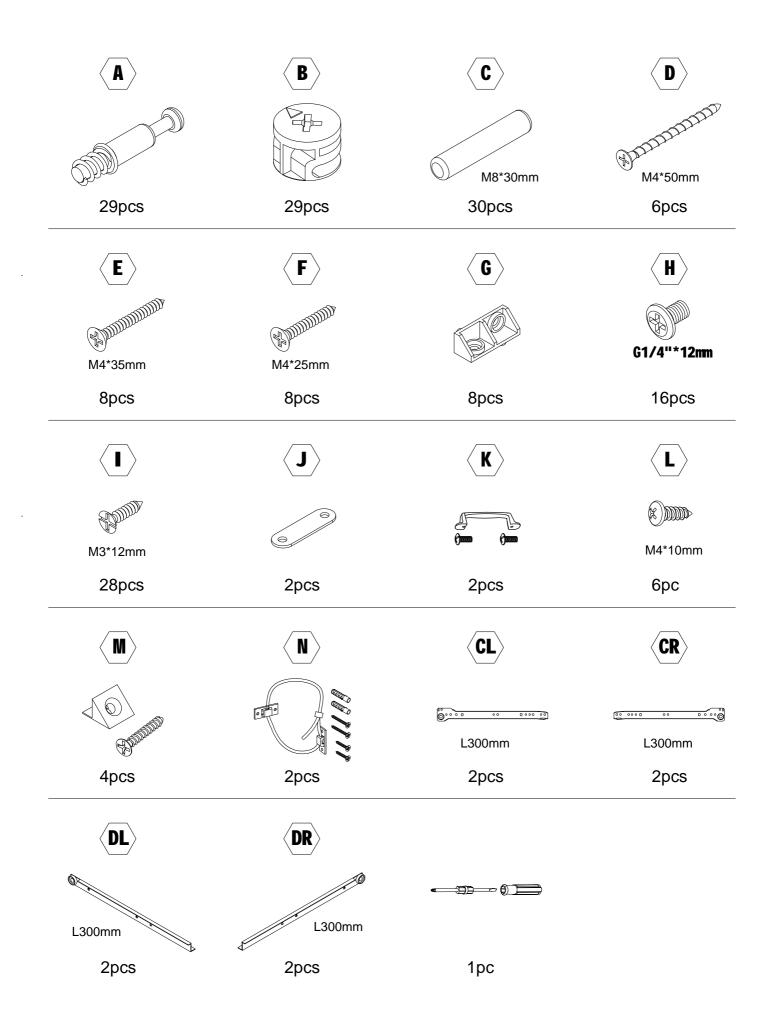



Assembly Steps

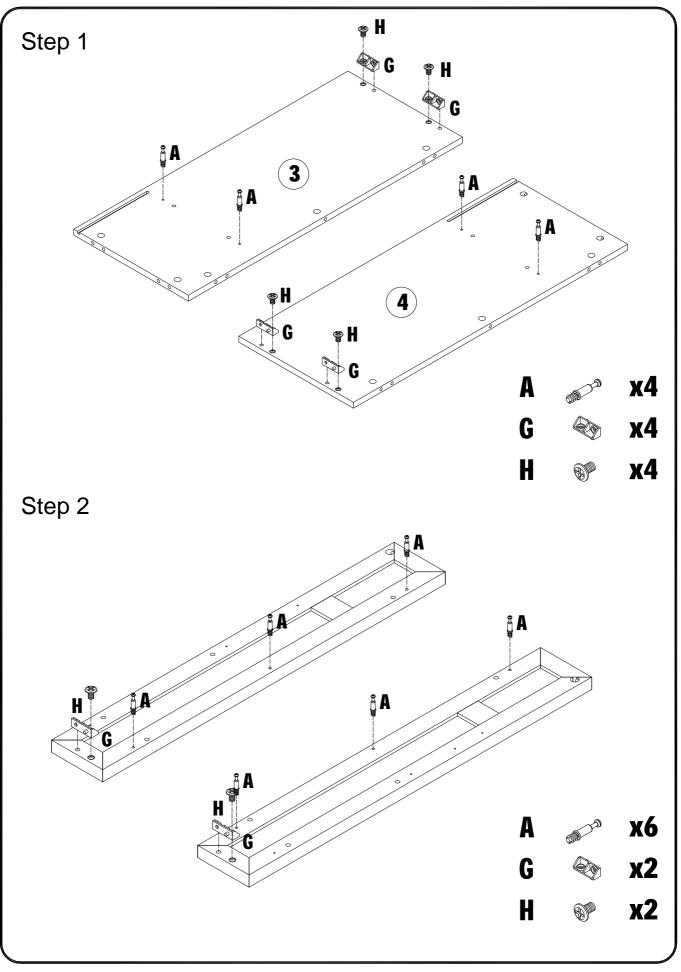



# Assembly Steps

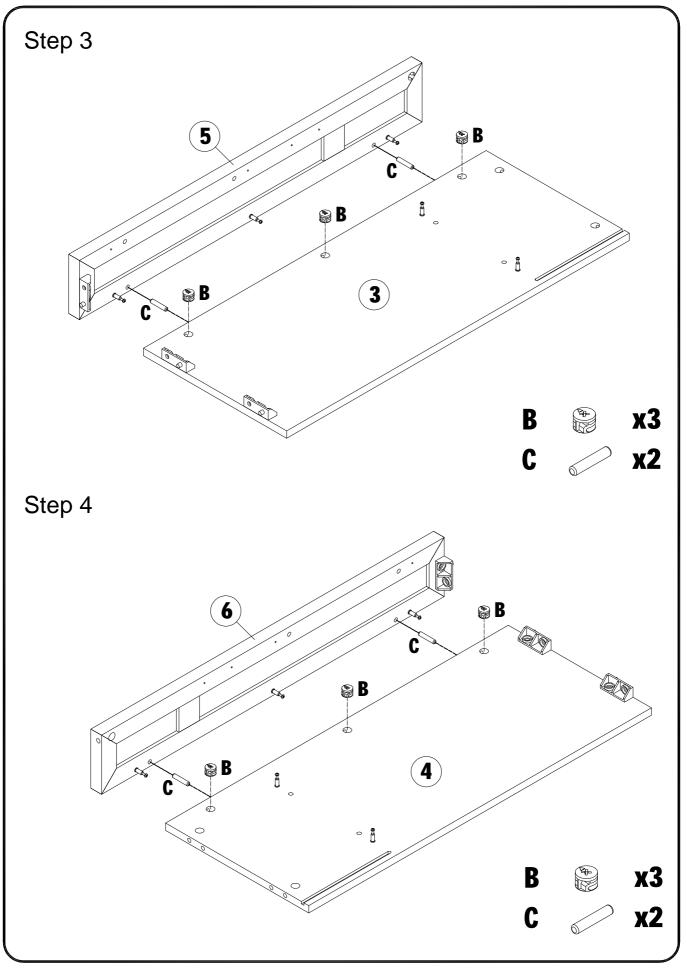


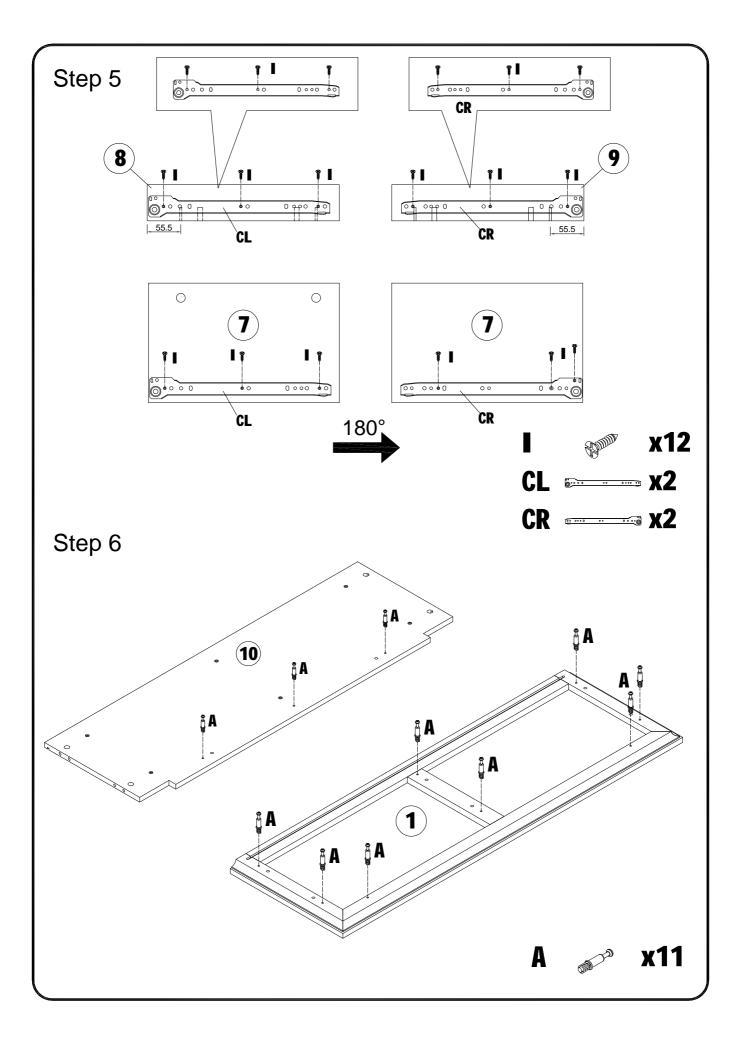


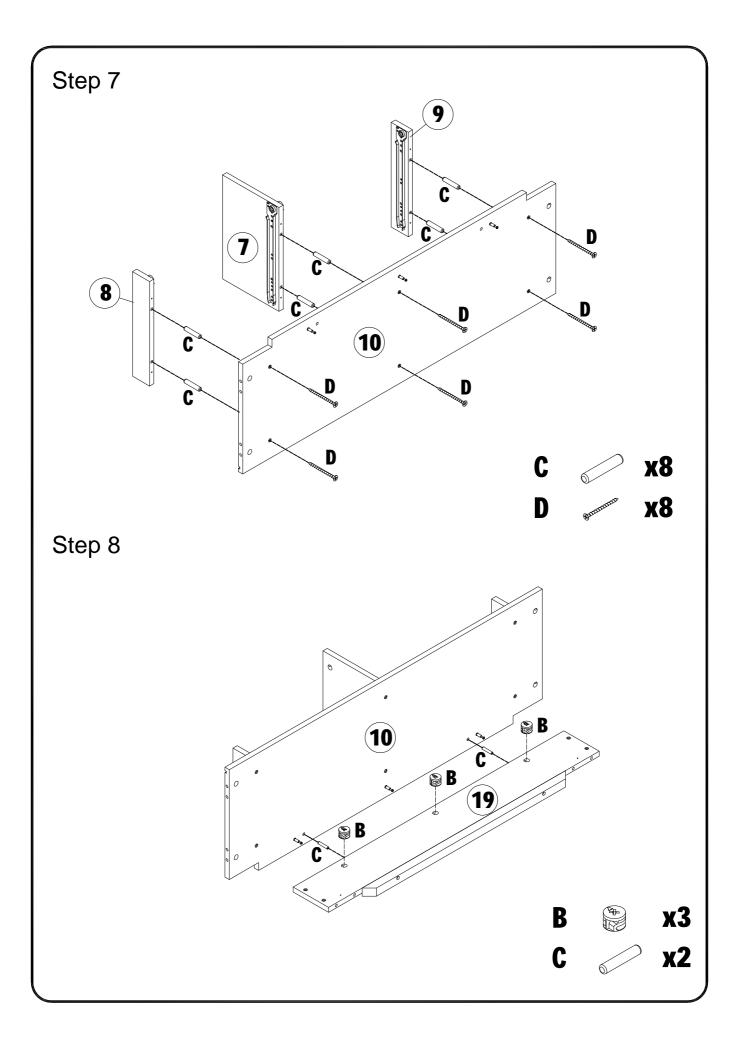


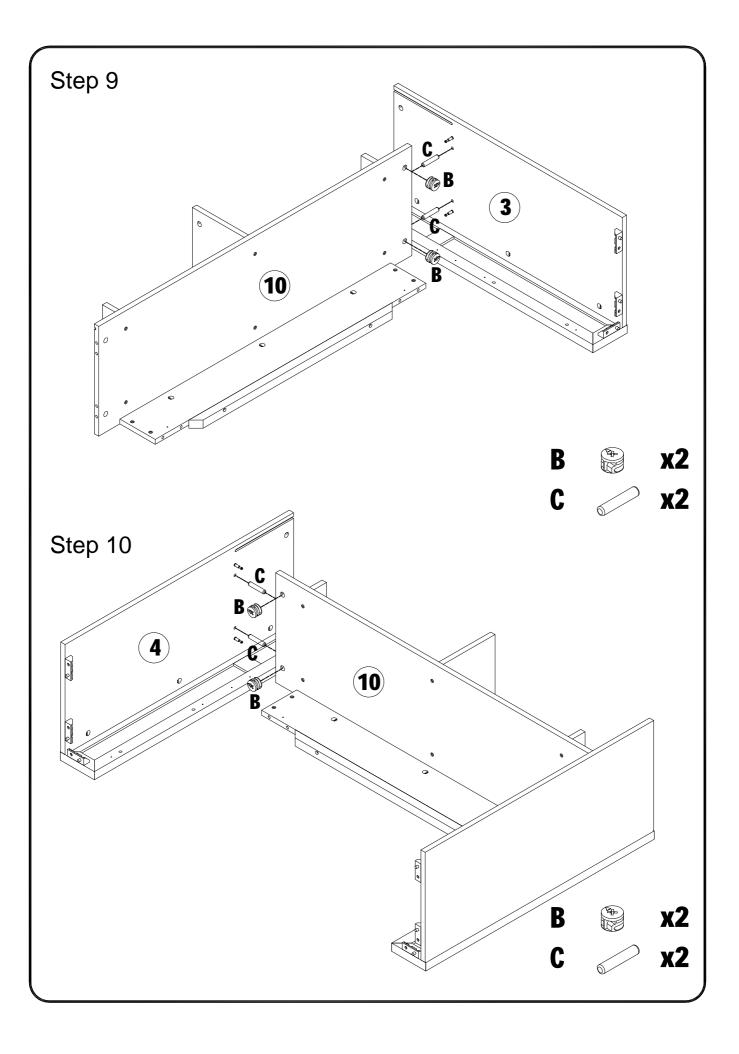


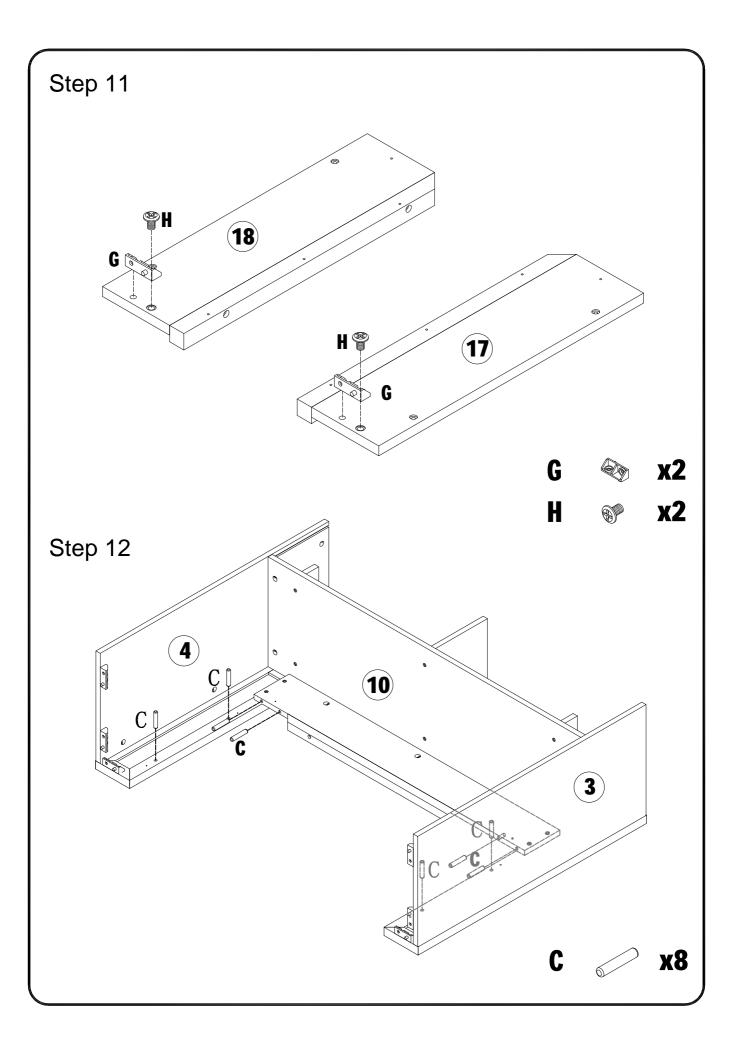


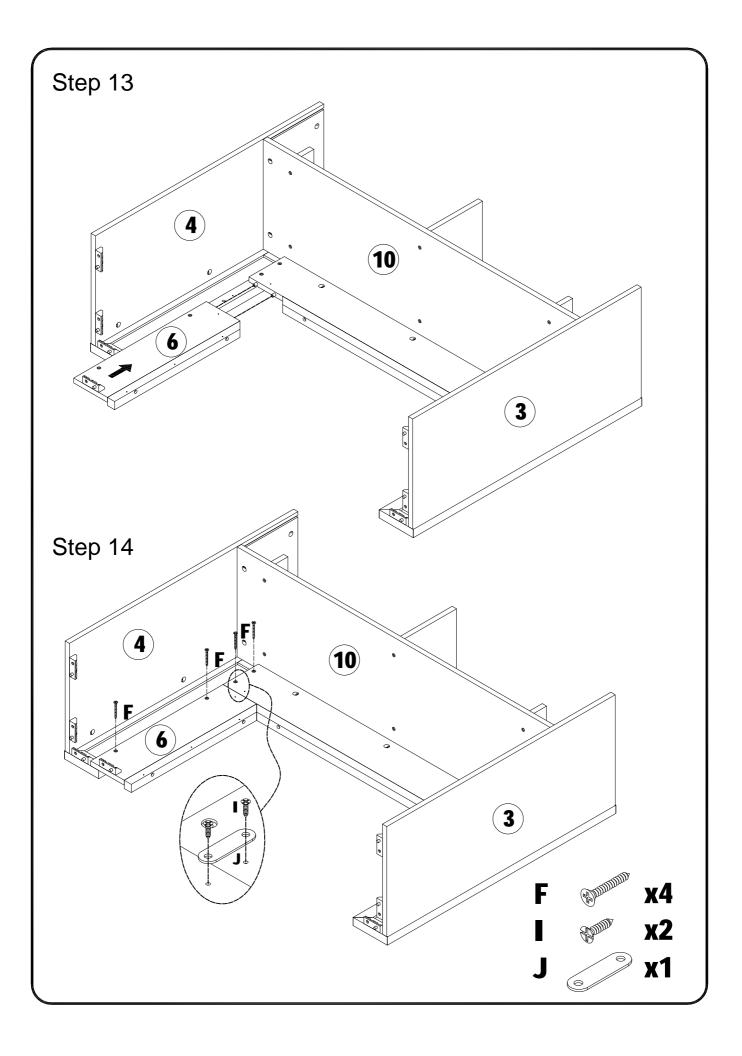


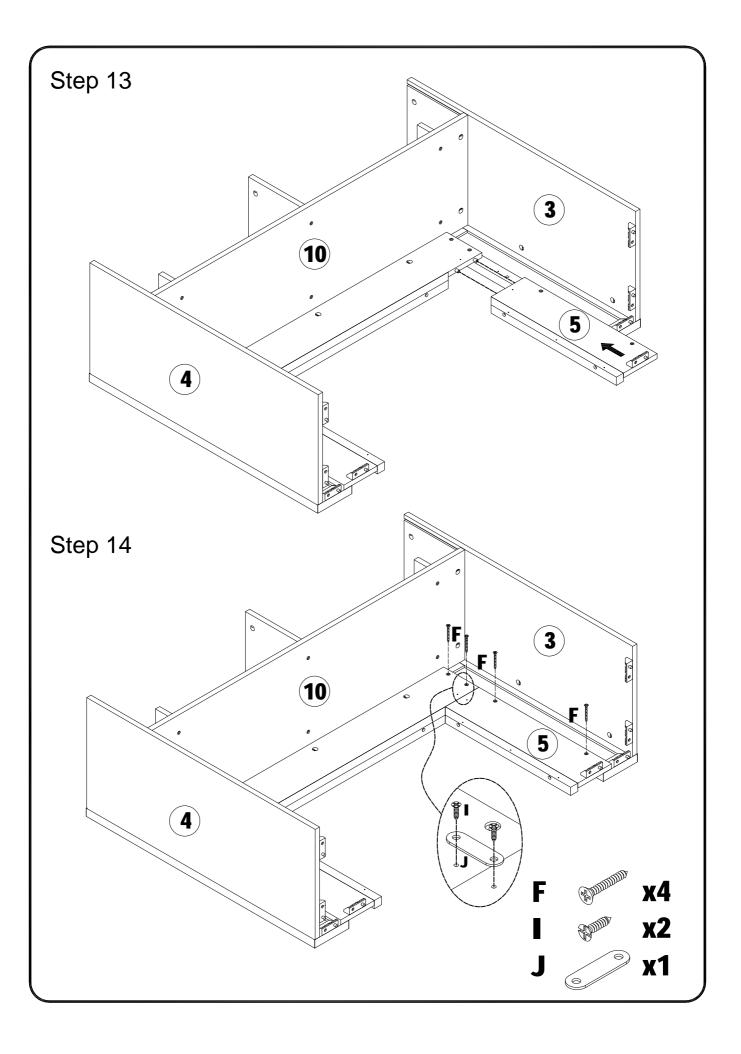


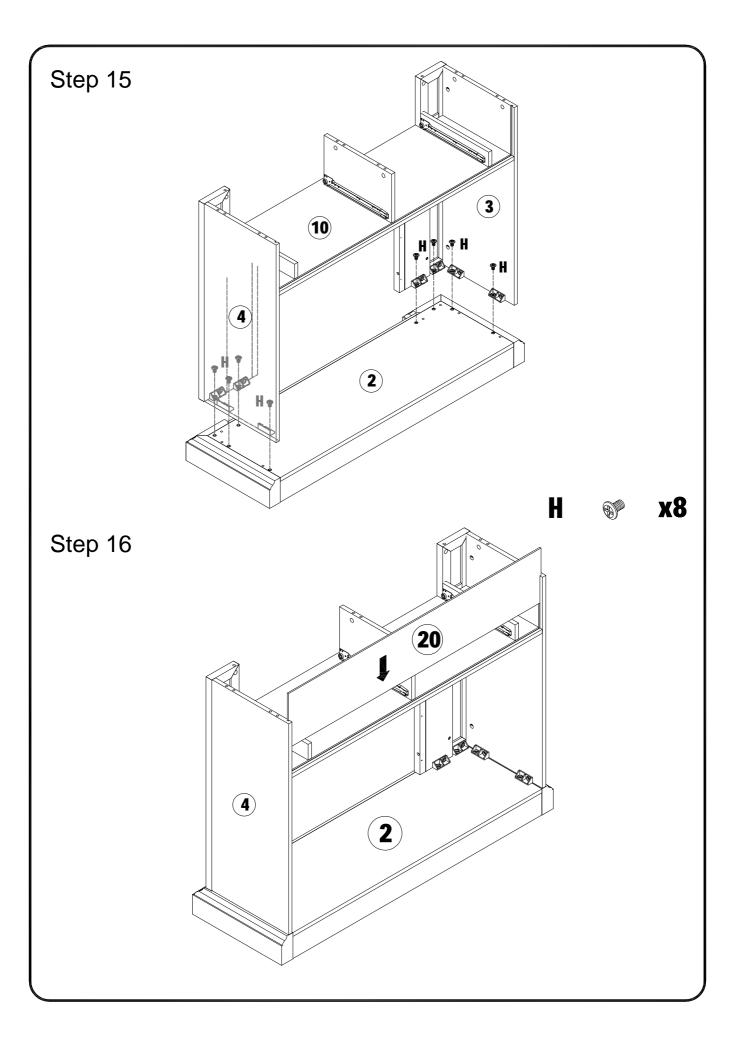


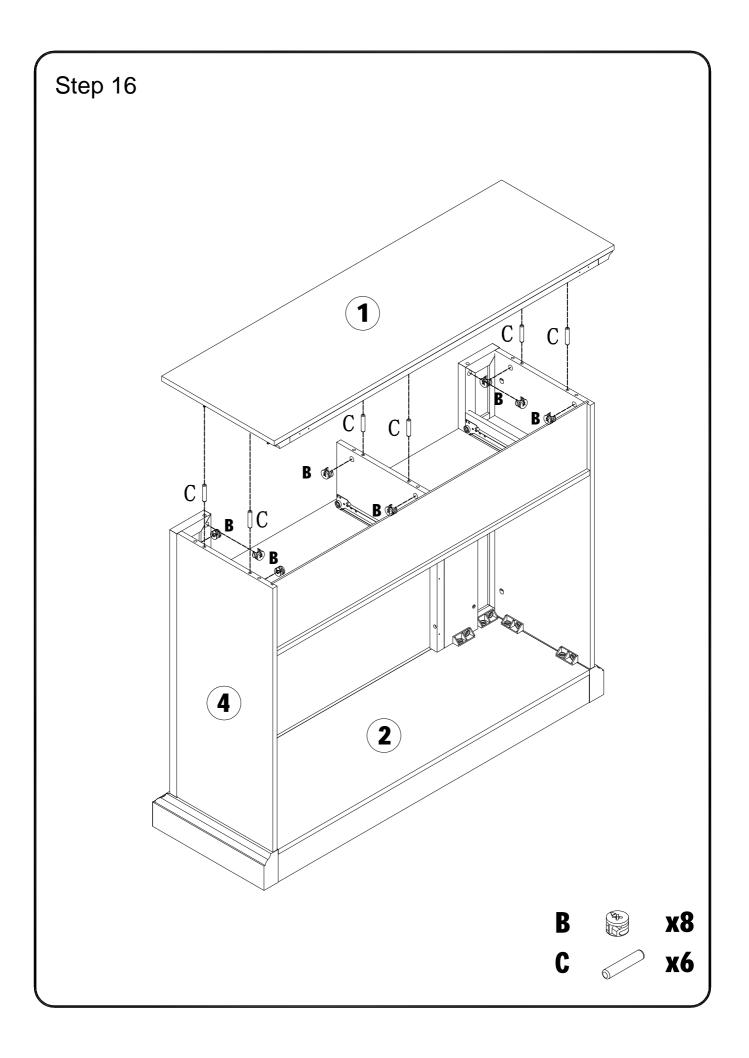


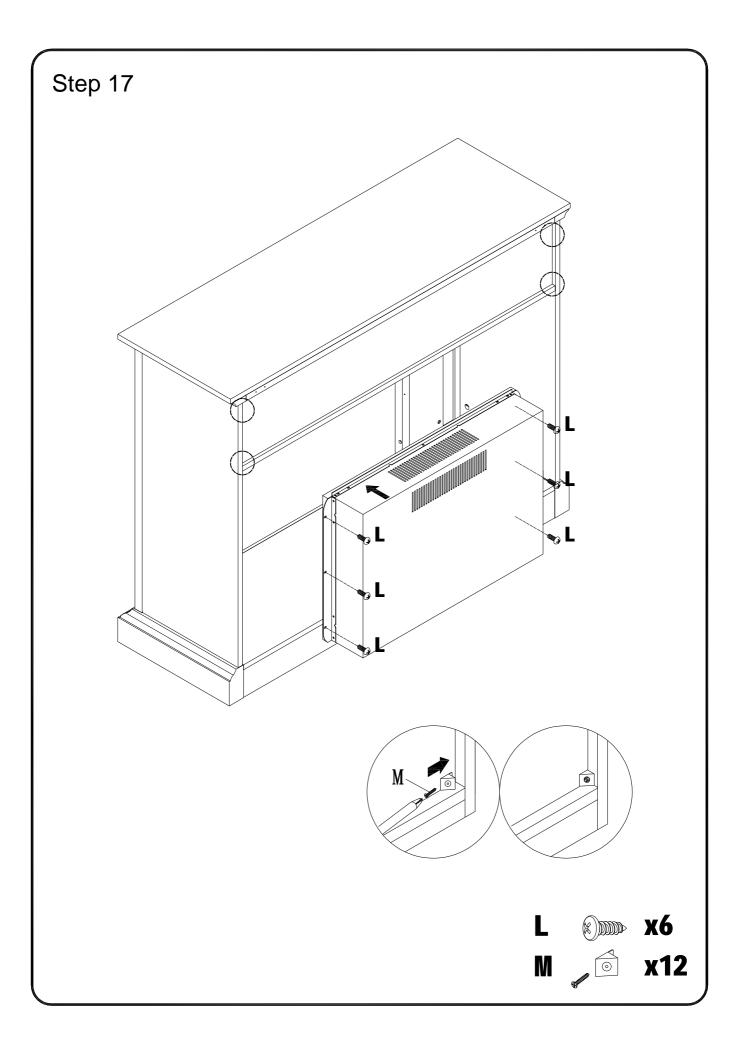

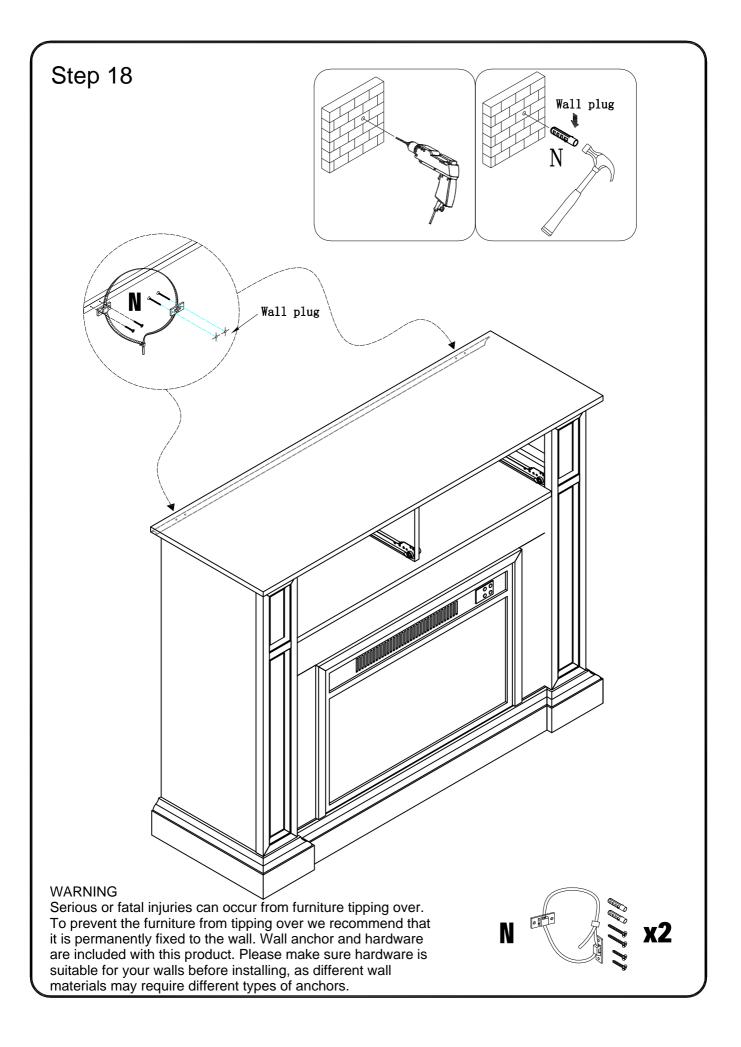

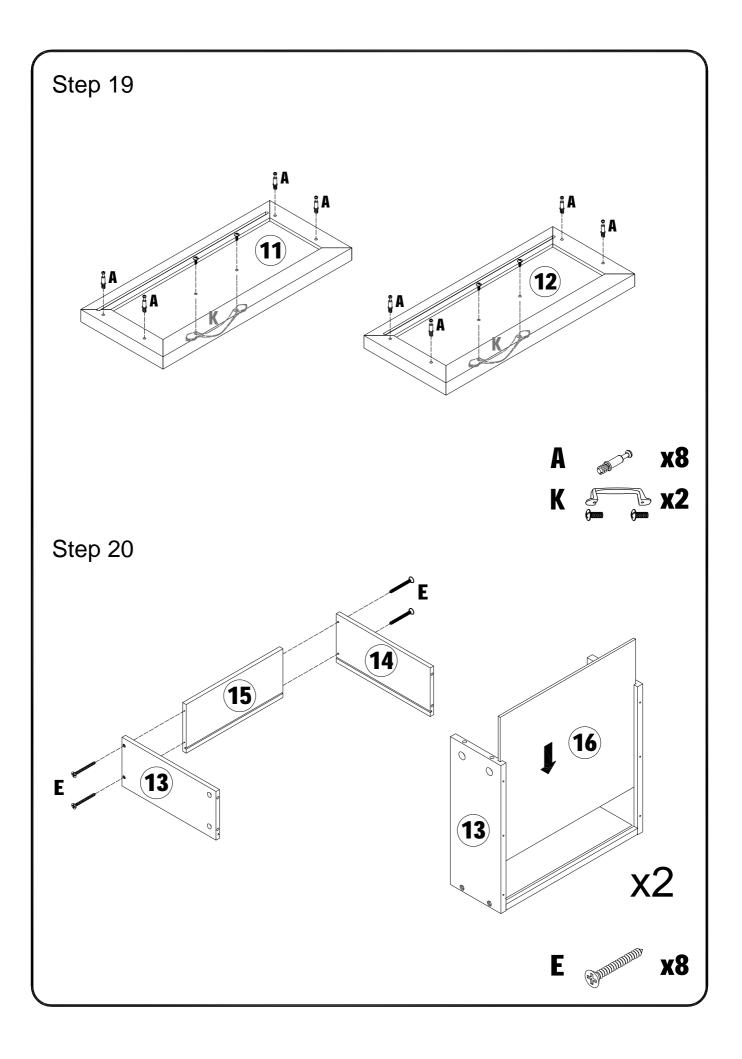

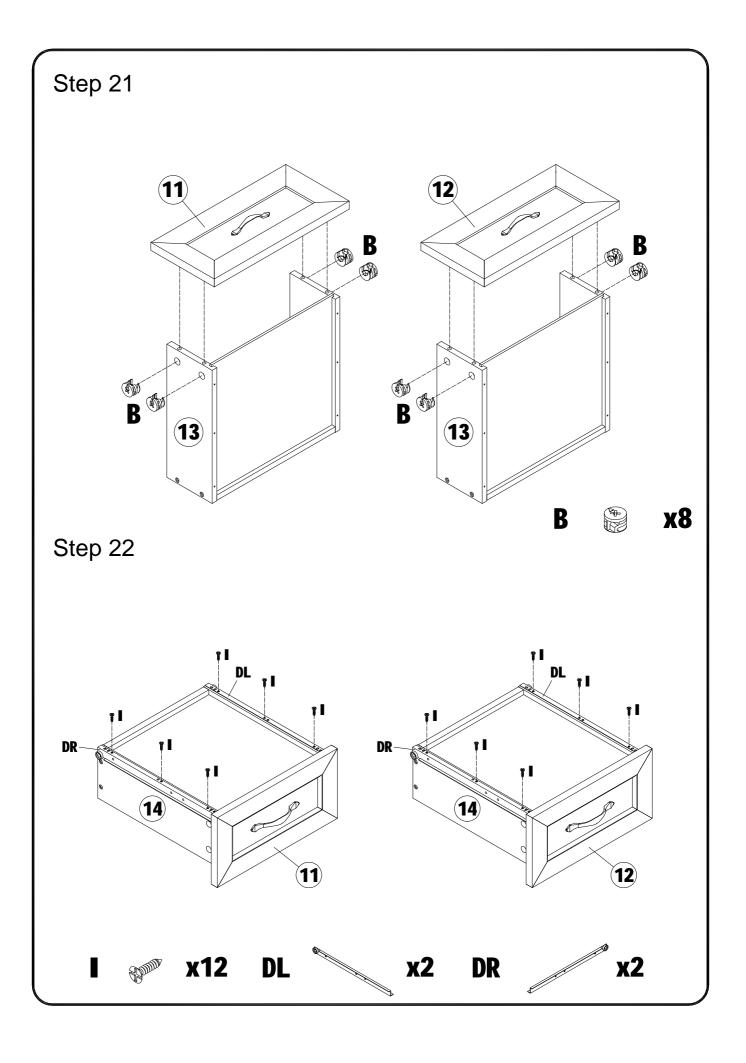

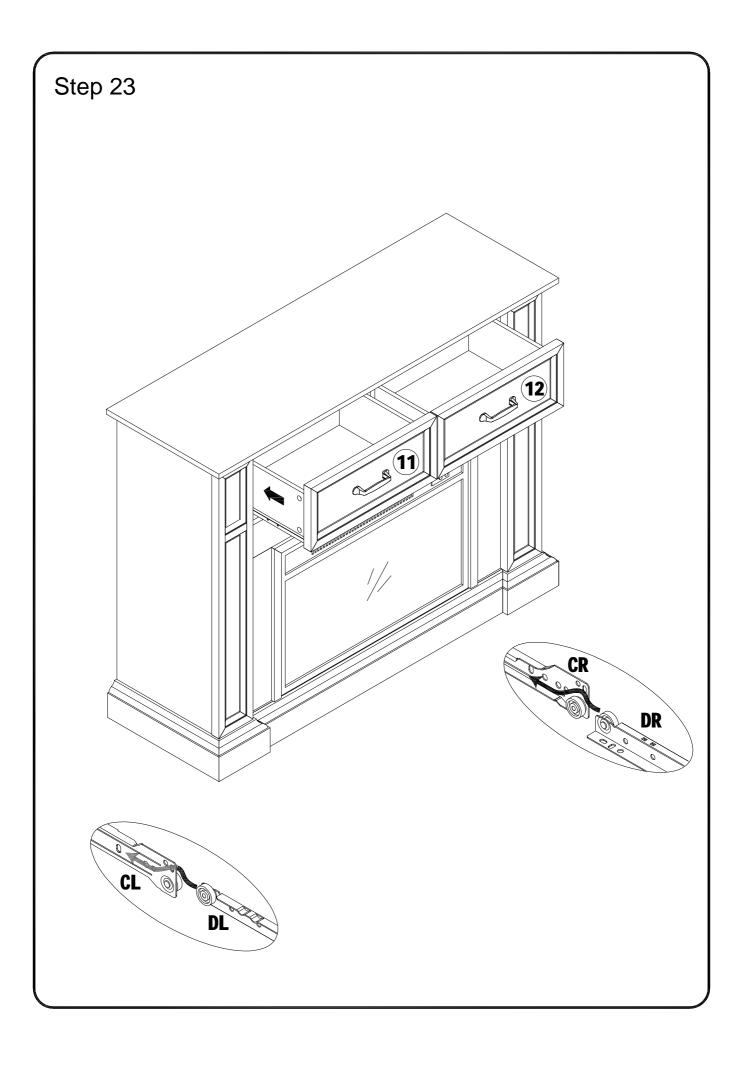

# **MAINTENANCE TIPS**



Neverlet liquids ordamp cloths sit on this furniture.



Neveruse chemical cleaning products, They can damage the finish. For cleaning, use only a slightly damp cloth and wipe dry.



To avoid dulling of the finish, do not place furniture in direct sunlight.



Do not put plastic or rubber rings under appliances. Use cloth of felt protectors.



To clean, use a soft or slightlydampcloth, then wipe with a clean, drycloth.

#### FURNITURE CARE AND MAINTENANCE

Medium-Density Fiberboard

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years ofservice, please refer to this care and maintenance guide.



#### MAINTENANCE

- Tighten all bolts and screws again within the first 2 weeks of assembly.
- Check thetightness of all bolts every 2 months, tighten them if necessary.



#### CLEANING

- Clean the surface of the MDF (medium -density fiberboard) with alightly dampened cloth.
- Small amount of mild soap can be used if necessary.
- · Drythe surfaceimmediately after cleaning.

 $\triangle$  DO NOT use bleach or alcohol detergent to clean the surface.  $\triangle$  DO NOT apply wood treatmenton parts made with MDF.

Medium -density fiberboard will swell and distortwhen suffer from waterdamage. Make sure to dry the furniture immediately after cleaning

# 


Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or losses, whether direct, indirect, orincidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification or neglect of this product.

#### Warranty

Our products come with a 1 year warranty from the date of purchase. In any event that the product arrives damaged or missing parts, we are more than happy to provide you with replacement part(s). **Register your product on our website to enioy extended warranty!!** 

#### Easy Return

We work hard to make sure order arrives safe and secure, but rest assured we will take care of it if it is not up to standard. If you need replacement parts, Contact us we will send you replacements with no hassle.

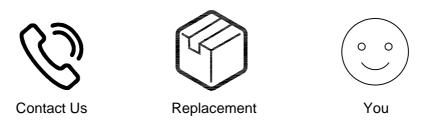

You don't have to worry about re-packaging / schedule pick-up.