


# DINING CHR

## ASSEMBLY INSTRUCTIONS

### PARTS PACKING CONFIGURATIONS

- A. CHAIR SEAT 1 PC
- B. LEFT FRONT LEG 1 PC
- C. RIGHT FRONT LEG 1 PC
- D. LEFT BACK LEG 1 PC
- E. RIGHT BACK LEG 1 PC

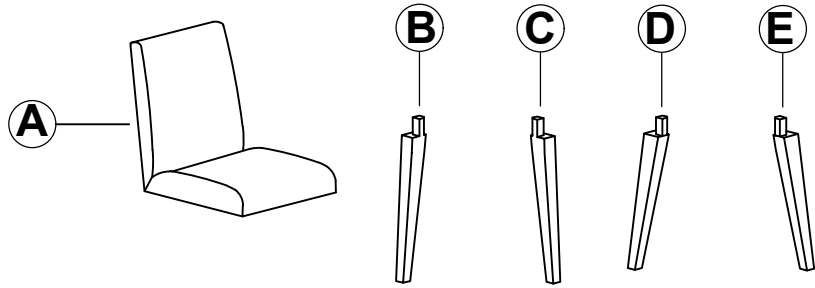


#### HARDWARE ENCLOSED IN CARTON

| No | Description               | Photo                                                                             | Quantity |
|----|---------------------------|-----------------------------------------------------------------------------------|----------|
| 1  | ALLEN BOLT (5/16 x 1-3/4) |  | 8 PCS    |
| 2  | LOCK WASHER (5/16)        |  | 8 PCS    |
| 3  | FLAT WASHER (5/16)        |  | 8 PCS    |
| 4  | ALLEN KEY                 |  | 1 PC     |




### STEP 1:

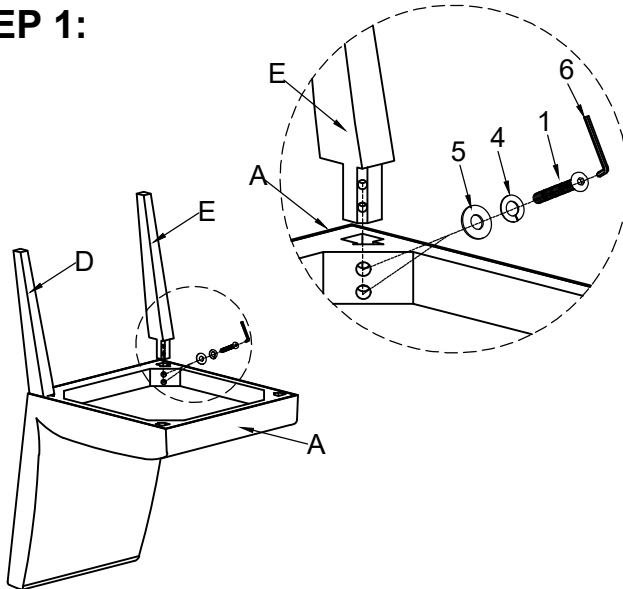

DO NOT TIGHTEN BOLTS COMPLETELY


### STEP 2:

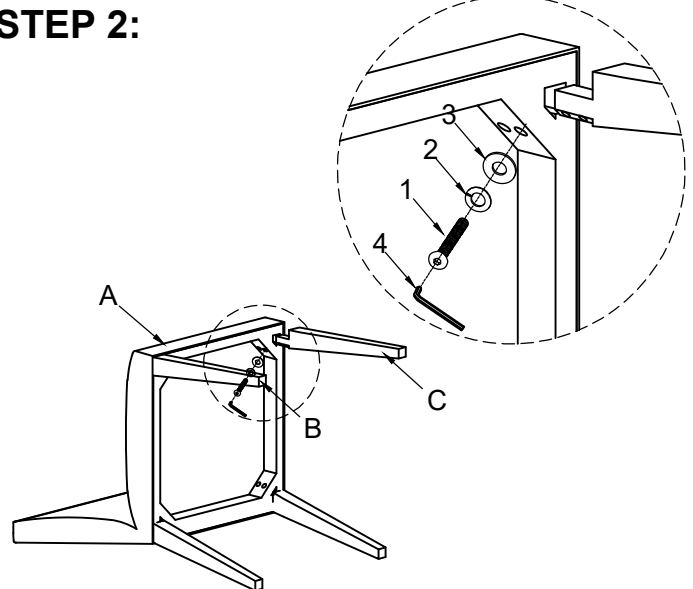

DO NOT TIGHTEN BOLTS COMPLETELY

### STEP 3:

ON A FLAT, LEVEL SURFACE PLACE THE CHAIR UPRIGHT. WHEN CHAIR IS LEVELED, PLEASE TIGHTEN ALL ASSEMBLY BOLTS WITH PROVIDED ALLEN KEY.

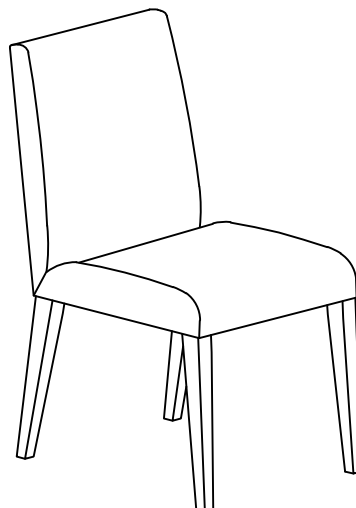

FULLY ASSEMBLED