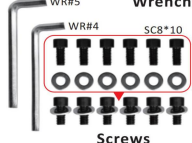


Installation Instructions

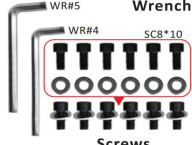
1. Parts Included

		
Backrest	Seat	Base
		
Footrest	Pump	Screws & Wrench

2. Installation Instruction

Step 1. Install the pump to the base

1. Parts you will need for this step.

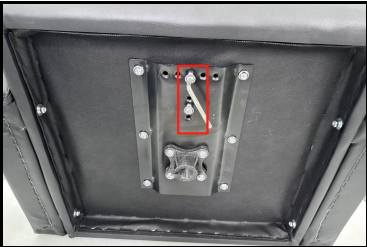
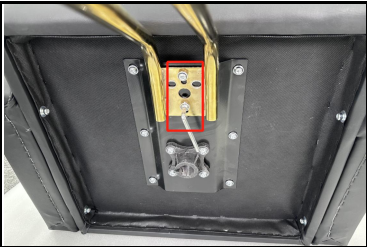
		
Base	Pump	Screws & Wrench

		
1-1. Align the 6 screw holes of the pump and the base.	1-2. Put the base and pump upside down, and insert 6 screws first, then tighten them with the wrench to secure the base and pump.	1-3. Make sure the screws are tightened to avoid wobbly of the chair.

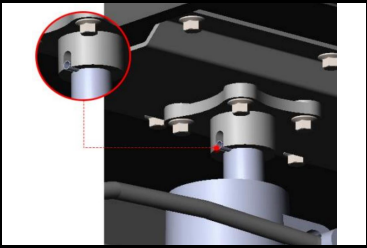
Step 2. Install the footrest to the seat

Parts you will need for this step.

		
Seat	Footrest	Wrench

		
2-1. Remove 2 pre-installed screws on the bottom of the seat with the wrench, and keep them for the next step.	2-2. Align the 2 screw holes of the footrest and the seat, insert the 2 screws and then tighten them.	

Step 3. Install the seat to the pump

		
3-1. Lift the seat to align with the pump and insert to the pump. (Two people is recommended to complete this step.)	3-2. Adjust the direction of seat. (Please note the pinon the pump toward the gap of the pump joint).	

Step 4. Install the backrest to the seat

Parts you will need for this step.

		
Chair	Backrest	Wrench

		
4-1. Remove the 4 screws pre-installed on both sides of the backrest, and keep them for the next step.	4-2. Align the 4 screw holes on both sides of the backrest and the armrest, insert the 4 screws first and then tight them.	4-3. Sit on the chair for a while to make the seat more firmly connected with the pump and avoid the chair being wobbly.

Please feel free to contact us if there are any problems with installation or items. We will reply to you within 24 hours.