 


SOOHOW

Assembly Manual

Coffee table


TS006

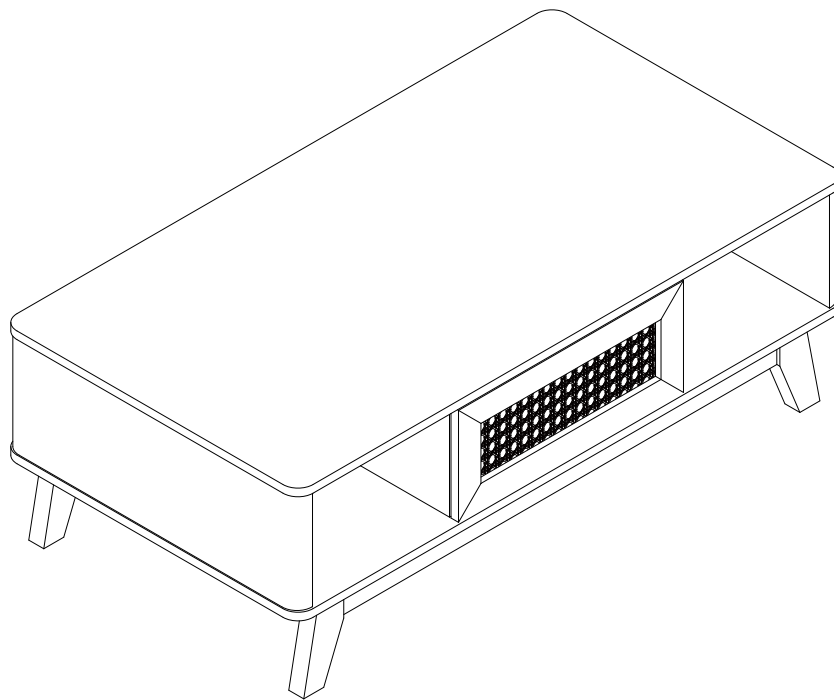

Please read this manual carefully before any operation and keep it properly for future use.

If any problems on our product, please feel free to contact us at [ecservice @isunon.com](mailto:ecservice@isunon.com).

Exploded View

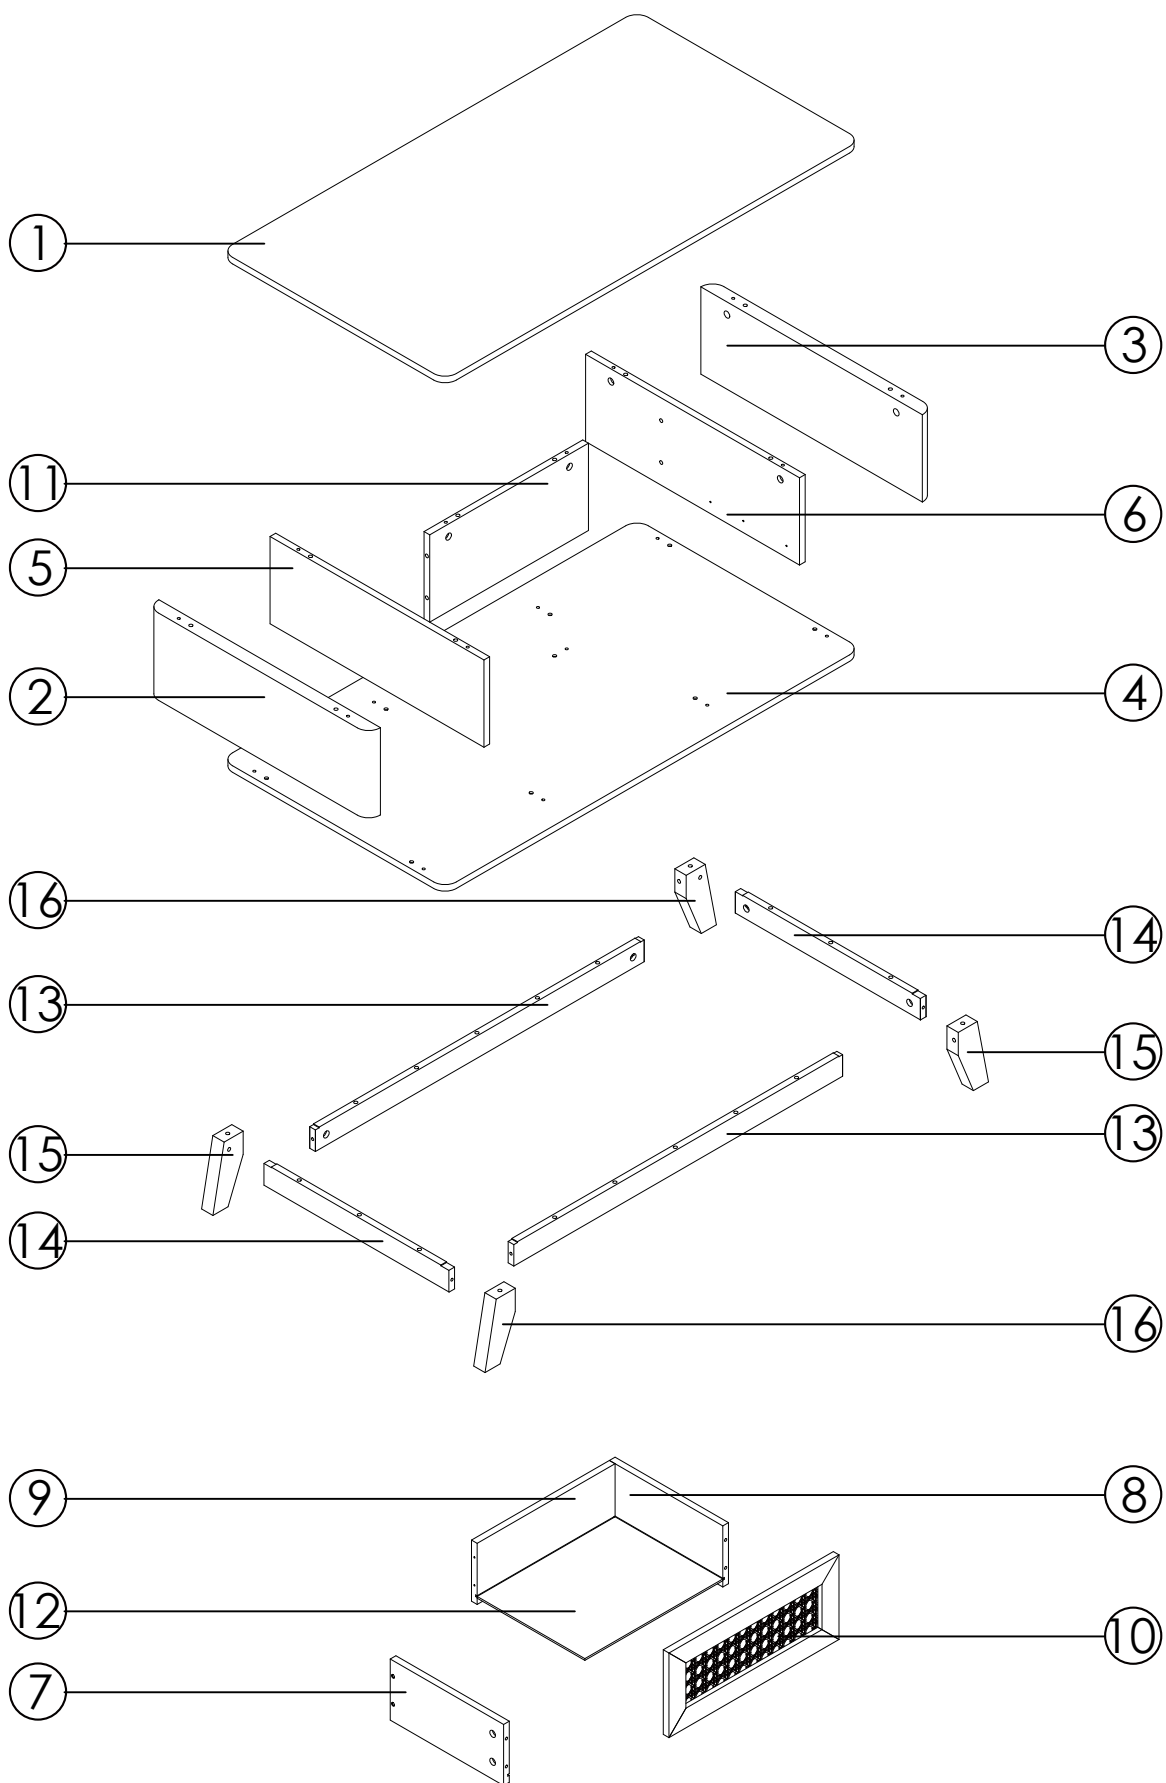


Components List

60 min


Assembly Time




One People

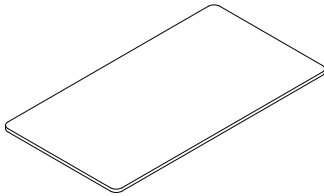


1
(X1)

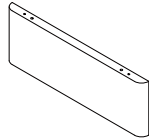 


2
(X1)

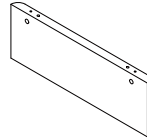 


3
(X1)

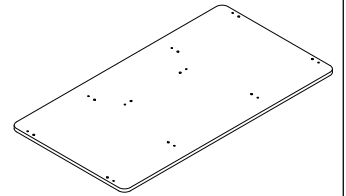


4
(X1)

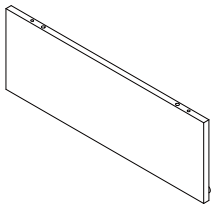


5
(X1)

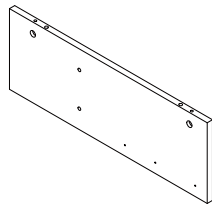


6
(X1)

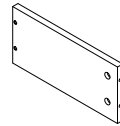


7
(X1)

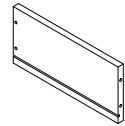


8
(X1)

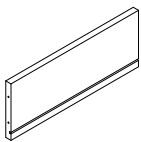


9
(X1)

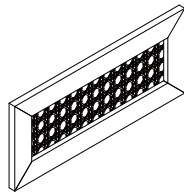


10
(X1)

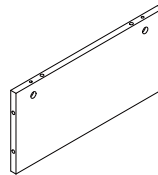


11
(X1)

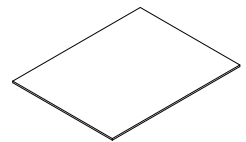


12
(X1)

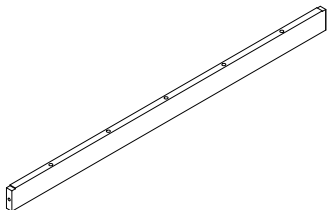


13
(X2)

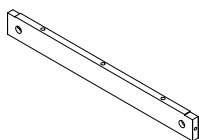

14
(X2)





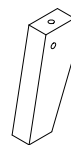

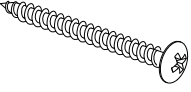
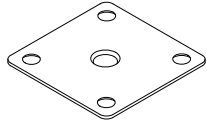
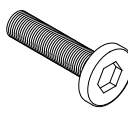
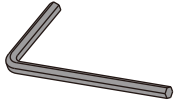
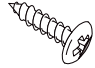
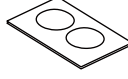
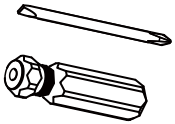
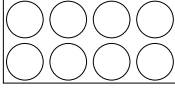
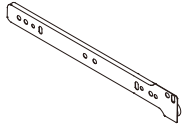
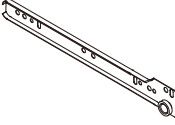
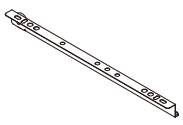
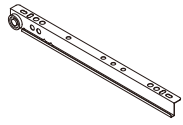


15
(X2)

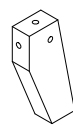

16
(X2)

Components list

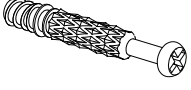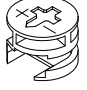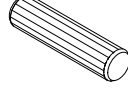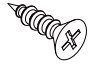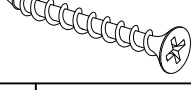A 			B 			C 		
Cam lock pin	M7x39	22+2	Klix cam	M15x12	22+2	Wooden dowel	M8x30	30+2
D 			E 			F 		
Screw	M3.5x14	12+2	Screw	M5x40	14+2	Foot pad		4+1
G 			H 			I 		
Screw	M5x50	10+2	Metal plate		4	Bolt	M6x25	4+1
J 			K 			L 		
Allen wrench		1	Screw	M4x14	16+2	Bumper pad		1
M 			N 			CL 		
Screwdriver		1	Decorative sticker		1	Left slide track		1
CR 			DL 			DR 		
Right slide track		1	Left drawer slide		1	Right drawer slide		1


Note:

- (1) The number after "+" sign indicates the extra piece(s).
- (2) How to use the 2-in-1 screwdriver with interchangeable Phillips and flat head bits:
 - (a) Insert the desired bit end (Phillips or flat head) into the handle and push firmly until it clicks into place. To remove the bit, push and hold the spring-loaded ring on the handle towards the base. This will release the bit from the handle.
 - (b) While still depressing the ring, pull the bit out of the handle. To replace with the opposite bit end, insert it into the handle until it clicks into the locking position. Make sure the bit is fully inserted before use.
- (3) **PRE-ASSEMBLY: Place a blanket or other protective padding on the floor in the assembly area. This padding will prevent scratching or damage to panels, boards, and other components when placing them on the floor during assembly.**

Assembly Instruction


STEP 1

Attach left track (CL) to panel(5) using screws (D). Attach right track (CR) to panel(6) using screws (D). Use the screwdriver (R) to fasten the screws. Be careful to use the correct screw holes for each track and panel as shown below.

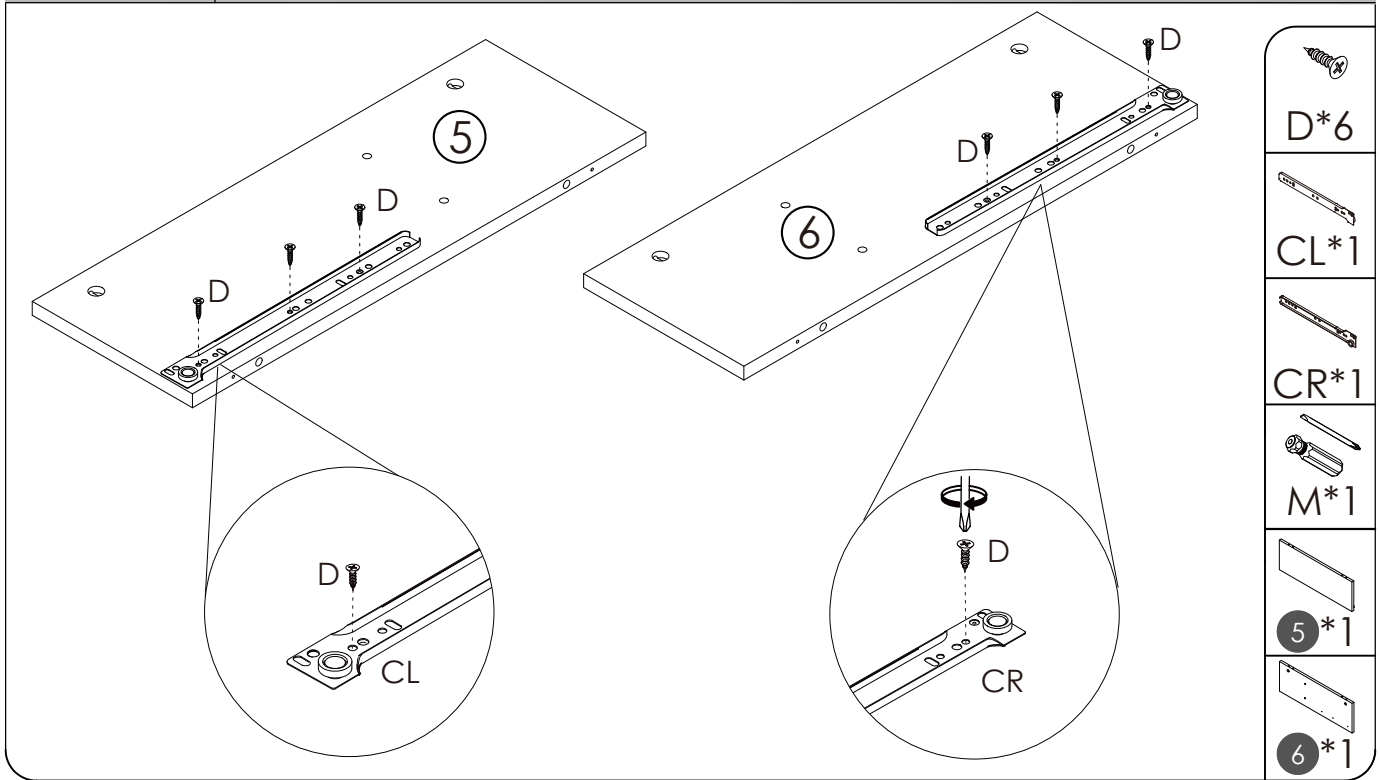

STEP 2


Insert dowels(C) to the sides of panels(2 and 3).

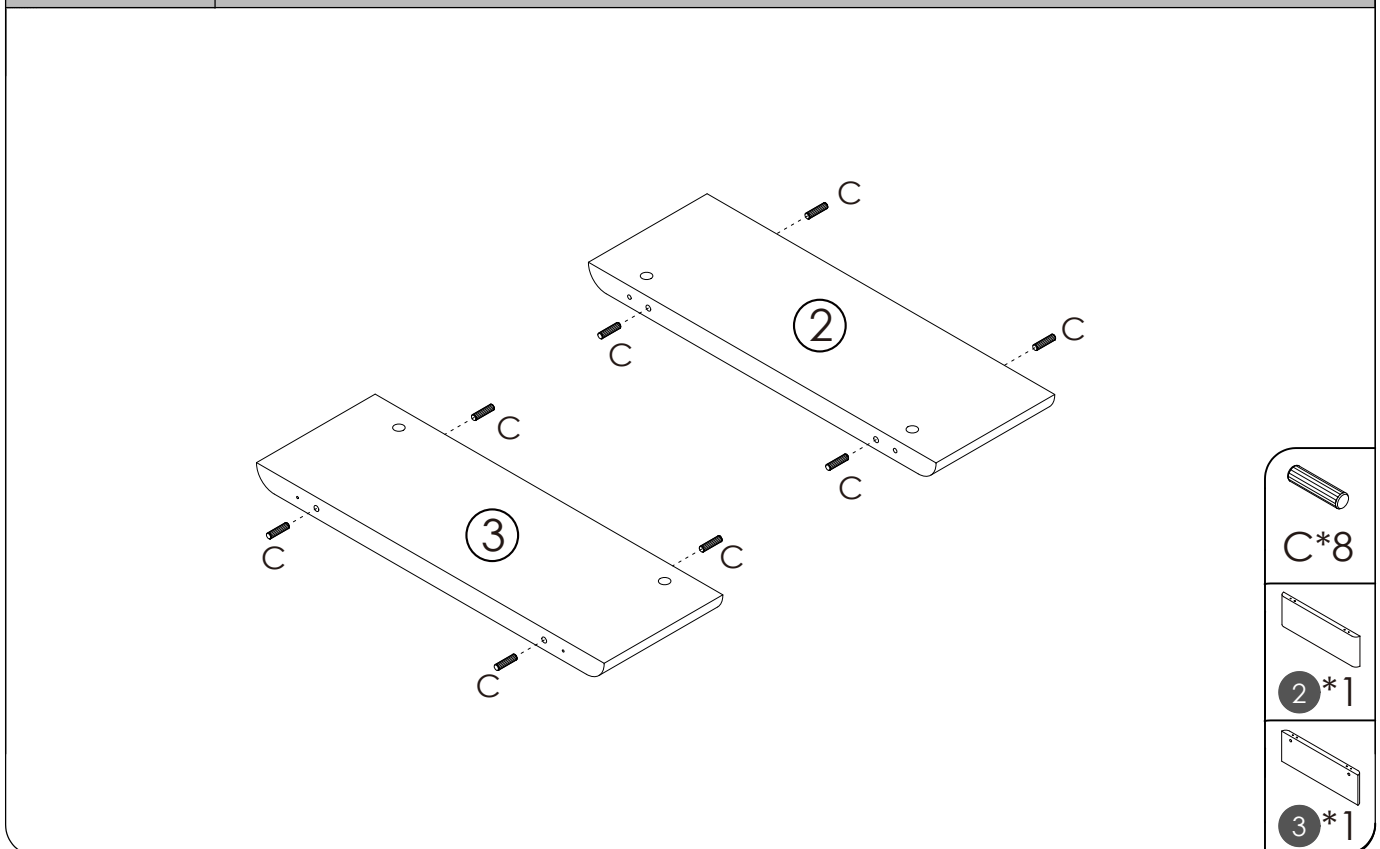

Assembly Instruction


STEP 3

Insert dowels(C) into sides of the panels(6,5 and 11).

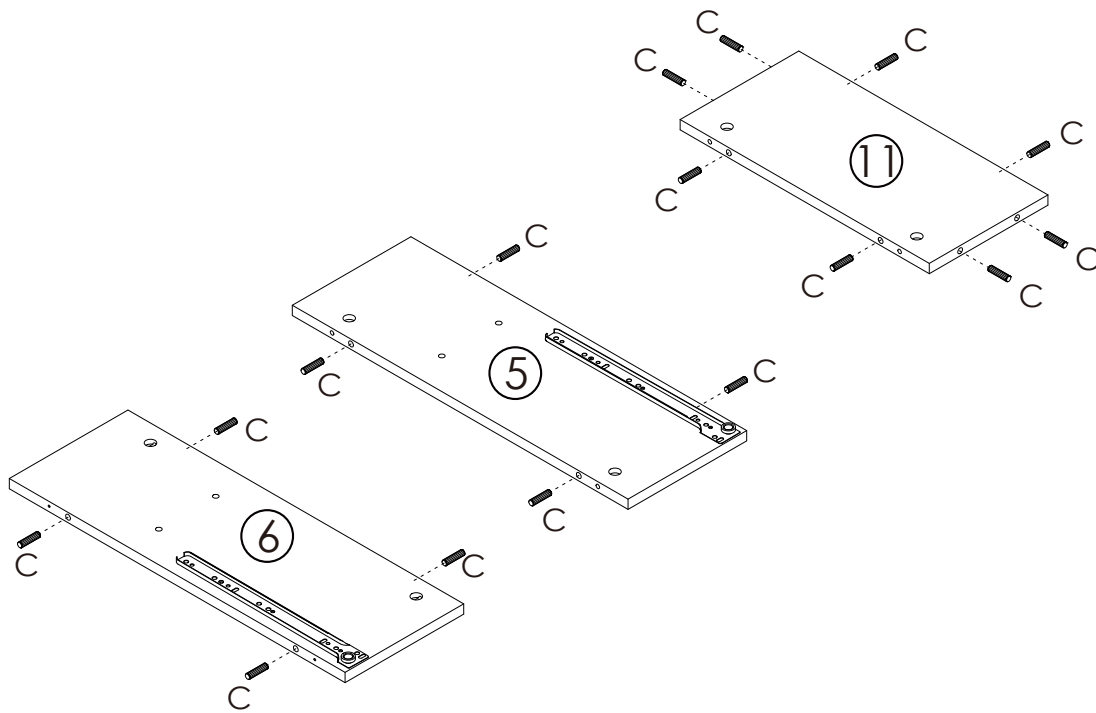

STEP 4


Attach panels(6 and 5) to panel(11).

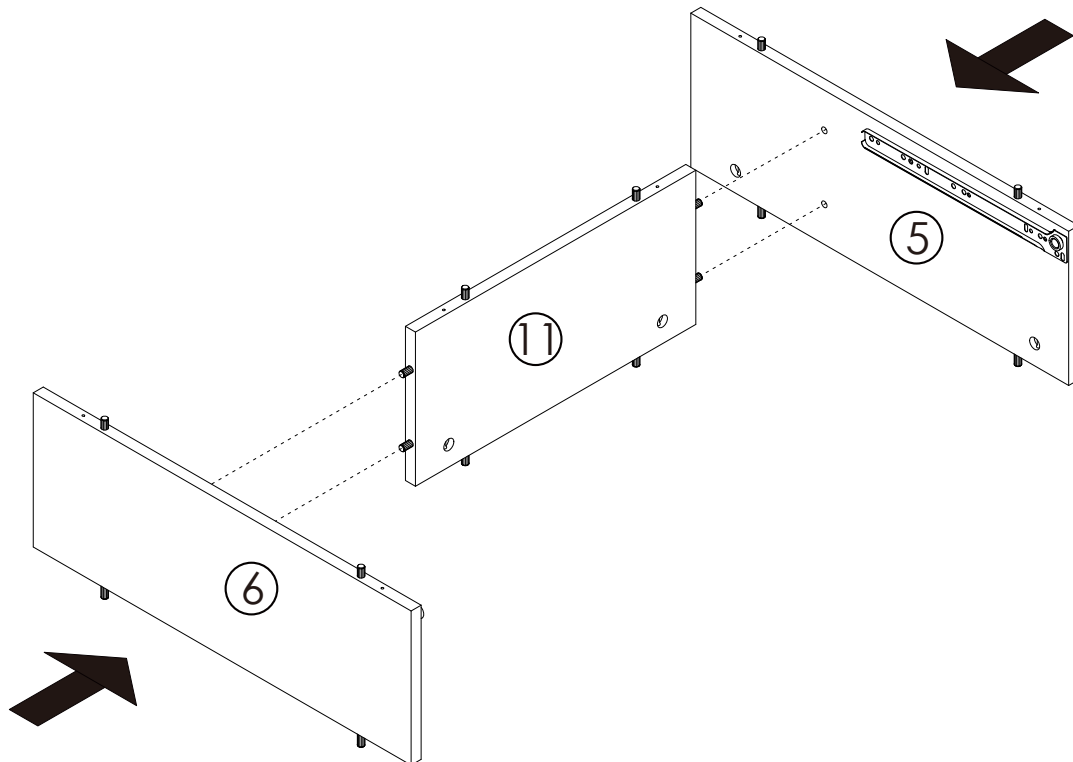

Assembly Instruction


STEP 5

Screw locking pins(A) into holes on panel(1). Don't over-tighten in case the crack on panel.

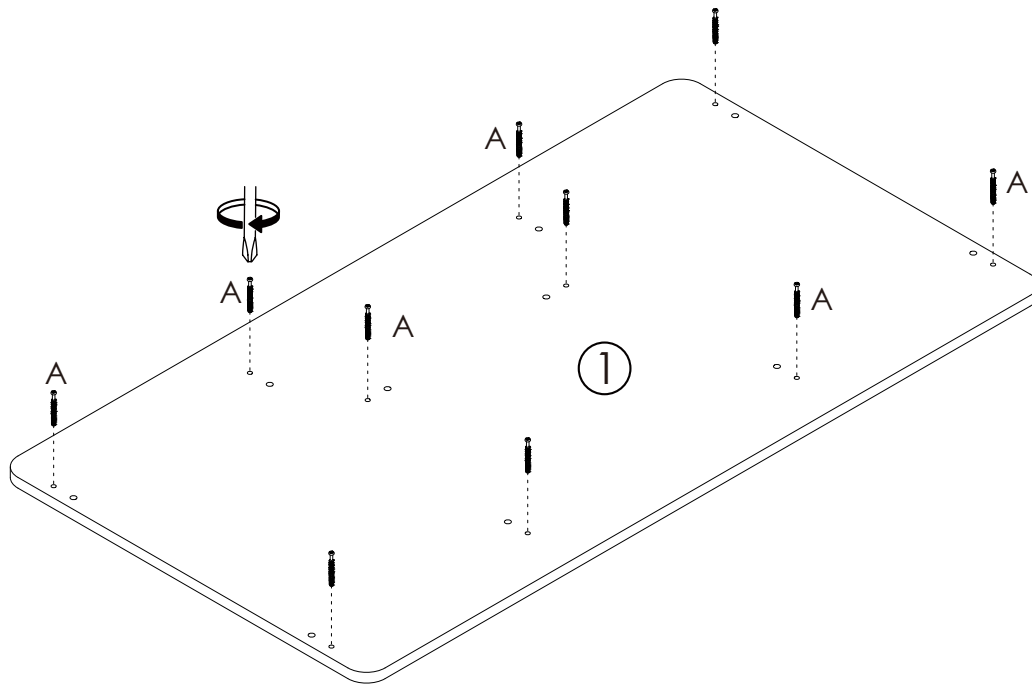

STEP 6


Attach panels(3 and 2) to panel(1), then put Klix cams(B) into the holes with the arrows (on Klix cams) pointing the heads of the locking pins. Turn Klix cams 180 degrees clockwise to lock the pins. After that, put the decorative stickers to cover the holes if you want.

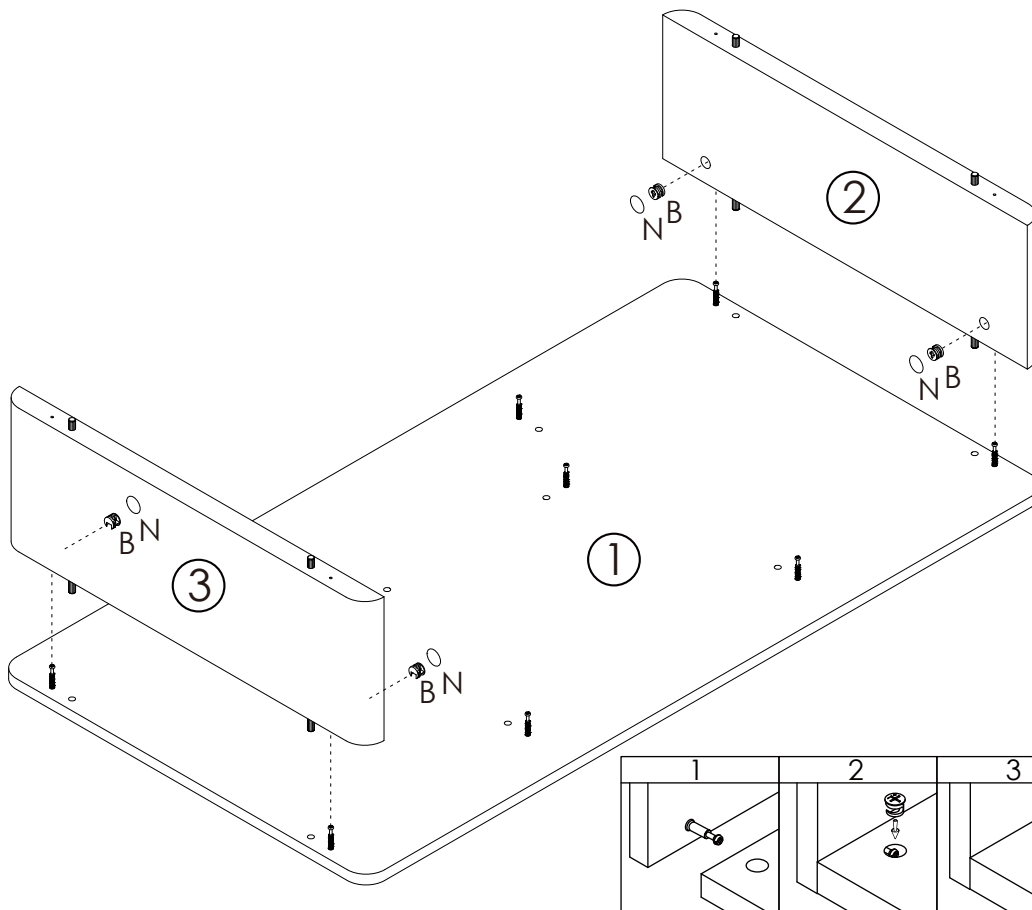

Assembly Instruction

STEP 7

Attach the assembled parts (panel 6, 5 and 8) to panel (1) and lock the pins by turning Klix cams (B) 180 degrees clockwise.

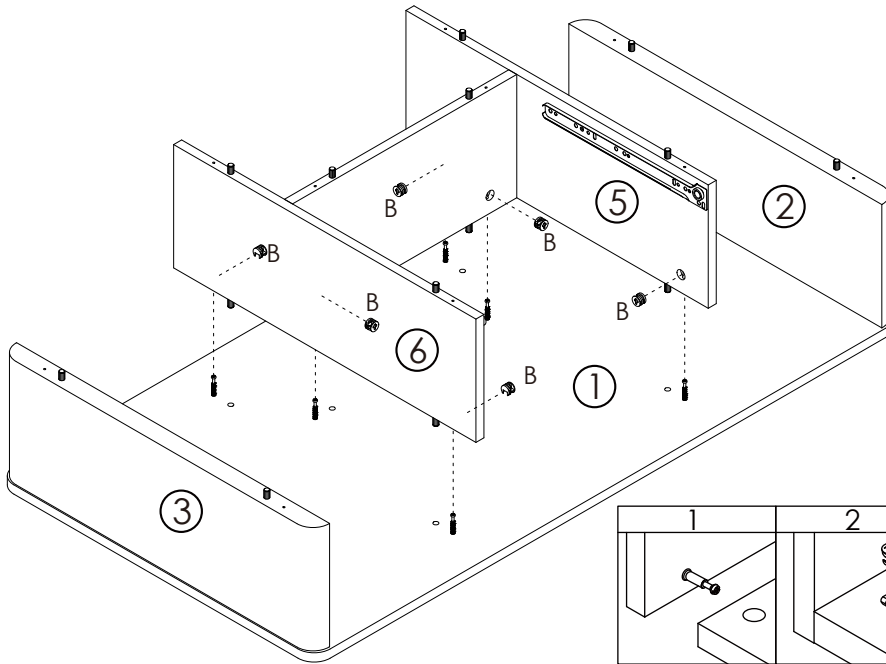


B*6



M*1

STEP 8

Attach panel (4) to the assembled parts in previous step using screws (E) and screwdriver (M).

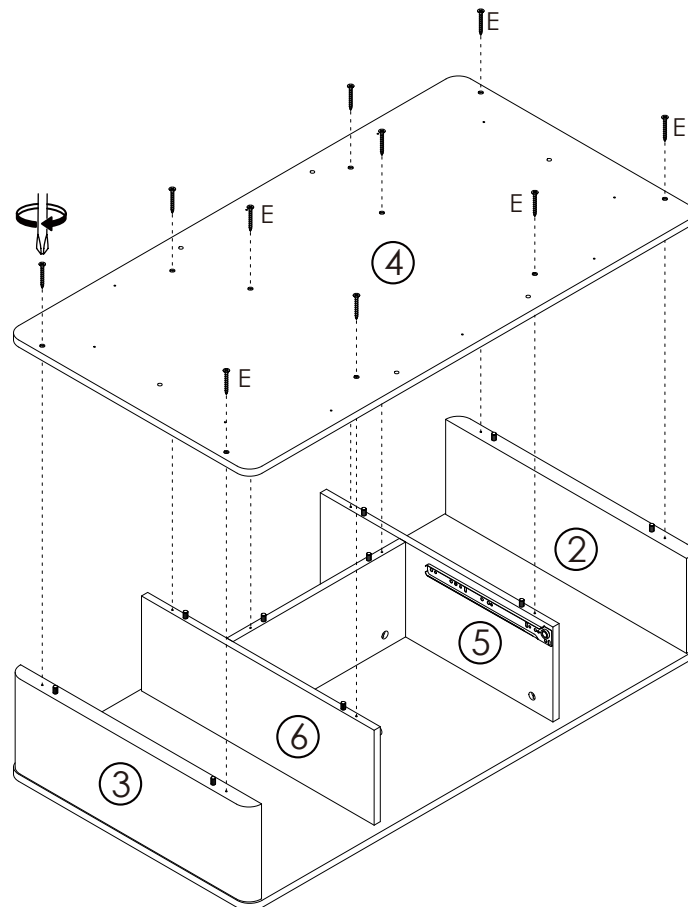

E*10



M*1




4*1

Assembly Instruction

STEP 9


Screw locking pins(A) into holes on legs(15 and 16) as shown below.

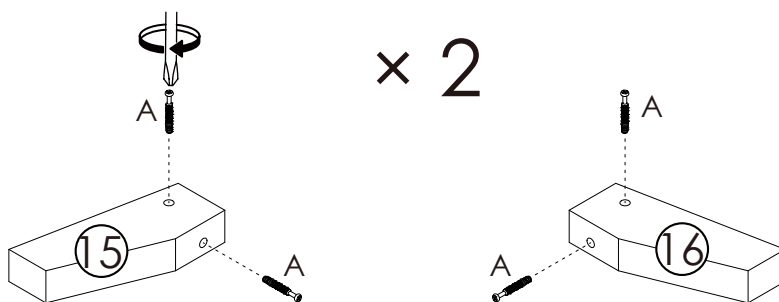


A*8



M*1

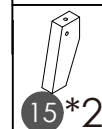


15*2

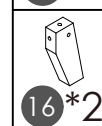

16*2

STEP 10


Attach legs(16 and 15) to crossbar(14) and lock by turning Klix cams(B) 180 degrees clockwise.

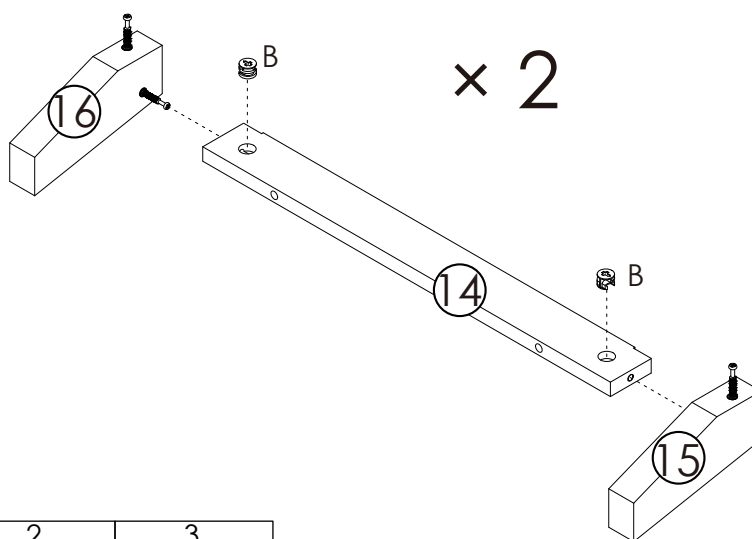


B*4



M*1

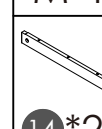


14*2

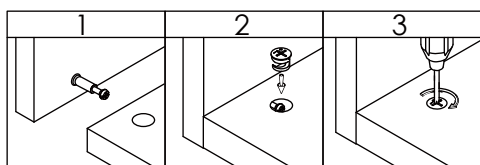

Assembly Instruction

STEP 11

Attach legs to the cross bars(13) and lock the pins in place by turning the Klix cams(B) 180 degrees using screwdriver(M).

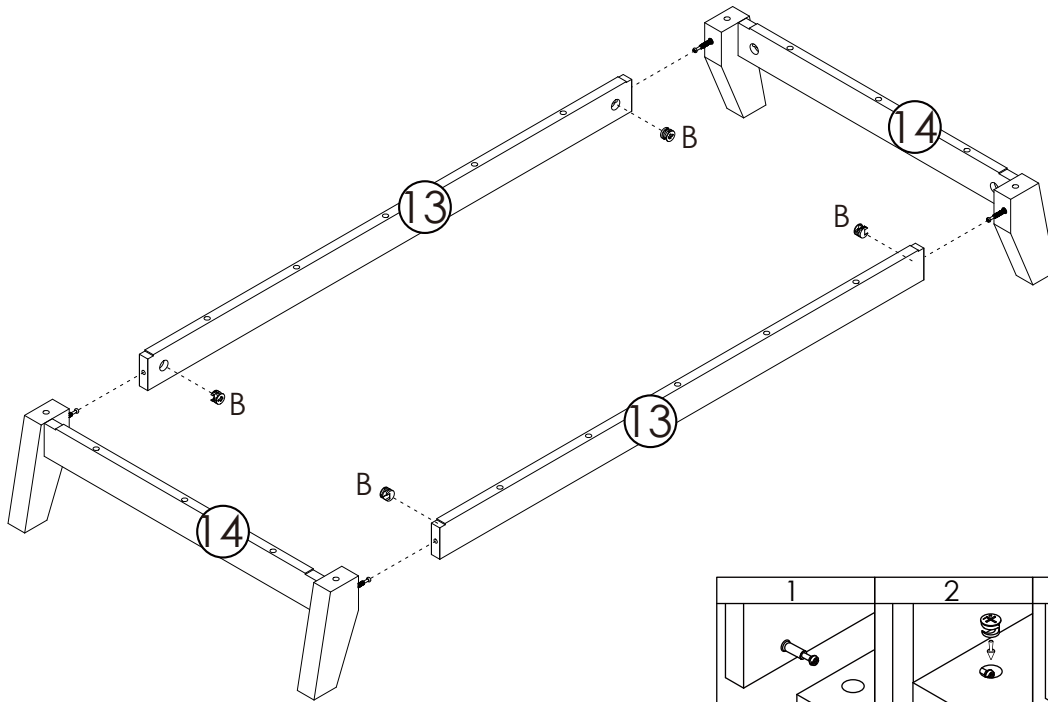

B*4




M*1




13*2

STEP 12

Attach metal plates(I) to the top of legs using bolts(H) and Allen wrench(J).

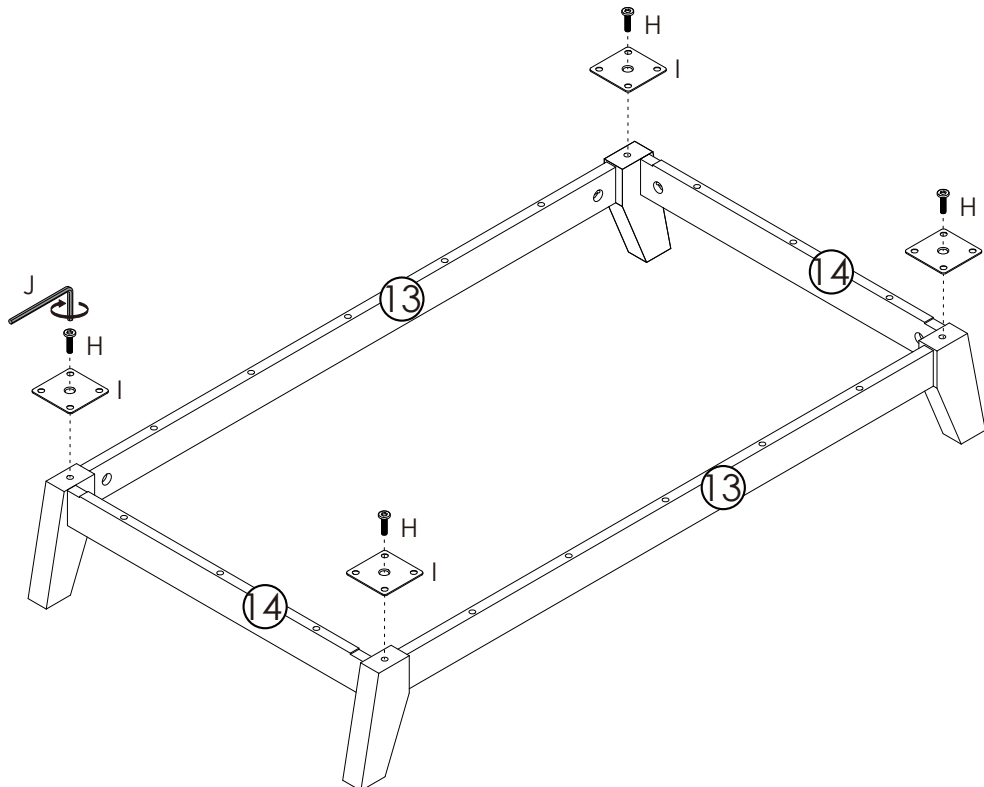

H*4

 

I*4




J*1

Assembly Instruction

STEP 13


Insert dowels(C) into holes on crossbars(13 and 14) as shown below.

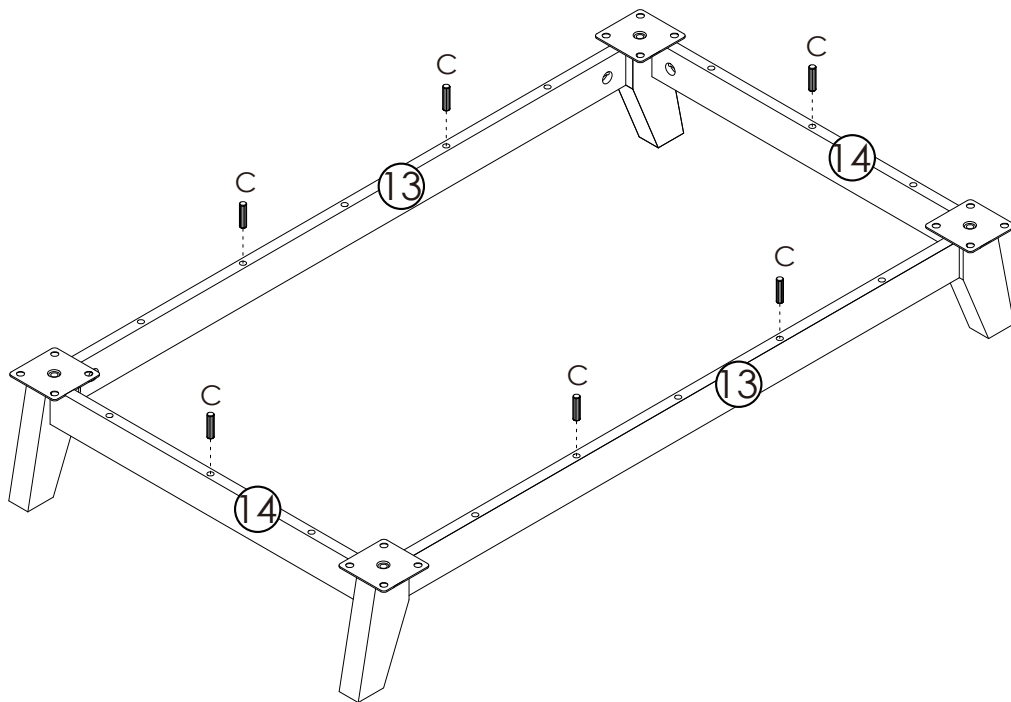


C*6

STEP 14

Attach the assembled base in previous step to the backside of the panel(4) using screws (G and K) and screwdriver(R) as shown below.

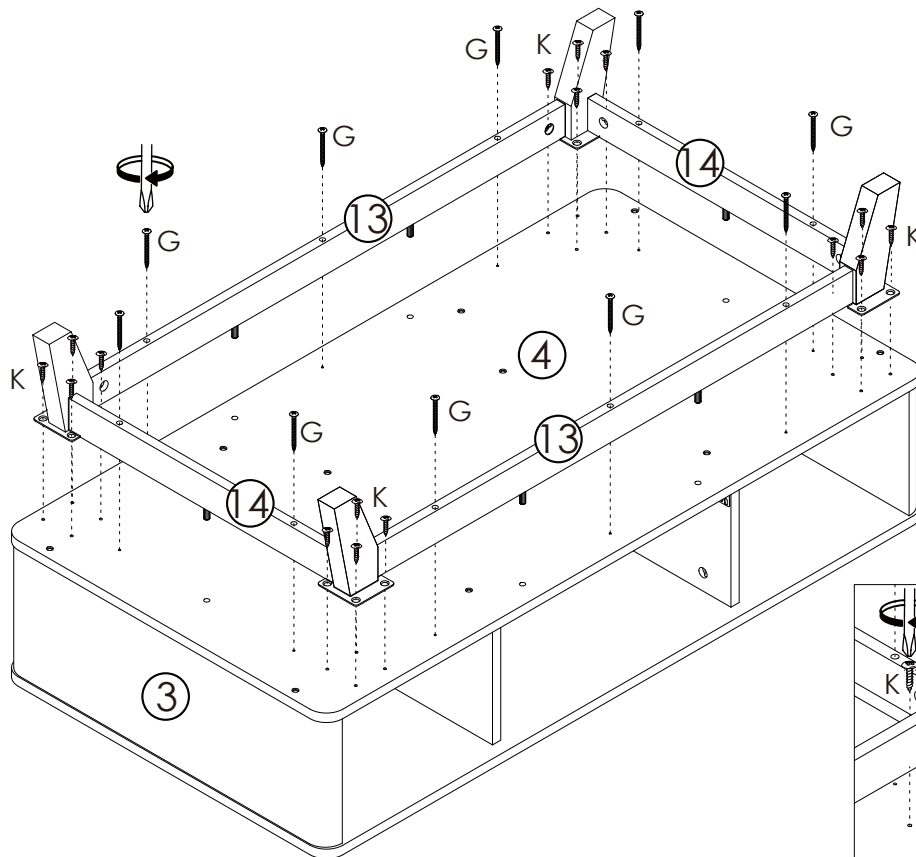


G*10


K*16

M*1

Assembly Instruction

STEP 15


Hammer the foot pads into the bottom of the legs using the handle of the screwdriver.

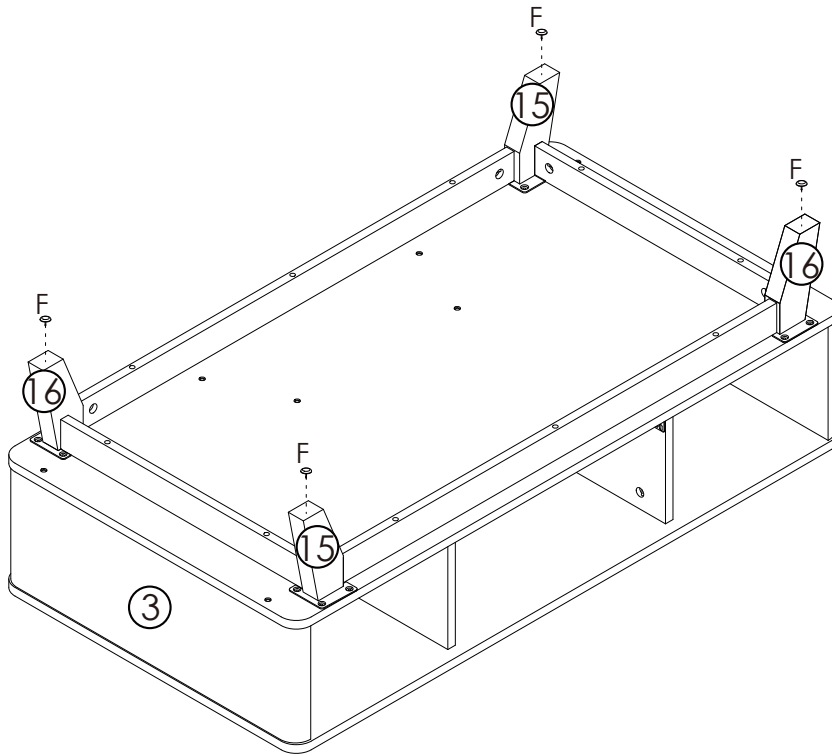

F*4

STEP 16

Attach drawer sides (8 and 7) to the drawer back (9) using screws (E) and screwdriver (M). Insert drawer bottom (12) to the slots as shown below.

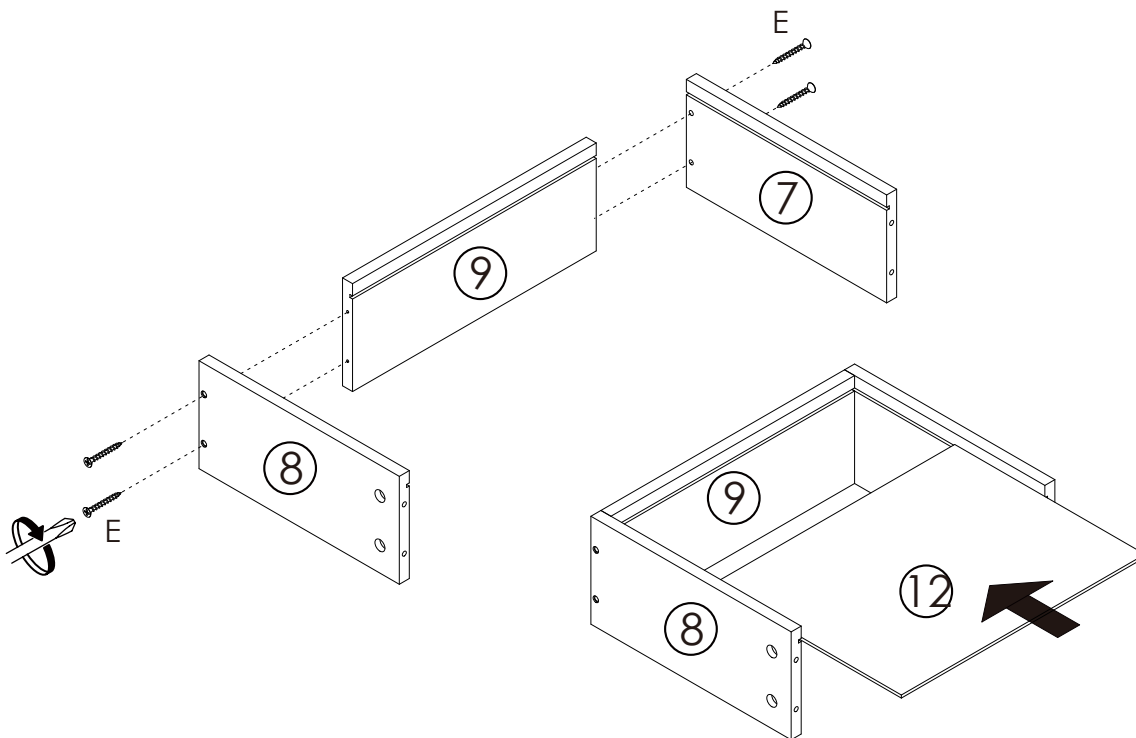

E*4



M*1



7*1



8*1



9*1




12*1

Assembly Instruction

STEP 17

Screw the locking pins into holes on the back of drawer back(10). Attach the drawer front to the assembled parts and lock by turning Klix cams(B) 180 degrees clockwise. Then put the decorative stickers(N) to cover the holes if you want.

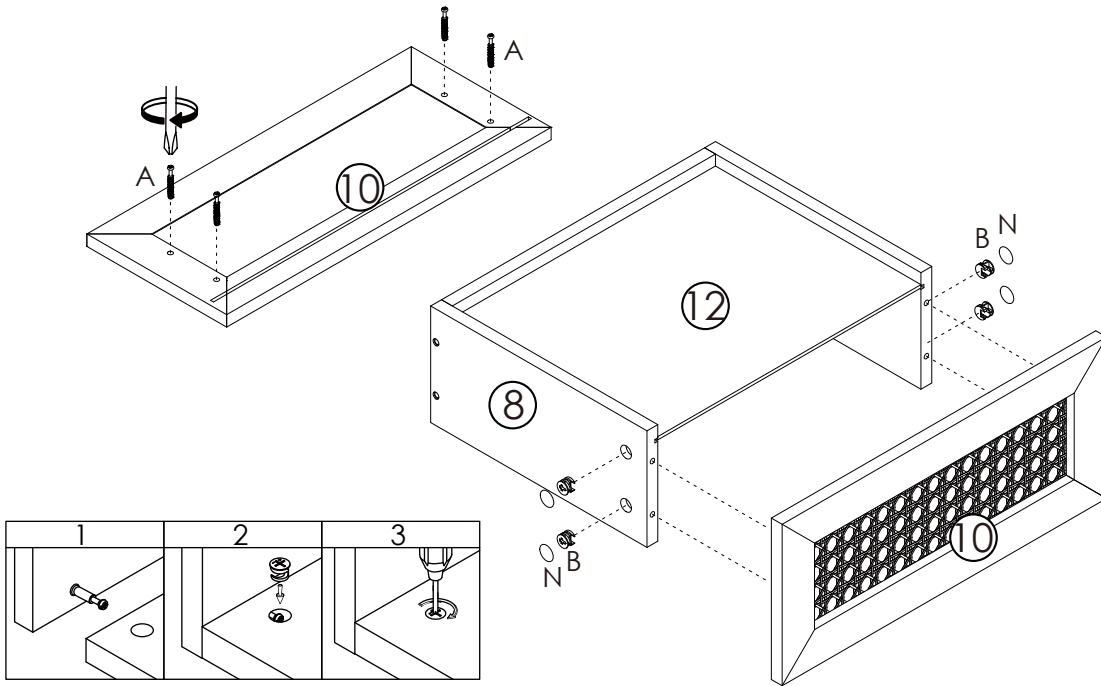

A*4



B*4



M*1




N*1



10*1

STEP 18

Attach track(DR) to the right drawer side and track(DL) to the left drawer side using screws(D) and screwdriver(M), as shown in the diagram below. When attaching the tracks, carefully use the correct screw holes that match the hole locations shown in the diagram.

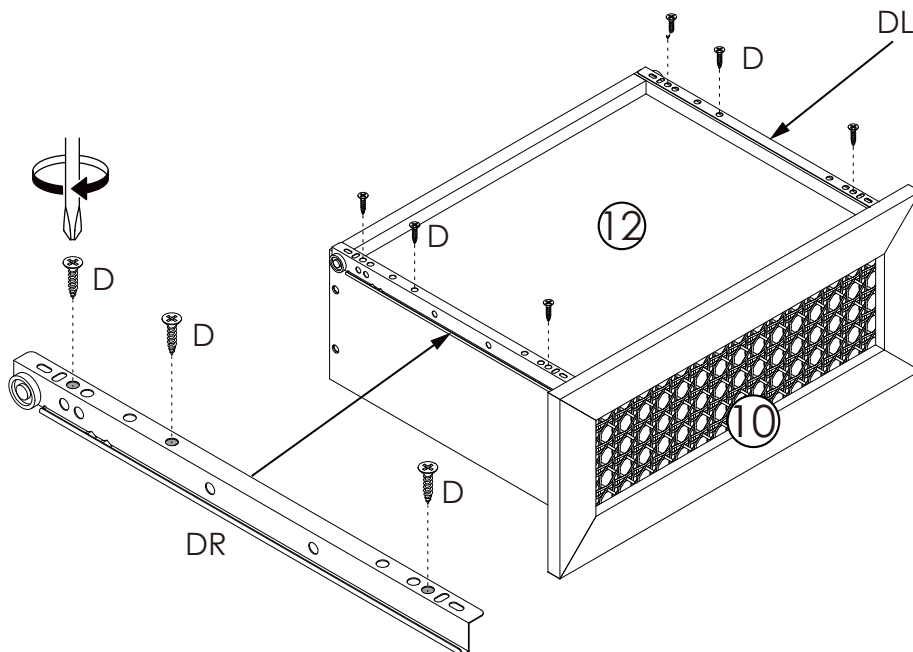

D*6



M*1



DL*1




DR*1

Assembly Instruction


STEP 19

Attach bumper pads(L) to the stand boards as shown below, Then push the drawer fully into the Coffee Table.

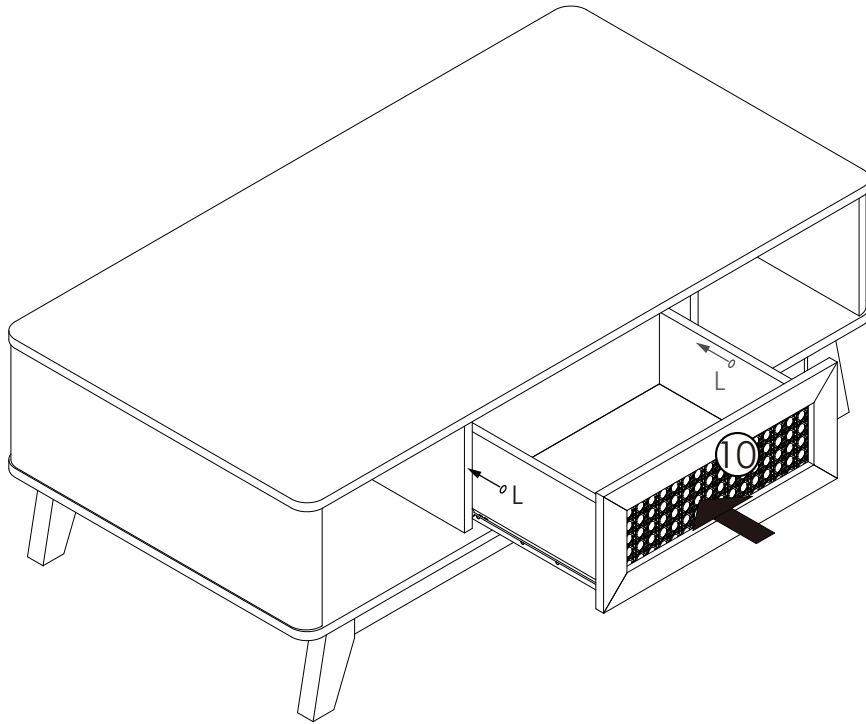

STEP 20

Assembly is complete.

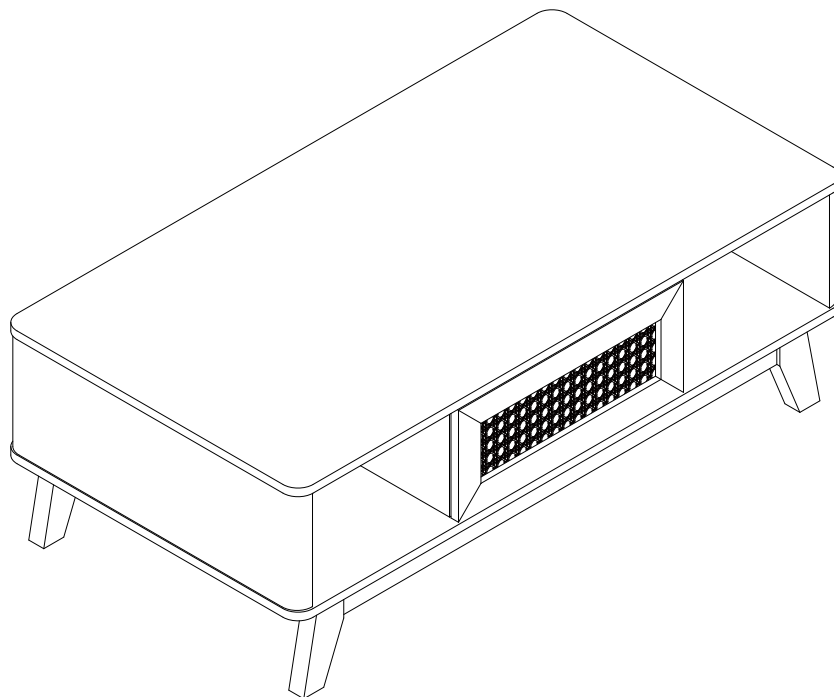

Warning

- Please keep the product away from children while assembling.
- Do not let children play or jump on the product.
- Do not stand on the item or use it as a step ladder.
- Prior to use, please check for any loosening screws or parts.
- Make sure that each screw and part is correctly installed and securely fastened.

Care and Maintenance

- Use a soft clean cloth that will not scratch the surface when dusting.
- There's no need to use furniture polish, you need to, test it first in an inconspicuous area.
- Using solvents of any kind on your furniture may damage the finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Liquid spills should be removed immediately.
- Gently blot the spill with a soft, clean cloth to avoid rubbing.

Further advice about the furniture care

- It is best to keep your furniture in a climate-controlled environment.
- Extreme temperatures and humidity changes can cause fading, warping, shrinking and spitting of wood.
- We recommend keeping furniture from sunlight exposure to avoid possible surface damage.
- Proper maintenance and cleaning at home will extend the life of your purchase.
- Following these important and helpful tips will help retain your furniture's performance even it ages.
- Periodically (every 90 days), make sure the screws are fully tightened.

Warmly after-sales service

- Please check all the hardware and furniture before assembling.
- If anything is missing, please feel free to contact us. If you only leave a message on the platform, we may not be able to effectively solve the problem.
- Timely communication helps us understand your situation and provides you with the best shopping experience.

Have a question for our company?

Thank you for supporting our company.

- If you have any issues with your purchase, please feel free to let us know.
- We will always do our best to work out a solution that you will be happy with.

Return Policy

Length of return period:

Items can be returned within 30 days of receipt of shipment. Who is responsible for the return shipping fee?

We will cover the return shipping fees if:

1. The item received is damaged or defective.
2. The wrong item was shipped to you.
3. The item received is materially different from what was described on the product page.
If the return is for any other reason, the customer will be responsible for the return shipping fees.

However, we always hope to work with you to find a better solution instead of a return. Please don't hesitate to contact us.

If the return is due to reasons other than the ones listed above, the customer will be responsible for the return shipping fees, if:

1. You are not satisfied with the product(s) after receiving the box(es).
2. You no longer need the product(s), but you have already received the box(es).
3. You purchased the product(s) by mistake, but you have already received the box(es).
4. Before FedEx picks up the package, please make sure that everything is returned to the original packaging and that the prior opening will not affect the reselling of the product.

You can try to get Amazon prepaid labels for UPS express return. Alternatively, we can provide prepaid shipping labels after you provide photos of the package before and after repackaging. Just stick the label on the box and call FedEx to pick it up.

When will I be refunded?

The refund will be issued once the goods have been received and processed at our warehouse. If you have any questions, please don't hesitate to contact us, and we will work with you to find a solution that ensures your satisfaction.