 
 


ASSEMBLY & MAINTENANCE INSTRUCTIONS FOR TABLES

HARDWARE:



(8) Washer & Nut
Sets

(8) Hex Screws

(1) Wrench

(1) Allen Wrench

(4) Hollow Rods*


*(REQUIRED FOR TABLES

INSTRUCTIONS:


WITH ADJUSTABLE LEGS ONLY)

1. Remove the legs from the cardboard packaging.
2. Stand a leg in the gap of the table frame in one of the outside corners. Skip to Step 3 for Wooden Legs.
*If attaching an Adjustable Table Leg insert the hollow rod to the top hole of the leg.
Then slide the Hex-Screw into the table leg through the hollow rod.
Turn the leg so the pre-drilled holes are facing attached corner bracket. (See Adjustable Leg Assembly Diagram Below)
3. Insert the Hex-Screw through the pilot hole in the table leg and tighten it using the Allen Wrench.
4. Repeat Step 2-3 for each leg. Re-tighten the screws occasionally, if necessary.

Wooden Legs

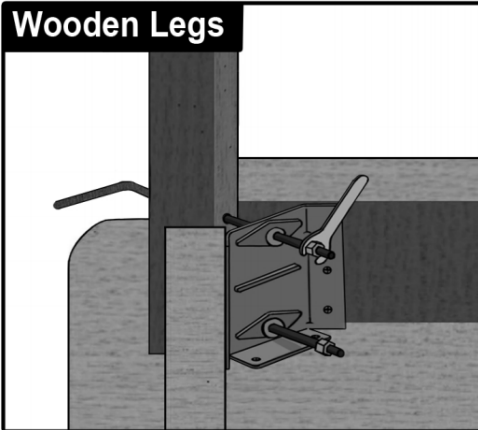

Adjustable Legs

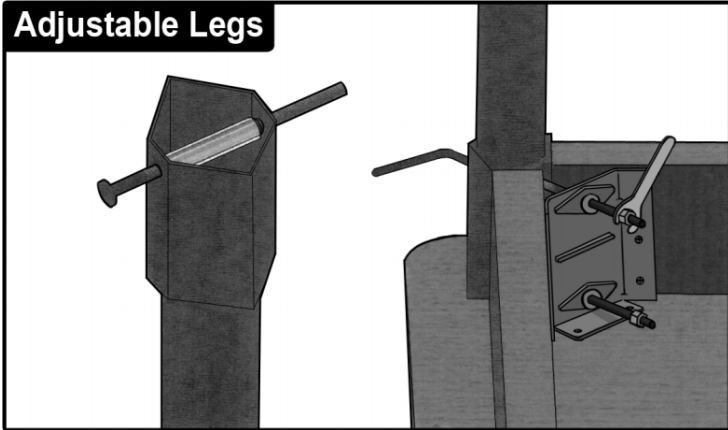

MAINTENANCE:

Cleaning:

Wipe surfaces clean with a soft cloth moistened with warm water, a mild detergent or dishwashing liquid, such as Dawn, and a small amount of bleach for disinfecting. Wipe dry. To prevent damage, do not leave water on wooden surface.

Warning:

- Not suitable for standing on.
- Check the stability and security of the table before use.
- Do not stand, kneel, climb, lean or pull on the unit for support.
- Only use unit on a firm, flat surface with all legs directly touching the floor
- Do not place near high heat or moisture.

- When moving the table, remove items from it's surface, lift all legs off the ground and place in desired location.



- Do not lift table from one side.



- Do not push, pull or slide table.



- Do not contact or return this product to the store.