
 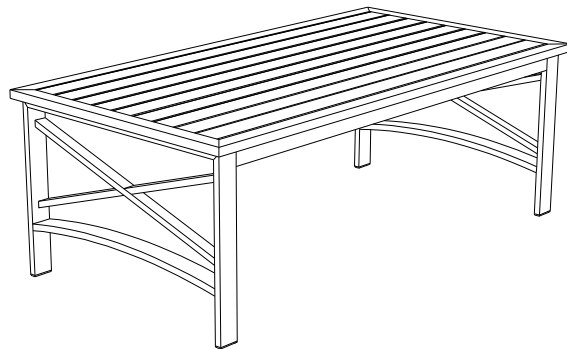

 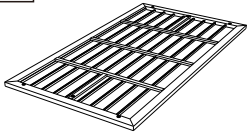




Outdoor Coffee Table





PART LIST

A 	B 	C 
Side Panel 2 PCS	Top Panel 1 PC	Rail 2 PCS

  HARDWARE LIST


#1  M6*15mm	#2  M6*30mm	#3  M6*45mm	#4  M6
Short Bolt 6 PCS	Long Bolt 6 PCS	Flat Washer 12 PCS	Allen Wrench 1 PC

  EXTRA HARDWARE LIST

#1  M6*15mm	#2  M6*30mm	#3  M6*45mm
Short Bolt 1 PC	Long Bolt 1 PC	Flat Washer 1 PC

Step 1. Lay top panel (part B) down on a soft flat surface, such as carpet, as shown below. Attach side panel (part A) to top panel (part B) using long bolts (part #2), flat washers (part #3) and allen wrench (part #4).


NOTE: Please do not fully tighten bolts until unit is fully assembled.

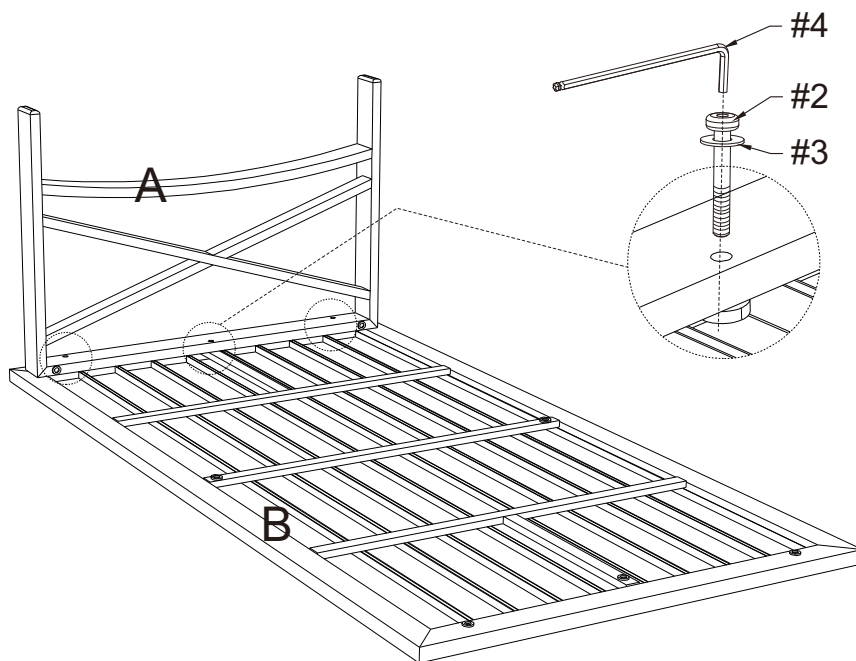

#2		x3
#3		x3
#4		x1

Step 2. Attach rails (part C) to side panel (part A) and top panel (part B) using short bolts (part #1), flat washers (part #3) and allen wrench (part #4).


NOTE: Please do not fully tighten bolts until unit is fully assembled.

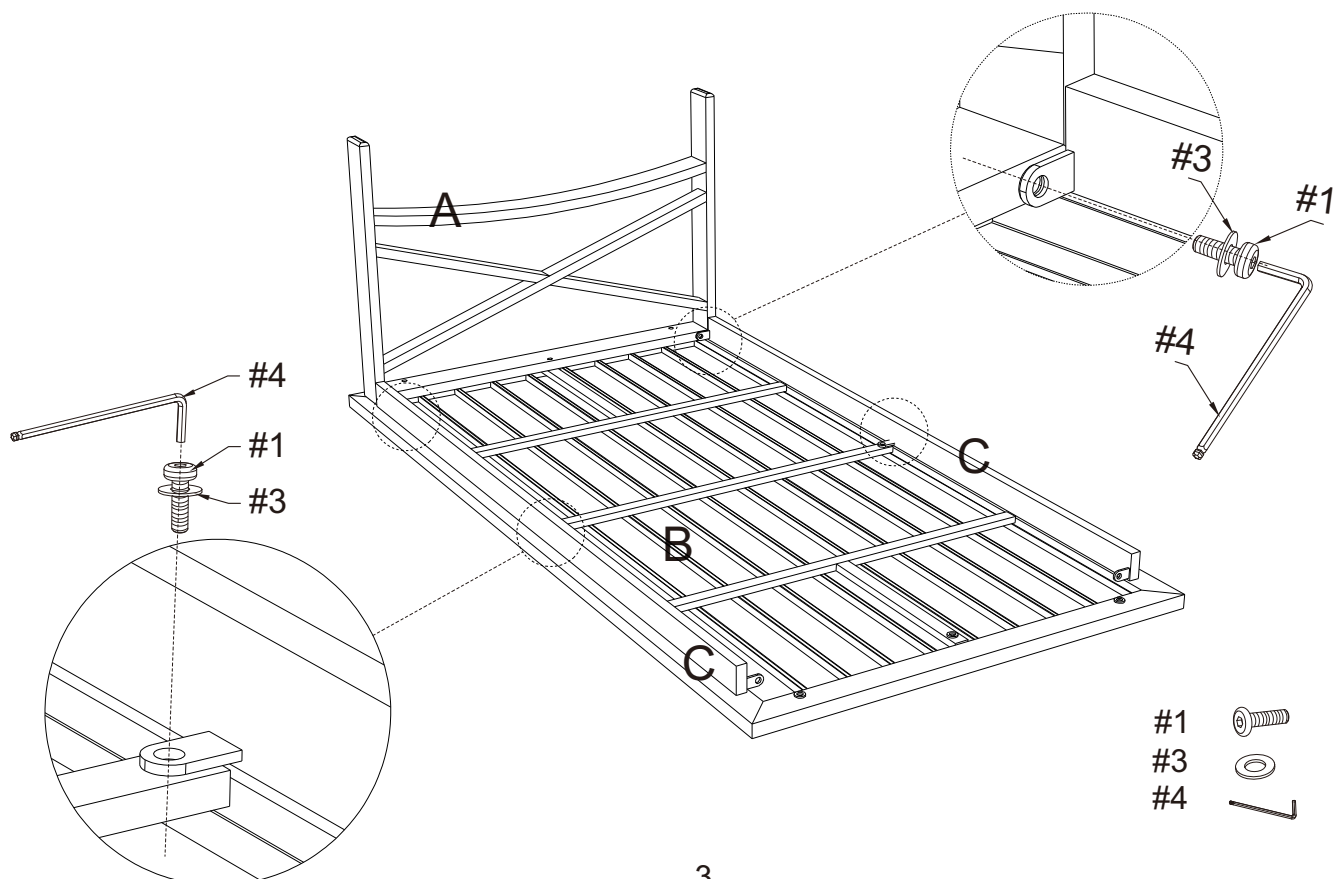

#1		x4
#3		x4
#4		x1

Step 3. Attach side panel (part A) to top panel (part B) and rails (part C) using short bolts (part #1), long bolts (part #2), flat washers (part #3) and allen wrench (part #4).

NOTE: Please fully tighten all bolts at this time.

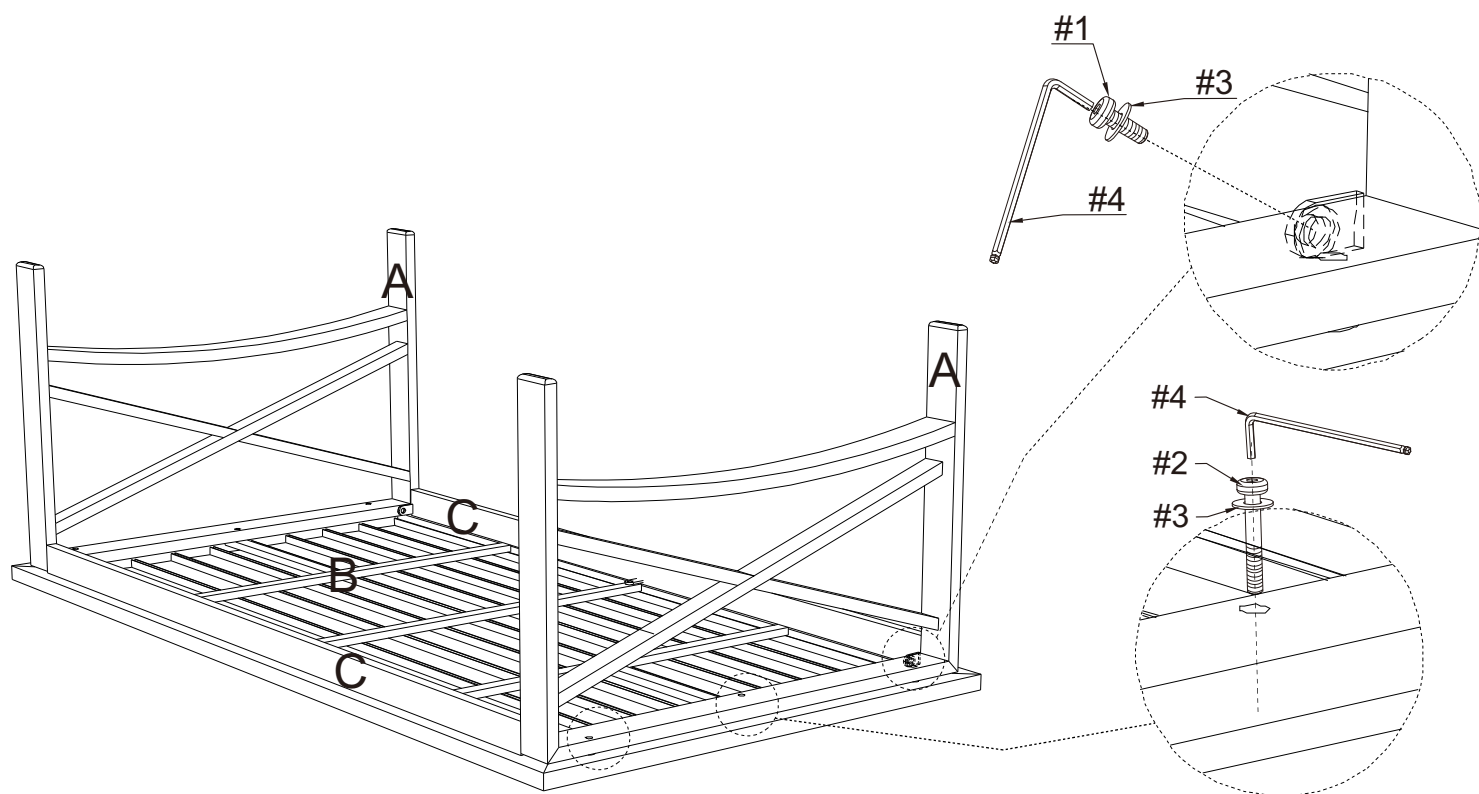

#1		x2
#2		x3
#3		x5
#4		x1

Step 4. Carefully turn unit upright.

