 


SPACE SAVER CABINET

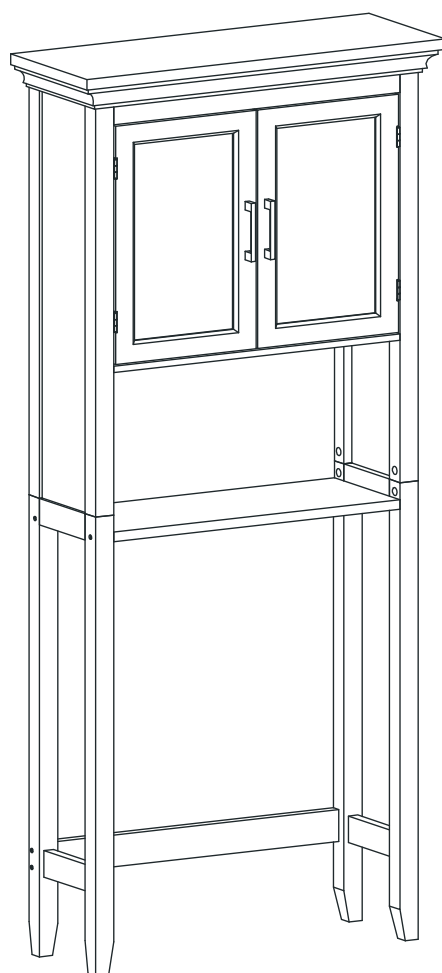

IMPORTANT : Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

SAFETY INFORMATION

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

May require 2 people for ease of assembly.

CARE and MAINTENANCE

To clean, use a soft or slightly damp cloth, then wipe with a clean, dry cloth. Dust with soft dry cloth.

Do not use ammonia-based cleaning products, as they will damage the finish.


Do not leave liquids or damp cloths on this furniture.

To avoid dulling of the finish, do not place furniture in direct sunlight.


Please inspect and tighten all screws or bolts on a regular basis to ensure proper performance and safety of your item.

PRE-ASSEMBLY INFORMATION

 
PARTS DESCRIPTION

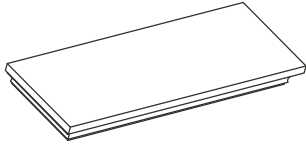A

CABINET TOP
QTY 1

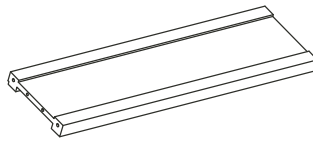B

 
TOP LEFT SIDE PANEL
QTY 1

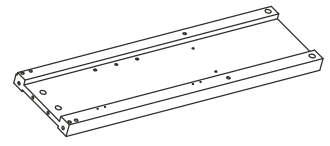C

 
TOP RIGHT SIDE PANEL
QTY 1

D

 
REAR TOP CROSS BAR
QTY 1

E

 
FRONT TOP CROSS BAR
QTY 1

F

ADJUSTABLE SHELF
QTY 1

G

 
MIDDLE SHELF
QTY 1

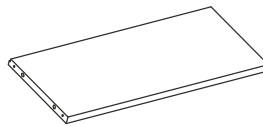H

 
BOTTOM SHELF
QTY 1

I

 
WOOD BLOCK
QTY 1

J

 
REAR BOTTOM CROSS BAR
QTY 1

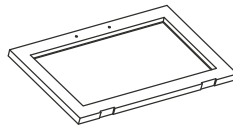K

 
LEFT SIDE DOOR
QTY 1

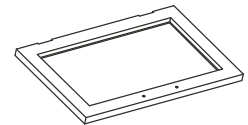L

 
RIGHT SIDE DOOR
QTY 1

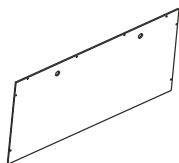M

 
TOP BACK PANEL
QTY 1

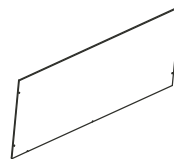N

 
MIDDLE BACK PANEL
QTY 1

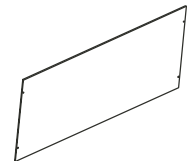O

 
BOTTOM BACK PANEL
QTY 1

P

PANEL CONNECTOR
QTY 1

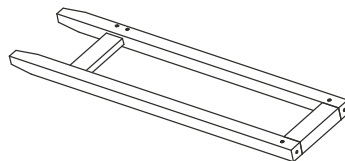Q

BOTTOM LEFT SIDE PANEL
QTY 1

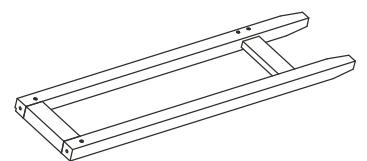R

BOTTOM RIGHT SIDE PANEL
QTY 1

PRE-ASSEMBLY INFORMATION

HARDWARE DESCRIPTION

AA



WOOD DOWEL
QTY 24

BB



CAM BOLT
QTY 8

CC



CAM LOCK
QTY 12

DD



 
SCREW
QTY 25

EE



SCREW
QTY 2

FF



MAGNET
QTY 1

GG



SCREW
QTY 4

HH



HANDLE
QTY 2

II



SCREW
QTY 2

JJ



 
PLASTIC ANCHOR
QTY 2

KK



SCREW
QTY 18

LL



METAL HINGE
QTY 4

MM



METAL PLATE
QTY 2

NN



SCREW
QTY 2

OO



SHELF SUPPORT
QTY 4

PP



SCREW
QTY 2

QQ



CAM LOCK
QTY 4

RR



SCREW
QTY 8

SS

 


CAP
QTY 16

 
TT



 
CAM BOLT
QTY 4



Required -
Flathead screwdriver
Phillips screwdriver
Rubber mallet
Not Included

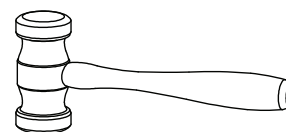 


COMPONENTS – KEY DIAGRAM

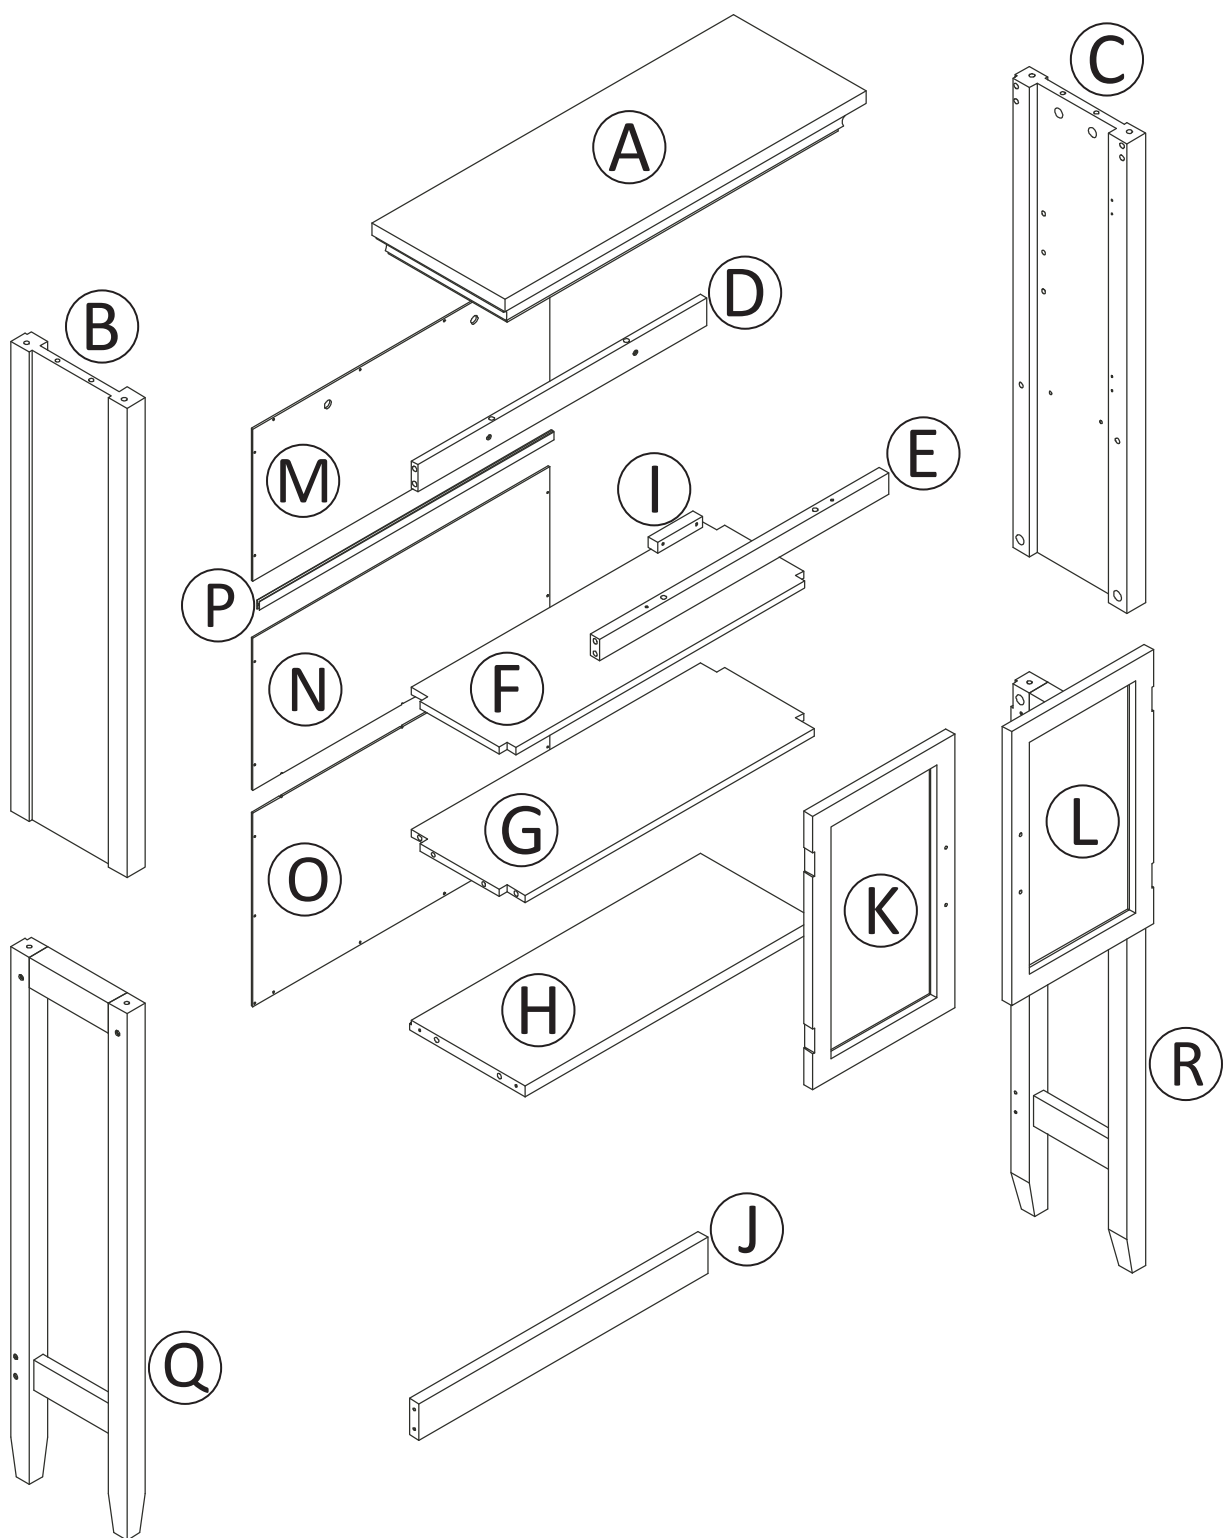

ASSEMBLY


STEP 1

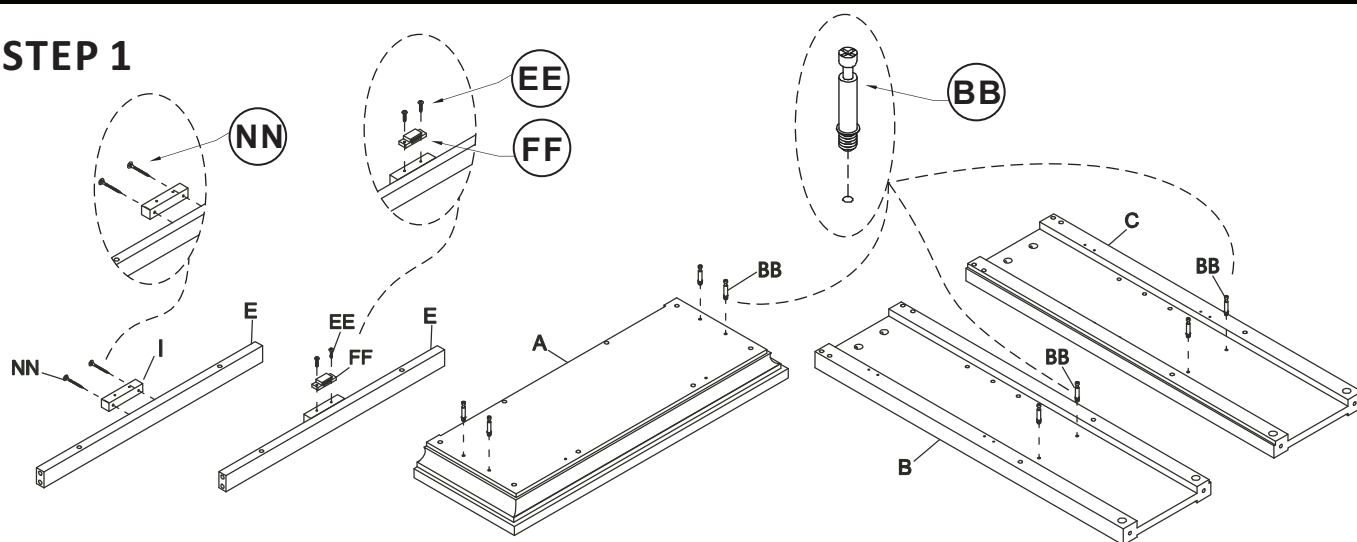

Assembling the Cabinet Top, Top Left Side Panel, Top Right Side Panel and Front Top Cross Bar

1. Lay down the cabinet top (A) and screw four cam bolts (BB) into the pre-drilled holes using a Phillips screwdriver.
2. Lay down the top left side panel (B) and screw two cam bolts (BB) into the pre-drilled holes using a Phillips screwdriver.
3. Lay down the top right side panel (C) and screw two cam bolts (BB) into the pre-drilled holes using a Phillips screwdriver.
4. Attach the wood block (I) to the front top cross bar (E), by inserting two screws (NN) through holes on the wood block (I) and tighten to the front top cross bar (E) using a Phillips screwdriver.
5. Attach the magnet (FF) to the wood block (I) by inserting two screws (EE) through the holes on the magnet (FF). Tighten using a Phillips screwdriver.

STEP 2

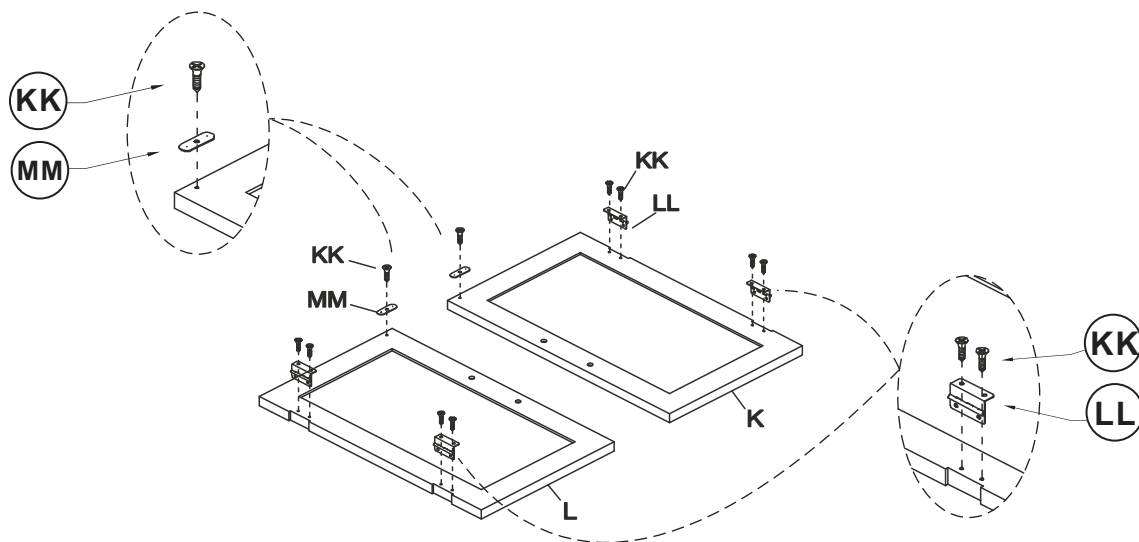


Assembling the Doors

1. Lay down the left side door (K) and attach two metal hinges (LL) to the left side door (L) by inserting four screws (KK) through the holes on the metal hinge (LL) and tighten the left side door (L) using a Phillips screwdriver.
2. Attach the magnet plate (MM) to the left side door (K) by inserting one screw (KK) through the hole on the magnet plate (MM) and tighten using a Phillips screwdriver.
3. Lay down the right side door (L) and attach two metal hinges (LL) to the right side door (L) by inserting four screws (KK) through the holes on the metal hinge (LL). Tighten the right side door (L) using a Phillips screwdriver.
4. Attach the magnet plate (MM) to the right side door (L) by inserting one screw (KK) through the holes on the magnet plate (MM) and tighten to the right side door (L) using a Phillips screwdriver.
5. Lay down the left side door (K) and attach two metal hinges (LL) to the left side door (K) by inserting four screws (KK) through the holes on the metal hinge (LL). Tighten the left side door (K) using a Phillips screwdriver.
6. Attach the magnet plate (MM) to the left side door (K) by inserting one screw (KK) through the holes on the magnet plate (MM) and tighten to the left side door (K) using a Phillips screwdriver.

ASSEMBLY


STEP 3

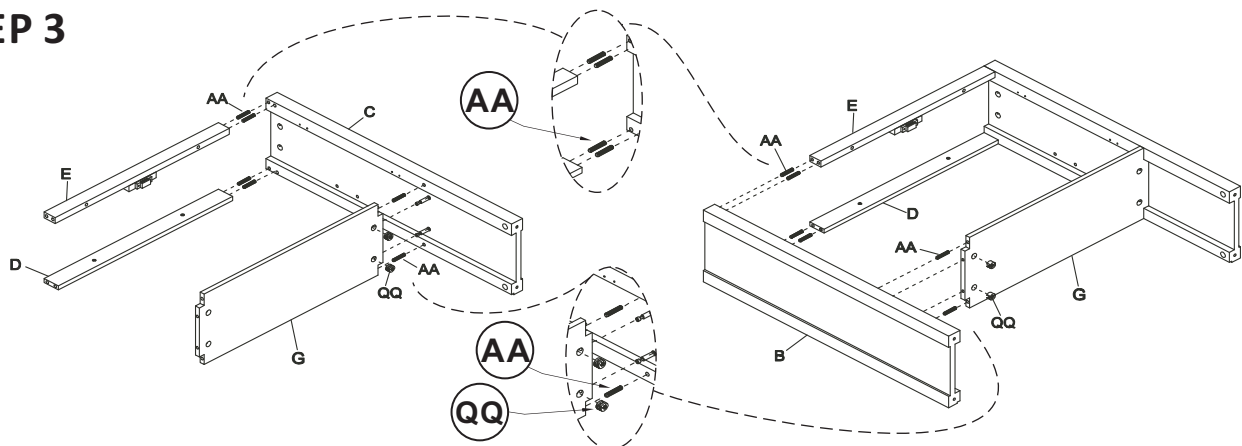

Assembling the Cross Bar, Middle Shelf and Top Left Side Panel

1. Attach the rear top cross bar (D), front top cross bar (E) and middle shelf (G) to the top right side panel (C) by inserting six wood dowels (AA) into the dowel holes on the top cross bar (D), front top cross bar (E) and middle shelf (G).
2. Insert two cam locks (QQ) into the cam lock holes on middle the shelf (G) and rotate clockwise to secure cam bolts in place using a Phillips screwdriver.
3. Attach the top left side panel (B) to the top cross bar (D), front top cross bar (E) and middle shelf (G) by inserting six wood dowels into dowel holes on rear top cross bar (D), front top cross bar (E) and middle shelf (G).
4. Insert two cam locks (QQ) into cam lock holes in the middle shelf (G) and rotate clockwise to secure cam bolts are in place using a Phillips screwdriver.
5. Attach the top right side panel (C) to the top cross bar (D), front top cross bar (E) and middle shelf (G) by inserting six wood dowels into dowel holes on rear top cross bar (D), front top cross bar (E) and middle shelf (G).
6. Insert two cam locks (QQ) into cam lock holes in the middle shelf (G) and rotate clockwise to secure cam bolts are in place using a Phillips screwdriver.

STEP 4

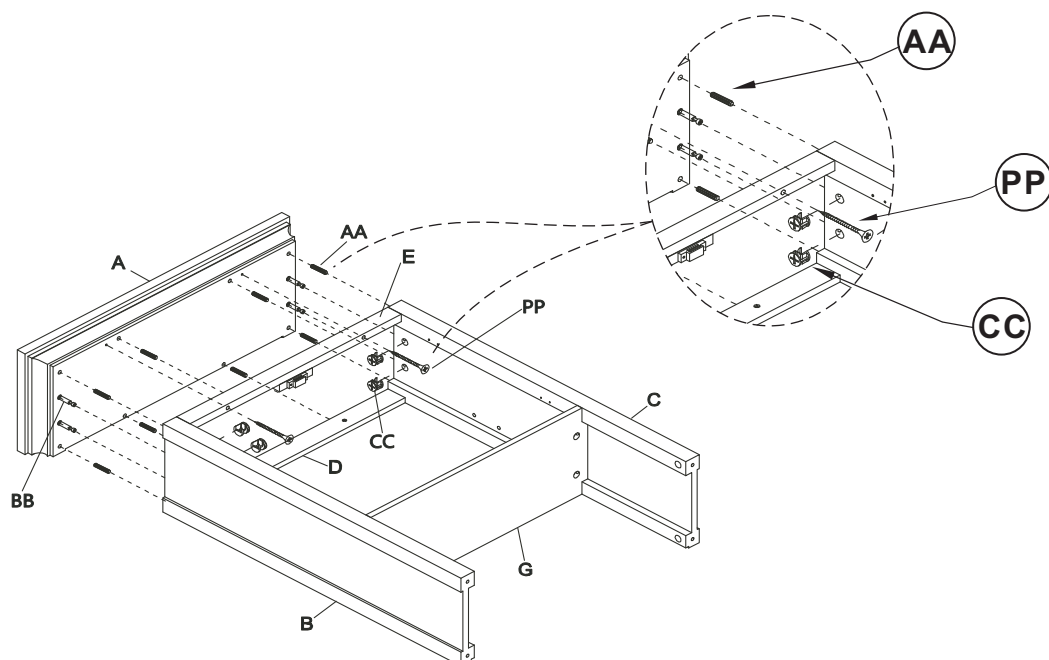


Assembling the Cabinet Top

1. Attach the cabinet top (A) to both pre-assembled side panels (B) and (C), rear top cross bar (D) and front top cross bar (E) by inserting eight wood dowels into dowel holes on both tops of side panels (B) and (C), rear top cross bar (D) and front top cross bar (E).
2. Insert two screws (PP) through the holes on the front top cross bar (E) and tighten using a Phillips screwdriver.
3. Insert four cam locks (CC) into cam lock holes on both tops of side panels (B) and (C) and rotate clockwise to secure cam bolts in place using a Phillips screwdriver.

ASSEMBLY


STEP 5

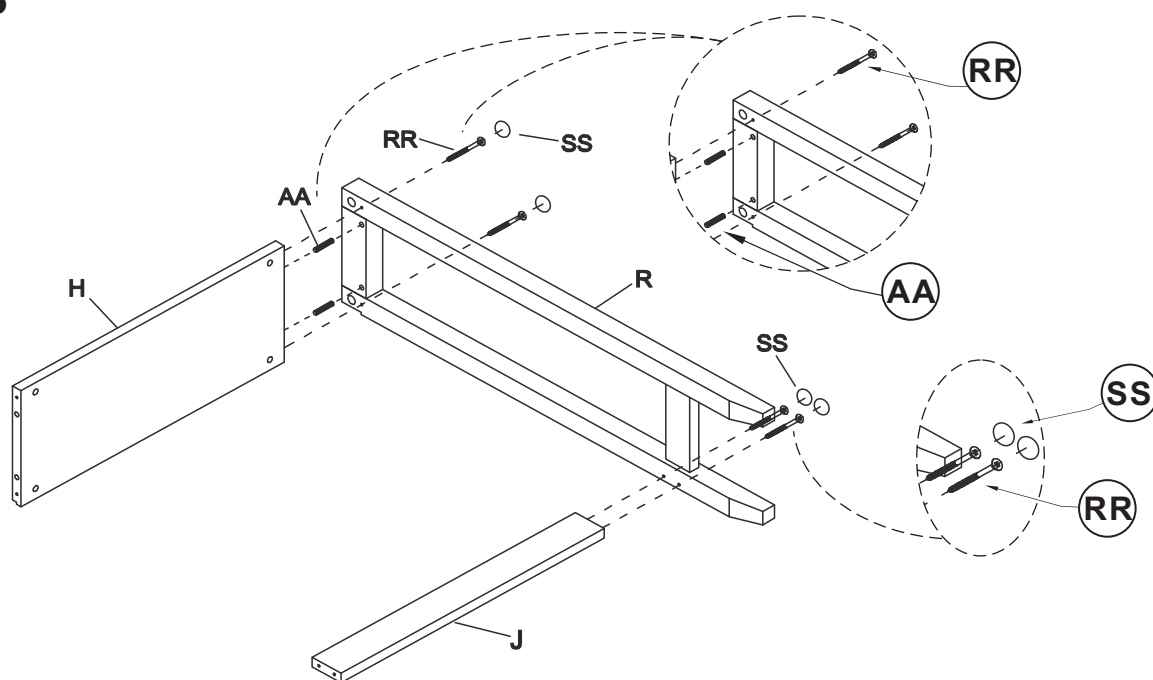

Assembling the Bottom Right Side Panel

1. Attach the bottom shelf (H) and rear bottom cross bar (J) to the bottom right side panel (R) to by inserting two wood dowels (AA) into dowel holes on the bottom shelf (H). Insert four screws (RR) through the bottom right side panel (R) and tighten using a Phillips screwdriver.
2. Cover the screws (RR) with caps (SS).

STEP 6

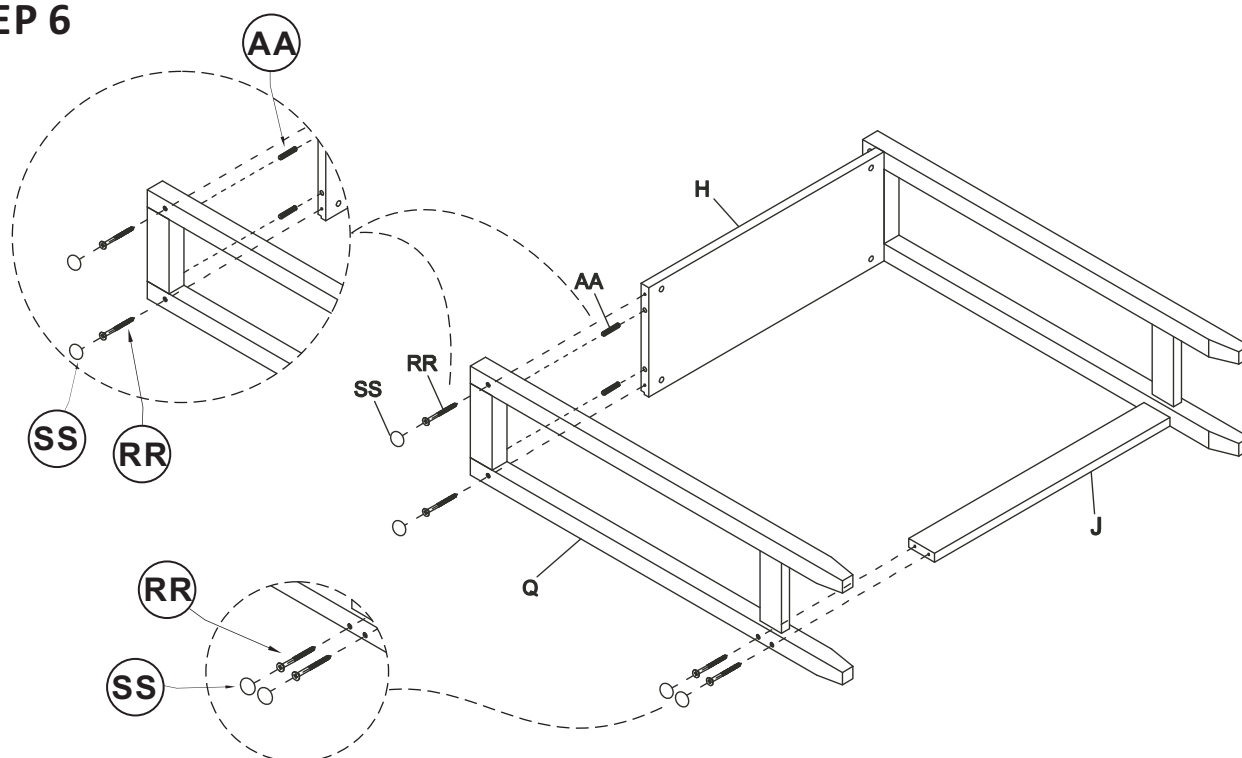


Assembling the Bottom Left Side Panel

1. Attach the bottom right side panel (Q) to the bottom shelf (H) and rear bottom cross bar (J) by inserting two wood dowels (AA) into dowel holes on the bottom shelf (H). Insert four screws (RR) through the bottom left side panel (Q) and tighten using a Phillips screwdriver.
2. Cover the screws (RR) with caps (SS).

ASSEMBLY


STEP 7

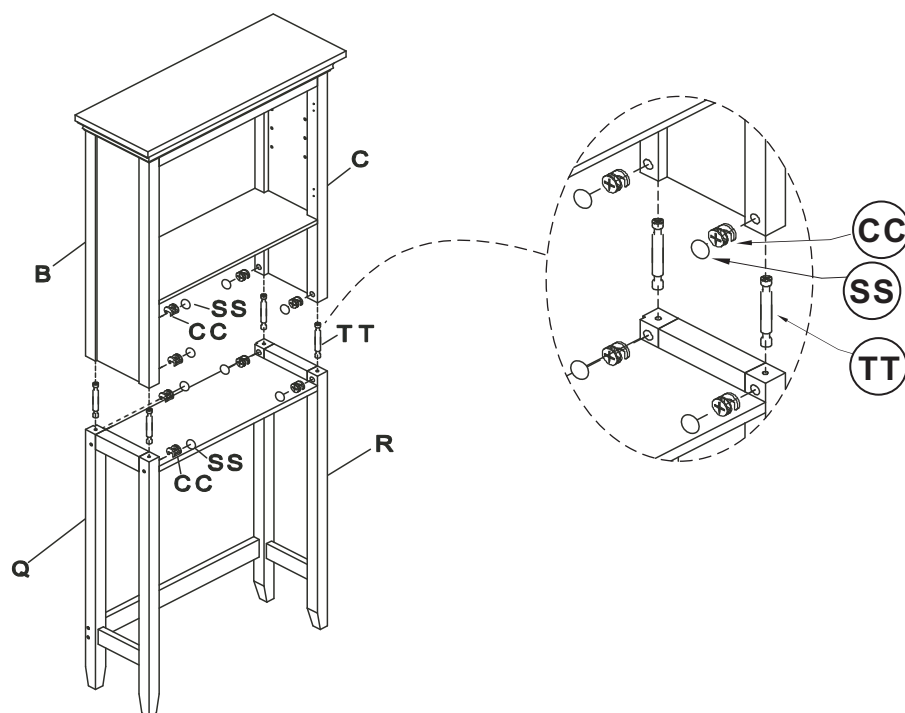

Assembling the Top Part of the Cabinet

1. Attach both pre-assembled top side panels (B) and (C) to both pre-assembled bottom side panels (Q) and (R) by inserting four cam bolts (TT) into holes on both bottom side panels (Q) and (R).
2. Insert eight cam locks (CC) into cam lock holes on both top side panels (B) and (C) and both bottom side panels (Q) and (R) and rotate clockwise to secure cam bolts are in place using a Phillips screwdriver.
3. Cover the cam locks (CC) with caps (SS).

STEP 8

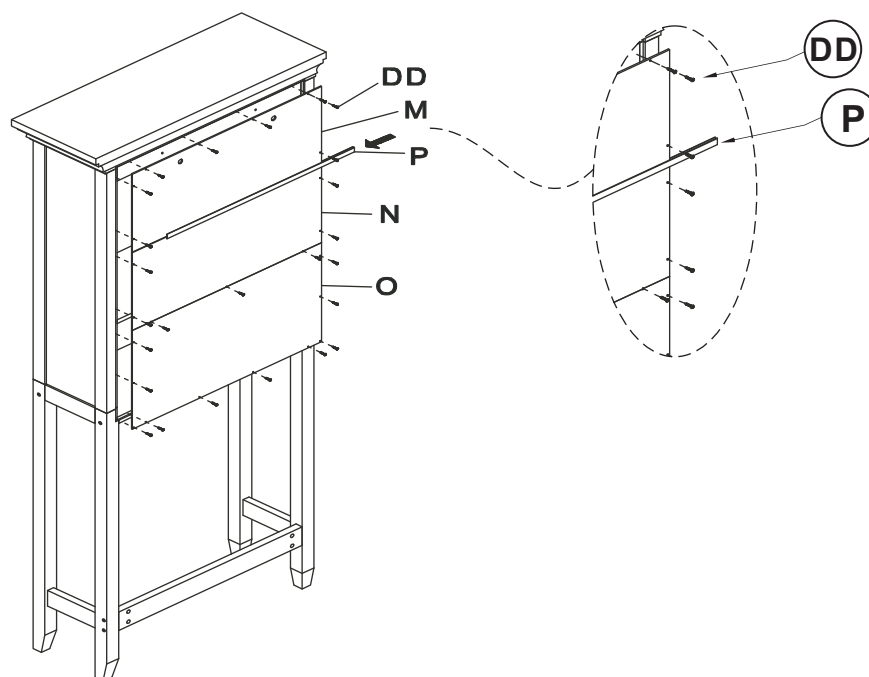


Assembling the Back Panel

1. Connect the top back panel (M) and middle back panel (N) with the panel connector (P).
2. Attach the top back panel (M), middle back panel (N) and bottom back panel (O) by inserting 25 screws (DD) through the holes on the top back panel (M), middle back panel (N) and bottom back panel (O). Tighten into the cabinet.

ASSEMBLY


STEP 9

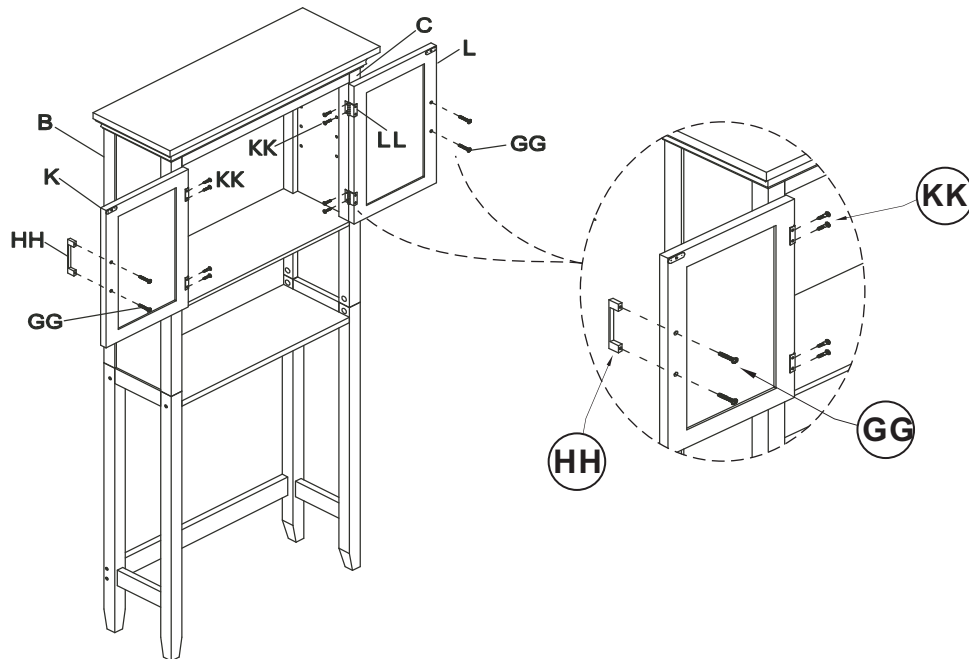

Assembling the Door

1. Attach the left side door (K) to the top left side panel (B) by inserting four screws (KK) through the holes on left side door hinges (K) and tighten.
2. Attach the right side door (L) to the top right side panel (C) by inserting four screws (KK) through the holes on right side door hinges (L) and tighten.
3. Attach the handles (HH) to both doors (K) and (L). Insert four screws (GG) through holes on both doors (K) and (L) and tighten to handles (HH) using a Phillips screwdriver.

STEP 10

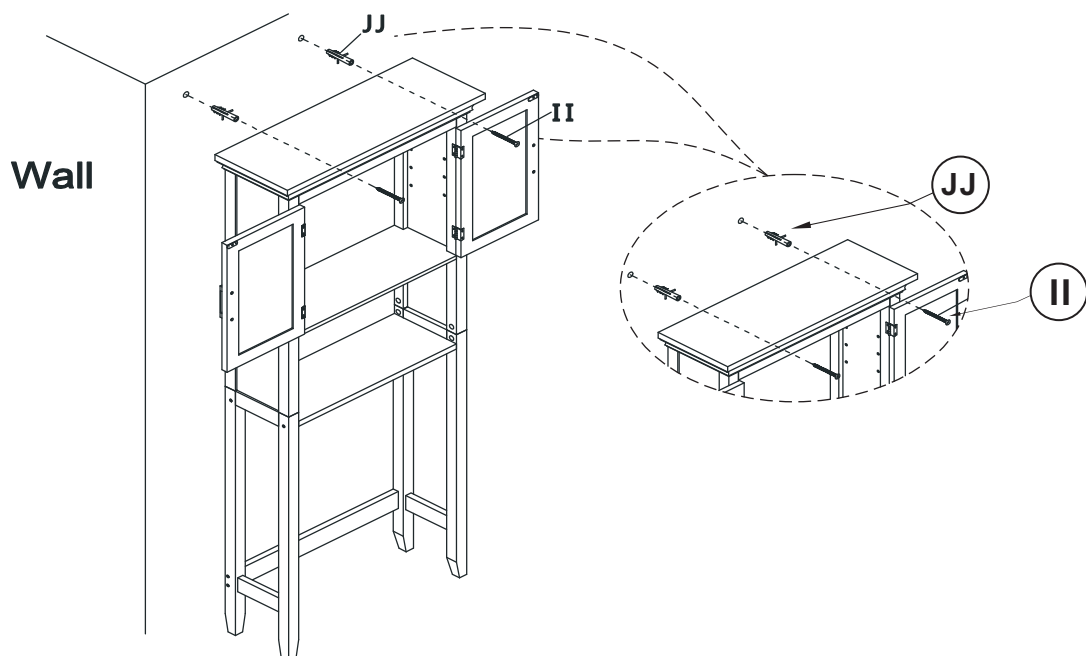


Attaching to the Wall

1. Place the cabinet against the wall of the desired location.
2. Using a level, mark two holes on the wall through the holes of the inside of the cabinet.
3. Drill two holes in the wall where marked.
4. Insert two plastic anchors (JJ) into the holes.
5. Attach the space saver in place with holes, then insert two screws (II) through the holes on the back of the space saver into the anchors and tighten the cabinet to the wall.

ASSEMBLY

STEP 11

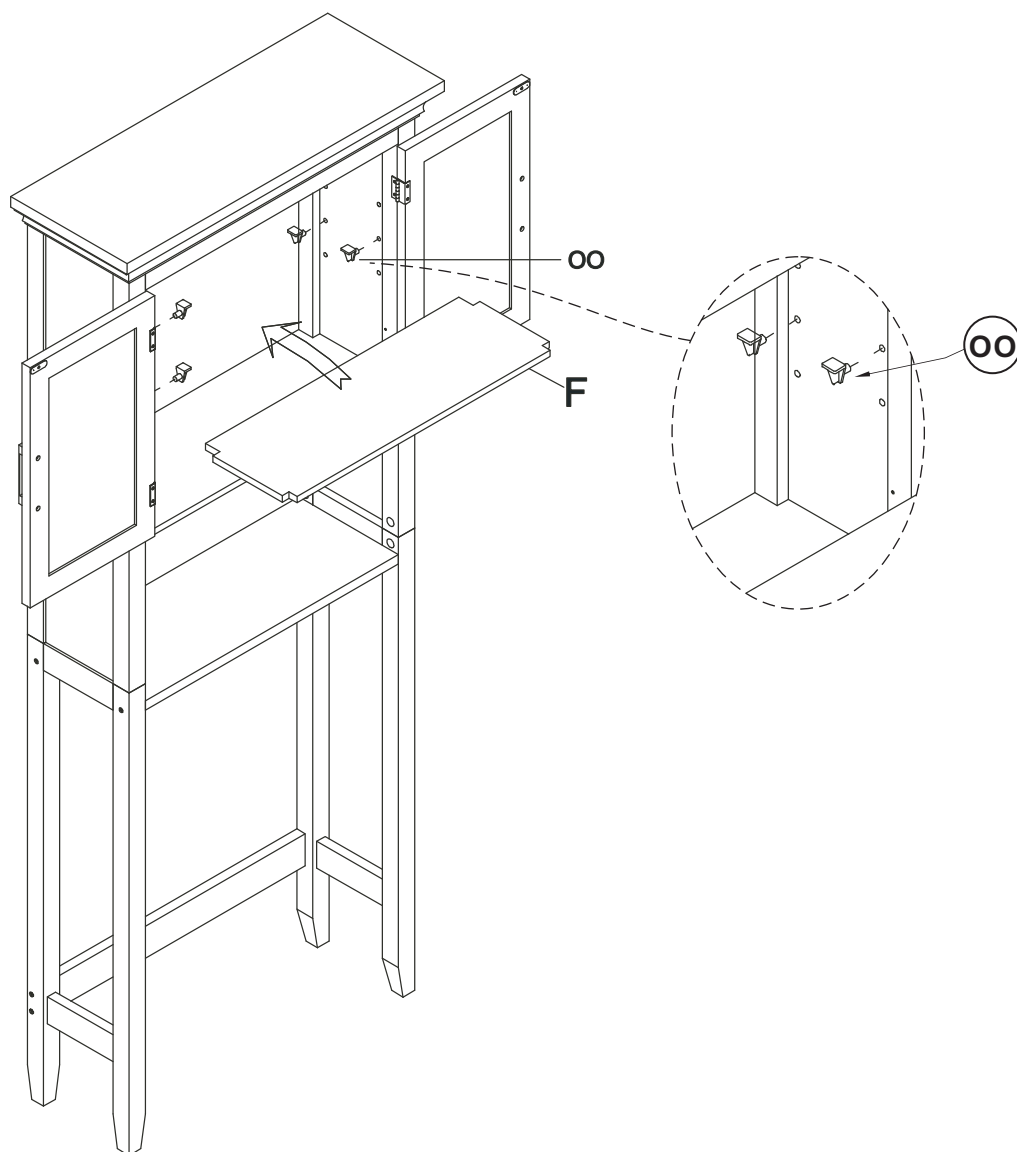

Assembling the Shelf

1. Insert four shelf supports (OO) into holes in the space saver on both side panels (B) and (C) at the same level.
2. Insert the middle shelf (F) into the space saver on top of the shelf supports (OO).

WARRANTY

Thank you for purchasing our product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.