
MOUNT-IT!

Installation Manual SKU: MI-509B SKU: MI-509L

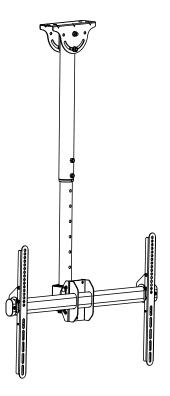

TV CEILING MOUNT



Monday - Friday from 8:00am - 4:00pm PST







support@mount-it.com

(855) 925-5668

www.mount-it.com

Thank you for choosing Mount-It!!



IMPORTANTE: Asequirese de que hava recibido todas las piezas según la lista de verificación de componentes para la instalación. Si falta alguna de las partes, o está dañada, comuniquese con su

MANTENIMIENTO: Compruebe periódicamente que el soporte esté asegurado y listo para usar (al menos cada tres meses)

PT 🚱 Leia todo o manual de instruções antes de iniciar a instalação e montagem. Se você tiver alguma dúvida sobre quaisquer uma das instruções ou avisos, por favor, entre em contato com o seu distribuidor local para assistência.


⚠

seu distribuidor local para assistencia. ATENÇÃO: O uso com produtos mais pesados do que os pesos indicados pode resultar em instabilidade, causando possíveis danos. Os suportes deven ser anexados como especificado nas instruções de montagem. A instaleção incorrela pode causar damos ou sérias lesões pessoais.
 Equiparientos de segurança e fermenteias adequaçãos devem ser utilizadas. Este produto só deves erinstatados por profissionais.
 Certifique-se que a superficie de suporte suportará com segurança o peso combinado do equipamento e todas as ferragens e componentes anexados.
 Use os parativos de montagem formecidos e NAD APERTE EXCESSUMANENTE os mesmos.

Este produto contém pequenas peças que podem causar asfixia se ingeridas. Mantenha esses itens tonge do alcances de orianças,
 Este produto destina-es somente para uso interno. Usá-lo em ambiente externo pode causar falhas no produto le lesões pessoais.
 MiPORTANTE: Assegure-se que voor de recebera todas as peças, de acordo com a lista de componentes, antes da instalação. Se alguran peça estiver faltando ou é defeituosa, contate o seu

tribuidor local para substituição.

MANUTENÇÃO: Certifique-se que o suporte seja seguro e protegido para o uso em intervalos regulares (pelo menos a cada três meses)

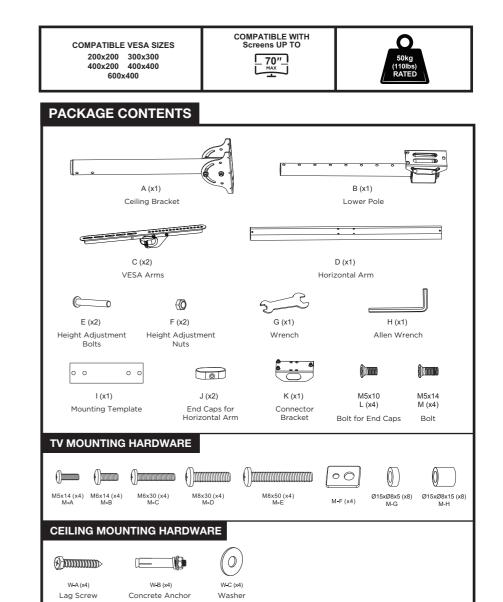

Check carefully to make sure there are no missing or defective parts. Some hardware provided may not be used. Use the correct wall mounting and monitor mounting hardware suitable for your installation.

CHOKING HAZARD. Package includes small parts. Not for children under 3 years. Adult supervision is required.

Missing Parts? Call us at (855) 925-5668 and we will ship replacement parts free of charge.

MOUNT-IT!


• Using a stud finder locate the center of the ceiling joist or angled wall stud. Center the Mounting Template (#I) on the stud and mark the center of the holes with a pencil.


• Drill pilot holes on the marked locations using a 3/16" drill bit to a depth of 2.2". Attach Ceiling Bracket (#A) to the drilled holes using Lag Screws (#W-A) and Washers (#W-C) and tighten until secure.

 
• Allow the pole to hang freely downward and then tighten the lower nut and bolt on the bracket (pictured below) by tightening the nut clockwise with Wrench (#G), holding the bolt in place on the other end with Allen Wrench (#H).

Note: In addition to normal ceiling mounting, this product may be mounted to angled ceiling surfaces or to the side of an exposed joist at a maximum of a 90° angle.



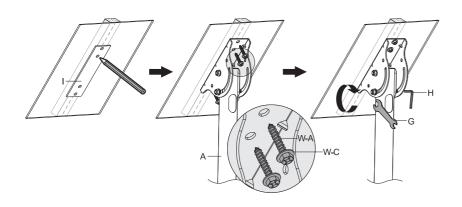

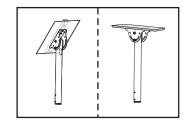



Step 1b

Mounting to Concrete or Brick


· Place the mounting template in the desired location and mark the center of the holes with a pencil.


• Drill holes on the marked locations using a ½" drill bit to a depth of 1.8". Clear dust and debris from the hole. Insert Concrete Anchors (#W-B) into the holes and remove the nut, lock washer, and washer from the end. Place the Ceiling Bracket (#A) over the protruding ends of the anchors and replace the removed pieces in order (Washer, lock washer, then nut) and tighten the nuts until secure.

• Allow the pole to hang freely downward and then tighten the lower nut and bolt on the bracket (pictured below) by tightening the nut clockwise with Wrench (#G), holding the bolt in place on the other end with Allen Wrench (#H).

Note: Do not drill mounting holes into mortar (such as between bricks or stones) only drill and install into solid stone or concrete surfaces.



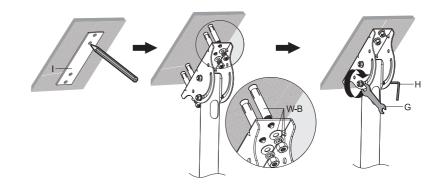


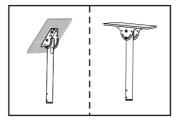



Routing Cables and Installing the Lower Pole

• Route the TV cables as shown through the upper and lower poles. Insert the lower pole inside the upper portion and position at the desired height. Secure the pole in place using Height Adjustment Bolts (#E) and Nuts (#F).

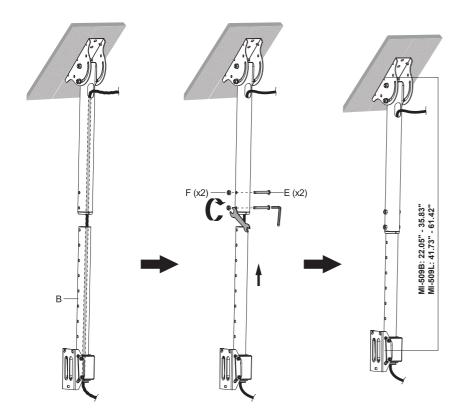


Step 3

Assembling the Horizontal Arm

• Insert Horizontal Arm (#D) through the openings in Connector Bracket (#K) and center it on the arm. Secure the two components together with Bolts M as shown.


• Attach End Caps (#J) to the ends of Horizontal Arm (#D) and secure them with Bolts (#L).

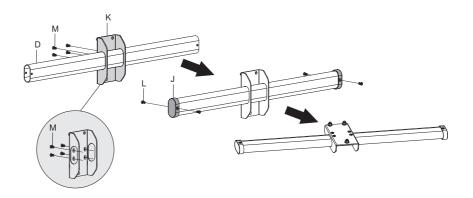

Step 4


Attaching the Horizontal Arm to the Mount

• Remove the single lower nut (pictured in the magnification bubble below) on the rear of the now assembled horizontal arm. Hang the top two nuts onto the corresponding slots on the end of the Lower Pole (#B) and the now exposed bolt will pass through the single corresponding hole. Reattach the nut and tighten until secure.

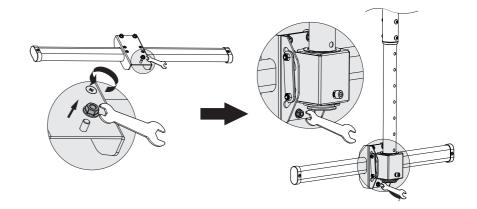

Removing the Security Screw

• Remove the security screw pictured below from each of the VESA Arms (#C).

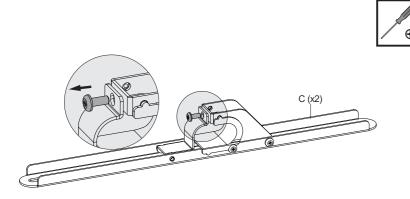


Step 6a Attaching the VESA Arms to the TV (No Spacers)

Spacers will not be required if the VESA bolts used are the correct length that matches the depth of the TV VESA holes.
Select the appropriate size mounting bolt (#M-A though M-E) for your display's mounting holes and verify the length of the VESA bolt is not too long. If you are unsure of the correct bolt size for your display refer to your TV user manual or contact the TV manufacturer for sizing information. Square Washer (#M-F) must be used in all configurations.



MOUNT-IT!

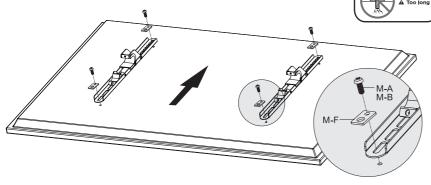


Step 6b

Attaching the VESA Arms to the TV (With Spacers)

• Spacers will be required if the VESA bolts used are too long for the depth of the TV VESA holes. Spacers are provided to adjust the length of the mounting bolt.

• Select the appropriate size mounting bolt (#M-A though M-E) for your display's mounting holes and verify the length of the VESA bolt is not too long. If you are unsure of the correct bolt size for your display refer to your TV user manual or contact the TV manufacturer for sizing information. If necessary, use the

included spacers (#M-G, M-H) between the mount and the TV as shown below to adjust the length of the mounting bolt. Multiple spacers can be used in combination to achieve the desired bolt depth. Square Washer (#M-F) must be used in all configurations.

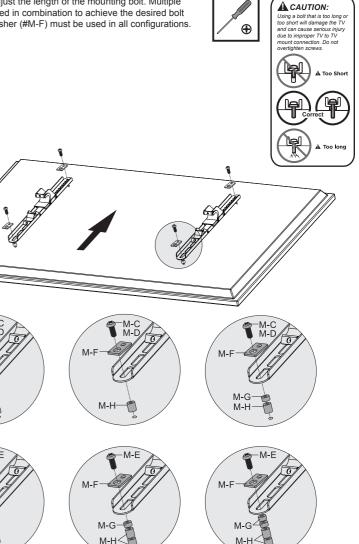

MOUNT-IT!


M-G M-G

M-F

M-H


Hanging the TV onto the Horizontal Arm

• Hang the TV on the horizontal arm as shown so that the full weight of the screen is being supported by the VESA arms. Note: It is recommended that at least two persons assist during this step.

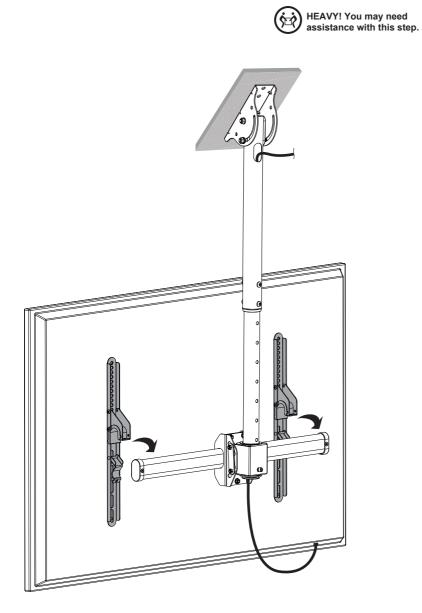

Step 8 Final Adjustments

• Re-insert the security bolts (removed in step 5) so that the TV cannot be accidentally removed from the mount.

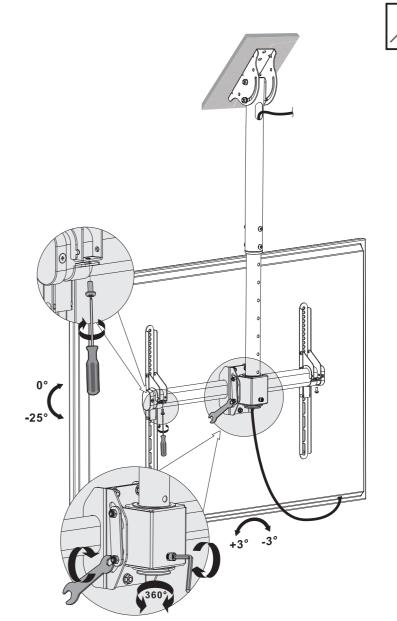

MOUNT-IT!

Visit us at **www.mount-it.com** for product registration and warranty information.

Our US based customer service team is standing by to answer any questions you have about your Mount-It! product.

Available by phone **Monday - Friday from** 8:00am to 4:00pm PST.

Chat live with an agent on our website!



support@mount-it.com



(855) 925-5668



www.mount-it.com