

Wave Outdoor Shower

Model #1055-SSB

PW-91055-2425BSS

Owner's Manual





Wave Outdoor Shower 1055-SSB / PW-91055-2425BSS

Please Read The Following Instructions COMPLETELY Before Beginning!

Our goal is to ensure your installation goes smoothly and safely. Please read these instructions carefully and follow recommendations for plumbing and mounting. After reading instructions, if you determine you do not have the necessary skills and/or tools, we recommend that a licensed plumbing contractor complete the installation.


If you encounter any problems during installation
PLEASE VISIT CUSTOMER SUPPORT AT
WWW.PULSESHOWERSPAS.COM
Before returning your Outdoor Shower to the store

You Will Need The Following tools

Soft pencil or felt pen to mark tile
5mm allen wrench
Safety glasses, Tape measure
Level
Channel locks or adjustable wrench
Drill (preferably cordless)
Masonry drill bit


Parts Legend

Ι.	rop Snower Pipe1
2.	Bottom Shower Pipe1
3.	Hose1
4.	Handshower1
5.	8mm Allen Wrench1
6.	5mm Screws4
7.	Diverter1
8.	Valve1
9.	Foot Rinse1
10.	Mounting Base1
11.	Metal Screws4
12.	Metal Anchors4
13.	Mounting Base Screws4
14.	Top Cover1
15.	Mounting Base Box1
16.	Metal Base1
17.	External Hot&Cold Connector1
18.	Level1
19.	Gasket1
20.	Unit Hot&Cold Connectors1
21.	Metal Washers4

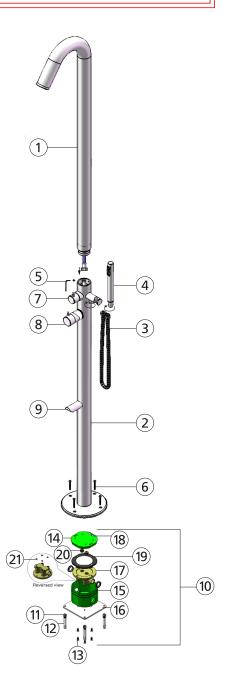


Installation Instructions



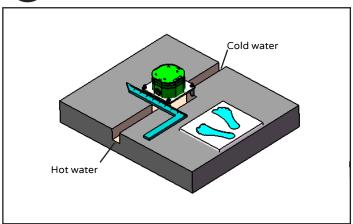


Confirm position for the mounting base (10) and standing place. Suggested distance between them is 30". Dig hole based on the mounting base (10) size.



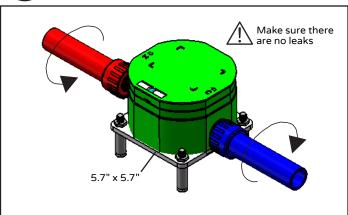


Connect hot and cold water pipes to mouting base (10).



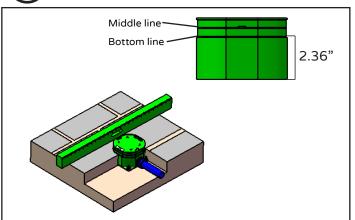


Make sure the mounting base (10) is vertical and centered to you. Tighten mounting base (10) with metal screws (11), make sure floor tile must be higher than bottom line and lower than middle line of mounting base (10).



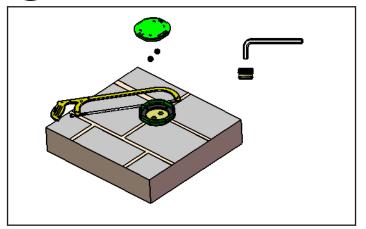


Discard mounting base cover and plugs for hot and cold water outlets. Cut the extra top part of the mounting base (10).



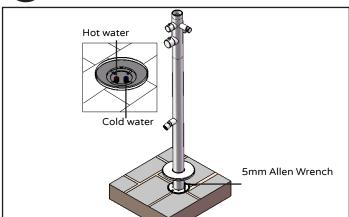

Insert bottom shower pipe (2) to the mounting base (10). Connect bottom flange to mounting base (10) with the four 5mm screws (6), then push down the bottom escutcheon.



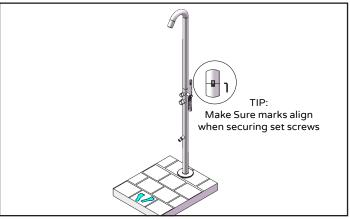

Insert top shower pipe (1) into bottom shower pipe (2). Connect hex head end of hose to swivel joint and tapered end to handshower (4). Place the tapered end of the hose into the handshower holder (9).

MANUFACTURER'S LIFETIME LIMITED WARRANTY

- 1. Defects Covered; Warranty Period: Pulse Shower Spas, Inc. ("Pulse") warrants to the original consumer purchaser who purchases this shower spa (the "Product") for use in his or her own home, that the Product will be free from defects in material and manufacturing workmanship for as long as the original consumer purchaser owns that same home. For all other purchasers (including, but not limited to purchasers for industrial, commercial and business use), the above warranty will apply for a period of 5 years from the original date of purchase.
- 2. Remedy: If the Product does not conform to the above warranty, Pulse, at its option, will repair or replace the Product, free of charge, or refund your purchase price. For warranty claims, please visit www.pulseshowerspas.com/index.php/warranty. Pulse may require that you return the Product to Pulse, shipping prepaid, in which case Pulse will provide you with a return materials authorization number (RMA). Pulse may also require that you provide evidence of the date you purchased the Product. Pulse will ship a new or repaired Product to you, at the expense of Pulse, or refund your purchase price. Service labor performed by you or others in connection with the removal or replacement of the Product will not be reimbursed by Pulse.
- 3. Exclusions: Pulse shall not be responsible for failure of the Product, and the above warranties will not apply, if the Product fails as a result of improper installation, improper use, modifications or repairs by anyone other than Pulse, or accident or abuse (including damage during shipment).
- 4. Warranty on Repairs and Replacements: For consumer purchasers who purchased the Product for home use, repaired or replacement Products will continue to be covered under this warranty for as long as he or she owns that same home. For other purchasers, repaired or replacement Products will be covered for the balance of the original warranty period.

No Other Warranties; Limitation of Liability: OTHER THAN THE LIFETIME LIMITED WARRANTY STATED ABOVE, PULSE DISCLAIMS ALL OTHER WARRANTIES EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, TO THE EXTENT PERMITTED BY APPLICABLE LAW. THE REMEDIES STATED ABOVE ARE YOUR SOLE REMEDIES IN CONNECTION WITH THIS WARRANTY. IN NO EVENT WILL PULSE BE LIABLE TO YOU FOR ANY DAMAGES, WHETHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR BUSINESS INTERRUPTION, ARISING OUT OF OR RELATING TO THE PRODUCT OR ITS USE, WHETHER UNDER A CONTRACT, WARRANTY, TORT, OR ANY OTHER CAUSE OF ACTION, EVEN IF PULSE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOTWITHSTANDING THE TERM OF ANY LIMITED OR IMPLIED WARRANTY, OR IN THE EVENT THAT ANY LIMITED WARRANTY FAILS OF ITS ESSENTIAL PURPOSE, IN NO EVENT WILL PULSE'S ENTIRE LIABILITY EXCEED THE PURCHASE PRICE OF THE PRODUCT. SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES SO THE ABOVE LIMITATION'S OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE AND PROVINCE TO PROVINCE.

