

USER

MANUAL

Preparation:

Before beginning assembly, read all warnings and safety precautions!



WARNINGS & CAUTIONS:

Warnings:

To reduce the risk of electric shock, connect pump only to a Ground Fault Circuit Interrupter (GFCI) outlet.

Do not exceed the voltage shown on the pump.

Always disconnect the pump from the power source before performing any maintenance or work on the pump, light (s) or any fountain fittings.

Inspect the power cord for damage before installation and/or maintenance. Replace the entire pump if damaged is found.

Cautions:

Use a proper power source as indicated on the pump label.

Keep the cord away from high temperatures and/or heat sources.

Do not lift the pump by its power cord.

Keep the fountain out of reach of children. Do not let the pump run dry. Pump must be completely submerged for proper operation and cooling.

Do not pump heated liquids.


Operate with freshwater only. Avoid heavily chlorinated water and water with high PH levels.

REMARK:

Please be sure that the assembly process is team works.

①

Diagram of water circulation for a whole unit fountain

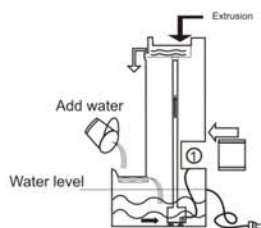

PUMP ASSEMBLY INSTRUCTIONS:

1-Remove the pump from the package and untie the power cord. Adjust the flow rate (if applicable) to the maximum position.


2-Drag out one end PVC tube from the fountain back (as shows in Fig.1) to connect with the pump. Place the pump in a desired location in the fountain. Close the cover plate (The individual product is not with any cover plate because of structure difference). Always keep the plug out.

3-Add water according to what picture shows. Make sure that water level does not exceed the front and back rock bottom.

4-Connect the power cord from the pump to a properly grounded, grounding type receptacle.

③

Diagram of water circulation for one set fountain with two pieces, by the perpendicularity links up.

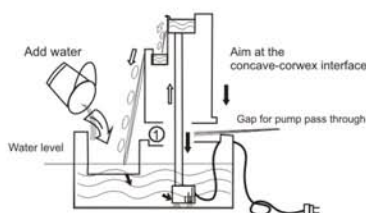

PUMP ASSEMBLY INSTRUCTIONS:

1-Remove the pump from the package and untie the power cord. Adjust the flow rate (if applicable) to the maximum position.

2-Drag out one end PVC tube from the bottom of Fountain Upright (as shown Fig.1) to connect with the pump. Place the pump in a suited location in the Fountain Cistern, and assembled the Fountain Upright on the Fountain Cistern at the same time (as what picture shows). Make sure they fitted well.

3-Add water according to what picture shows. Make sure that water level does not exceed the front and back rock bottom.

4-Connect the power cord from the pump to a properly grounded, grounding type receptacle.

④

Diagram of water circulation for twist and lock style fountain .



PUMP ASSEMBLY INSTRUCTIONS:

1-Remove the pump from the package and untie the power cord.Adjust the flow rate (if applicable) to the maximum position.Pass the power cord through the middle of the Basin and Pedestal, drag the power cord out from the hole of Pedestal bottom (as what picture shows).

2-Tighten the screws to assemble the Basin and Pedestal (as shown in Fig.1 & Fig.2).


3-Drag out one end of PVC tube from the bottom of the Fountain Upper-end to connect with the pump. Place the pump in a suited location in the Basin (as shown in Fig.2).

4- Tighten the screws to assemble the Fountain Upper-end and the Basin (as shown in Fig.2 & Fig.3)

5--Add water according to what picture shows. Make sure that water level cover the pump fitly just completely.

6-Connect the power cord from the pump to a properly grounded, grounding type receptacle.

Diagram of fountain light (s)

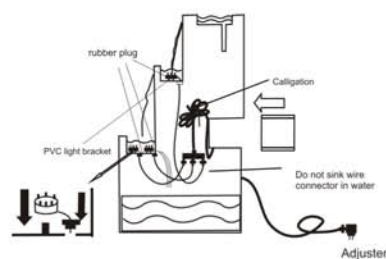

LIGHT ASSEMBLY INSTRUCTIONS:

1-If product design does not contain light , ignore this chapter please.

2-Please check accesories light(s) and wiring strategy if the product should attach any light.

3-Remove the transformer from the package.

4-Drag the light(s) cord attachment plug out the fountain, connect it to the transformer.

5- Connect the transformer to a properly grounded, grounding type receptacle.

REMARK:

6-Specifically for the fountain like page.4 , part of light sometimes attached to the Fountain Upright.First of all, please drag the light cord attachment plug out the Fountain Upright, connect it ti the light attachment Fountain Infrastructure with a black PVC connector.

LIST

Page 1. ATTENTION

Page 2. LIST

Page 3. A WHOLE UNITE FOUNTAIN.

Page 4. ONE SET FOUNTAIN WITH TWO PIECES.



Page 5. TWIST AND LOCK STYLE FOUNTAIN.


Page 6. FOUNTAIN ATTACHMENT LIGHT

Page 7. APPENDIX OF LIGHT DIAGRAM 1. & 2.


Page 8. APPENDIX OF LIGHT DIAGRAM 3. & 4.

 Page 9. APPENDIX OF FOUNTAIN EXTRUSION DIAGRAM

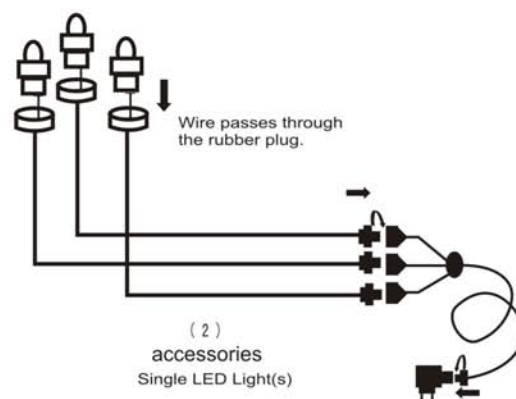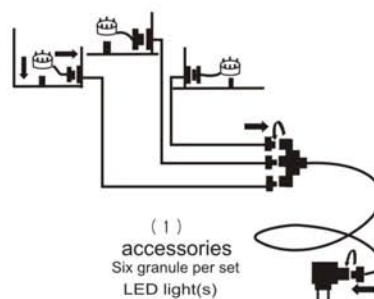




 
(1) **Great four face connection**
For great flux, three face outwater.



 
(2) **Great three face connection**
For great flux, two face outwater.



 (3) **Four face connection with adjuster**
For counterpoise water flux.(With adjuster).




 (4) **Small four face connection**
For multioiway out water.



Collgation
To bind the PVC tube with the pump.
Ensure that link up tight.

⑨

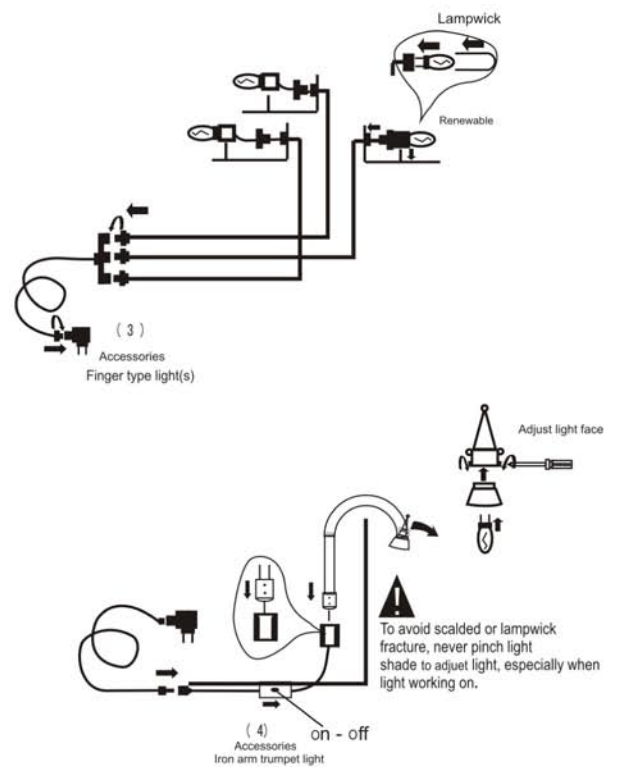

⑧