


OPERATING INSTRUCTION

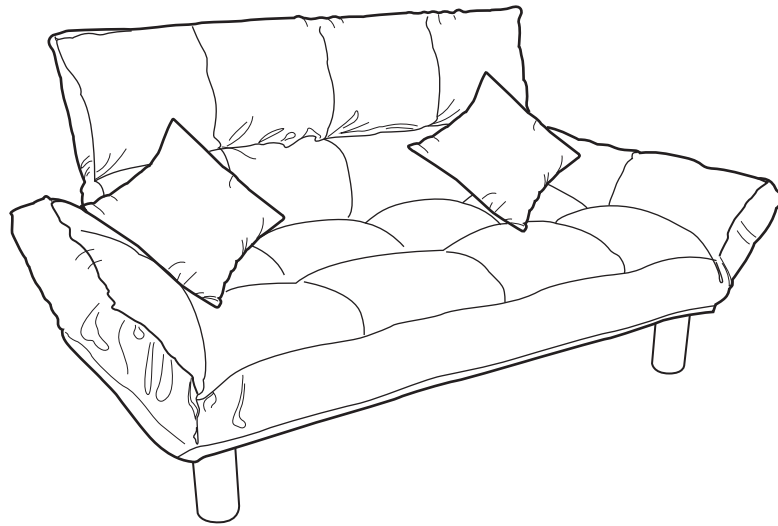

The backrest position and the armrest position can be adjusted in five levels

