 
 


PLEASE READ THE INSTRUCTIONS

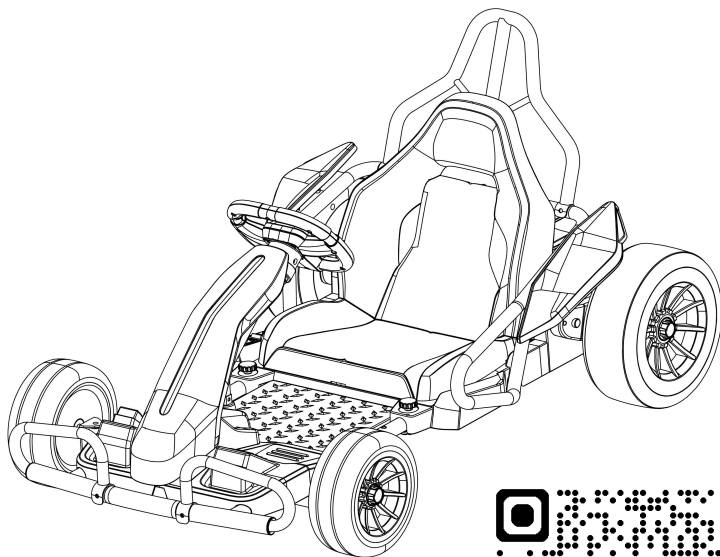

Styles and colors may vary

- ◎ Suitable age for 6 Years +
- ◎ Maximum user weight: 59 kg
- ◎ Adult assembly required

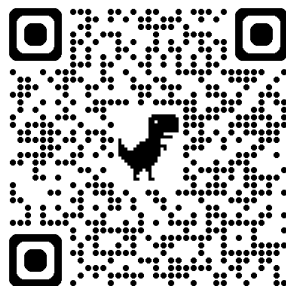

Installation video

**INSTRUCTION
MANUAL
MADE IN CHINA**



Charge for 8–12 hrs
before initial use.

After initial charge,
follow the normal
recommended
Charging time.



SAFETY

Please retain these instructions for future reference.

NOTE:For best performance, only use this vehicle on flat and hard surfaces.

AGE RANGE:6 years +

WEIGHT CAPACITY:59KG is the maximum weight for 1 rider(combined)

The following safety hazards may result in serious injury or death:

- This product contains small parts.Keep children away during assembly.Make sure to remove all packaging material and parts from underneath the vehicle body.
- Never open the battery.Batteries contain lead and lead compounds(acids).
- Limbs, hair, and clothing can get caught in moving parts.Always wear shoes, keep limbs away from moving parts, and do not wear loose clothing while operating this vehicle.
- This vehicle does not have brakes or braking capability.Do not leave a child unattended during operation.Do not use this in a location that may require braking capability.as this could result in loss of control, which may cause serious injury or death.
- Use of this vehicle near streets, motor vehicles, steps, bodies of water, sloped surfaces, hills, wet areas, flammable vapors, in alleys, at night, or in the dark could result in an unexpected accident.
- Use of this vehicle in unsafe conditions such as snow, rain, loose dirt, mudsand, or gravel may result in an unexpected accident such as tipping over, and could damage the electrical system or battery.
- Do not operate this vehicle in an unsafe manner.Examples include but are not limited to:
 - pulling the vehicle with another vehicle or similar device
 - Allowing more than two children to ride
 - Pushing the user
 - Traveling at an unsafe speed
- The battery charger used with the electric toy shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it shall not be used until the damage has been repaired.

BATTERY WARNINGS

The following safety hazards may result in serious injury or death:

- Use of a battery or charger other than the supplied rechargeable battery and charger may cause a fire or explosion. Only use the supplied battery and charger.
- Use of the rechargeable battery and charger for any other product may result in overheating, fire, or explosion. Never use the supplied rechargeable battery and charger with another product.
- Explosive gases are created during charging. Charge the battery in a well-ventilated area. Do not charge the battery near heat or flammable materials.
- Contact between the positive and negative terminals may result in fire or explosion. Avoid direct contact between the terminals. Picking up the battery by the wires or charger can cause damage to the battery and may result in a fire. Always pick up the battery by its case or handles.
- Liquids on the battery may cause fire or electric shock. Always keep all liquids away from the battery and keep the battery dry. Contact or exposure to battery leakage (lead acid) may cause serious injury. If contact or exposure occurs immediately call your physician. If the chemical is on the skin or in the eyes, flush with cool water for 15 minutes. If the chemical was swallowed, immediately give the person water or milk. Do not give water or milk if the patient is vomiting or has a decreased level of alertness. Do not induce vomiting.
- Battery posts, terminals, and related accessories contain lead and lead compounds (acid).
- Tampering or modifying the electric circuit system may cause a shock, fire or explosion and permanently damage the system. Exposed wiring and circuitry in the charger may cause electric shock. Always keep the charger housing closed.

USER WARNINGS


The following safety hazards may result in serious injury or death:

- Never leave a child unattended.
- Always sit in the seat when using this vehicle.
- Keep your hands, hair, and clothes away from moving part.
- Always wear shoes when operating this vehicle.
- Maximum of two children are allowed in the vehicle at a time.
- Children under 3 years of age cannot use the vehicle.
- Only drive on level ground.
- Do not go near swimming pools or other bodies of water, drop-offs, or up and down steep inclines.
- Do not drive the vehicle into loose dirt, mudsand, fine gravel, or on wet surfaces.
- Do not drive the vehicle on streets or near cars.

SPECIFICATIONS

Item	Specification
Batteries	24V10AH
Motor	24V
Age	6 years +
Max Weight	59KG
Dimension	112*75*60.5CM
Speed	7-12km/hr (24V)
Play Time	1-2 hours / recharger time 8-12hours
Charger	Output DC 2 4 V

 TOOLS REQUIRED



SCREWDRIVER
(BRING YOUR OWN)



M10 WRENCH
(PROVIDED)



M8/M5 WRENCH
(PROVIDED)



2 PERSON
ASSEMBLY



APPROXIMATELY
45 MIN.
ASSEMBLY

HARDWARE

1

M4*12mm SCREW



10 PCS

2

φ 12 GASKET



6 PCS

3

M5 NUTS



9 PCS

4

M5*10mm SCREW



3 PCS

5

M8*82mm
SCREW



2 PCS

6

φ 10 GASKET



1 PCS

7

M8 NUTS



2 PCS

8

φ 8 GASKET



2 PCS

9

M5*20mm SCREW



1 PCS

10

φ 16 GASKET



1 PCS

11

M5*45mm SCREW



2 PCS

12

M5*35mm SCREW

 


3 PCS

PARTS

A


FRONT WHEEL

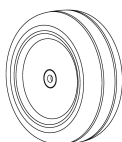

2 PCS

B

 REAR WHEEL



2 PCS

C

STEERING WHEEL



1 PCS

D

FRONT FACE



1 PCS

E

CUSHION



1 PCS

F

 
TURN SEAT



1 PCS

G

STEERING
BRACKET



1 PCS

H

 
REAR AXLE



1 PCS

I

WHEEL COVER



4 PCS

J

CHARGER



1 PCS

K

 
TURN SIGNAL
LEVER



1 PCS

L


CRASH BAR



2 PCS

M

 BACKREST



1 PCS

 
N

REAR WHEEL
COVER (H/L)




2 PCS

As shown in the figure: Insert the steering seat into the corresponding hole on the vehicle body.

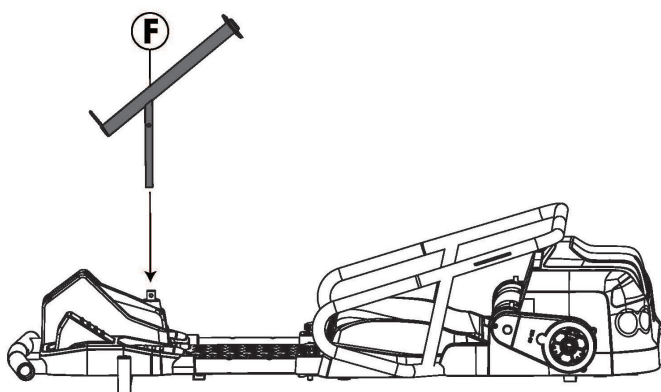


PRODUCT ASSEMBLY

 As shown in the figure: first fix it with M4 * 12 screws, then fix it with M5 * 20screws and M5 nuts.

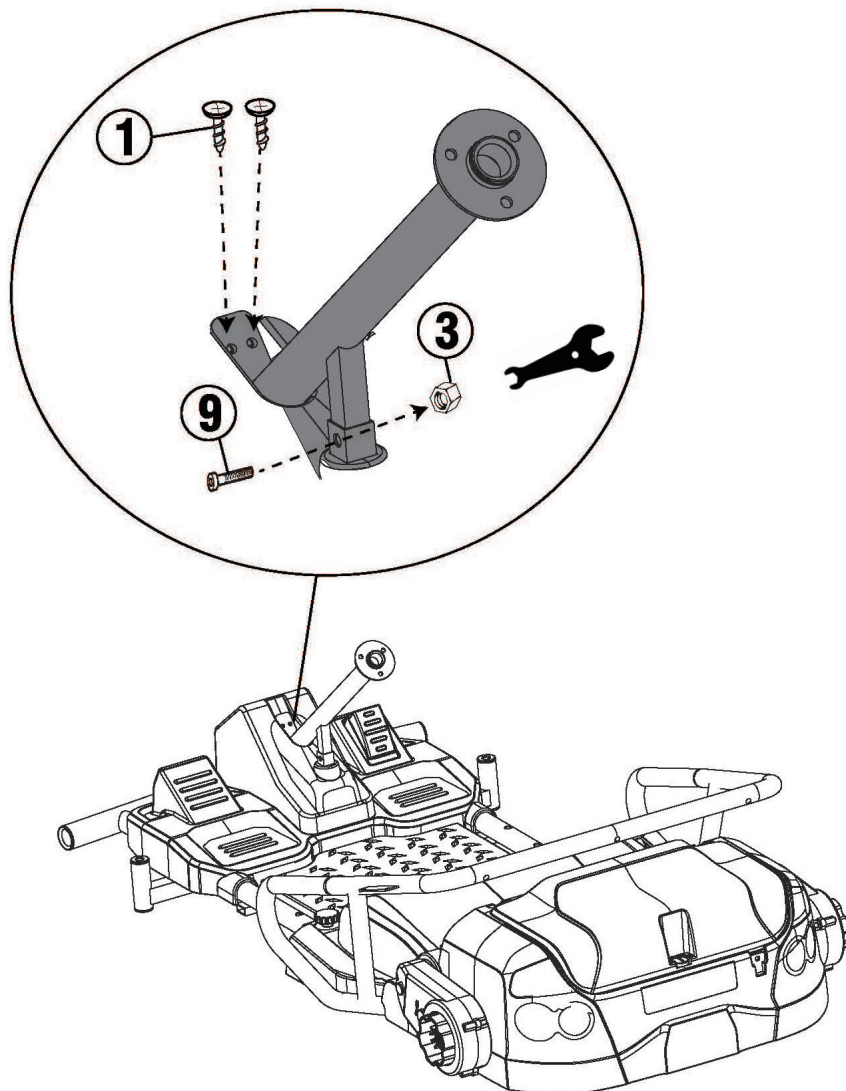


 As shown in the figure: first insert the $\phi 16$ gasket into the steering rod, and then insert the steering rod into the body hole position.

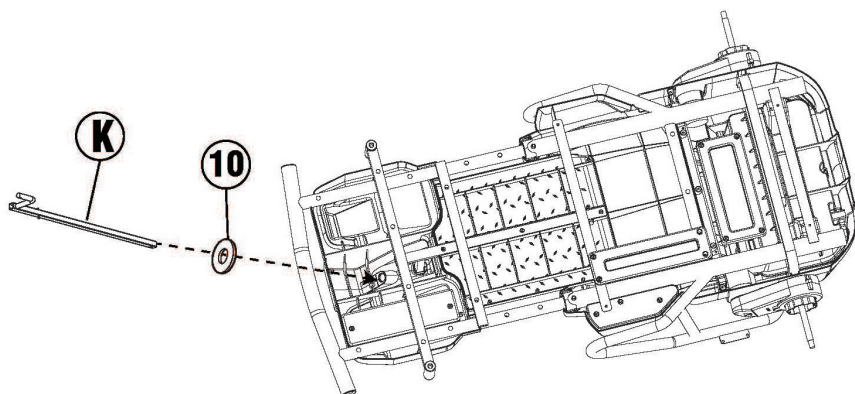


PRODUCT ASSEMBLY

 As shown in the figure, first place the gasket with a diameter of 10 into the steering hook, and then insert the steering bracket into the corresponding hole of the vehicle body.

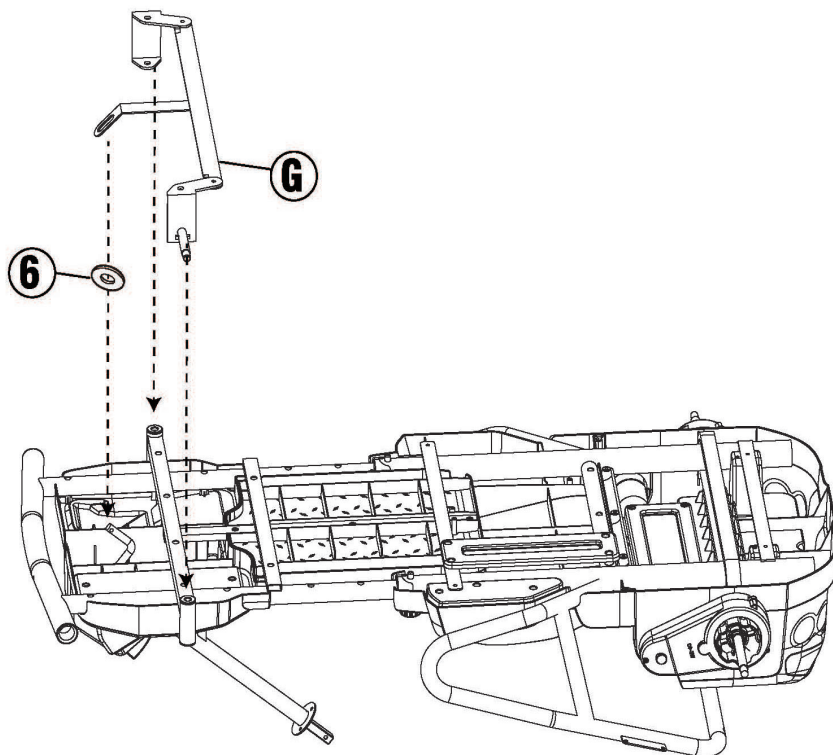


PRODUCT ASSEMBLY

 As shown in the figure: Insert the M8 * 82 screw into the steering bracket and fix it with the M8 nut, using the same installation method on both sides.

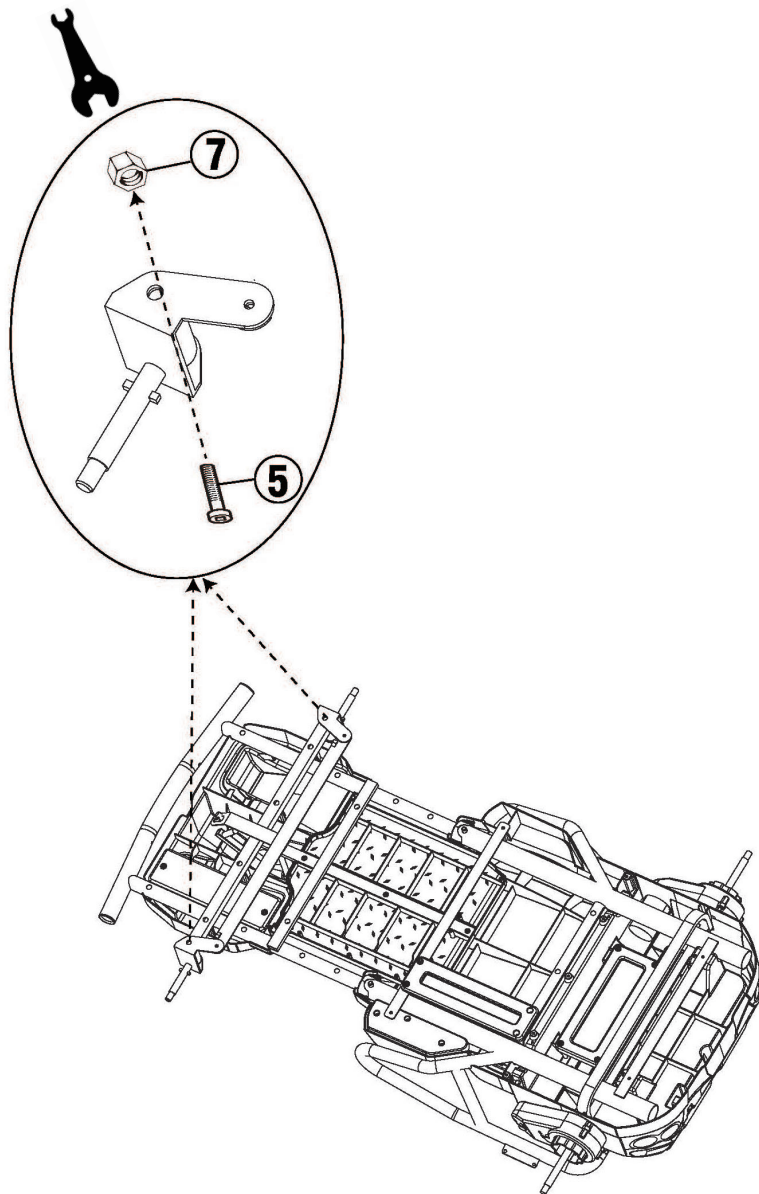


PRODUCT ASSEMBLY

 As shown in the figure: Insert the front face into the corresponding hole of the vehicle body.

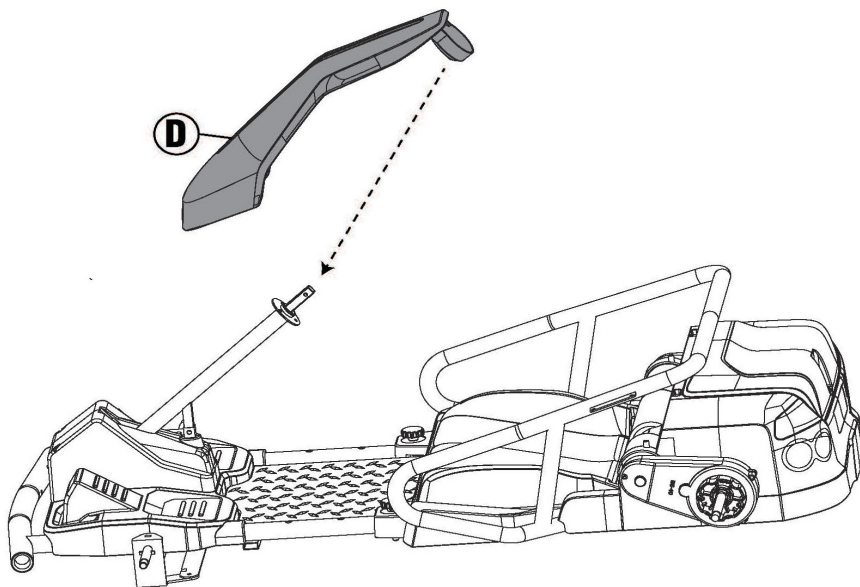


 As shown in the figure: fix the M5 * 10 screw and M5 nut.

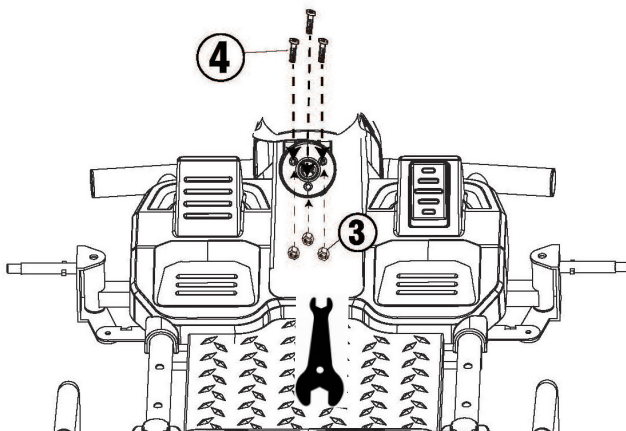


PRODUCT ASSEMBLY

 
As shown in the picture: Flip the car body and fix the front face with M4 * 12 screws.

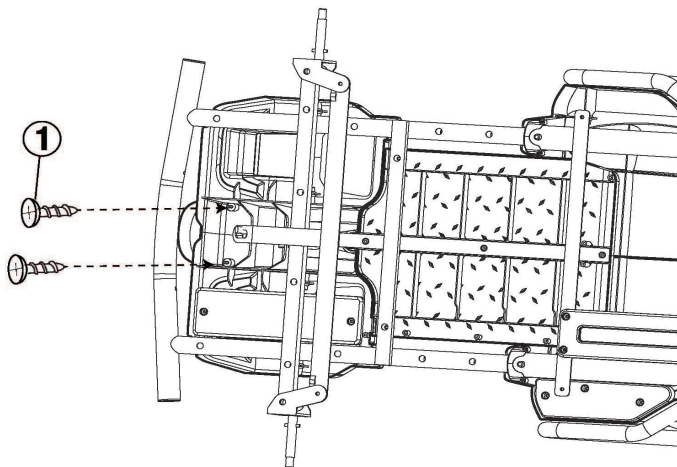

 As shown in the figure: Remove the pre installed nut first Insert the rear axle into the body hole position.

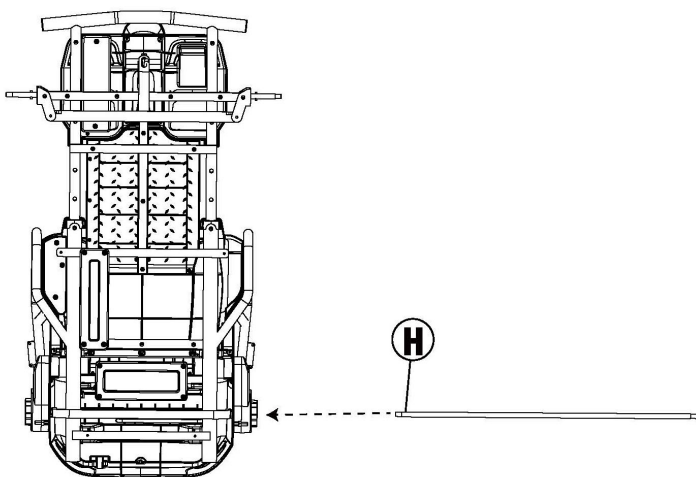


 As shown in the figure: Place the rear wheel cover in the corresponding hole and fix it with screws.

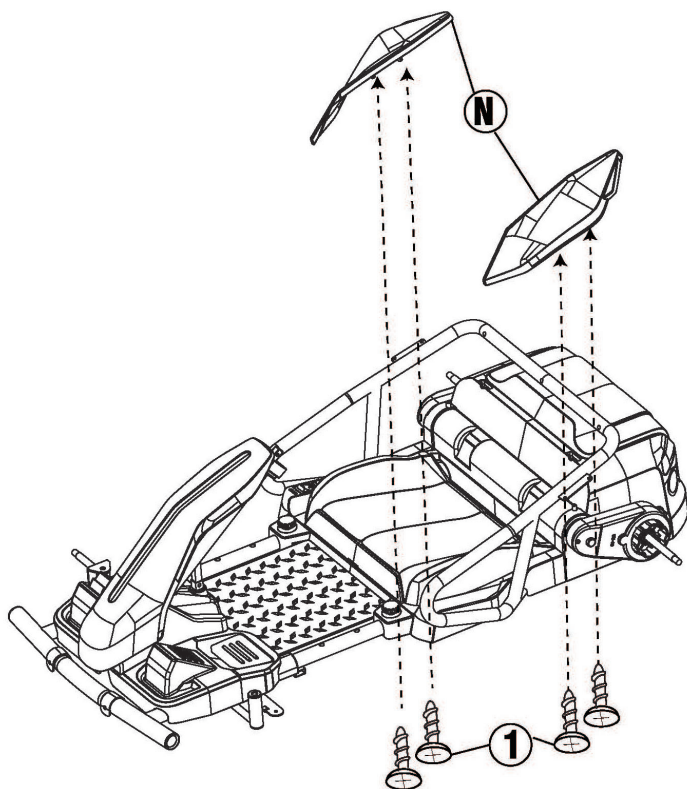

PRODUCT ASSEMBLY

 
As shown in the figure: first remove the pre installed nut, then sequentially fix the $\phi 12$ washer, front wheel, $\phi 12$ washer, and pre installed nut with a wrench, and then fix the wheel cover.

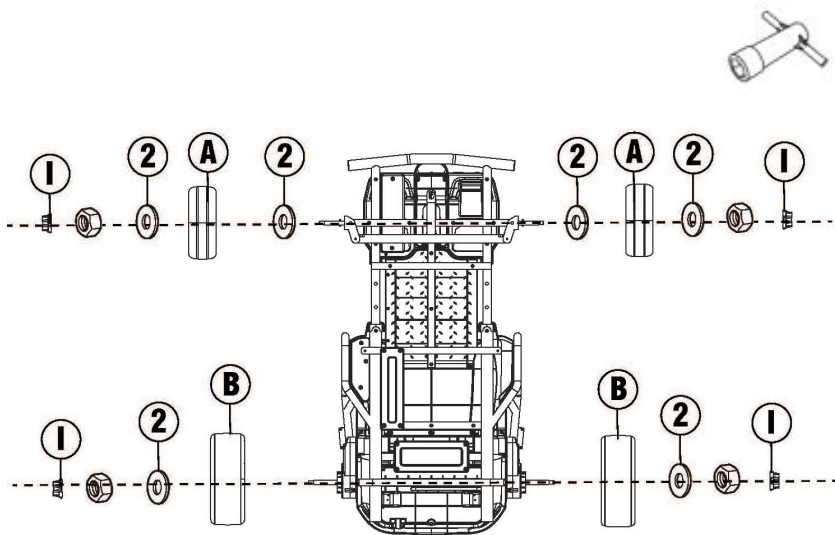

As shown in the figure: Fix the rear wheel, the $\phi 12$ washer, and the pre installed nut with a wrench in sequence, and then fix the wheel cover.


DASHBOARD DIAGRAM

 As shown in the figure: first remove the pre installed screws and nuts, insert them into the body holes, and fix them with the removed screws and nuts.


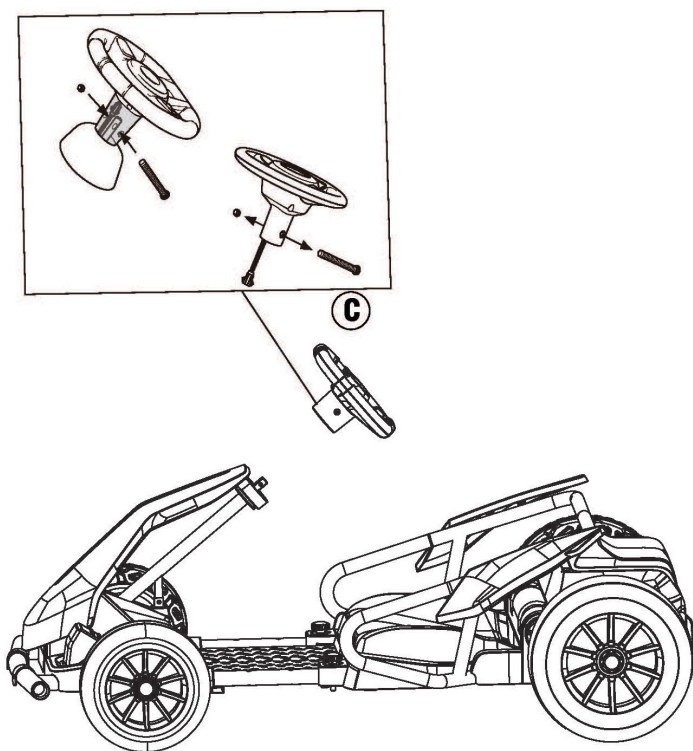


Install steering wheel battery.

 - With a screwdriver remove the screw on the battery cover located in the center of the steering wheel.
- Remove the battery cover from the top of the battery compartment.
- Insert 2x1.5 AA batteries (not included) in their correct polarities.
- Place the battery cover over the battery compartment and fasten with the screw you removed in step one.

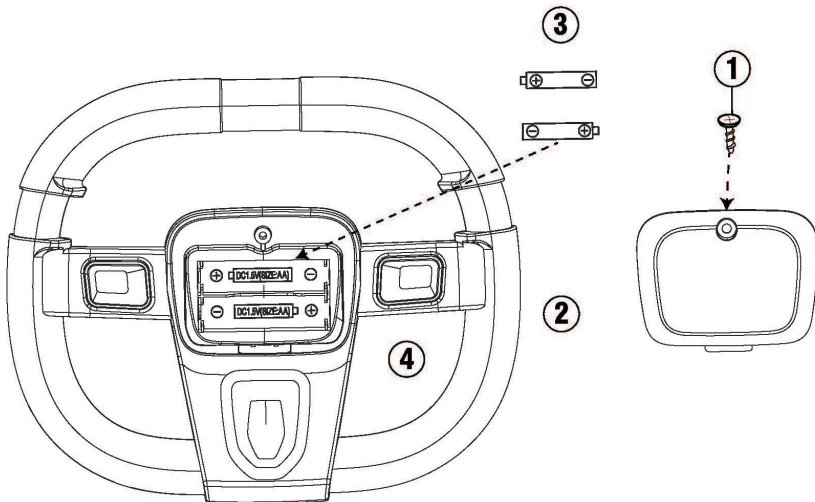


  As shown in the figure: Place the bumper and backrest into the corresponding body holes and fix them with screws.

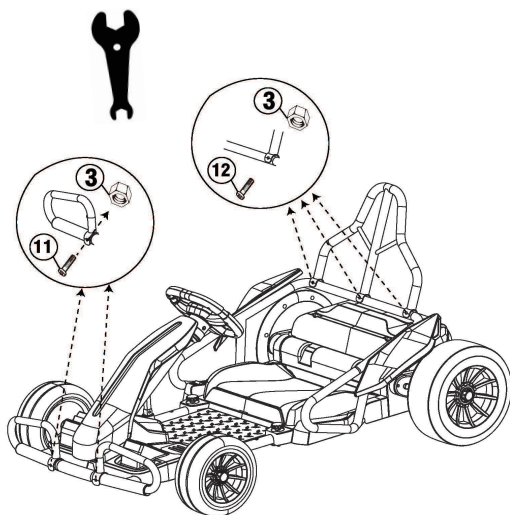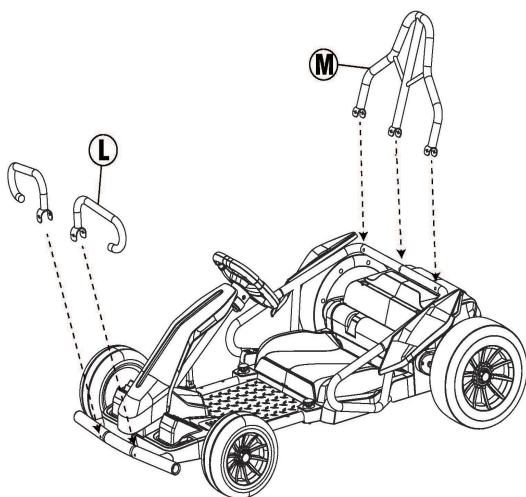



DASHBOARD DIAGRAM

 As shown in the picture: Insert the seat cushion into the body hole and fix it with M4 * 12 screws.

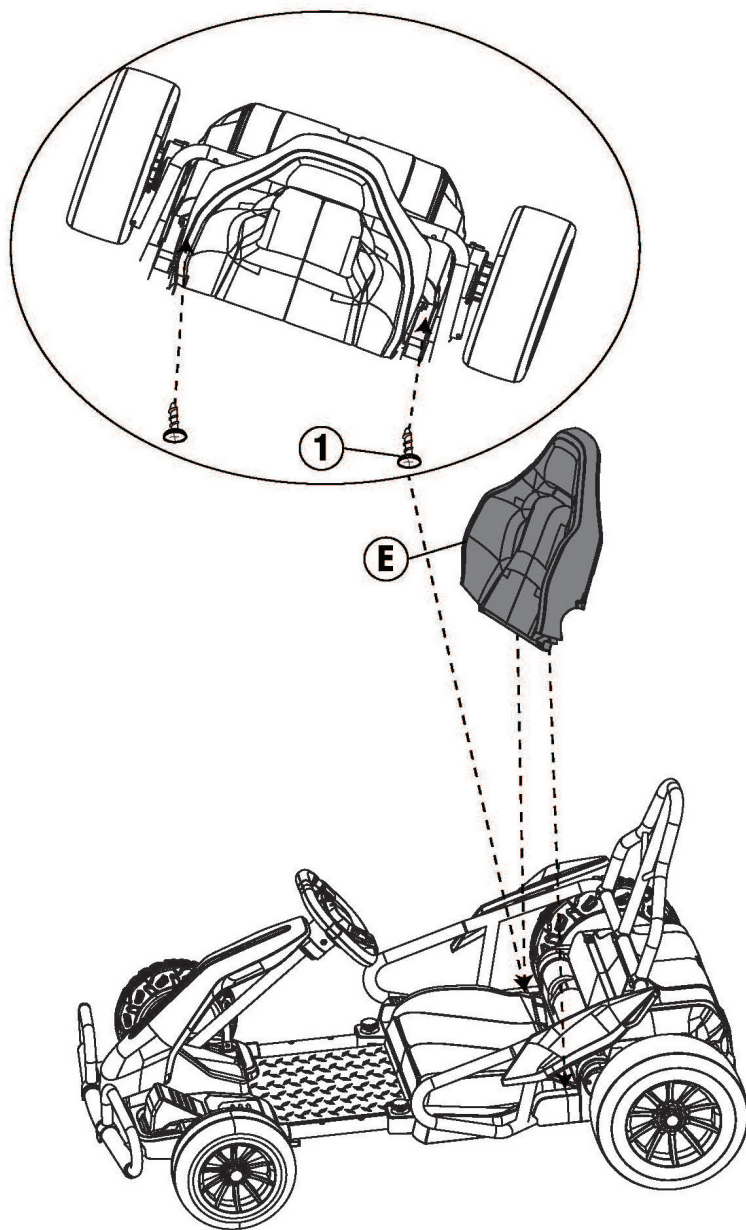


DASHBOARD DIAGRAM

  As shown in the picture: Use a tool to open the knob
and remove the cover.

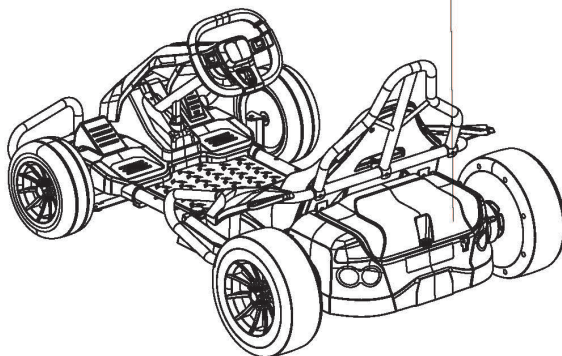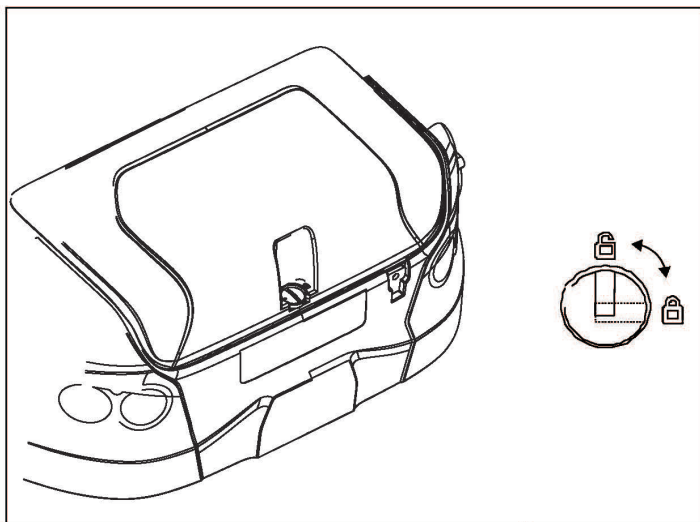


DASHBOARD DIAGRAM

 As shown in the figure: After removing the cover, find the connection wire between the battery and the controller and connect them. After the docking is completed, install the lid again.


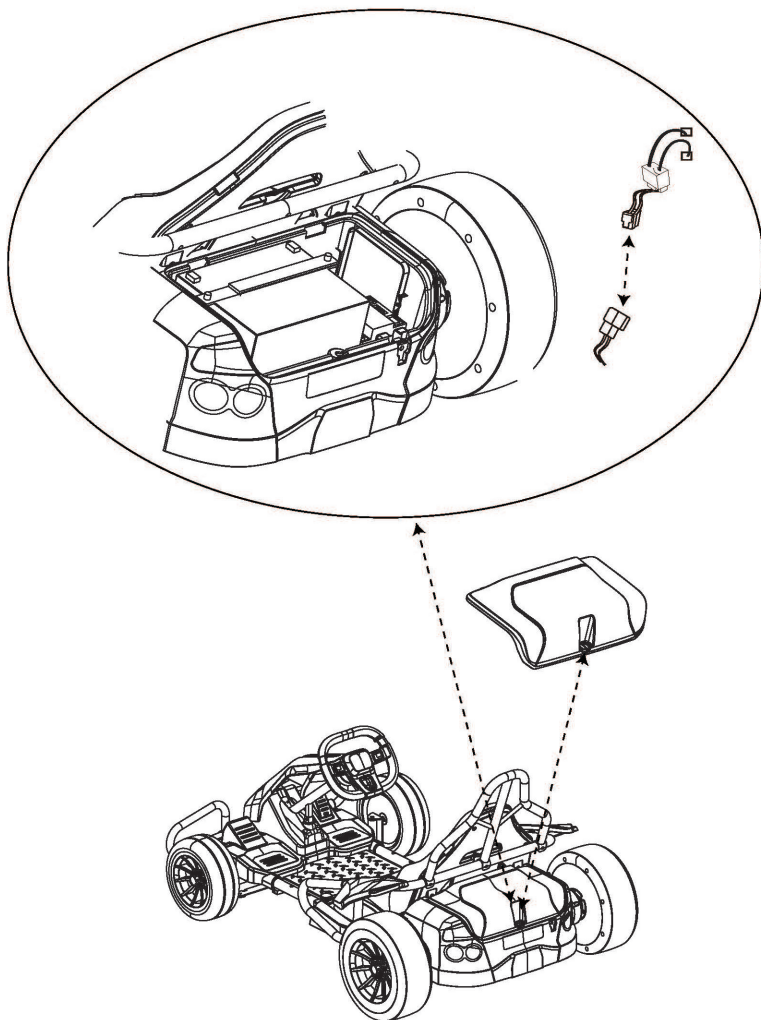


DASHBOARD DIAGRAM

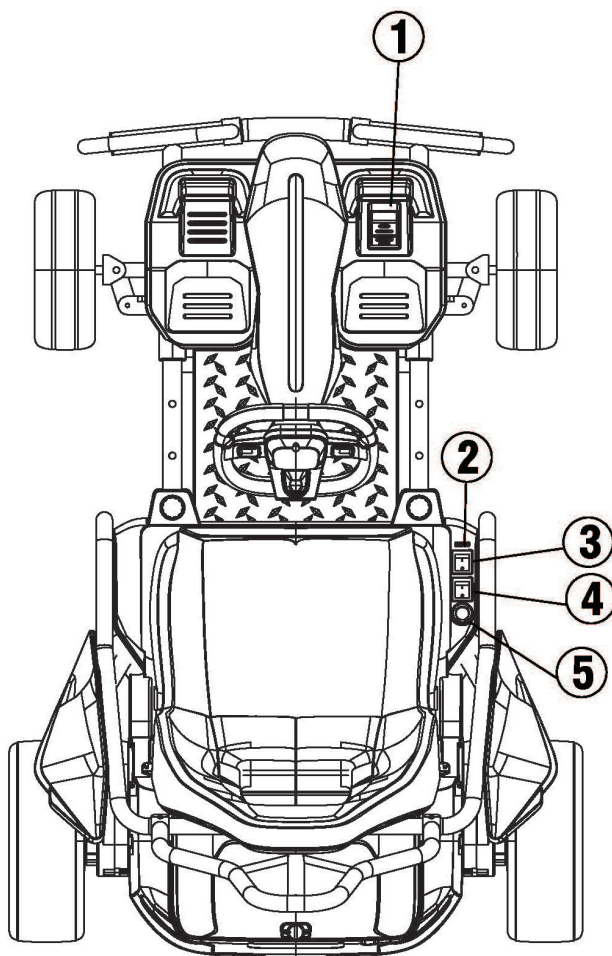 

1. Foot Switch
2. Battery Level Display
3. Forward / Reverse Switch
4. High / Low Speed Switch
5. Power Switch

  CHARGING INSTRUCTIONS

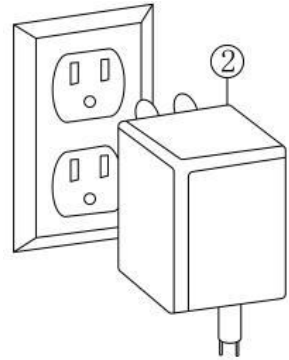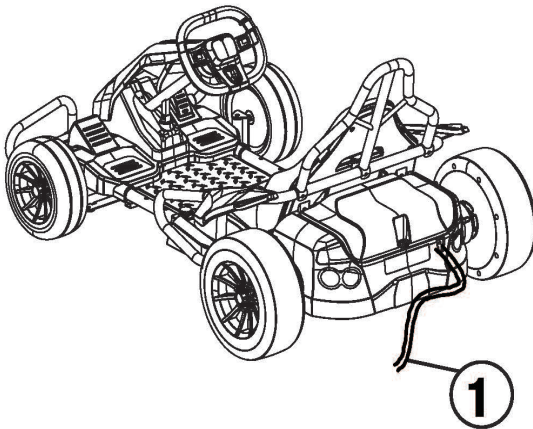

1. Insert the charger jack into the charging hole of the car.
 2. Plug the charger plug into the stable matching AC power supply as shown in the picture.
- Charge the battery 8 to 12 hours before initial use.
 - On average, you will need to charge the battery between 8 and 12 hours. Do not charge the battery for more than 20 hours. Failure to charge the battery as directed could cause permanent damage to the battery and void the warranty.
 - Damage to the battery may occur if it is allowed to drain completely. Do not allow the battery to drain completely.
 - Check the battery and charger (supply cord, connector) for wear and damage before charging. Do not charge the battery if damage has occurred.
 - Only an adult who has read and understood the safety warnings should handle, charge and recharge the battery.

CARING FOR YOUR RIDE-ON

- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Do not leave the vehicle in the sun for long periods of time or fading may occur.
Store in shade or cover with tarp.
- Do not wash the vehicle with a hose.
- Do not wash the vehicle with soap.
- Charge battery at least once a month to prolong the life of the battery.

TROUBLESHOOTING

PROBLEM	REASON	SOLUTION
Vehicle does not move	Low battery	Fully charge the battery
	Electrical protection	Stop use for several minutes and restart
	Switch not in the correct position	Completely press in switches
	Battery connectors disconnected	Plug in battery connectors
Battery does not recharge	Battery connectors disconnected	Plug in battery connectors
	Charge not connected to socket or outlet	Completely plug in the charger
Battery does not last	Battery does not have a full charge	Fully charge the battery
Battery is warm and makes a slight noise while charging	Normal	Normal
Slow speed	Low battery	Fully charge the battery
	Overloaded vehicle	Reduce the weight on the vehicle
	Uneven or sloped road	Drive on flat pavement
Vehicles shakes while driving	Loose connection to motor	Ensure the motor is properly connected to the battery
Difficulty shifting between forward/reverse	Attempting to shift while vehicle in motion	Only shift when the vehicle is at a stop
Forward and reverse switch is flipped	Gear boxes are installed incorrectly	Make sure the L gear box is on the left and R gear box is on the right

WARNINGS REGARDING BATTERIES

The battery on the vehicle is not replaceable.

- Do not mix old and new batteries.
Do not mix alkaline, standard(carbon-zinc), or rechargeable batteries.
- Non-rechargeable batteries should not be charged.
- Rechargeable batteries should be charged under adult supervision only.
- Exhausted batteries should be removed.
- The supply terminals should not be short-circuited.
- Do not put batteries next to or in a heat source(fire, electronic heating device,etc.)
- Do not hit batteries against hard objects.
- Do not submerge batteries in water.
- Batteries should be inserted with the correct polarity.
- Only use the battery specified by the manufacturer.
- Only use the charger specified by the manufacturer.



WARNING:

- Protective equipment should be worn. Not to be used in traffic.
- The toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
- To reduce the risk of injury, adult supervision is required. Never use in roadways. near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than 1 rider.



WARNING: ADULT ASSEMBLY REQUIRED



WARNING: Not to be used in traffic



WARNING: CHOKING HAZARD-Small parts.

Not for children under 3yrs.

IMPORTANT

- Always charge battery for a FULL 18hrs the first time you use it.
- Always charge battery for a FULL 10hrs after each use.
- Charge the battery once a month. even if you are not using your vehicle.

FCC Statement

Caution:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference. (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.