 
 


ASSEMBLY INSTRUCTIONS

TV STAND

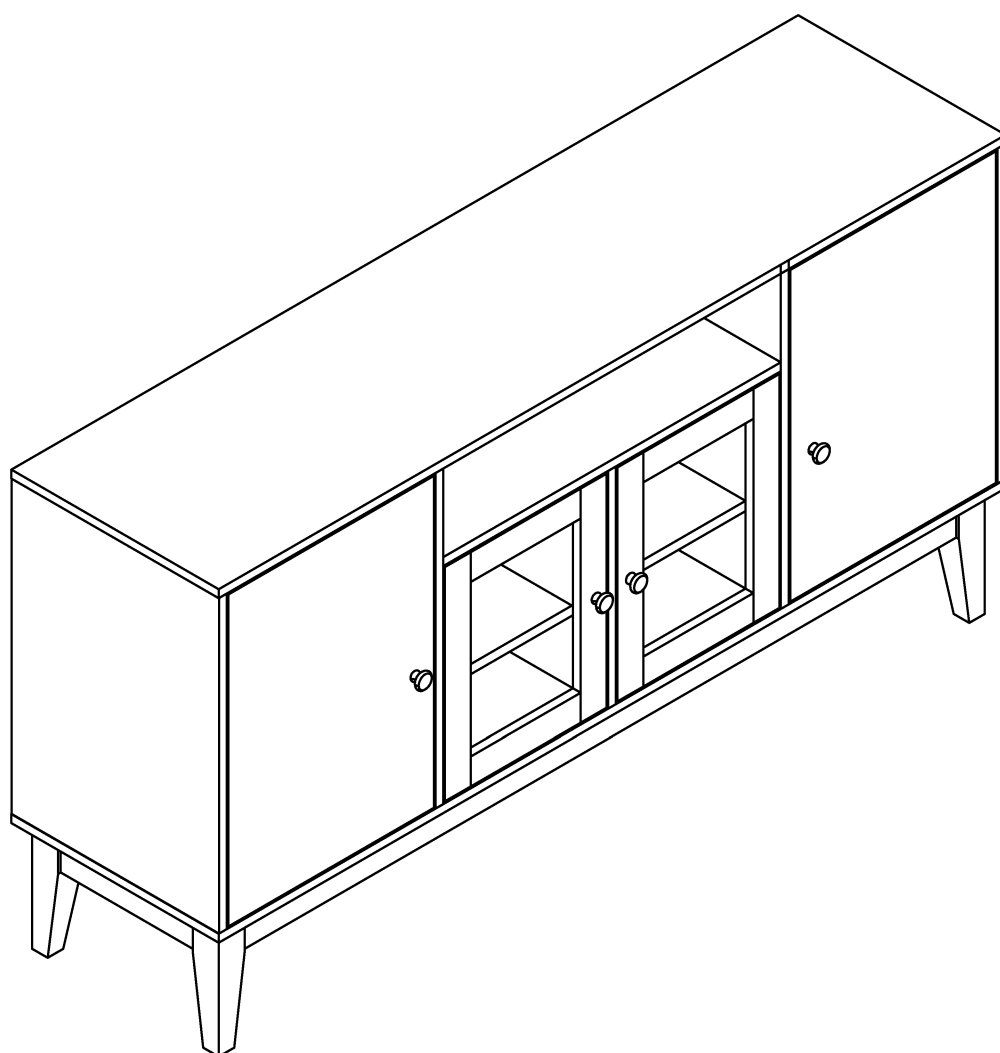 


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)

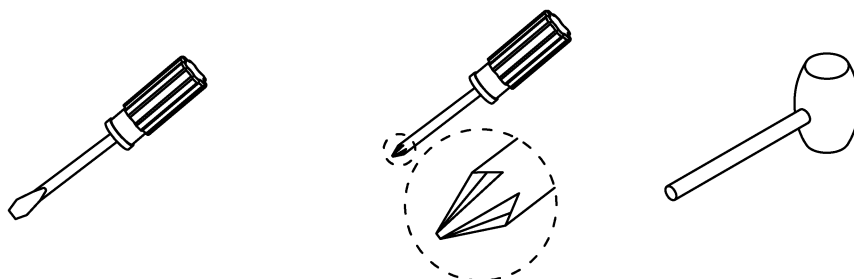


WOODEN DOWEL INSTALLATION PROCEDURE

Gently tap dowel into hole with rubber mallet













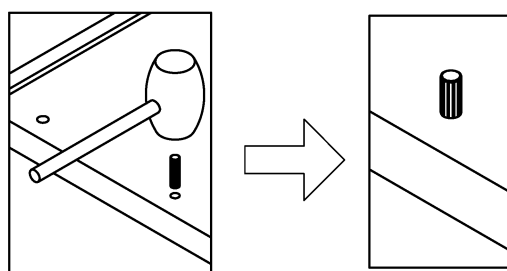


 HIDDEN CONNECTOR.....ASSEMBLY TECHNIQUES

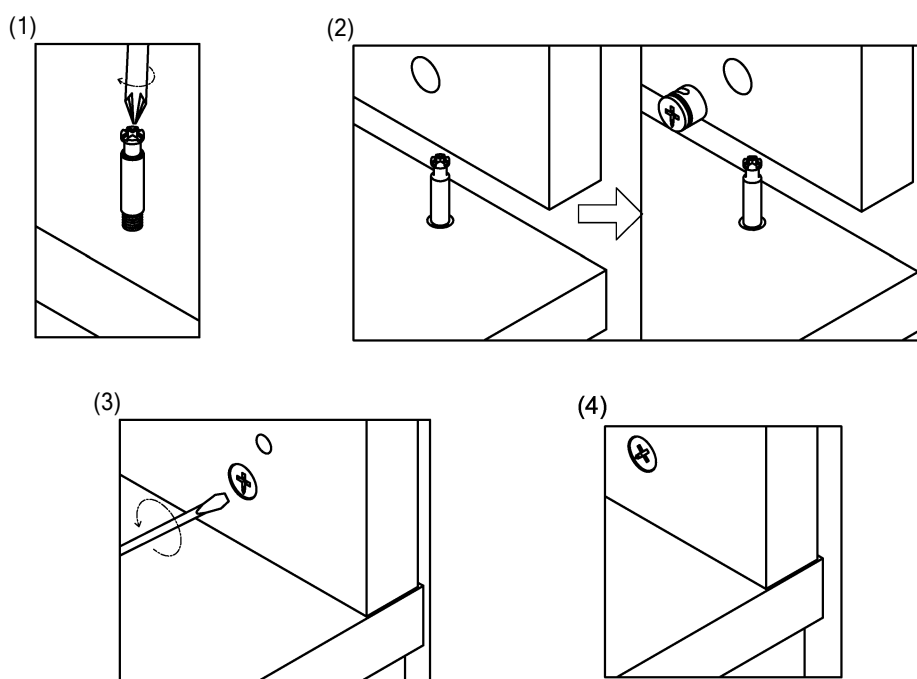


PARTS LIST

             A Carton part list

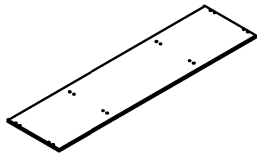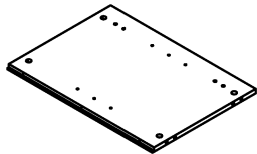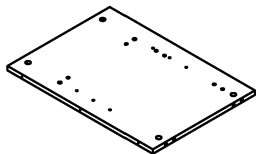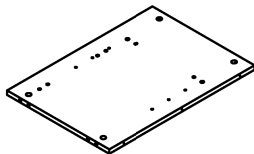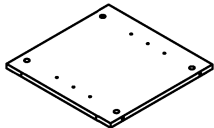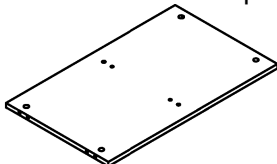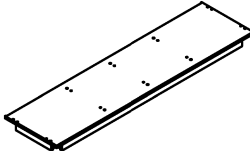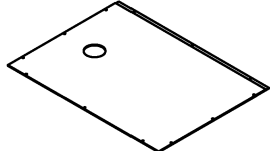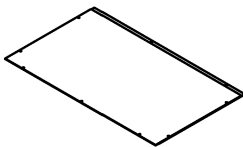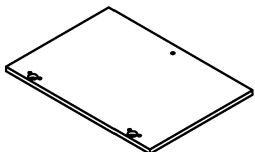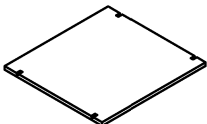A:Top panel 1 pc 	B:side panel 2 pc 	c:Left mid panel 1 pc 	D:Right mid panel 1 pc 
E:Partition 1 pc 	F: Fixed Shelf 1 pc 	G: Bottom panel 1 pc 	t Left Back panel 2 pc 
H: Mid Back panel 2 pc 	J: side door 2 pc 	K: mid door 2 pc 	L: side adjustable shelf 2 pc 
M: Mid adjustable shelf 2 pc 	N: leg 4 pc 	HARDWARE PKG 1 pc IA 1 pc	


PARTS LIST

 HARDWARE LIST

1:Cam lock 24pcs  015*11.5	2:Cam bolt 24 pcs  06*35	3:Wood plug 24 pcs  08*30	4.Shelf support pin 16pc  08x5x16
5:Pull knob 4 pcs  024*21	6:Screw 4 pcs  04x18	7:Wood screw 34 pcs  03.0*12	8: Glue tube 3pc 
9.Hinge 8pcs  026	1a.Screw 32pcs  04.0*12	11.Sticker 20 pcs  	12.Hexagon socket key 1pcs 
13.Spring washer 8pcs  	14.Washer 8pcs  	15.Bolt 8pcs  M6.0*40	16.Touch-up marker 1pcs 


Step 1

2		1 pcs
3		8 pcs
14		8 pcs
15		1 pcs

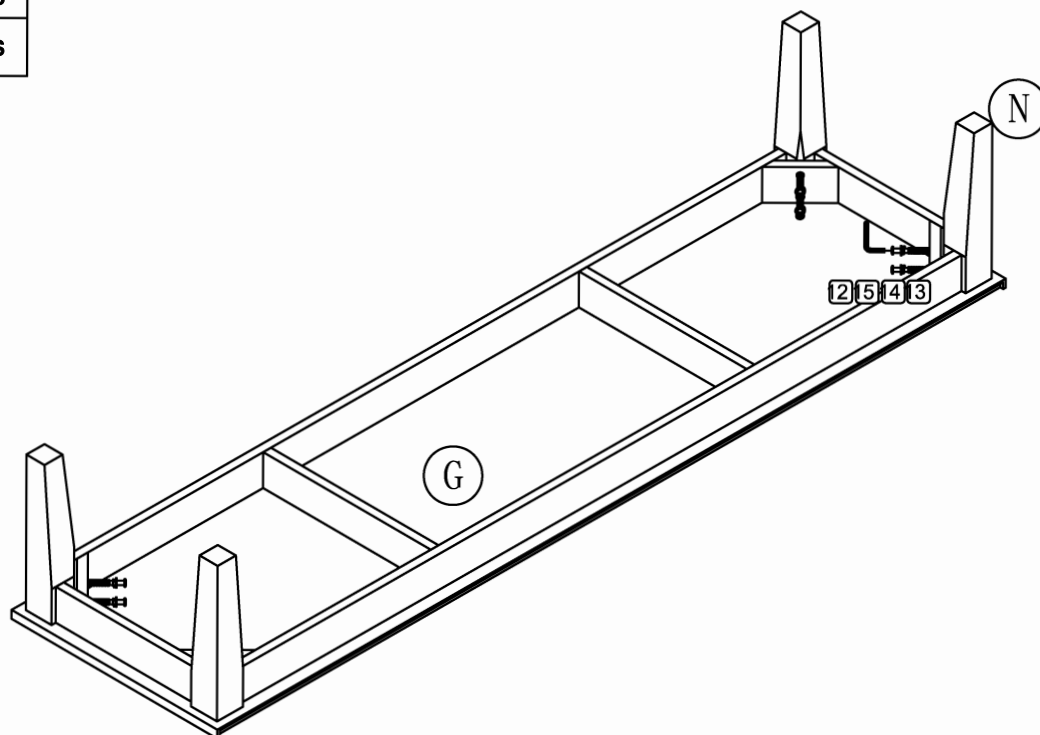 


Step 2

2		10 pcs
---	---	--------

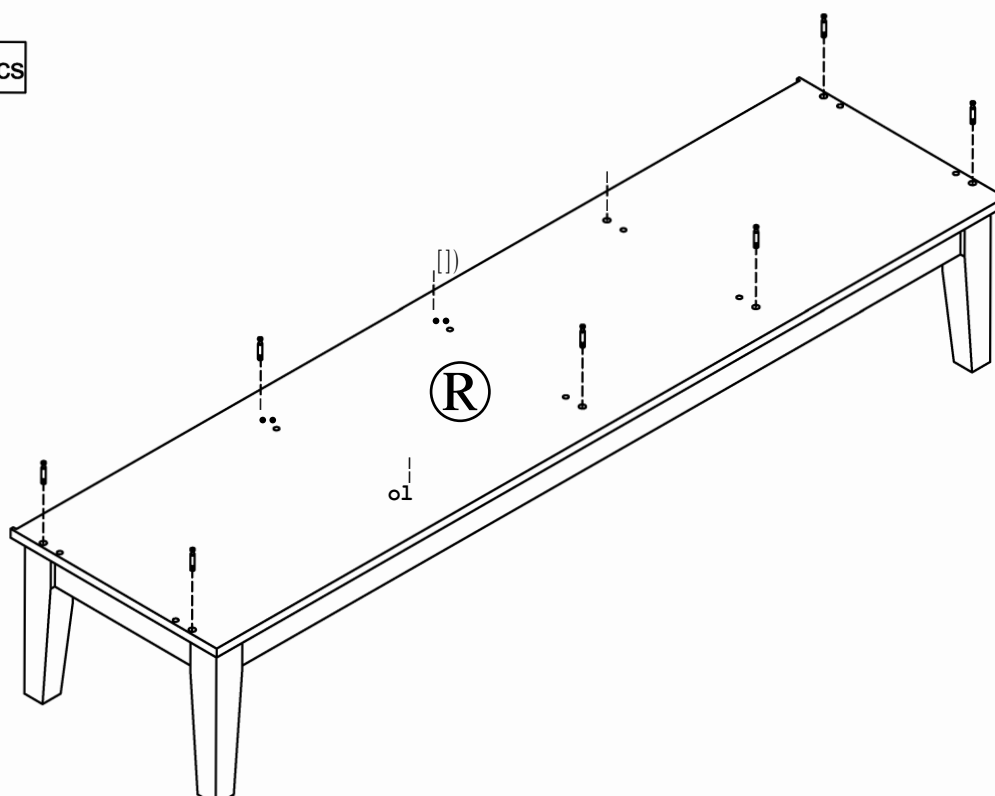 


Step 3

2:		4 pcs
3:		16 pcs

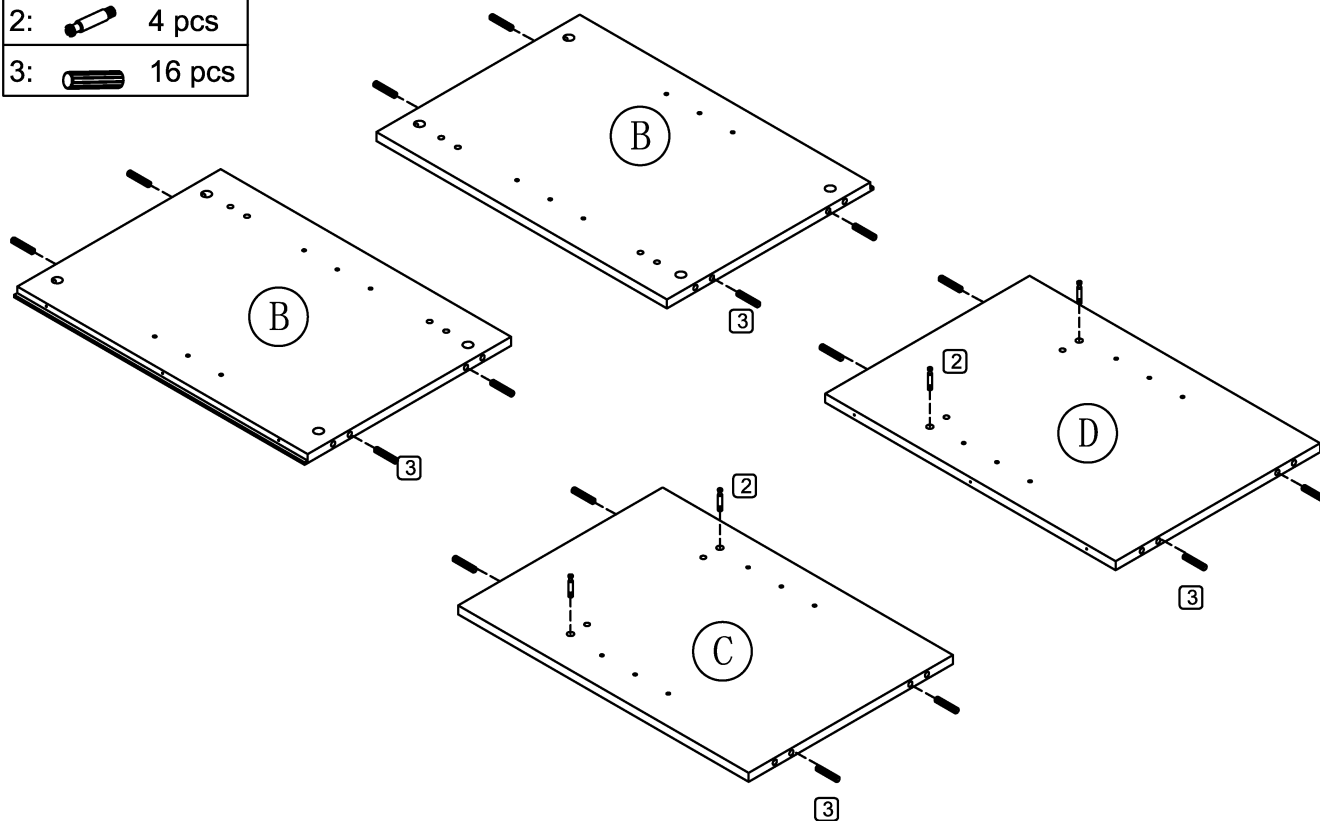 


Step 4

2:		2 pcs
3:		4 pcs

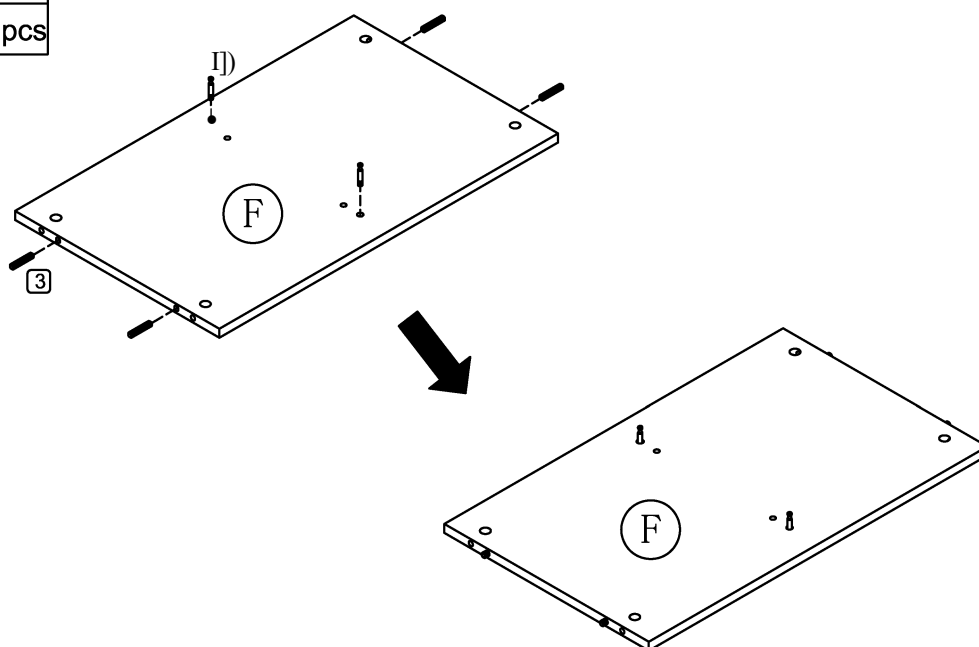 


Step 5

 2:  8 pcs

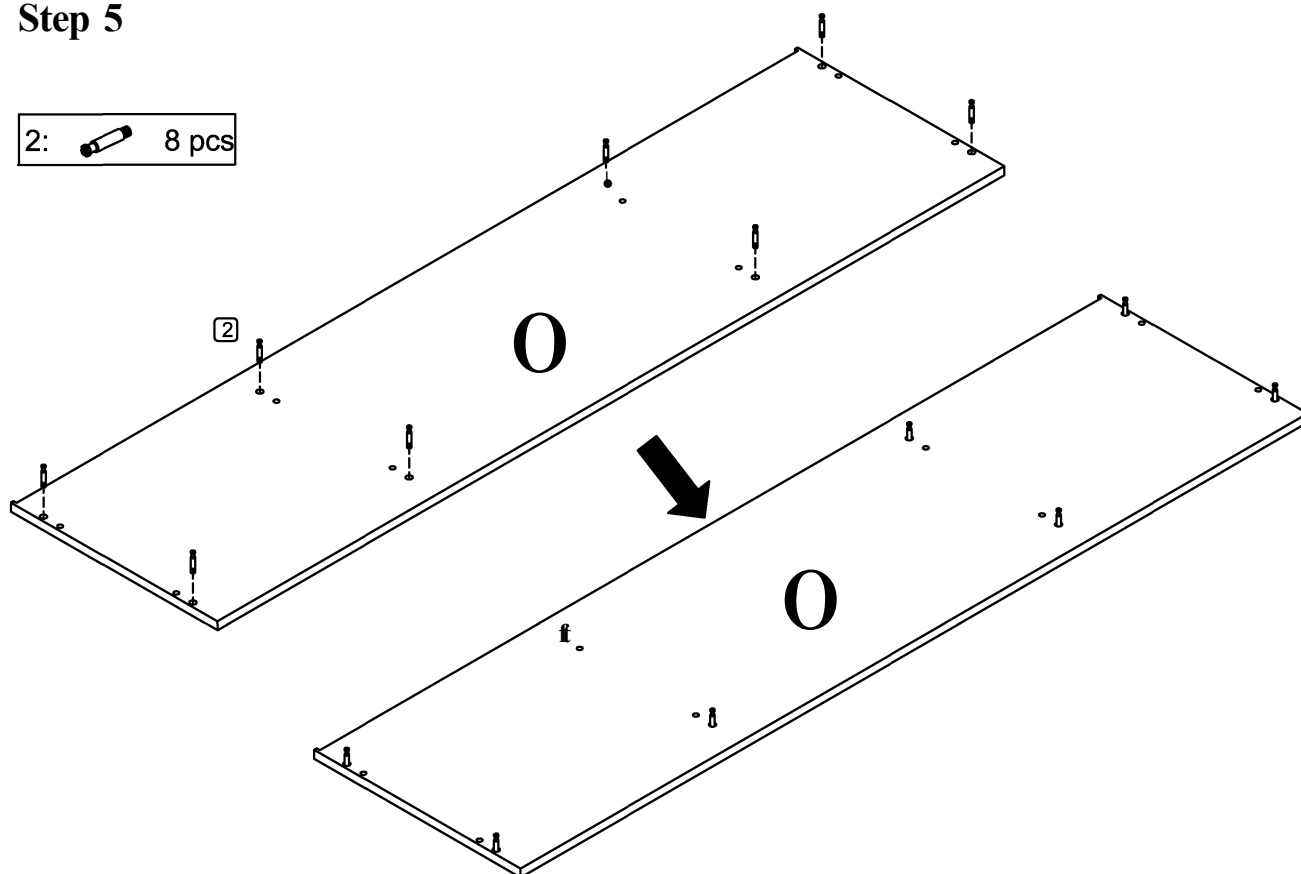


Step 6

 3:  4 pcs

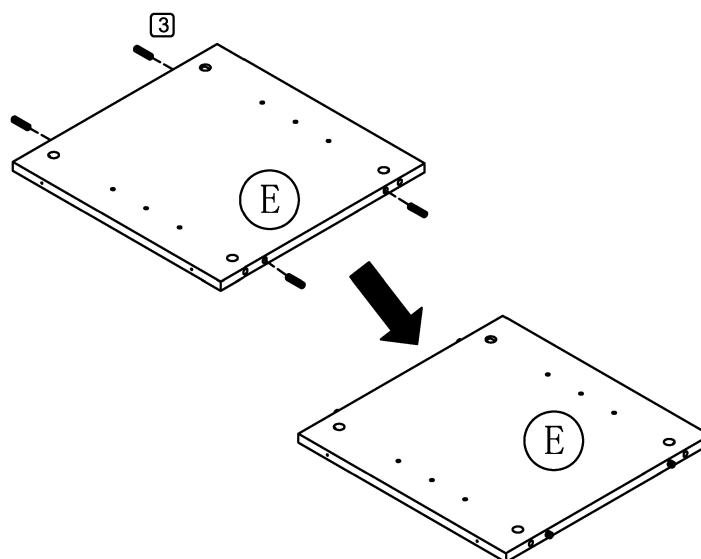


Step 7

5:	W 4 pcs
6:	d ■ Q4 pcs
9:	◆ 8 pcs
10:	◁ ▷ @ 16 pcs

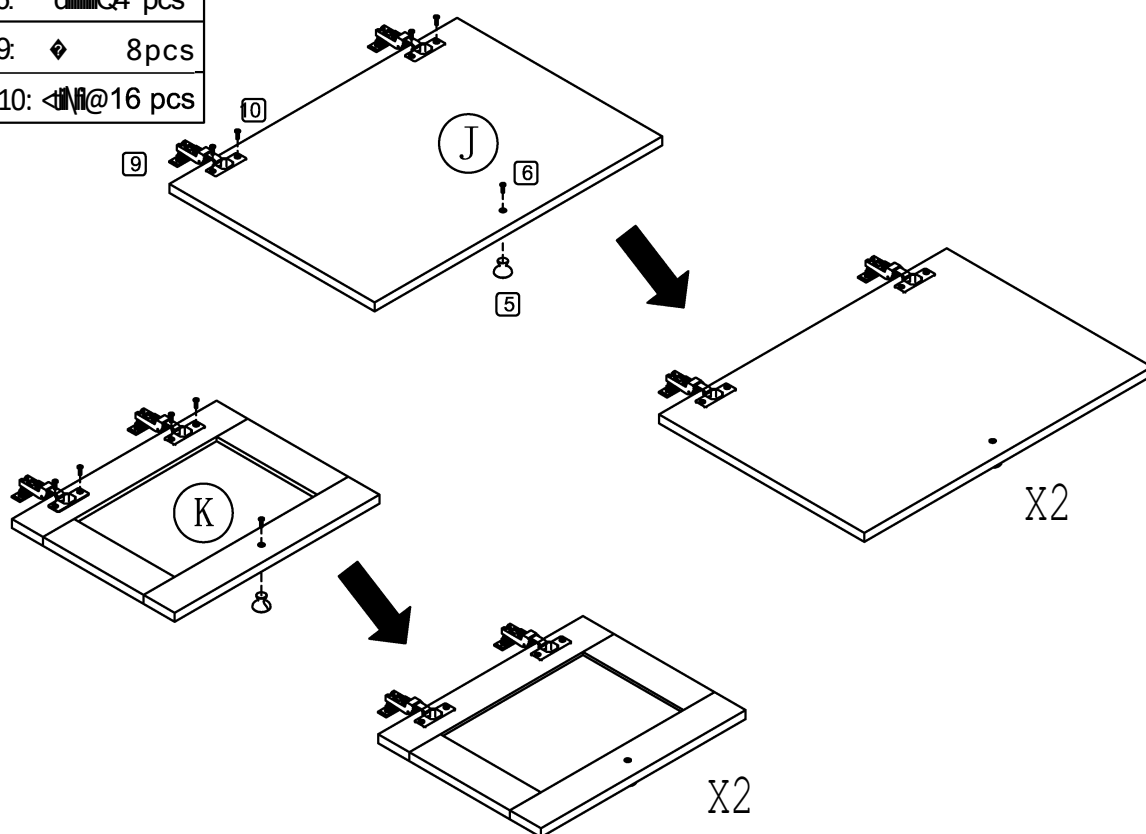 


Step 8

 11: @ 4 pcs

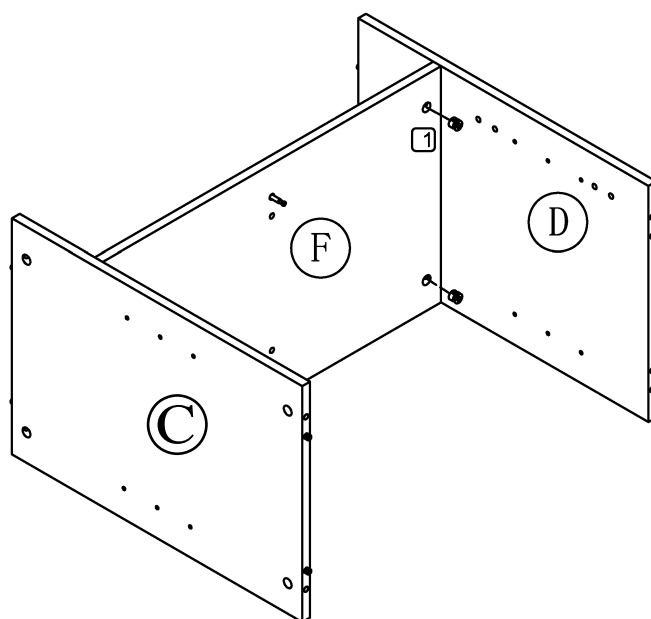


Step g

 1:  6 pcs

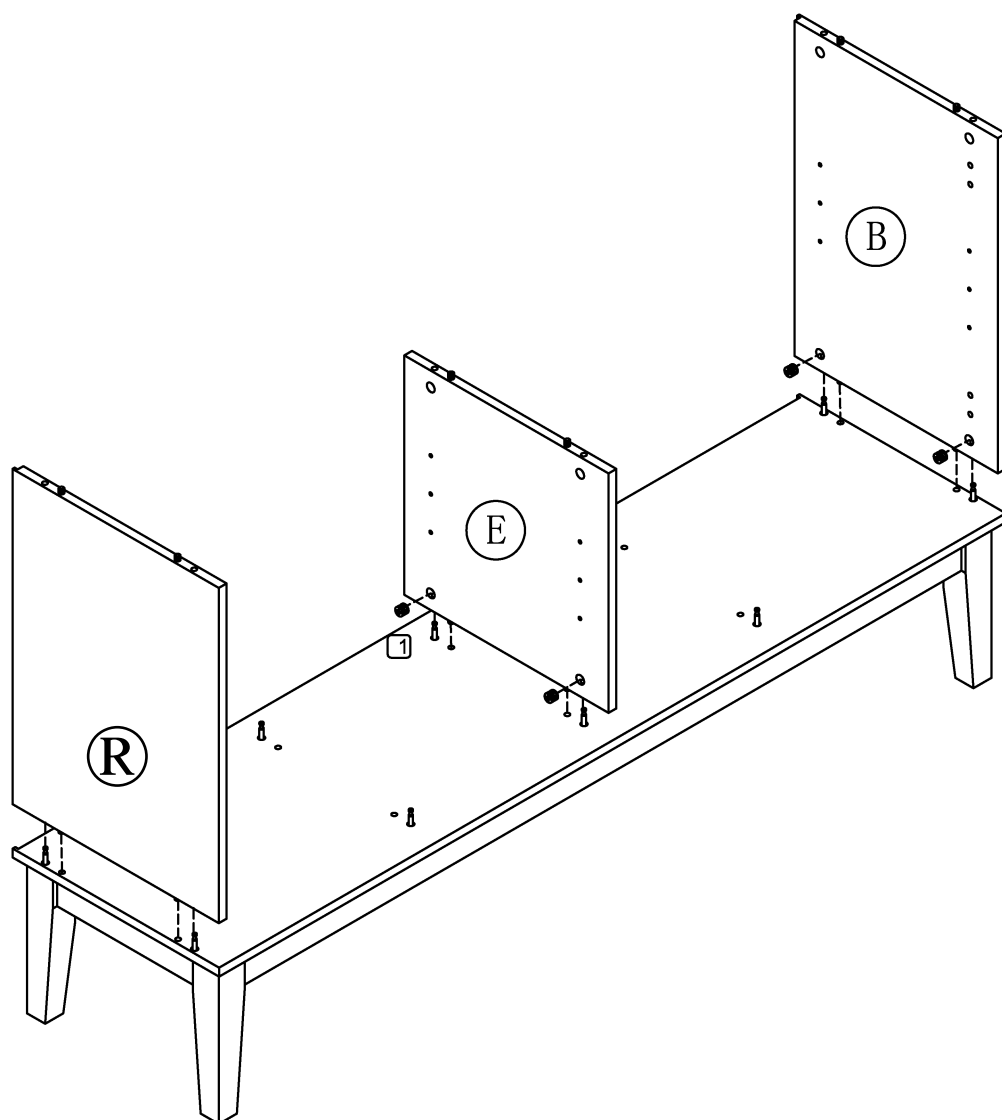


Step 10

 1: (R) 6 pcs

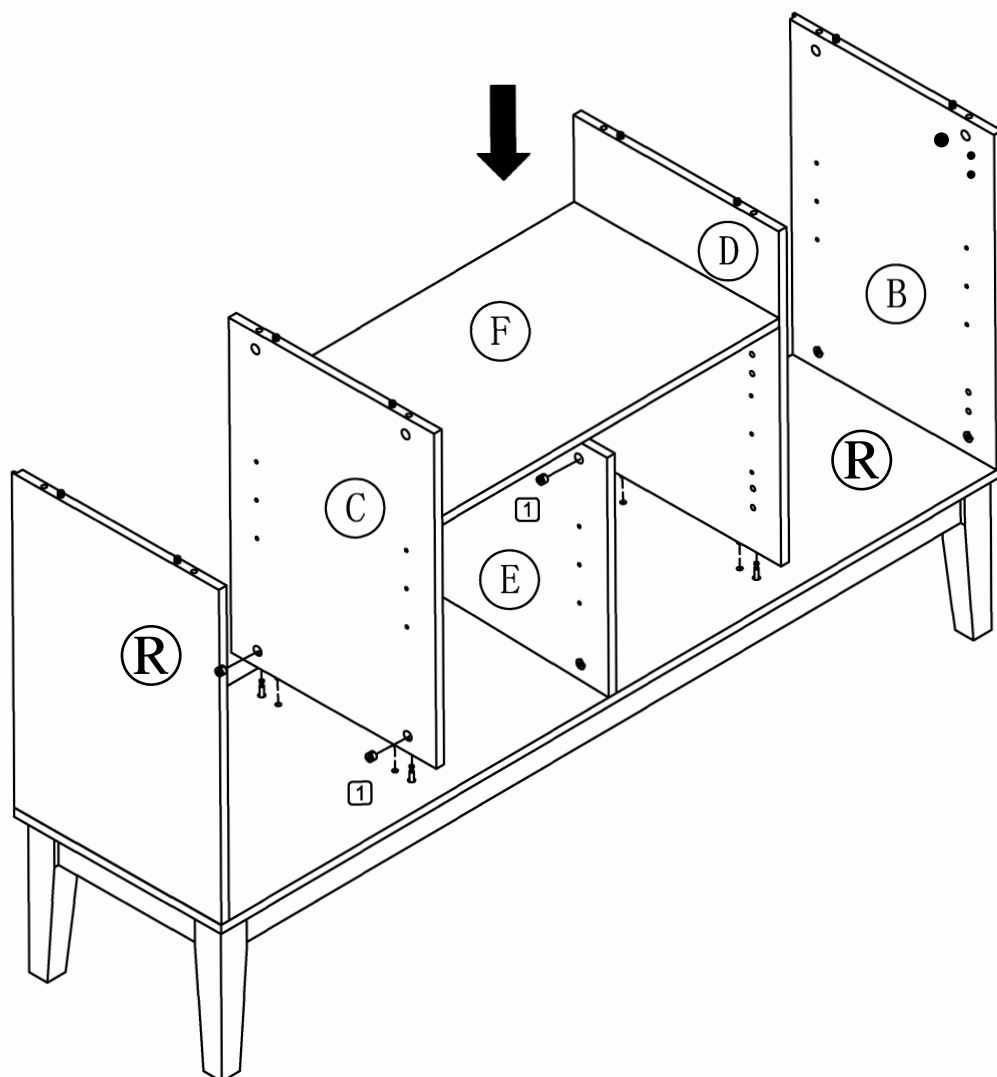


Step 11

 1:  8 pcs

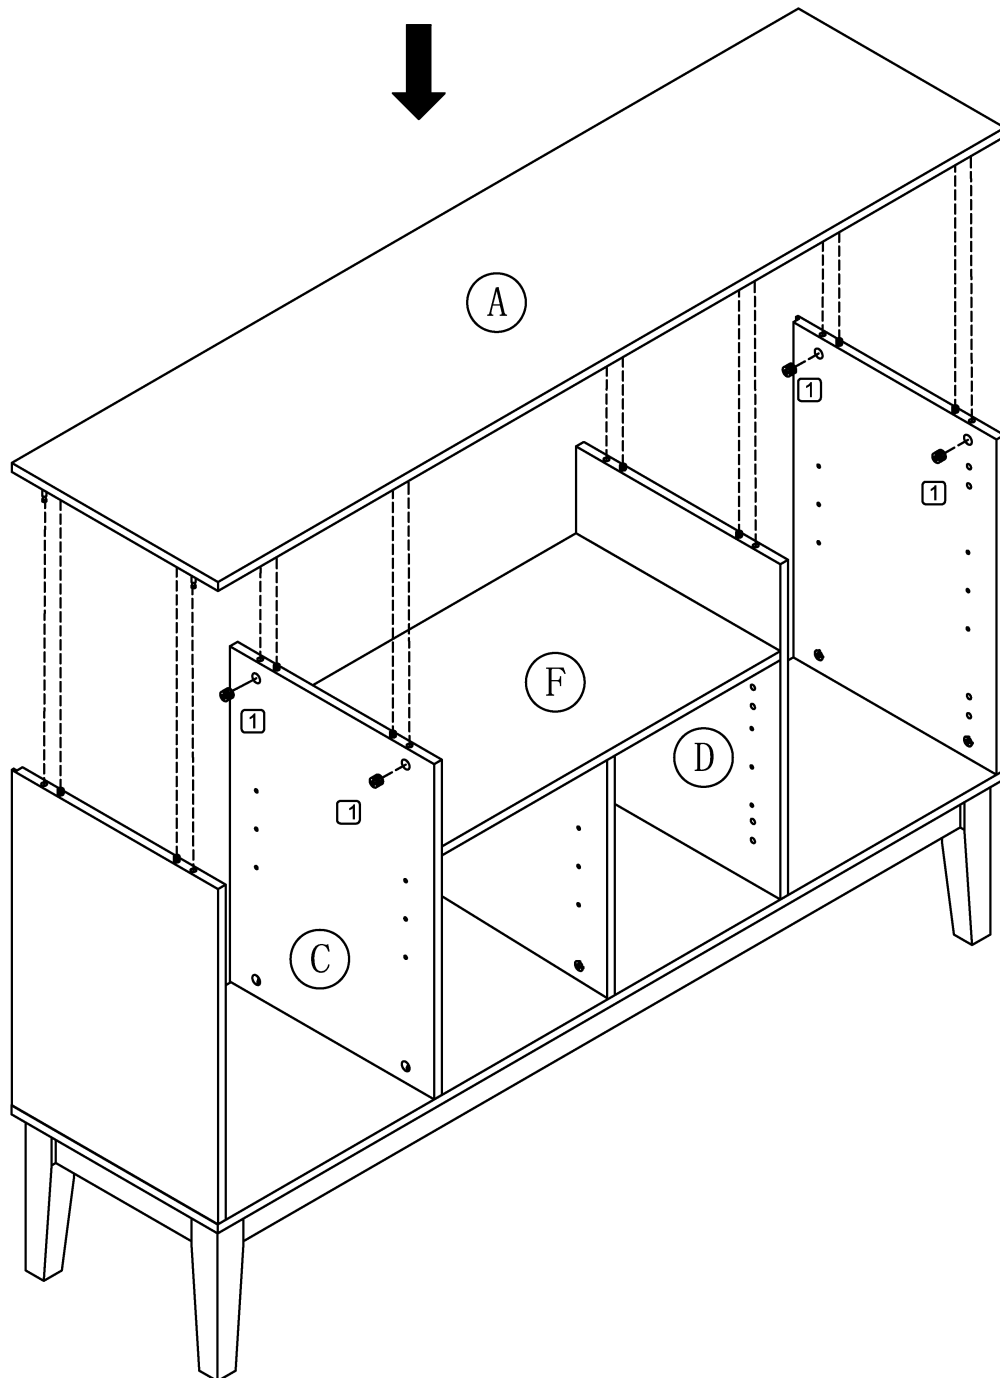

Step 12

 
II: 34 pcs

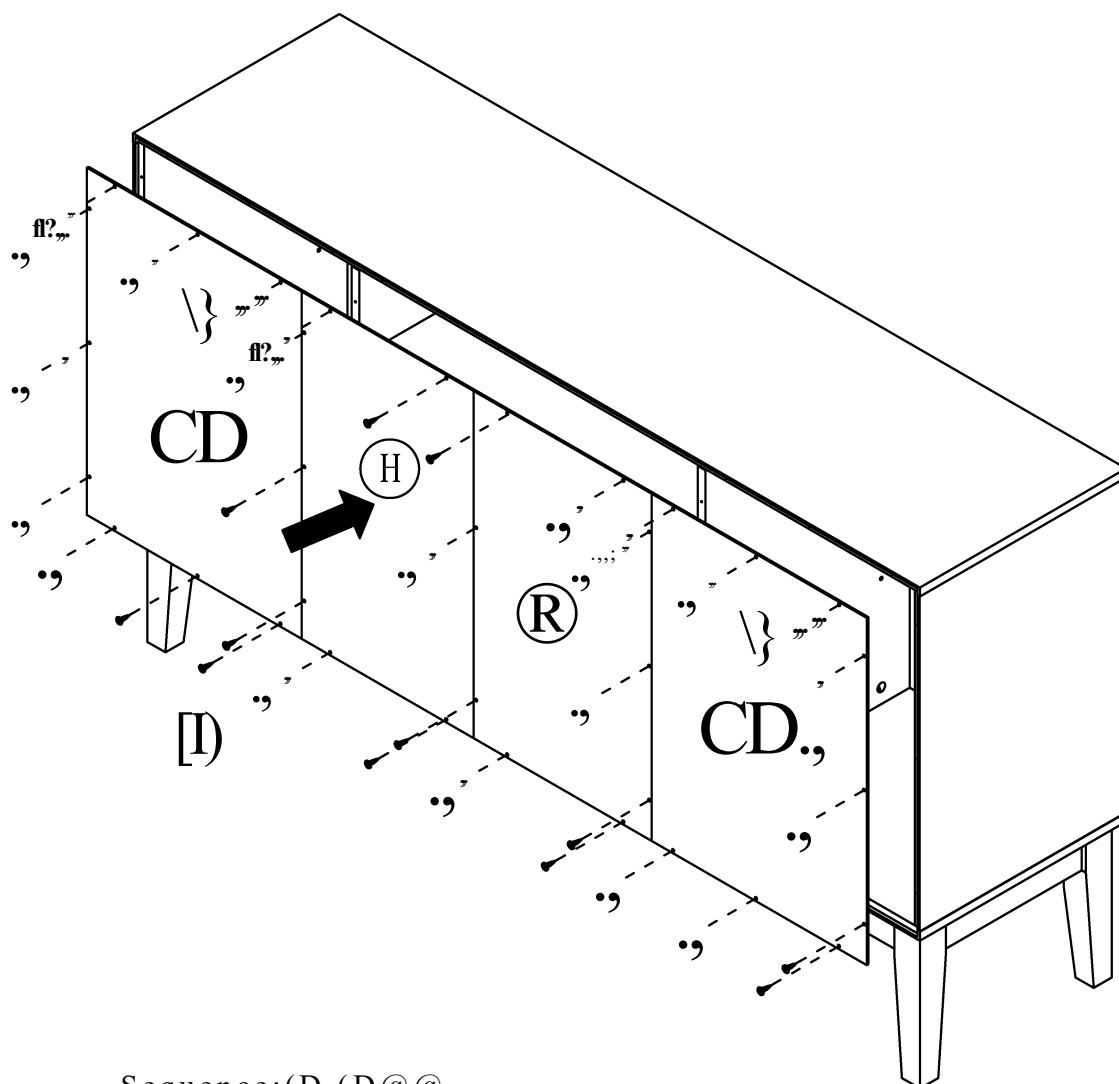

Sequence:(D (D@@@


Step 13

 4: c::(::l) 16 pcs
11: 0 20 pcs

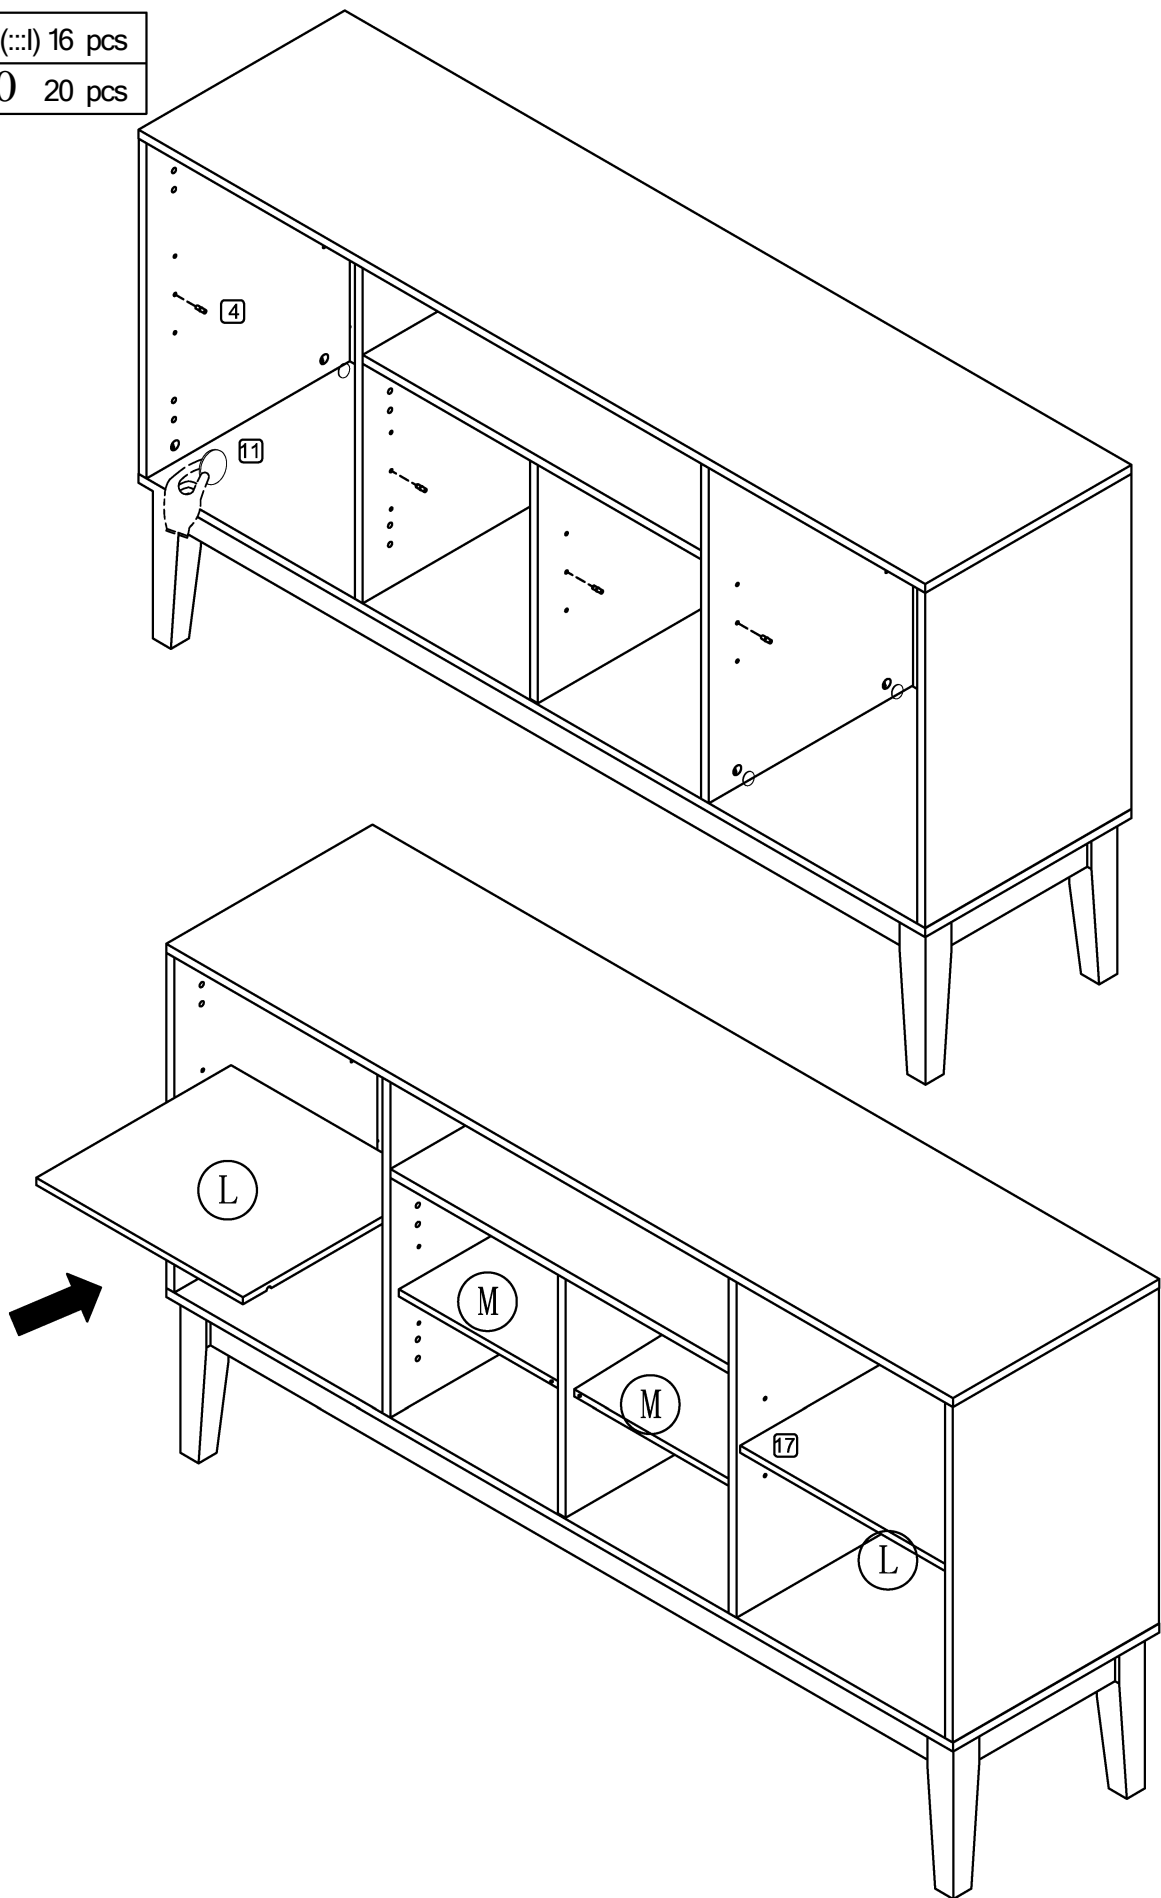


Step 14

 110: 16 pcs

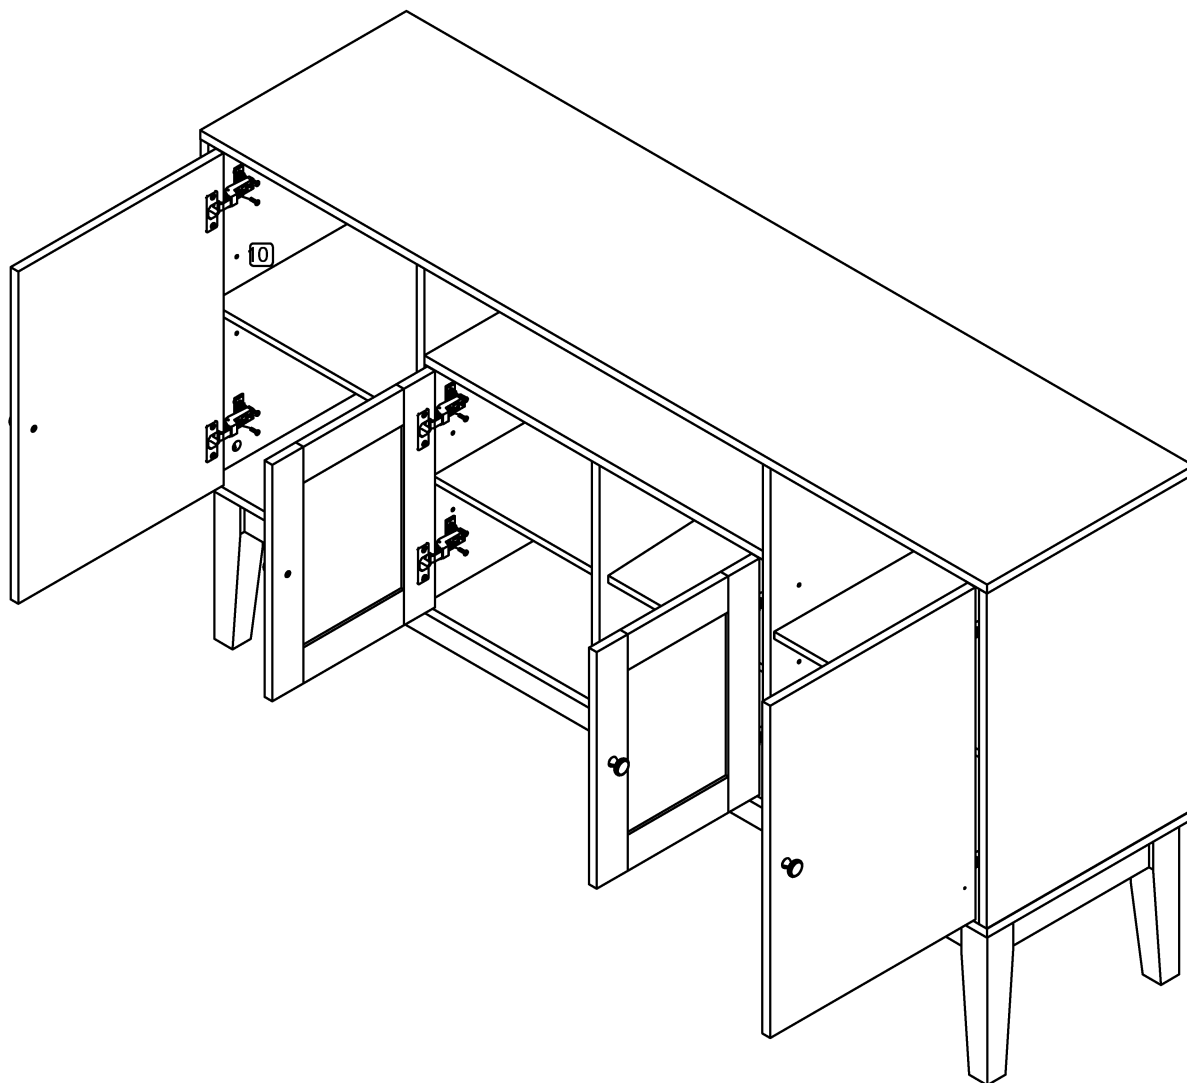

 Step 15

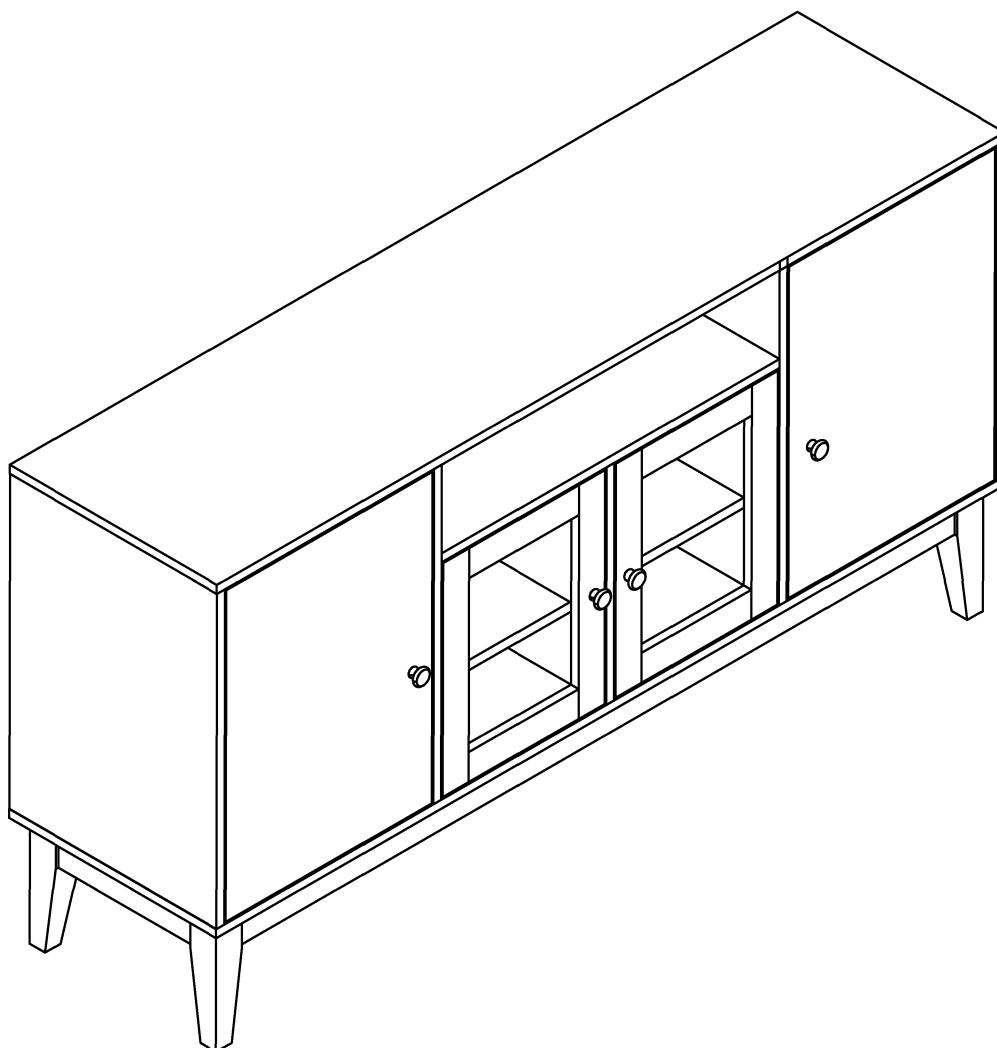

Final Assembly