
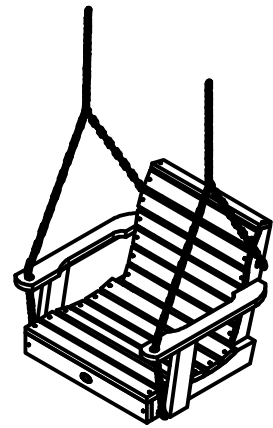
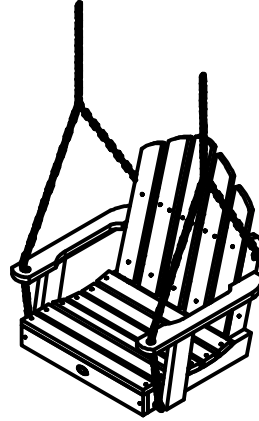


Single Porch Swing



Assembly Guide

PORL3
PORW3
SW2CW23

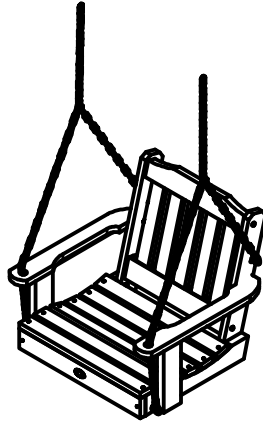

*Actual Style May Vary from
the One Pictured in this Guide


HARDWARE INCLUDED

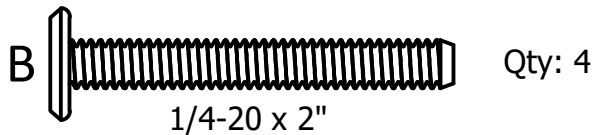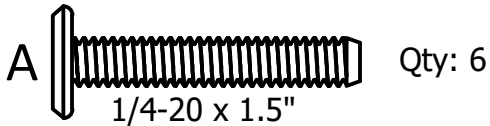

** Chain Attachment Kit

- 5/16-18 x 2" Eyebolt - Qty: 4
- 5/16-18 Nylon Lock Nut - Qty: 4
- 5/16 Flat Washer - Qty: 4
- HDK-CHAINLONG - Qty: 2
- HDK-CHAINSHORT - Qty: 2
- Chain Link Connector - Qty: 2

TOOLS INCLUDED

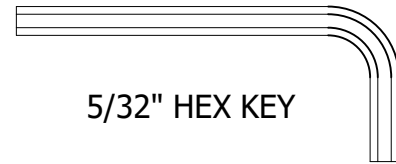


5/32" HEX KEY

CUSTOMER SUPPLIED TOOLS


1/2" or 13mm wrench/socket

IMPORTANT!

DO NOT fully tighten bolts until all bolts are started.

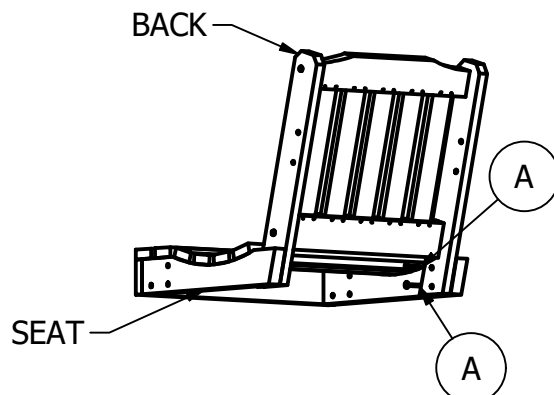


- 1) Attach Back to Seat using
(2) A Bolts on each side.

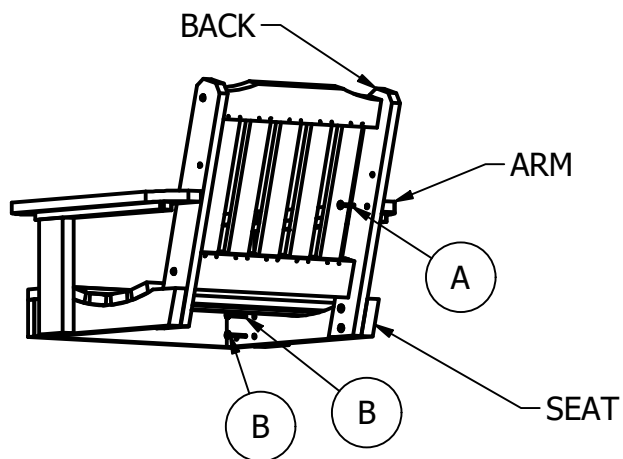

2) Attach the Arm to the Back using (1) A bolts on each side


3) Attach the Arm to the Seat using (2) B bolt on each side

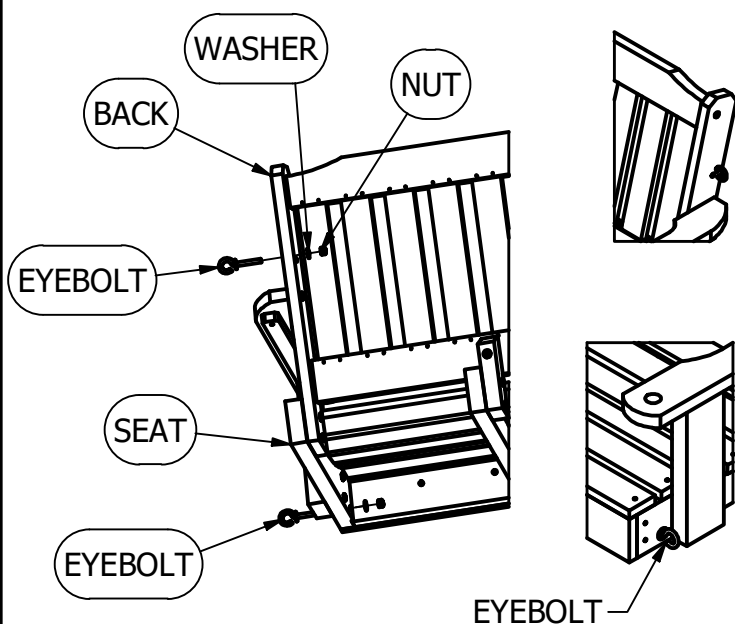

7) Attach Eyebolt to Back.
Insert bolt through Back, attach washer and nut on inside of back.
Align Eyebolt as shown and tighten.

8) Attach Eyebolt to Seat.
Insert bolt through Seat, attach washer and nut on inside of Seat.
Align Eyebolt as shown and tighten.

9) Repeat on other side.

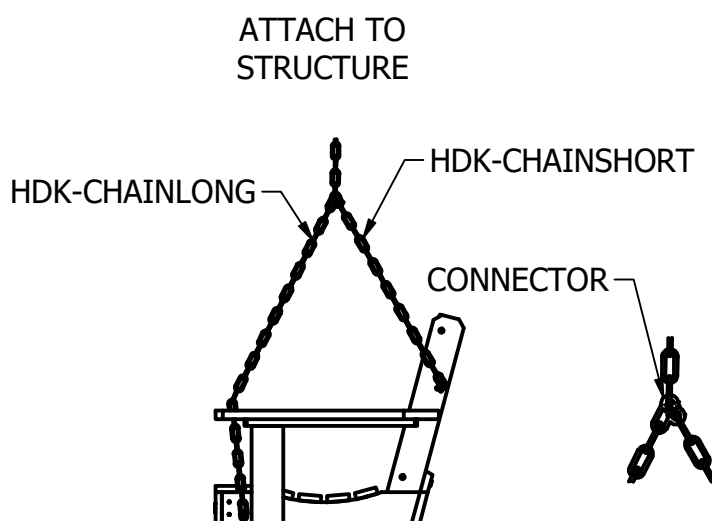

10) Attach HDK-CHAINSHORT to back Eyebolt, attach Chain Link Connector to other end of chain.

11) Attach HDK-CHAINLONG to seat Eyebolt, guide chain through hole in Arm and attach to other end of Chain Link Connector so that arm is level as shown.

12) Repeat on other side.

13) Attach ends of HDK-CHAINLONG to structure.