

ASSEMBLY INSTRUCTIONS

DINING TABLE

ASSEMBLY
REQUIREMENTS

2-Person
Assembly

30 MINUTES
Assembly Time
Approximate

 
Tools Required
(Not Provided)



Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product.
Contact our customer service department in case there are any missing or damage parts or hardware. Replacement parts are normally shipped within 2 or 3 days.

We appreciate your business!

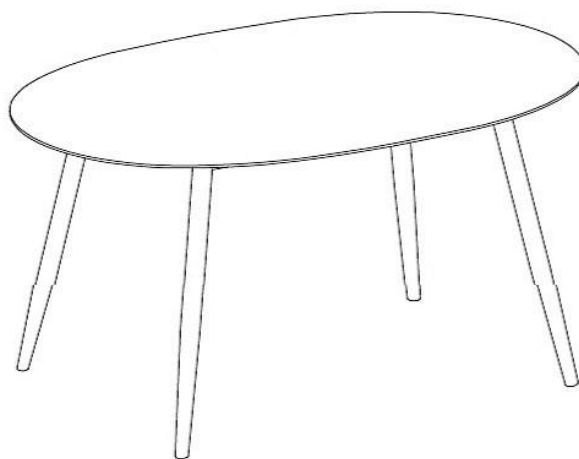

ASSEMBLY PREPARATION

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List. Ensure parts and hardware are complete before assembling the product.
3. Contact customer service for missing parts.
4. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

SAFETY PRECAUTION

1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

TIPS FOR ASSEMBLY

1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Check all of the parts and quantities are included before assembly.
4. Identify all of the parts, hardware and quantities required for each step.
5. During assembly, do not over-tighten any fittings as this may cause damage.
6. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
7. Always place the product on a flat, level surface.
8. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE



- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g. hot drinks) directly onto the wood surface.
- Do not drag and/or pull the furniture.

This product is for indoor and household use only - not for commercial use.

ASSEMBLY INSTRUCTIONS

DINING TABLE


PART LIST

Item	Description	Part	Qty
1	Table Top K		1
2	Table Leg		4

HARDWARE LIST

Item	Description	Part	Qty
A	Allen Key M5 x 65mm		1
B	JCBB Screw M8 x 80mm		8
C	Spring Washer		8
D	Flat Washer		8
E	Leg Stud		4

 STEP 1

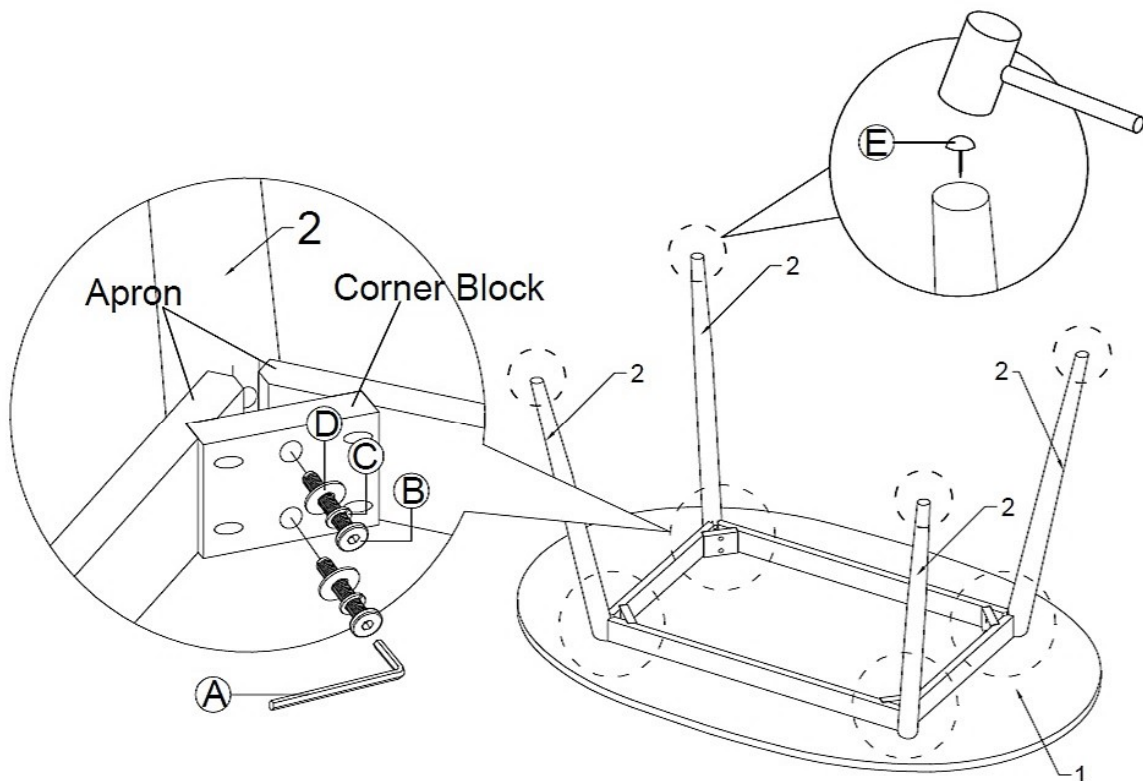

- With the assistance of another person, place Table Top (1) bottom-side up on a surface that does not scratch or damage the product.
- Position Table Leg (2) against the corner of the table aprons and align the screw holes on (2) to the screw holes on the corner block.
- Insert Screw (B) fitted with Spring Washer (C) and Flat Washer (D) through each hole on the corner block into screw hole on (2).
- Use Allen Key (A) to drive (B) to fasten Table Leg (B) to corner block. Do not tighten (1) completely until both screws are in place on each leg. Do not over-tighten the screws.
- Repeat the above assembly procedure for the other three legs.
- Use a mallet or hammer to gently nail Leg Stud (E) into each end of the leg.
- Turn the table right-side up.

The assembly of the table is complete.